

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Mati Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.A1.88.2	<b>EQUIPMENT, GROUND, ASSEMBLY ...</b>	—	—	—	
		Spares for:—				
4Q/4230826	E.A1.88.77	<b>ADAPTOR, fuselage, jacking ...</b>	1	—	B	
1L/178	†	<b>ADAPTOR, canopy to fuselage torque wrench ...</b>	1	—	B	
4G/6246	†	<b>ADAPTOR, charging oleo ...</b>	2	—	A	
95087	E.A3.88.157	<b>ARM, NOSE WHEEL STEERING, ASSEMBLY ...</b>	1	—	A	
		Spares for:—				
20870	E.A3.88.57	<b>ARM, STEERING, ATTACHMENT ...</b>	1	—	MR	
		Spares for:—				
21123	E.A3.88.47	<b>BAR, release, axle pin ...</b>	2	—	MR	
21124	E.A3.88.49	<b>BAR, release, plunger ...</b>	2	—	MR	
21218	E.A3.88.51	<b>BUSH ...</b>	2	—	MR	
40109	E.A3.88.41	<b>GUIDE, axle pin ...</b>	2	—	MR	
95459	E.A3.88.43	<b>GUIDE, plunger ...</b>	2	—	C	
26190	E.A3.88.55	<b>PIN, adaptor ...</b>	2	—	MR	
22988	E.A3.88.25	<b>PIN, axle, port ...</b>	1	—	MR	
21120	E.A3.88.27	<b>PIN, axle, starboard ...</b>	1	—	MR	
21122	E.A3.88.45	<b>PLUNGER ...</b>	2	—	C	
21219	E.A3.88.69	<b>SPRING ...</b>	2	—	MR	
95460	E.A3.88.53	<b>WASHER, saddle ...</b>	2	—	C	
	FLEXELLO					
95494	633/C1	<b>CASTOR, unit ...</b>	2	—	C	
95022	E.A3.88.15	<b>ATTACHMENTS, NOSE TOWING BAR, ASSEMBLY</b>	1	—	B	
		Spares for this assembly are identical with those for assembly Part No. E.A3.88.57, except for the following deletion and addition				
		Delete:—				
26190	E.A3.88.55	<b>PIN, adaptor ...</b>	2	—	MR	
		Add:—				
25733	E.A3.88.37	<b>PIN, adaptor ...</b>	2	—	MR	
95539	L.F.D.S.4319	<b>ASSISTOR, Avro, triple bomb carrier ...</b>	1	—	B	
4G/2792	†	<b>BAR, towing ...</b>	1	—	A	
95299	E.A3.88.297	<b>BLOCK, for depressing stud ring cover when assembling or withdrawing fuel tanks Nos. 1 and 2</b>	2	—	B	
	DOWTY					
27Q/32596	M.T.1093	<b>BLOCK, split, for air brake ...</b>	1	—	B	
95490	E.A1.88.889	<b>BOLT, canopy, slave (ST8/4833) ...</b>	32	5.97	C	
95413	E.A3.88.307	<b>BRACKET, MAIN WHEEL JACKING, ASSEMBLY</b>	2	—	B	
		Spares for:—				
21870	E.A3.88.219	<b>BOLT, special ...</b>	2	S.94 or S.95	C	
95013	E.A3.88.79	<b>BRIDGE, detachable, for wing slinging ...</b>	1	—	B	
4GB/4139	†	<b>BRIDGE, towing, main undercarriage ...</b>	1	—	A	
95012	E.A1.88.89	<b>CABLE, retaining, bomb door ...</b>	2	—	B	
1971	E.A3.88.91	<b>CLAMP, AILERON LOCKING, ASSEMBLY ...</b>	1	—	B	
		Spares for:—				
6799	E.A3.88.103	<b>PENNANT ...</b>	2	—	C	
6800	E.A3.88.101	<b>STRAP, assembly ...</b>	1	—	C	
1972	E.A3.88.92	<b>CLAMP, AILERON LOCKING, ASSEMBLY ...</b>	1	—	B	
		Spares for:—				
6799	E.A3.88.103	<b>PENNANT ...</b>	2	—	C	
20738	E.A3.88.102	<b>STRAP, assembly ...</b>	1	—	C	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
1867	E.A1.88.73	<b>CLAMP, ELEVATOR LOCKING, STARBOARD, ASSEMBLY</b>	1	—		B	
		Spares for:—					
20736	E.A1.88.185	<b>PENNANT</b> ... ..	1	—		C	
28FP/4062336	A.617	<b>PIN, "pip"</b> ... ..	2	—		C	
13142	E.A1.88.873	<b>CLAMP, elevator locking, port</b> ... ..	1	—		B	
2468	E.A3.88.153	<b>CLAMP, RUDDER LOCKING, ASSEMBLY (PRE-MOD. 5096)</b>	2	—		B	
6119203	E.A3.88.383	<b>CLAMP, RUDDER LOCKING, ASSEMBLY (MOD. 5096)</b>	1	—		B	
		Spares for:—					
20432	E.A3.88.97	<b>PENNANT, assembly</b> ... ..	1	—		C	
28FP/9432062	A.413	<b>PIN, "pip"</b> ... ..	1	—		C	
14747	TERRY EX12	<b>SPRING</b> ... ..	1	—		C	
20778	EEAS.20/2ER	<b>TAB, locking</b> ... ..	4	—		C	
95298	E.A3.88.205	<b>COVER, used for protection and depressing stud rings when assembling or withdrawing tanks Nos. 1 and 2</b>	2	—		B	
	E.B6.88.35	<b>COVER, AIRCRAFT, ASSEMBLY</b> ... ..	—	—		—	
		Spares for:—					
27D/2948	E.A3.88.301	<b>COVER, nose</b> ... ..	1	—		B	
27D/2809	E.A1.88.401	<b>COVER, coupé</b> ... ..	1	—		B	
27D/2991	E.A9.88.27	<b>COVER, engine</b> ... ..	2	—		B	
27D/2811	E.A1.88.405	<b>COVER, jet pipe</b> ... ..	2	—		C	
27D/2807	E.A1.88.407	<b>COVER, main wheel</b> ... ..	2	—		C	
27D/2806	E.A1.88.409	<b>COVER, nose wheel</b> ... ..	2	—		C	
27D/2962	E.A1.88.597	<b>COVER, pressure head</b> ... ..	1	—		B	
27D/2878	E.A1.88.787	<b>COVER, equipment door</b> ... ..	1	—		B	
95412	GM/C/1776	<b>COVER, for Avro triple carrier</b> ... ..	1	—		B	
95109	E.A3.88.211	<b>CRADLE, for handling jettisonable wing tanks</b> ...	1	—		A	
95037	E.A1.88.417	<b>CRADLE, retraction test (For use at frame 13)</b> ...	1	—		A	
95038	E.A1.88.419	<b>CRADLE, retraction test (For use at frame 29)</b> ...	1	—		A	
95072	E.A1.88.551	<b>DISC, setting engine controls, starboard, 12 SWG</b> ...	2	L.72		B	
95408	E.B6.88.27	<b>DISC, setting engine controls, port, 12 SWG</b> ...	1	L.72		B	
	—	<b>EQUIPMENT, SIGHTING, COMPASS ALIGNMENT, ASSEMBLY</b>	—	—		—	
		Spares for:—					
95563	E.A9.88.481	<b>CASE, carrying, assembly</b> ... ..	1	—		B	
95562	E.A9.88.479	<b>ROD, SIGHTING, AFT, ASSEMBLY</b> ... ..	1	—		A	
		Spares for:—					
	E.A9.88.497	<b>BRACKET, mounting (Spirit level)</b> ... ..	1	—		—	
	E.A9.88.445	<b>BRACKET, rod sighting</b> ... ..	1	—		—	
	E.A9.88.447	<b>JOINT, ball (inner)</b> ... ..	1	DEF.131A		—	
	E.A9.88.449	<b>JOINT, ball (outer)</b> ... ..	1	DEF.131A		—	
	E.A9.88.467	<b>KNOB</b> ... ..	1	DEF.131A		—	
	COOKE						
	TROUGHTON & SIME LTD.						
	E.985	<b>LEVEL, spirit, circular</b> ... ..	1	—		—	
	E.A9.88.495	<b>SHAFT</b> ... ..	1	—		—	
	E.A9.88.469	<b>STUD, special</b> ... ..	1	DEF.131A		—	
95561	E.A9.88.477	<b>ROD, SIGHTING, FORWARD, ASSEMBLY</b> ... ..	1	—		A	
		Spares for:—					
	E.A9.88.513	<b>BRACKET, mounting (Spirit level)</b> ... ..	1	DEF.131A		—	
	E.A9.88.505	<b>CHUCK, inner portion</b> ... ..	1	DEF.131A		—	
	E.A9.88.507	<b>CHUCK, sleeve</b> ... ..	1	DEF.131A		—	
	E.A9.88.515	<b>CLIP</b> ... ..	2	DEF.131A		—	
	E.A9.88.447	<b>JOINT, ball (inner)</b> ... ..	1	DEF.131A		—	
	E.A9.88.449	<b>JOINT, ball (outer)</b> ... ..	1	DEF.131A		—	



**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
95276	E.B7.88.15	GUARD, AIR INTAKE DEBRIS, ASSEMBLY (FOR USE ON A/C NOT EMBODYING AVON MOD. 843) Spares for:—	2	—	B	
95503	E.A3.88.295	BOLT, key	2	—	C	
95538	E.B7.88.205	GUARD, AIR INTAKE DEBRIS, ASSEMBLY (FOR A/C EMBODYING AVON MOD. 843) (MOD. GE.2396) Spares for:—	2	—	B	
33H/	†	ADHESIVE, P.R.C. compound	QR	—	—	
	E.B7.88.207	SEGMENT	3	LFS.21	—	
28S/1214853	4100/8/3/8"	SCREW, P.K.	21	—	C	
32B/	E.B7.88.209	STRIP, felt, 3/8" x 1"0 x 38" long	1	DTD.590	LM	
1B/4467	†	GUN, lubricating	1	—	A	
95080	AT.81489	HANDLE, crutching	1	—	A	
4Q/4230825	E.A1.88.257	HEAD, 10 ton jack adaptor	2	—	B	
95112	E.A3.88.269	HEAD, jacking, for 15 ton pillar jack	2	—	B	
95449	E.A9.88.39	HEAD, jacking, for 15 ton pillar jack	1	—	B	
4Q/4230661	†	HEAD, adaptor, for 15 ton pillar jack	2	—	C	
95293	E.A1.88.831	INDICATOR, engine control setting disc, 20 SWG	1	DTD.124	A	
95051	E.A1.88.349	INSERTER, piston ring, main undercarriage oleo leg	1	L.72	B	
95048	E.A1.88.363	INSERTER, wing to fuselage pick-up pins	1	—	B	
95052	E.A1.88.383	INSERTER, main oleo pivot point bush	1	—	B	
95050	E.A1.88.389	INSERTER, for bushes in torque links main oleo leg	1	—	B	
95053	E.A1.88.391	INSERTER, and extractor for sealing rings main oleo leg	1	—	B	
95088	E.A1.88.733	INSERTER, main undercarriage pivot pin	1	—	B	
4Q/2232	†	JACK, hydraulic, fuselage, 5 ton, type A	1	—	A	
4Q/1045838	†	JACK, hydraulic, 10 ton pillar	2	—	A	
10AF/598	ED.9/7501	JIG, alignment, blue silk aerial	1	—	A	
95647	FT8/2571	JIG, alignment, for vent mast (Mod.4112)	1	—	B	
	†	JIG, DRILLING ALIGNMENT, MAIN PLANE, OUTER SPAR, LOWER BOOM (MOD. 5027) Spares for (Per Set):—	1	—	MR	
	E.A3.08.1365	BUSH, drilling	1	—	MR	
	E.A3.08.1367	BUSH, drilling	1	—	MR	
	E.A3.08.1369	BUSH, drilling	1	—	MR	
95063	E.A1.88.395	KEY, hydraulic tank	1	—	B	
1970	E.A1.40.169	LUG, picketing and towing and for T/P sling	6	S.96	C	
27Q/11743	D.26067	NOZZLE, flexible, c/w gauge	1	—	A	
95015	E.A1.88.255	PIN, nose wheel locking	1	—	B	
95491	E.A1.88.891	PIN, locating (ST.8/4842)	6	—	C	
95407	E.B6.88.29	PLATE, setting bellcrank level engine controls, port	1	L.59	B	
95295	E.A1.88.548	PLATE, setting bellcrank lever engine controls, starboard	1	—	C	
95074	E.A1.88.549	PLATE, setting throttle box, 16 SWG	1	—	C	
	E.G4.88.21	PLUG, assembly, for use when cabin pressure testing (Mod. 3799)	1	—	—	
95270	E.A3.88.281	PLUG, BLANKING, CABIN PRESSURE CONTROL VALVE, ASSEMBLY Consisting of:—	1	—	B	
	†	CHAIN, retaining	QR	Brass	—	
21084	E.A2.88.77	PENNANT	1	—	C	
	E.A3.88.283	PLUG	1	L.65	—	
28E/9007825	†	RING, split, 1/2" o/d. x 1/8" thick	2	—	C	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Matl Spec	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
6A/2679	†	PLUG, protective, static vents ... ..	4	—	B	
4G/2764	†	PUMP, pleo, type F ... ..	1	—	A	
95603	T.56015	REAMER, for main u/c attachment bushes ... ..	1	—	B	
1C/9105853	†	SCREWDRIVER ... ..	1	—	C	
95277	E.B7.88.1	SEAL, engine dust ... ..	2	—	B	
95619	E.A3.88.5053	SET, TEST, AIR VENTILATED SUIT (MOD. 4047-S.O.O.)	1	—	A	
		Spares for:—				
	E.A3.88.5077	ADAPTOR, TEST GAUGE, ASSEMBLY ... ..	1	—	—	
		Spares for:—				
27F/2241	A102/3	HANDLE, valve ... ..	1	—	C	
32C/	DAS.412/E/10	HOSE, kinkproof ... ..	1	—	—	
	E.A3.88.5085	ORIFICE, test ... ..	1	—	—	
	DUNLOP					
27VA/3446	A.C.O.6592	PLUG, mating ... ..	1	—	C	
	E.A3.88.5065	TEE-PIECE ... ..	1	—	—	
	SAUNDERS					
27F/	106/AR/02	VALVE, MK. 3 ... ..	1	—	—	
	BELLS					
	ASBESTOS					
	OS-8	WASHER, sealing ... ..	1	—	—	
	E.A3.88.5069	ADAPTOR, assembly, test gauge ... ..	1	—	—	
	E.A3.88.5055	CASE, ASSEMBLY ... ..	1	—	—	
		Spares for:—				
	E.A3.88.5081	BAG, stowage, plugs ... ..	1	—	—	
	6685-420491	GAUGE, test, 0-200 lbs. ... ..	1	—	—	
	6685-420483	GAUGE, test, 0-30 lbs. ... ..	1	—	—	
	E.A3.88.5057	ORIFICE, test ... ..	3	—	—	
	E.A3.88.5059	PLUG, blanking, assembly ... ..	1	—	—	
	E.A3.88.5061	PLUG, blanking, assembly ... ..	1	—	—	
	E.A3.88.5063	PLUG, blanking, assembly ... ..	1	—	—	
95442	E.B6.88.85	SLAVE, cowling, port and starboard ... ..	2	—	A	
95089	E.A1.88.743	SLEEVE, MAIN UNDERCARRIAGE WHEEL LOCKING, ASSEMBLY	2	—	A	
		Spares for:—				
21084	E.A2.88.77	PENNANT ... ..	2	—	C	
28FP/9432064	AVDEL A.817	PIN, "pip" ... ..	2	—	C	
95008	E.A1.88.11	SLING and frame, main plane lifting, complete ... ..	1	—	A	
95009	E.A1.88.59	SLING, tailplane ... ..	1	—	A	
95006	E.A1.88.61	SLING, centre fuselage lifting, complete ... ..	1	—	A	
95005	E.A1.88.63	SLING, front fuselage lifting, complete ... ..	1	—	A	
95007	E.A1.88.65	SLING, REAR FUSELAGE LIFTING, COMPLETE	1	—	A	
		Spares for:—				
95495	E.A1.88.267A	BOLT ... ..	1	—	C	
95084	E.A1.88.601	SLING, fin and rudder ... ..	1	—	A	
95094	E.A1.88.741	SLING, combined nose and mid fuselage lifting ... ..	1	—	A	
95443	E.B6.88.39	SLING, INTERNAL TANK, ASSEMBLY ... ..	1	—	B	
		Spares for:—				
95479	E.B6.88.57	BOLT, eye ... ..	1	S.92	C	
1L/9106389	†	SOCKET, 1/8" BSF, for explosive bolts ... ..	1	—	C	
1L/9106397	†	SOCKET, for attachment bolts, 1/4" BSF ... ..	1	—	C	
1L/9106401	†	SOCKET, for attachment bolts, 1" BSF ... ..	1	—	C	
95269	E.A3.88.293	SPANNER, wing tip tank drain plug ... ..	1	—	C	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
95064	E.A1.88.263	SPANNER, integral and drop tank ... ..	1	DTD.124A	B	
95493	E.A1.88.877	SPANNER, nosewheel door (Mod.2311) ... ..	1	—	B	
95054	E.A1.88.345	SPANNER, torque link main undercarriage ... ..	1	DTD.124	C	
95056	E.A1.88.347	SPANNER, special, "C", main undercarriage oleo stop nut	1	—	B	
95057	E.A1.88.353	SPANNER, special, main undercarriage oleo piston	1	—	B	
95325	E.A3.88.303	SPANNER, special, main undercarriage bearing ring	1	STEEL	B	
95086	E.A3.88.135	SPANNER, special, main undercarriage oleo axle clamp	1	STEEL	B	
95065	E.A1.88.365	SPANNER, special, plug forward jacking point ...	1	—	B	
95046	E.A1.88.379	SPANNER, universal, for attaching aileron to centre hinge bracket	1	MS	B	
95059	E.A1.88.385	SPANNER, special, for undercarriage pivot pin ...	1	MS	B	
95060	E.A1.88.387	SPANNER, special, for undercarriage pivot nut ...	1	MS	B	
95079	E.A1.88.531	SPANNER, special, for drop tank, assembly	1	MS	C	
1C/9106265	†	SPANNER, union, main fuel feed ... ..	2	—	C	
95466	E.B7.88.203	SPANNER, special, fuel pump pipe integral tank (Mod. GE.1730)	1	S.510	B	
95095	E.A1.88.749	SPANNER, forward bomb crutch ... ..	1	—	C	
95004	E.A1.88.23	SPIGOT, forward jacking front fuselage ... ..	1	S.65	B	
95444	E.B6.88.81	STRAP, INNER INTEGRAL TANK, ASSEMBLY ...	1	—	B	
		Spares for:—				
95465	E.B6.88.119	BOLT, sub-assembly ... ..	1	—	C	
95464	E.B6.88.121	BOLT, sub-assembly ... ..	1	—	C	
95483	E.B6.88.47	BRACKET, guide, inner ... ..	1	—	C	
95262	E.A3.88.273	STRAP, metal, for use with combined nose and centre fuselage sling	1	—	B	
95445	E.B6.88.83	STRAP, outer integral tank, assembly ... ..	1	—	B	
95090	E.A1.88.799	STRUT, jury, tailplane ... ..	1	—	B	
	E.B7.88.53	TEMPLATES, NEUTRAL RIGGING, ASSEMBLY ...	—	—	—	
		Spares for:—				
95297	E.B7.88.65	TEMPLATE, neutral rigging, aileron ... ..	1	—	A	
95296	E.B7.88.55	TEMPLATE, neutral rigging, elevator ... ..	1	—	A	
95265	E.A3.88.247	TEMPLATE, neutral rigging, rudder ... ..	1	—	B	
95061	E.A1.88.351	TOOL, shock absorbing piston centralising ...	1	—	A	
95062	E.A1.88.361	TOOL, special, combination, main undercarriage oleo insertion and extraction spherical bearing	1	—	C	
95101	E.A1.88.821	TOOL, setting ... ..	1	—	B	
	MARTIN BAKER					
95082	A/MBEU/70/EE	TOOL, for cocking and uncocking snatch unit ...	1	—	C	
4Q/4230849	†	TRESTLE, wing jacking, Mk. 1 ... ..	2	—	A	
4Q/4230643	†	TRESTLE, fuselage jacking, Mk. 2 ... ..	1	—	A	
	E.A1.88.87	TRESTLE, REAR FUSELAGE, ASSEMBLY ... ..	—	—	—	
		Spares for:—				
95017	E.A1.88.87A	FORMER, forward ... ..	1	SPRUCE	B	
95018	E.A1.88.87B	FORMER, aft ... ..	1	SPRUCE	B	
4F/1041044	†	TROLLEY, pressure cabin testing, Mk. 1 ... ..	1	—	A	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95016	E.A1.88.85	<b>TROLLEY, PRESSURE CABIN GROUND MAINTENANCE, ASSEMBLY</b>						1	—	A	
		Spares for:—									
95487	E.A2.88.53	<b>WHEEL</b> , trolley (Carbowheel T.82) ... ..						4	—	A	
95069	ALVIS S.4954	<b>TROLLEY, BOMB LOADING, HYDRAULIC, MK. 1</b>						1	—	A	
95111	18101	<b>TROLLEY, BOMB LOADING, HYDRAULIC, MK. 2</b>						1	—	A	
		Spares for:—									
95239	HC.34501B	<b>ADAPTOR</b> , hose pump, O.S. ... ..						1	—	B	
95240	HC.31723	<b>ADAPTOR</b> , hose pump, lines ... ..						2	—	B	
95241	HC.24313	<b>ADAPTOR</b> , tank and pump ... ..						3	—	B	
95242	HC.4968	<b>ADAPTOR</b> ... ..						3	—	B	
95243	HC.27254	<b>ADAPTOR</b> ... ..						4	—	B	
95244	HC.33438	<b>ADAPTOR</b> , cylinder to hose ... ..						3	—	B	
95155	AS.17986	<b>ADAPTOR</b> , plate, 16½" dia. ... ..						8	—	C	
95122	AS.16571	<b>ARM</b> , steering, O.S. ... ..						1	—	A	
95123	AS.16572	<b>ARM</b> , steering, N.S. ... ..						1	—	A	
95594	AS.16553	<b>AXLE</b> , front stub, N.S. ... ..						1	—	B	
	AS.16552	<b>AXLE</b> , front stub, O.S. ... ..						1	—	—	
	AS.16554	<b>AXLE</b> , rear stub ... ..						2	—	—	
95249	HC.23364	<b>BANJO</b> , fitting ... ..						30	—	B	
95250	HC.23367	<b>BANJO</b> , fitting, double, ⅝" ... ..						8	—	B	
95251	HC.16297	<b>BANJO</b> , fitting, angle reversing valve ... ..						1	—	B	
95252	HC.38058	<b>BANJO</b> , hose, ¼" ... ..						10	—	B	
95217	AS.18151	<b>BEARING</b> , roller, cradle, assembly ... ..						8	—	A	
95218	AS.1856	<b>BEARING</b> , roller, store, assembly ... ..						8	—	A	
95253	HC.1318	<b>BOLT</b> , banjo, ¼" ... ..						49	—	B	
95254	No. 1331	<b>BOOT</b> , for reversing valve ... ..						1	—	B	
95530	HC.31727/4	<b>BOOT</b> , lifting cylinder ... ..						1	—	C	
95531	HC.41447	<b>BOOT</b> , lifting cylinder ... ..						1	—	C	
95570	S.3177	<b>BOOT</b> , rubber, for size B, Mk. 3 sockets ... ..						4	—	C	
95484	AS.19014	<b>BRACKET</b> , stop ... ..						1	—	C	
	GIRLING										
16L/21880	GB.34608	<b>BRAKE</b> , assembly, R.H. ... ..						1	—	A	
	GIRLING										
16L/21890	GB.34609	<b>BRAKE</b> , assembly, L.H. ... ..						1	—	A	
95118	AS.16555	<b>BRAKE</b> , drum ... ..						2	—	B	
95138	AS.16688	<b>BUSH</b> , bellcrank lever ... ..						1	—	B	
95144	AS.16687	<b>BUSH</b> , bisector lever ... ..						2	—	B	
95133	AS.16716	<b>BUSH</b> , handbrake lever ... ..						1	—	B	
95152	AS.16816	<b>BUSH</b> , long transmitter shaft ... ..						2	—	B	
95142	AS.16686	<b>BUSH</b> , lower brake lever spindle ... ..						2	—	B	
95192	AS.16981	<b>BUSH</b> , reversing lever ... ..						1	—	B	
95153	AS.16817	<b>BUSH</b> , short transmitter shaft ... ..						2	—	B	
95146	AS.16684	<b>BUSH</b> , spindle brake lever ... ..						2	—	B	
95157	AS.16987	<b>BUSH</b> , store roller ... ..						4	—	B	
95121	AS.16575	<b>BUSH</b> , stub axle swivel pin and lifting cam stop						8	—	B	
95151	AS.16569	<b>BUSH</b> , lifting cylinder pin ... ..						2	—	B	
95128	AS.16591	<b>BUSH</b> , tow bar yoke and plate ... ..						4	—	B	
95141	AS.16685	<b>BUSH</b> , upper brake lever spindle and valve handle shaft						6	—	B	
95131	AS.17263	<b>CATCH</b> , trigger tow bar ... ..						1	MS	C	
95255	K.20109	<b>CLIP</b> , for boot ... ..						1	—	B	
95219	HC.41412	<b>CYLINDER, LIFTING, ASSEMBLY</b> ... ..						2	—	B	
		Spares for:—									
95531	HC.41447	<b>BOOT</b> ... ..						1	—	C	
95220	HC.31392J	<b>CYLINDER, LIFTING, ASSEMBLY</b> ... ..						2	—	B	
		Spares for:—									
95530	HC.31727/4	<b>BOOT</b> ... ..						1	—	C	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95221	HC.25220.QC4	<b>CYLINDER, TABLE OPERATING, 4" STROKE, ASSEMBLY</b>						2	—	B	
	HC.26357/8	Spares for:— <b>BOOT</b> , c/w clip and filter, assembly ... ..						1	—	C	
95222	HC.25220.HJ6	<b>CYLINDER</b> , table operating, 6" stroke ... ..						2	—	A	
16T/770	No. 6358	<b>EXTENSION</b> , valve ... ..						4	—	B	
95226	MF.2604	<b>FILTER</b> , micronic ... ..						1	—	C	
	or MF.2629	<b>FILTER, MICRONIC, ASSEMBLY</b> ... ..						1	—	—	
		Spares for:— <b>ELEMENT</b> ... ..						1	—	C	
27M/9356	MF/HA/36A	<b>FITTING</b> , bulkhead ... ..						26	—	B	
95247	HC.36961	<b>FITTING</b> , bulkhead ... ..						8	—	C	
16L/8300	15489	<b>GASKET</b> , banjo ... ..						54	—	C	
16L/10800	KL.44524	<b>GASKET</b> ... ..						70	—	B	
95257	KL.44521	<b>GASKET</b> , 3/4" ... ..						8	—	B	
95258	KL.44528	<b>GASKET</b> , 1/2" ... ..						8	—	B	
95259	KL.44535	<b>HANDWHEEL</b> ... ..						2	—	B	
95225	HC.2107A	<b>HARNES</b> S, safety, for steadying bombs on cradle						1	—	LM	
95497	†										
	LOCKHEED										
95230	CM.323.B12	<b>HOSE</b> , pump and tank, N.S. and O.S., 12" long						3	—	B	
	or										
	AVA.323.B12										
95231	CM.374.D18	<b>HOSE</b> , pump and tank, N.S., 18" long ... ..						1	—	B	
	or										
	AVA.374.D18										
95232	CM.374.D24	<b>HOSE</b> , pump and tank, O.S., 24" long ... ..						1	—	B	
	or										
	AVA.374.D24										
95233	CM.322.B19	<b>HOSE</b> , lifting cylinder and hydraulic, O.S., 19" long						8	—	B	
	or										
	AVA.322.B19										
95234	CM.323.B24	<b>HOSE</b> , lifting cylinder, 24" long ... ..						4	—	B	
	or										
	AVA.323.B24										
95235	CM.322.B42	<b>HOSE</b> , table cylinder ... ..						1	—	B	
	or										
	AVA.322.B42										
95236	CM.322.B34	<b>HOSE</b> , table cylinder ... ..						1	—	B	
	or										
	AVA.322.B34										
95237	CM.322.B41	<b>HOSE</b> , table cylinder ... ..						1	—	B	
	or										
	AVA.322.B41										
95238	CM.322.B32	<b>HOSE</b> , table cylinder ... ..						1	—	B	
	or										
	AVA.322.B32										
95544	CM.323.B27	<b>HOSE</b> , tilting cylinder, 1/4" x 27" long ... ..						2	—	B	
	or										
	AVA.323.B27										
95568	AS.16556	<b>HOUSING</b> , oil sealing hub ... ..						1	—	C	
95124	AS.16573	<b>KEY</b> , steering arm ... ..						2	—	B	
95590	AS.19008	<b>LEVER</b> , brake ... ..						1	—	B	
95577	J.3177/4	<b>LNK</b> , drag ... ..						1	—	C	
95127	AS.16596	<b>LOCKNUT</b> , steering arm tie rod socket, L.H. ...						2	MS	B	
95126	AS.16595	<b>LOCKNUT</b> , steering arm tie rod socket, R.H. ...						2	MS	B	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95566	AS.17043	NUT,	clamp,	transmitter	bracket	...	...	1	—	C	
16L/9752	18234	NUT,	tube,	$\frac{1}{8}$ "	...	...	...	114	—	C	
95256	No. 19885	NUT,	tube	...	...	...	...	6	—	C	
95117	AS.16438	NUT,	wheel	...	...	...	...	32	—	B	
16M/1478	HC.1787	OUTLET,	straight	...	...	...	...	10	—	C	
95245	HC.14028	OUTLET,	straight,	tank	...	...	...	1	—	B	
95548	AS.19006	PAWL,	hand brake	(Mod. Alvis 1639)	...	...	...	1	—	B	
16L/2460	1234	PIECE,	3-way,	$\frac{1}{8}$ " pipe	...	...	...	5	—	C	
95248	HC.40504	PIECE,	3-way,	pump line,	N.S.	...	...	1	—	B	
95154	AS.17039	PIN,	hinge,	transmitter	bracket	...	...	2	—	B	
28FP/9243488	AVDEL.A.1013	PIN,	"pip"	...	...	...	...	2	—	C	
95139	AS.16675	PIN,	pivot,	bellcrank	lever	...	...	1	—	B	
95134	AS.16715	PIN,	pivot,	hand brake	lever	...	...	1	—	B	
95148	AS.16892	PIN,	pivot,	22" long,	lifting	lever	...	2	—	B	
95149	AS.16800	PIN,	pivot,	8 $\frac{1}{2}$ " long,	lifting	cylinder	...	2	—	B	
95150	AS.16568	PIN,	pivot,	lifting	cylinder	...	...	2	—	B	
95120	AS.16574	PIN,	stub axle	swivel (front) and	lifting	arm stop	...	4	—	B	
95130	AS.16594	PIN,	swivel,	tow bar	...	...	...	1	—	B	
95129	AS.16592	PIN,	swivel,	tow bar	yoke	...	...	1	—	B	
95455	AS.17990	PIN,	cradle	retaining	...	...	...	1	—	C	
95161	AS.17187	PIPE,	tank to tee	piece,	11 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95162	AS.17188	PIPE,	hose adaptor	to filter,	N.S., 21 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95163	AS.17189	PIPE,	tank to hose,	N.S., 16 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95164	AS.17191	PIPE,	3-way,	to pump,	6 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95165	AS.17192	PIPE,	pump to hose,	N.S., 19" long	...	...	...	1	COPPER	B	
95166	AS.17193	PIPE,	pump to hose,	O.S., 14 $\frac{1}{2}$ " long	...	...	...	1	COPPER	B	
95167	AS.17194	PIPE,	reversing	valve to selector	valve,	6 $\frac{1}{2}$ " long	...	1	COPPER	B	
95168	AS.17195	PIPE,	3-way,	to reversing	valve,	N.S., 87 $\frac{1}{2}$ " long	...	1	COPPER	B	
95169	AS.17196	PIPE,	O.S. pump	hose to 3-way,	N.S., 56 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95170	AS.17197	PIPE,	3-way,	to hose adaptor,	N.S., 7 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95171	AS.17202	PIPE,	filter to reversing	valve,	58 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95172	AS.17203	PIPE,	reversing	valve to selector	valve,	9 $\frac{1}{2}$ " long	...	1	COPPER	B	
95173	AS.17204	PIPE,	bracket to selector	valve,	94 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95174	AS.17205	PIPE,	bracket to selector	valve,	97 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95175	AS.17206	PIPE,	bracket to selector	valve,	97" long	...	...	1	COPPER	B	
95176	AS.17207	PIPE,	bracket to selector	valve,	97 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95177	AS.17208	PIPE,	O.S. bracket	to N.S. bracket,	72" long	...	...	1	COPPER	B	
95178	AS.17209	PIPE,	O.S. bracket	to N.S. bracket,	74 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95179	AS.17210	PIPE,	O.S. bracket	to N.S. bracket,	72 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95180	AS.17211	PIPE,	O.S. bracket	to N.S. bracket,	73 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95181	AS.17212	PIPE,	hydroloc	valve to hydroloc	valve (arm), 24" long	...	...	2	COPPER	B	
95182	AS.17213	PIPE,	hydroloc	valve to hydroloc	valve (arm), 10 $\frac{1}{2}$ " long	...	...	2	COPPER	B	
95183	AS.17216	PIPE,	No. 1, hydroloc	valve (arm) to bracket,	O.S., 18 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95184	AS.17217	PIPE,	No. 2, hydroloc	valve (arm) to bracket,	O.S., 25 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95185	AS.17218	PIPE,	No. 3, hydroloc	valve (arm) to bracket,	O.S., 34 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95186	AS.17219	PIPE,	No. 4, hydroloc	valve (arm) to bracket,	O.S., 29 $\frac{1}{2}$ " long	...	...	1	COPPER	B	
95187	AS.17220	PIPE,	No. 1 hydroloc	valve (on arm) to bracket	(on arm), O.S., 46" long	...	...	1	COPPER	B	
95188	AS.17221	PIPE,	No. 2 hydroloc	(on arm) to bracket	(on arm), O.S., 38 $\frac{1}{2}$ " long	...	...	1	COPPER	B	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
95189	AS.17222	PIPE, No. 3 hydroloc (on arm) to bracket (on arm), O.S., 30½" long						1	COPPER	B	
95190	AS.17223	PIPE, No. 4 hydroloc (on arm) to bracket (on arm), O.S., 23" long						1	COPPER	B	
95191	AS.17224	PIPE, jack to jack (forward and aft), 64½" long ...						1	COPPER	B	
95192	AS.17225	PIPE, jack to jack (forward and aft), 44½" long ...						1	COPPER	B	
95193	AS.17226	PIPE, jack to jack (lateral), 35½" long ...						1	COPPER	B	
95194	AS.17227	PIPE, jack to jack (lateral), 34½" long ...						1	COPPER	B	
95195	AS.17228	PIPE, hydroloc valve (top) to 3-way rear end, 10½" long						1	COPPER	B	
95196	AS.17229	PIPE, hydroloc valve (top) to 3-way rear end, 5½" long						1	COPPER	B	
95197	AS.17230	PIPE, pump, hose adaptor O.S. to pump hose adaptor N.S., 94½" long						1	COPPER	B	
95198	AS.17231	PIPE, reversing valve to selector valve, 8½" long						1	COPPER	B	
95199	AS.17232	PIPE, bracket to 3-way, 8½" long ...						2	COPPER	B	
95200	AS.17233	PIPE, bracket to 3-way, 3½" long ...						2	COPPER	B	
95201	AS.17234	PIPE, hydroloc valve (top) to bracket N.S., 48½" long						1	COPPER	B	
95202	AS.17235	PIPE, hydroloc valve (top) to bracket N.S., 42½" long						1	COPPER	B	
95203	AS.17236	PIPE, selector to bracket, 10½" long ...						1	COPPER	B	
95204	AS.17237	PIPE, selector valve to bracket, 10½" long ...						1	COPPER	B	
95205	AS.17238	PIPE, centre to bottom hydroloc valve, 8½" long						1	COPPER	B	
95206	AS.17239	PIPE, centre hydroloc valve to 3-way, 19½" long						1	COPPER	B	
95207	AS.17240	PIPE, bracket to 3-way N.S., 39½" long ...						1	COPPER	B	
95208	AS.17241	PIPE, bracket to 3-way N.S., 43" long ...						1	COPPER	B	
95209	AS.17242	PIPE, hydroloc valve (bottom) to bracket N.S., 43½" long						1	COPPER	B	
95210	AS.17243	PIPE, centre to bottom hydroloc valve, 8" long						1	COPPER	B	
95211	AS.17244	PIPE, bottom hydroloc valve to 3-way, 15½" long						1	COPPER	B	
95212	AS.17245	PIPE, bracket O.S. to 3-way, 13½" long ...						1	COPPER	B	
95213	AS.17246	PIPE, bracket O.S. to 3-way, 18½" long ...						1	COPPER	B	
95214	AS.17247	PIPE, hydroloc valve (centre) to bracket N.S., 42½" long						1	COPPER	B	
95215	AS.17248	PIPE, selector valve to bracket N.S., 104" long ...						1	COPPER	B	
95216	AS.17249	PIPE, selector valve to bracket N.S., 105½" long						1	COPPER	B	
95564	AS.16832	PLATE, keeper, lateral table ...						1	MS	C	
95567	AS.17125	PLATE, pipe carrier ...						1	—	C	
95246	HCP.16902	PLUG, pump ...						2	—	B	
95224	HC.26140F	PUMP, transmitter ...						2	—	B	
95547	AS.19003	QUADRANT, handbrake (Mod. Alvis 1639) ...						1	—	B	
95125	AS.16577	ROD, steering, ¾" o/d. x 8SWG x 25½" long ...						2	MS	C	
95550	AS.19004	ROD (Mod. Alvis 1639) ...						1	—	C	
95467	AS.18003/2	SEAL, felt ...						8	—	C	
95119	†	SEAL, oil, hub (Burtonwood No. 275-350) ...						4	—	B	
95589	HC.24011	SEAL, 1½" for one-way valve, low loader trolley						1	—	C	
95569	ADS.4000/30	SEAL, cylinder head elevating cylinder ...						1	—	C	
95158	AS.17006	SHAFT, store roller ...						4	—	C	
95160	AS.17934	SHAFT, valve handle ...						2	—	C	
95260	J.3704 R.H.	SOCKET, assembly steering tie rod, R.H. ...						2	—	B	
95261	J.3705 L.H.	SOCKET, assembly steering tie rod, L.H. ...						2	—	B	
95143	AS.16671	SPINDLE, bisector lever ...						1	—	B	
95140	AS.16678	SPINDLE, brake lever ...						2	—	B	
95145	AS.16683	SPINDLE, brake lever ...						2	—	B	
95147	N.1783	SPRING, brake return ...						2	—	B	



**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
		1 2 3 4 5 6					
	LOCKHEED						
95257	KL.44521	GASKET, 1/4" BSP ... ..	9	—		B	
95258	KL.44528	GASKET, 3/8" BSP ... ..	6	—		B	
95259	KL.44535	GASKET, 1/4" BSP ... ..	1	—		B	
95391	KL.44523	GASKET, 1/8" BSF ... ..	1	—		B	
95392	KL.44532	GASKET, 3/4" BSF ... ..	1	—		B	
95393	KL.44543	GASKET, 3/4" ... ..	2	—		B	
	WAINE						
95346	WO.1928	HANDLE, roof ... ..	2	—		B	
	LOCKHEED						
95379	CM.326B/11	HOSE, 1/2" x 11" long, pump delivery ... ..	1	—		B	
95376	CM.325B/240	HOSE, 1/2" H.P., 20 ft. long, pressure line ... ..	1	—		B	
	or						
	CM.725/000/B/240	HOSE, 1/2" H.P., 20 ft. long, pressure line ... ..	1	—		B	
95377	CM.373/C/240	HOSE, 3/8" 20 ft. long, return line ... ..	1	—		B	
	or						
	AVA.373.C240						
95378	CM.374F/18	HOSE, 3/4" x 18" long, pump suction ... ..	1	—		B	
95354	ALVIS.18113	LUG, and base, assembly foot pedal ... ..	1	—		B	
	LOCKHEED						
95370	KL.46002	NUT, for 1/4" bulkhead fitting ... ..	1	—		B	
95369	HCP.11505	NUT, for 1/4" bulkhead fitting ... ..	1	—		B	
95343	ALVIS.18124	NUT, support leg ... ..	4	—		B	
	LOCKHEED						
95382	HC.2060	OUTLET, straight, 1/4" ... ..	1	—		B	
95380	HC.2446	OUTLET, straight, 3/8" ... ..	2	—		B	
95384	HC.14027	OUTLET, straight, 3/8" ... ..	1	—		B	
95352	ALVIS.AS.18118	PEDAL, foot, assembly, c/w pad ... ..	1	—		B	
95353	AS.18121	PIN, joint, foot pedal and control valve adaptor	2	—		B	
95347	AS.18139	PIN, roof hinge ... ..	2	—		B	
95399	AS.18326	PIPE, control valve to 3-way, 1/4" o/d. x 20 SWG x 13" long, c/w nuts	1	—		B	
95400	AS.18327	PIPE, 3-way, to select valve, 1/4" o/d. x 20 SWG x 29" long, c/w nuts	1	—		B	
95401	AS.18328	PIPE, 3-way, to bulkhead fitting, 1/4" o/d. x 20 SWG x 24" long, c/w nuts	1	—		B	
95402	AS.18329	PIPE, tank to bulkhead fitting, 3/8" o/d. x 18 SWG x 18 SWG x 22" long, c/w nuts	1	—		R	
95403	AS.18330	PIPE, tank to relief valve, 3/8" o/d. x 18 SWG x 18" long, c/w nuts	1	—		B	
95404	AS.18331	PIPE, relief valve to 3-way, 3/8" o/d. x 18 SWG x 29 1/2" long, c/w nuts	1	—		B	
95405	AS.18332	PIPE, 3-way, to control valve banjo, 3/8" o/d. x 18 SWG, 11" long, c/w nuts	1	—		B	
95406	AS.18333	PIPE, 3-way, to control valve outlet connection 3/8" o/d. x 18 SWG x 3 1/2" long, c/w nuts	1	—		B	
95349	AS.18142	PLATE, roof spring clip ... ..	2	—		B	
95345	ALVIS.AS.18133	PLATE, roof assembly, complete ... ..	1	—		C	
	LOCKHEED						
95386	H.C.P.16901	PLUG, 1/4" BSP ... ..	1	—		B	
95360	FA.7508	PUMP, fluid ... ..	1	—		B	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
	LOCKHEED										
95396	K.17603							8	—	C	
95350	ALVIS.AS.18144							1	—	B	
95364	AS.18357							5	—	B	
95342	AS.18125							4	—	C	
95341	AS.18116							4	—	B	
	LOCKHEED										
95357	HC.29615							1	—	B	
95359	HC.26260D							1	—	B	
95358	HC.28085U							1	—	B	
95366	ALVIS.AS.18359							15	—	C	
	LOCKHEED										
95371	K.19210							1	—	C	
95372	K.19213							1	—	C	
95340	ALVIS.AS.18120							2	—	A	
	—										
	LOCKHEED										
	33438							5	—	B	
95244	33438							5	—	B	
95249	HC.23364							4	—	B	
95383	HC.22379							1	—	B	
95253	HC.1318							5	—	C	
95323	ALVIS.AS.18233							1	—	B	
95324	AS.18234							1	—	B	
	AS.18239							1	—	B	
	LOCKHEED										
27M/8832	AVA.64/B							1	—	C	
27M/8775	AVA.64/C							1	—	C	
27M/8899	AVA.58/B							1	—	C	
27M/8750	AVA.55/C							1	—	C	
	HC.20402							3	—	—	
95257	KL.44521							9	—	C	
16L/10800	KL.44524							5	—	C	
27BA/12069	AVX.273							1	—	C	
27BA/8983	AVX.265							1	—	C	
95382	HC.2060							1	—	B	
16L/2460	No. 1234							1	—	B	
	ALVIS										
95330	AS.18361							1	COPPER	B	
95331	AS.18362							1	COPPER	B	
95332	AS.18363							1	COPPER	B	
95333	AS.18364							1	COPPER	B	
95334	AS.18365							1	COPPER	B	
95335	AS.18366							1	COPPER	B	
95336	AS.18367							1	COPPER	B	
95337	AS.18368							1	COPPER	B	
	LOCKHEED										
95338	HC.44871							2	—	A	
16L/9752	18234							14	—	C	
27M/4699	ADS.174A							1	—	C	
	239							1	—	—	

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Matl. Spec.	Cl. of Equip.		Plate No.
		1	2	3	4	5	6			M.R.	L.M.	
27M/4310	LOCKHEED ADS.174E											
	31385											
95326	HC.44213											
95327	HC.26907											
4F/3229	†											
1C/6239	†											
	JENKS BROS.											
1L/156	EVT.360											
1C/6447	†											
95633	ALVIS.AS.17026											

**EQUIPMENT  
GROUND AND MAINTENANCE**

Ref. No.	Part No.	Description						No. off	Mati. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
<b>TRANSPORTATION EQUIPMENT</b>											
95279	—	<b>BEAM</b> , transportation, fuselage, nose (43G/SAL/180)						1	Deal	B	
95280	—	<b>BEAM</b> , transportation, mid-section, front fuselage (43G/SAL/180)						1	Deal	B	
95281	—	<b>BEAM</b> , transportation, fuselage, rear section (rear) (43G/SAL/181)						1	Deal	B	
95282	—	<b>BEAM</b> , transportation, fuselage, rear section (front) (43G/SAL/181)						1	Deal	B	
95285	—	<b>BEAM</b> , transportation, fuselage, mid-section (rear) (43G/SAL/182)						1	Ash	B	
95289	—	<b>BEAM</b> , transportation, mainplane outer, port (43G/SAL/194)						1	Ash	B	
95290	—	<b>BEAM</b> , transportation, mainplane outer, starboard (43G/SAL/194)						1	Ash	B	
95291	—	<b>BEAM</b> , transportation (support blocks), mainplane (43G/SAL/195)						2	R.S.J.	B	
95286	—	<b>BLOCK</b> , transportation, mainplane, front ... .. (43G/SAL/185)						2	Ash	B	
95287	—	<b>BLOCK</b> , transportation, mainplane, rear ... .. (43G/SAL/185)						2	Ash	B	
95288	—	<b>BLOCK</b> , transportation, mainplane, centre ... .. (43G/SAL/185)						2	Ash	B	
95598	—	<b>CLAMP-PLATE</b> , front, No. 2 universal trestle, front and mid-section transportation (41G/SAL/297)						1 set	M.S.	B	
95599	—	<b>CLAMP-PLATE</b> , rear, No. 2 universal trestle, front and mid-section transportation (41G/SAL/298)						1 set	M.S.	B	
95283	—	<b>PEDESTAL</b> , transportation, tailplane ... .. (43G/SAL/183)						1	M.S.	B	
95284	—	<b>PEDESTAL</b> , transportation, tailplane ... .. (43G/SAL/184)						2	M.S.	B	
<p>NOTE:—The number off shown is the quantity required for the transportation of one aircraft</p>											

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

