

**RADIO  
A.R.I.23021, A.D.F., INSTALLATION**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	E.G4.82.1043	<b>A.R.I. 23021, A.D.F., INSTALLATION (SRIM.3533)</b> (MOD. 4799) Spares for:—						—	—	—	
10HA/16237	†	<b>CONNECTOR</b> , DN.375, pressure bulkhead to aerial loop						1	—	B	
10HA/16238	†	<b>CONNECTOR</b> , PF.375, pressure bulkhead to aerial loop						1	—	B	
10HB/3103	†	<b>CONNECTOR</b> , DM/A/391, aerial loop to junction box, type 1629						1	—	C	
10HB/3113	†	<b>CONNECTOR</b> , DVV.391, pressure bulkhead to receiver						1	—	C	
10HA/16235	†	<b>CONNECTOR</b> , GR/A/375, junction box type 1629, to sense aerial amplifier						1	—	B	
10HB/3102	†	<b>CONNECTOR</b> , DM.391, junction box type 1629 to receiver						1	—	C	
10HB/3120	†	<b>CONNECTOR</b> , DT.391, voltage regulator to receiver						1	—	C	
10HB/3117	†	<b>CONNECTOR</b> , DU.391, pressure bulkhead to receiver						1	—	C	
10HB/10248	†	<b>CONNECTOR</b> , DS.650, pressure bulkhead to receiver						1	—	C	
10HA/16236	†	<b>CONNECTOR</b> , DJ/A/375, sense aerial amplifier to receiver						1	—	B	
10HA/16206	†	<b>CONNECTOR</b> , DK.373, aerial loop to receiver ...						1	—	B	
10HA/16209	†	<b>CONNECTOR</b> , GT.373, sense aerial to sense aerial amplifier						1	—	B	
10HB/10043	†	<b>CONNECTOR</b> , EX.649, radio junction box to pressure bulkhead						1	—	C	
	SCA.78015/130	<b>CONNECTOR</b> , DN.649, loop controller to pressure bulkhead (SRIM.3533) (Mod. 4799)						1	—	—	
10HB/4101310	†	<b>CONNECTOR</b> , DS.649, radio junction box to pressure bulkhead						1	—	C	
	SCA 78015/131	<b>CONNECTOR</b> , DW.649, receiver controller to pressure bulkhead (SRIM.3533) (Mod. 4799)						1	—	—	
10HB/4101312	†	<b>CONNECTOR</b> , PF.649, radio junction box to pressure bulkhead						1	—	C	
10HB/4101313	†	<b>CONNECTOR</b> , PN.649, indicator to radio junction box						1	—	C	
10HB/4101314	†	<b>CONNECTOR</b> , PP.649, indicator to radio junction box						1	—	C	
10HB/10051	†	<b>CONNECTOR</b> , DU.649, power factor transformer to pressure bulkhead						1	—	C	
10HB/13627	†	<b>CONNECTOR</b> , FQ.649, 400 cycle fuse box to power factor transformer						1	—	C	
10HB/10399	†	<b>CONNECTOR</b> , EX.662, pressure bulkhead to voltage regulator						1	—	C	
	E.G4.82.83	<b>EQUIPMENT, A.D.F. IN CENTRE FUSELAGE, INSTALLATION</b> Spares for:—						—	—	—	
10B/17658	†	<b>AERIAL</b> , sense, 8071 (Alternative to Ref. 31951)						1	—	B	
31951	E.A3.82.427	<b>AERIAL SENSE, ASSEMBLY</b> (Alternative to Ref. 10B/17658) Consisting of:—						1	—	B	
	E.A3.82.437	<b>BUSH</b> ... ..						1	—	—	
	E.A3.82.435	<b>CONDUCTOR</b> ... ..						1	BS.249	—	
	E.A3.82.439	<b>DISC</b> , insulating ... ..						1	BS.2572 or BS.2966	—	
28M/9455059	A 14/EB	<b>NUT</b> , 1/2" BSF ... ..						4	—	C	
	E.A3.82.431	<b>PILLAR</b> , centre ... ..						1	BS.2572 or BS.2966	—	

**RADIO**  
**A.R.I.23021, A.D.F., INSTALLATION**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
34732	E.A3.82.429	PILLAR, end ... ..	2	LFS	—	
	E.A3.82.433	ROD, antenna, 3/8" o/d. x 17 SWG ... ..	1	L.62	—	
28S/9446592	A45/B24	SCREW, 4 BA ... ..	1	—	C	
28W/1010007	SP.22/C	WASHER ... ..	2	—	C	
		Attaching parts for E.A3.82.427:—				
28S/9135205	A33/C28	Screw, 2: BA ... ..	18	—	C	
10U/16964	†	AMPLIFIER, sense aerial, Type 1628 ... ..	1	—	A	
	E.G4.82.1105	EQUIPMENT, A.D.F. IN FRONT FUSELAGE, INSTALLATION	—	—	—	
		Spares for:—				
10B/16446	†	AERIAL-LOOP, Type 1324A ... ..	1	—	A	
10D/19525	†	BOX, junction, Type 1629 ... ..	1	—	A	
	E.A3.82.5605	BRACKET, assembly, voltage regulator ... ..	1	—	—	
	E.A3.82.5607	BRACKET, assembly, voltage regulator ... ..	1	—	—	
10J/13152	†	CONTROLLER, loop, Type 1342 ... ..	1	—	A	
10L/16073	†	CONTROLLER, receiver, Type 1274 ... ..	1	—	A	
10Q/16314	†	INDICATOR, bearing, Type 1630, pilot's (NHA-E.G4.80.1183)	Ref	—	A	
10Q/16314	†	INDICATOR, bearing, Type 1630, navigator's (NHA-E.G4.80.891)	Ref	—	A	
5UC/6007	W.25385	REGULATOR, voltage, Type 1555A ... ..	1	—	A	
10K/16244	†	TRANSFORMER, power-factor, Type 1571 ... ..	1	—	B	
	E.G4.82.85	EQUIPMENT, A.D.F. IN STARBOARD WING, INSTALLATION	—	—	—	
		Spares for:—				
10D/17031	†	RACK, assembly, Type 182 ... ..	1	—	A	
10D/19598	†	RECEIVER, AD.70920 ... ..	1	—	A	
10K/18225	†	TRANSFORMER, aerial, Type 1343/A ... ..	1	—	B	
10AR/1026	†	TRAY, receiver mounting ... ..	1	—	B	

**RADIO**  
**A.R.I.23076, DECCA Mk. 1 (AIR) INSTALLATION**

Ref. No.	Part No.	Description					No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5				
	E.G.4.82.1011	<b>A.R.I.23076, DECCA MK. 1 (AIR) INSTALLATION (SRIM.3533) (MOD. 4799)</b>					—	—	—	
	90G/29816	<b>AERIAL, IN PORT BOMB DOOR, INSTALLATION (SRIM.3775) (MOD. 4799)</b>					—	—	—	
10B/9565490	†	<b>AERIAL</b> , Type 880/A ... .. Attaching parts for Ref. 10B/9565490:—					1	—	B	
28S/9435717	90G/29816/19 A33/C20	Gasket, rubber (Make from Ref. 32C/1206557) ...					1	—	LM	
		Screw, 2 BA ... ..					30	—	C	
	90G/29769	<b>AMPLIFIER, AERIAL IN PORT BOMB DOOR, INSTALLATION (SRIM.3775) (MOD. 4799)</b>					—	—	—	
10U/17602	†	<b>AMPLIFIER</b> , aerial, Type M108 ... .. Attaching parts for Ref. 10U/17602:—					1	—	B	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..					4	—	C	
28W/9419402	SP.13/C	Washer ... ..					4	—	C	
5975-99-970 -3104	†	<b>BACKPLATE</b> , assembly, power unit (SCD.78952) (SRIM.3533) (Mod. 4799)					1	—	B	
5841-99-952 -6654	†	<b>BLOWER</b> , assembly, Type 1610-E (SRIM.3533) (Mod. 4799)					1	—	A	
	SCB.79802	<b>CHANNEL</b> , mounting, control unit (Ref. 5975-99-947-9458 modified) (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/71	<b>CONNECTOR</b> , from ECP to power unit and blower relay (SRIM.3533) (Mod. 4799)					Ref	—	—	
	SCA.78015/72	<b>CONNECTOR</b> , from power unit to blower relay and receiver unit "B" (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/73	<b>CONNECTOR</b> , from receiver unit "B" to electrical indicator plug break (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/74	<b>CONNECTOR</b> , from electrical indicators to plug break (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/75	<b>CONNECTOR</b> , between receiver units "A" and "B" (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/76	<b>CONNECTOR</b> , between receiver units "A" and "B" (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/77	<b>CONNECTOR</b> , from power unit to receiver unit "A" (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/78	<b>CONNECTOR</b> , from receiver unit "A" to aerial amplifier (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/79	<b>CONNECTOR</b> , from receiver unit "A" to control unit (SRIM.3533) (Mod. 4799)					1	—	—	
	SCA.78015/80	<b>CONNECTOR</b> , from aerial amplifier to aerial (SRIM.3533) (Mod. 4799)					1	—	—	
	E.G.4.82.1091	<b>COOLING SYSTEM FOR RECEIVER UNITS (SRIM.3808) (MOD. 4799)</b>					—	—	—	
28E/2027591	SP.91/L BELLS ASBESTOS	<b>CLIP</b> , pipe ... .. <b>HOSE</b> , flexible, Type BAS.160-2/3/32/12, 2" i/d. (SRIM.3533) (Mod. 4799)					10 QR	—	C	

**RADIO**  
**A.R.I.23076, DECCA Mk. 1 (AIR) INSTALLATION**

Ref. No.	Part No.	Description						No. off	Mati Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	
5826-99-955 3416-	†	<b>INDICATOR</b> , electrical, Type A274ZF, Green, (SRIM.3533) (Mod. 4799)						1	—	A	
5826-99-955 -3417	†	<b>INDICATOR</b> , electrical, Type A274ZF, Red (SRIM.3533) (Mod. 4799)						1	—	A	
5826-99-955 -3419	†	<b>INDICATOR</b> , electrical, Type A274ZF, Purple (SRIM.3533) (Mod. 4799)						1	—	A	
5826-99-955 -3418	†	<b>INDICATOR</b> , electrical, Type A274ZF, Lane Indent (SRIM.3533) (Mod. 4799)						1	—	A	
	SCC.79914	<b>MOUNTING ASSEMBLY, RECEIVER SUB-ASSY "A" (SRIM.3533) (MOD. 4799)</b> Spares for:—						—	—	—	
5841-99-952 -6656	†	<b>DUCT</b> , air ... ..						1	—	B	
	SCB.79916/1	<b>DUCT</b> , assembly ... .. Attaching parts for SCB.79916/1:—						2	—	—	
28D/1007980	AS.1246/1/2	Bolt, 2 BA ... ..						4	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						4	—	C	
28W/9419402	SP.13/C	Washer ... ..						4	—	C	
	SCC.79341 or	<b>MOUNTING</b> , rack, assembly ... ..						1	—	—	
5826-99-956 -5017	†	<b>RACK</b> , electrical equipment ... ..						1	—	A	
	SCC.79915	<b>MOUNTING ASSEMBLY, RECEIVER SUB-ASSY "B" (SRIM.3533) (MOD. 4799)</b> Spares for:—						—	—	—	
5841-99-952 -6657	†	<b>DUCT</b> , air ... ..						1	—	B	
	SCB.79916/2	<b>DUCT</b> , assembly ... .. Attaching parts for SCB.79916/2:—						1	—	—	
28D/1007980	AS.1246/1/2	Bolt, 2 BA ... ..						4	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						4	—	C	
28W/9419402	SP.13/C	Washer ... ..						4	—	C	
	SCC.79342 or	<b>MOUNTING</b> , rack, assembly ... ..						1	—	—	
5826-99-956 -5018	†	<b>RACK</b> , electrical equipment ... ..						1	—	A	
10P/16604	†	<b>RECEIVER</b> , sub-assy. "A" (SRIM.3533) (Mod. 4799)						1	—	A	
10P/16605	†	<b>RECEIVER</b> , sub-assy. "B" (SRIM.3533) (Mod. 4799)						1	—	A	
5945-99-956 -5110	†	<b>RELAY</b> , assembly, blower (SRIM.3808) (Mod. 4799)						1	—	B	
10L/17101	†	<b>UNIT</b> , control, at navigator's station (SRIM.3533) (Mod. 4799)						1	—	A	
10K/21518	†	<b>UNIT</b> , power, Type M37 (SRIM.3533) (Mod. 4799) (For mounting tray see part No. SCD.78952 on page RH.1)						1	—	A	

**RADIO  
EQUIPMENT AND WIRING RADIO RELAY BOX**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	E.G4.82.1087	<b>EQUIPMENT AND WIRING, RADIO RELAY BOX (SRIM.3533) (MOD. 4799)</b>						—	—	—	
		Spares for:—									
5X/1002695	CZ.23212/1	<b>BLOCK</b> , terminal, 20-way ... ..						4	—	C	
		Attaching parts for CZ.23212/1:—									
28D/1214867	AS.1246/5B	Bolt, 4 BA ... ..						2	—	C	
29C/1206041	AGS.2035/B	Washer, shakeproof ... ..						2	—	C	
	33626	<b>BUS-BAR, ASSEMBLY</b> ... ..						1	—	B	
		Consisting of:—									
	E.B6.82.1029	<b>BUS-BAR</b> ... ..						1	—	—	
28M/5234	A.14/CB	<b>NUT</b> , 2 BA ... ..						3	—	C	
28S/9464989	A.43/C28	<b>SCREW</b> , 2 BA ... ..						3	—	C	
28W/9419475	SP.15/C	<b>WASHER</b> ... ..						3	—	C	
		Attaching parts for E.B6.82.1023:—									
28M/1990760	AGS.2002/C/4	Nut, 2 BA ... ..						2	—	C	
28S/1008081	A.33/C10	Screw, 2 BA ... ..						2	—	C	
29C/1013428	AGS.2036/C	Washer, shakeproof ... ..						2	—	C	
28W/9419475	SP.15/C	Washer ... ..						2	—	C	
	33627	<b>BUS-BAR, ASSEMBLY</b> ... ..						1	—	B	
		Consisting of:—									
28D/1011030	A.25/2E	<b>BOLT</b> , 1/2" BSF ... ..						1	—	C	
	E.B6.82.1029	<b>BUS-BAR</b> ... ..						1	—	—	
28M/1007403	A.27/ET	<b>NUT</b> , 1/2" BSF ... ..						1	—	C	
28M/5234	A.14/CB	<b>NUT</b> , 2 BA ... ..						4	—	C	
28S/9464989	A.43/C28	<b>SCREW</b> , 2 BA ... ..						4	—	C	
28W/9419475	SP.15/C	<b>WASHER</b> ... ..						4	—	C	
28W/9419487	SP.16/E	<b>WASHER</b> ... ..						1	—	C	
		Attaching parts for E.B6.82.1025:—									
28M/1990760	AGS.2002/C/4	Nut, 2 BA ... ..						2	—	C	
28S/1008081	A.33/C10	Screw, 2 BA ... ..						2	—	C	
29C/1013428	AGS.2036/C	Washer, shakeproof ... ..						2	—	C	
28W/9419475	SP.15/C	Washer ... ..						2	—	C	
	33628	<b>BUS-BAR, ASSEMBLY</b> ... ..						1	—	B	
		Consisting of:—									
28D/1011030	A.25/2E	<b>BOLT</b> , 1/2" BSF ... ..						1	—	C	
	E.B6.82.1029	<b>BUS-BAR</b> ... ..						1	—	—	
28M/1007403	A.27/ET	<b>NUT</b> , 1/2" BSF ... ..						1	—	C	
28M/5234	A.14/CB	<b>NUT</b> , 2 BA ... ..						3	—	C	
28S/9464989	A.43/C28	<b>SCREW</b> ... ..						3	—	C	
28W/9419475	SP.15/C	<b>WASHER</b> ... ..						3	—	C	
28W/9419487	SP.16/E	<b>WASHER</b> ... ..						1	—	C	
		Attaching parts for E.B6.82.1027:—									
28M/1990760	AGS.2002/C/4	Nut, 2 BA ... ..						2	—	C	
28S/1008081	A33/C10	Screw, 2 BA ... ..						2	—	C	
29C/1013428	AGS.2036/C	Washer, shakeproof ... ..						2	—	C	
28W/9419475	SP.15/C	Washer ... ..						2	—	C	
	5X/9010	<b>INSULATOR</b> , bus-bar ... ..						6	—	C	
		Attaching parts for AS.2722:—									
28D/1214865	AS.1246/2B	Bolt, 4 BA ... ..						2	—	C	

**RADIO  
EQUIPMENT AND WIRING RADIO RELAY BOX**

Ref. No.	Part No	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
5X/1004086	Z.50219	LINK, commoning, transverse ... ..						2	—	C	
5X/1004082	Z.50210	LINK, commoning, 2-way ... ..						8	—	C	
5X/1012212	Z.50218	LINK, commoning, 10-way ... ..						2	—	C	
	†	<b>RELAY AND MOUNTING, INSTALLATION</b>						—	—	—	
		(SRIM.3533) (MOD. 4799)									
	SCC.79487/2	BLOCK, packing, 10 SWG ... ..						2	L.72	—	
	SCA.79513	PLATE, relay, 18 SWG ... ..						1	L.72	—	
	SCB.79488	PLATE, relay mounting, 18 SWG ... ..						1	L.72	—	
		Attaching parts for SCB.79488:—									
28D/9133012	A25/3C	Bolt, 2 BA ... ..						2	—	C	
	SM-5M-N156	RELAY, Type 4C ... ..						1	—	—	
33420	E.B7.81.347	SUPPORT, terminal block ... ..						6	—	C	
		Attaching parts for E.B7.81.347:—									
28D/1214867	AS.1246/5B	Bolt, 4 BA ... ..						2	—	C	
	†	<b>TERMINAL, EARTH, ASSEMBLY</b>						—	—	—	
		Consisting of:—									
28M/1006473	A.27/CT	NUT, 2 BA ... ..						1	—	C	
28M/1278190	AGS.2001/C/1	NUT, 2 BA ... ..						1	—	C	
28S/1011481	A.31/C48	SCREW, 2 BA ... ..						1	—	C	
17519	EEAS.28/4DPH	WASHER ... ..						1	—	C	

**RADIO**  
**A.R.I.23090/9, COLLINS, H.F. INSTALLATION**

Ref. No.	Part No.	Description	No. off	Mati Spec.	Cl. of Equip.		Plate No.
					M.R.	L.M.	
		1 2 3 4 5 6					
	E.G4.82.1007	<b>A.R.I. 23090/9, COLLINS, H.F. INSTALLATION (SRIM.3533) (MOD. 4799)</b>	—	—	—	—	
	—	Spares for:— <b>AERIAL WIRE, ASSEMBLY</b> ... ..	—	—	—	—	
	—	Spares for:—					
	CHELTON 3505	<b>CAP</b> , insulating ... ..	1	—	—	—	
	5399	<b>CAP</b> , insulating ... ..	1	—	—	—	
	5398	<b>CHUCK</b> , assembly ... ..	1	—	—	—	
	3510	<b>CHUCK</b> , assembly ... ..	1	—	—	—	
	CHELTON AS.467/205	<b>PIN</b> , weak, link ... ..	1	—	—	—	
10B/16897	CHELTON 1JWC4063	<b>UNIT</b> , tension, type B or S ... ..	1	—	—	—	B
	CHELTON 5E/4885 5048	<b>WIRE</b> , aerial ... ..	QR	—	—	—	C
10B/	CHELTON Z.5485	<b>AERIAL MAST</b> , type 69 Attaching parts for Z5485:—	1	—	—	—	—
28D/1212806	AS.1248/6C	Bolt, 2 BA ... ..	12	—	—	—	C
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..	12	—	—	—	C
	40504	Seal (Made from 32C/628) ... ..	1	—	—	—	C
28W/9419402	SP.13/C	Washer ... ..	12	—	—	—	C
	E.C3.82.67	<b>AERIAL ATTACHMENT, FITTINGS ON FIN, INSTALLATION</b> Consisting of:—	—	—	—	—	—
	40216	<b>BAR</b> , toggle ... ..	1	—	—	—	C
28D/9133011	A25/2C	<b>BOLT</b> , 2 BA ... ..	2	—	—	—	C
	40215	<b>EYE-BOLT</b> ... ..	1	—	—	—	C
	40219	<b>NUT</b> , special ... ..	1	—	—	—	C
28M/5808573	A27/CS	<b>NUT</b> , 2 BA ... ..	2	—	—	—	C
	40221	<b>PLATE</b> , adapter ... ..	2	—	—	—	C
	40220	<b>PIN</b> ... ..	1	—	—	—	C
28P/9486478	SP.90/C5	<b>PIN</b> , split ... ..	2	—	—	—	C
28P/9560929	SP.90/E8	<b>PIN</b> , split ... ..	1	—	—	—	C
	40217	<b>WASHER</b> ... ..	1	—	—	—	C
	40218	<b>WASHER</b> ... ..	1	—	—	—	C
28W/9419475	SP.15/C	<b>WASHER</b> ... ..	2	—	—	—	C
	E.G4.82.1079	<b>BOX, DISTRIBUTION, H.F., ASSEMBLY (SRIM. 3533) (MOD. 4799)</b> Spares for:—	1	—	—	—	—
	5X/3181	<b>BLOCK</b> , terminal, 20-way ... ..	1	—	—	—	C
	28S/1200033	Attaching parts for CZ.23712/1:— Screw, 4 BA ... ..	2	—	—	—	C
28W/9416642	SP.47/B	Washer ... ..	2	—	—	—	C
	E.G4.82.1081	<b>BOX</b> , sub-assembly ... ..	1	—	—	—	—
5E/4189	†	<b>CABLE</b> , Uninyvin 8 ... ..	QR	—	—	—	C
5E/4187	†	<b>CABLE</b> , Uninyvin 12 ... ..	QR	—	—	—	C
5E/4183	†	<b>CABLE</b> , Uninyvin 20 ... ..	QR	—	—	—	C
5E/4201	†	<b>CABLE</b> , Uninyvinmetsheath 16 ... ..	QR	—	—	—	C
	E.G4.82.1083	<b>COVER, ASSEMBLY (SRIMS.3533, 3872) (MOD. 4799)</b> Spares for:—	1	—	—	—	—
	20457	<b>SCREW</b> , 4 BA ... ..	6	—	—	—	C



**RADIO**  
**A.R.I.23090/9, COLLINS, H.F. INSTALLATION**

Ref. No.	Part No.	Description						No. off	Mati Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	SCA.78015/21	CONNECTOR, from pilot's starboard coaming panel and dimmer switch panel, switches to HF distribution box (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/22	CONNECTOR, from control unit to HF distribution box (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/23	CONNECTOR, from HF distribution box to pre-amplifier Type UA6002 (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/24	CONNECTOR, from HF distribution box to aerial tuner Type 490T/1 (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/25	CONNECTOR, from HF distribution box to trans receiver Type 618T (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/26	CONNECTOR, from trans receiver Type 618T to aerial tuner Type 490T/1 (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/27	CONNECTOR, from trans receiver Type 618T to aerial tuner Type 490T/1 (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/28	CONNECTOR, from HF distribution box to i/c distribution box Type UA6043 (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/29	CONNECTOR, from HF distribution box to 1600 distribution box and ECP (SRIM.3533) (Mod. 4799)						Ref	—	—	
	SCA.78015/30	CONNECTOR, from aerial to aerial tuner Type 490T/1 (SRIM.3533) (Mod. 4799)						1	—	—	
10F/1047561	†	KEY, telegraph (SRIM.3872) (Mod. 4799) ... ..						1	—	B	
10AJ/9451643	†	MOUNTING, resilient, Type 3905/1, trans receiver (SRIM.3533) (Mod. 4799)						1	—	A	
		Attaching parts for Ref. 10AJ/9451643:—									
28D/9709461	AS.1242/3C	Bolt, 2 BA ... ..						16	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						16	—	C	
28W/9403514	SP.26/C	Washer ... ..						16	—	C	
10U/9148966	†	PRE-AMPLIFIER, Type UA6002 (SRIM.3533) (Mod. 4799)						1	—	A	
		Attaching parts for Ref. 10U/9148966:—									
28M/1221216	A125/C66	Nut, 8 UNC ... ..						2	—	C	
28W/9156626	SP.122/C	Washer ... ..						2	—	C	
10D/23518	†	TRANS-RECEIVER, Type 618T/3 (SRIM.3533) (Mod. 4799)						1	—	A	
	SCD.79005	UNIT, AERIAL TUNER, INSTALLATION (SRIM.3533) (MOD. 4799)						—	—	—	
		Spares for:—									
	E.H8.82.363	CONDUIT, assembly, HF cable ... ..						1	—	—	
	E.H8.82.183	CONDUIT, assembly, HF cable ... ..						1	—	—	
	SCB.79006	FAIRLEAD, assembly (Make from Ref. 5F/9400956)						1	—	—	
	SCB.79038	FAIRLEAD, assembly (Make from Ref. 5F/9400956)						1	—	—	
		Attaching parts for SCB.79006 or SCB.79038:—									
28D/1011006	A25/5B	Bolt, 4 BA ... ..						2	—	C	
28D/9140645	A25/10C	Bolt, 2 BA ... ..						1	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA ... ..						2	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						1	—	C	
28W/9419402	SP.13/C	Washer ... ..						1	—	C	

**RADIO**  
**A.R.I.23090/9, COLLINS, H.F. INSTALLATION**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	SCC.79033	<b>FAIRLEAD, INSTALLATION</b> ... ..						—	—	—	
	SCB.79036	Spares for:— <b>FAIRLEAD, assembly</b> (Make from Ref. SF/9400956)						1	—	—	
		Attaching parts for SCB.79036:—									
28D/1010029	A25/6B	Bolt, 4 BA ... ..						2	—	C	
28D/1011021	A25/16C	Bolt, 2 BA ... ..						1	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA ... ..						2	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						1	—	C	
28W/9419465	SP.13/B	Washer ... ..						2	—	C	
28W/9419402	SP.13/C	Washer ... ..						1	—	C	
110B/5616480	†	<b>INSULATOR</b> ... ..						1	—	C	
	SCD.78916	<b>MOUNTING, structure assembly</b> for aerial tuning unit						1	—	—	
		Attaching parts for SCD.78916:—									
28FP/7002000	AGS.2105/403	Pin, quick release ... ..						2	—	C	
28FP/11	AGS.2105/A418	Pin, quick release ... ..						2	—	C	
5980-00-871-9123	†	<b>MOUNTING, resilient, Type 790Y/2</b> for aerial tuning unit						1	—	A	
		Attaching parts for Ref. 5980-00-871-9123:—									
28D/9133011	A25/2C	Bolt, 2 BA ... ..						16	—	C	
28W/9419402	SP.13/C	Washer ... ..						16	—	C	
1438516	E.H8.82.181	<b>SLEEVE, HF cable conduit</b> ... ..						1	—	—	
	E.G7.82.2807	<b>SPARK-GAP, ASSEMBLY</b> ... ..						1	—	B	
		Consisting of:—									
	E.G7.82.2811	<b>BLOCK, base, assembly</b> ... ..						1	—	—	
	E.G7.82.191	<b>CABLE, ASSEMBLY, HF3, from spark-gap</b> to aerial post						1	—	—	
	E.G7.82.199	<b>CABLE, ASSEMBLY, EARTH, from spark-gap</b> to earth						1	—	—	
		(See Cable Chart for Breakdown Spares)									
5X/9409403	BULGIN P.92	<b>CAP, valve</b> ... ..						2	—	C	
	E.C3.82.419	<b>COVER</b> ... ..						1	—	—	
		Attaching parts for E.C3.82.419:—									
28D/9130080	AS.1242/9B	Bolt, 4 BA ... ..						3	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA ... ..						3	—	C	
28W/9419474	SP.15/B	Washer ... ..						3	—	C	
	E.G7.82.2809	<b>SPACER</b> ... ..						1	LFS	LM	
	E.E. Co. Ltd. LINCOLN ZD.32664	<b>SPARK-GAP, Type BS142</b> ... ..						1	—	B	
		Attaching parts for E.G7.82.2807:—									
28D/9133012	A25/3C	Bolt, 2 BA ... ..						2	—	C	
28W/9419402	SP.13/C	Washer ... ..						2	—	C	
110D/8726847	†	<b>UNIT, aerial tuning, Type 490T-1</b> ... ..						1	—	A	
10L/16857	†	<b>UNIT, control, Type 714E-3, on pilot's starboard</b> coaming panel (SRIM.3533) (Mod. 4799)						1	—	A	

**RADIO  
A.R.I.18011, I.L.S., INSTALLATION**

Ref. No.	Part No.	1	2	3	4	5	6	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
											M.R.	
	E.G4.82.1051							<b>A.R.I. 18011, I.L.S., INSTALLATION (SRIM. 3533) ...</b> (MOD. 4799) Spares for:—	—	—	—	
10B/16706	†							<b>AERIAL</b> , marker, Type 237 ... ..	1	—	A	
	E.A9.82.197							<b>AERIAL, I.L.S., IN LEADING EDGE, PORT, INSTALLATION</b> Spares for:—	—	—	—	
10B/16708	†							<b>AERIAL</b> , localiser, Type 239 ... ..	1	—	A	
28D/9133011	A25/2C							Attaching parts for Ref. 10B/16708:—				
40233	EEAS 28/3FU							Bolt, 2 BA ... ..	18	—	C	
								Washer ... ..	18	—	C	
	E.A9.82.198							<b>AERIAL, I.L.S., IN LEADING EDGE, STARBOARD, INSTALLATION</b> Spares for:—	—	—	—	
10B/16707	†							<b>AERIAL</b> , glide path, Type 238 ... ..	1	—	A	
28D/9133011	A25/2C							Attaching parts for Ref. 10B/16707:—				
40233	EEAS.28/3FU							Bolt, 2 BA ... ..	10	—	C	
								Washer ... ..	10	—	C	
	E.B6.82.175							<b>BOX, JUNCTION, TYPE 164, INSTALLATION</b> ... Spares for:—	—	—	—	
10D/4042156	†							<b>BOX</b> , junction, Type 164 ... ..	1	—	A	
28S/9992522	A32/B16							Attaching parts for Ref. 10D/4042156:—				
28W/9419465	SP.13/B							Screw, 4 BA ... ..	4	—	C	
								Washer ... ..	4	—	C	
10HA/4042159	E.A4 82.521							<b>CONNECTOR</b> , shorting, Type 3793, at junction box 164	1	—	C	
10HA/11993	E.A4.82.519							<b>CONNECTOR</b> , shorting, Type 3794, at junction box 164 (Fitted when zero reader is not used)	1	—	C	
10HB/37	E.A4.82.505							<b>CONNECTOR</b> , B7/20A/R1, pressure bulkhead to junction box 157	1	—	C	
10HB/39	E.A4.82.509							<b>CONNECTOR</b> , B11/20A/R2, pressure bulkhead to junction box 157	1	—	C	
10HB/40	E.A4.82.511							<b>CONNECTOR</b> , B11/30B/R7, junction box 164 to pressure bulkhead	1	—	C	
10HB/41	E.A4.82.513							<b>CONNECTOR</b> , B21/50F/R1, junction box 164 to warning light	1	—	C	
10HB/42	E.A4 82.515							<b>CONNECTOR</b> , B11/30B/R8, junction box 164 to pilot's indicator	1	—	C	
10HB/43	E.A4.82.517							<b>CONNECTOR</b> , B19/50E/R1, terminal block to junction box 157	2	—	C	
10HB/44	E.A4.82.523							<b>CONNECTOR</b> , D267/30B/R16, localiser marker receiver to wing root break	1	—	C	
10HB/45	E.A4.82.525							<b>CONNECTOR</b> , D267/30A/R8, wing root break to port inner wing rib 6 break	1	—	C	
10HB/46	E.A4.82.527							<b>CONNECTOR</b> , D273/30A/R1, inner wing rib 6 break to outer wing rib 2 break, port	1	—	C	
10HB/47	E.A4.82.529							<b>CONNECTOR</b> , D267/30A/R9, outer wing rib 2 break to localiser aerial, port	1	—	C	
10HB/48	E.A4 82.531							<b>CONNECTOR</b> , D267/30B/R17, glide path receiver to wing root break	1	—	C	
10HB/49	E.A4.82.533							<b>CONNECTOR</b> , D267/30A/R10, wing root break to inner wing rib 6 break, starboard	1	—	C	

**RADIO**  
**A.R.I.18011, I.L.S., INSTALLATION**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
10HB/50	E.A.4.82.535	CONNECTOR, D273/30A/R2, inner wing rib 6 break to outer wing rib 2 break, starboard	1	—	C	
10HB/51	E.A.4.82.537	CONNECTOR, D267/30A/R11, outer wing rib 2 break to glide path aerial, starboard	1	—	C	
10HB/52	E.A.4.82.539	CONNECTOR, D267/30B/R18, localiser-marker receiver to marker aerial	1	—	C	
10HB/53	E.A.4.82.541	CONNECTOR, D243/20D/R2, pressure bulkhead to junction box 157	1	—	C	
10HB/55	E.A.4.82.545	CONNECTOR, D243/30B/R6, pressure bulkhead to junction box 157	1	—	C	
10HB/10494	E.B.6.82.955	CONNECTOR, I.L.S.1, pressure bulkhead to junction box 157	1	—	C	
10HB/10495	E.B.6.82.957	CONNECTOR, I.L.S.2, radio junction box to pressure bulkhead	1	—	C	
10HB/10496	E.B.6.82.1047	CONNECTOR, I.L.S.3, control unit to pressure bulkhead	1	—	C	
10HB/10497	E.B.6.82.1055	CONNECTOR, I.L.S.7, control unit to pressure bulkhead	1	—	C	
10HB/10498	E.B.6.82.1057	CONNECTOR, I.L.S.8, control unit to pressure bulkhead	1	—	C	
	E.G4.82.1113	EQUIPMENT IN UPPER EQUIPMENT BAY, INSTALLATION (SRIM. 3533) (MOD. 4799) Spares for:—	—	—	—	
5X/9402803	AS.2635	BLOCK, terminal, 5-way ... ..	1	—	C	
		Attaching parts for AS.2635:—				
28S/1200034	A31/B16	Screw, 4 BA ... ..	2	—	C	
28W/9419465	SP.13/B	Washer ... ..	2	—	C	
5X/9402794	AS.2603	COVER, terminal block ... ..	1	—	C	
5X/9402800	AS.2666	LINK, commoning ... ..	1	—	C	
5X/9402799	AS.2606	TERMINAL, screwed head, double tier ... ..	5	—	C	
5X/9400055	AS.2674	FERRULE ... ..	8	—	C	
10Q/4049193	†	INDICATOR, azimuth deviation on pilot's flying panel (NHA-E.G4.80.1183)	Ref	—	A	
	E.A.4.82.289	INSTALLATION OF ENGINE BREAK, INNER, PORT Spares for:—	—	—	—	
	23864	BRACKET, assembly ... ..	1	—	C	
		Attaching parts for E.A.9.82.171:—				
28D/1010658	A25/1B	Bolt, 4 BA ... ..	4	—	C	
28M/1278189	AGS.2001/B/1	Nut, 4 BA ... ..	4	—	C	
28W/9419474	SP.13/B	Washer ... ..	4	—	C	
10H/19610	†	PLUG, bulkhead, Type 757 ... ..	1	—	C	

**RADIO  
A.R.I.18011, I.L.S., INSTALLATION**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
	E.A.4.82.287	<b>INSTALLATION OF ENGINE BREAK, OUTER, PORT</b> Spares for this installation are identical with those for Part No. E.A.4.82.289, on page RE 2	—	—	—	
	E.A.4.82.290	<b>INSTALLATION OF ENGINE BREAK, INNER, STARBOARD</b> Spares for this installation are identical with those for Part No. E.A.4.82.289, on page RE 2	—	—	—	
	E.A.4.82.288	<b>INSTALLATION OF ENGINE BREAK, OUTER, STARBOARD</b> Spares for this installation are identical with those for Part No. E.A.4.82.289, on page RE 2	—	—	—	
	E.G.4.82.1117	<b>RECEIVERS AND JUNCTION BOX, UPPER EQUIPMENT BAY, INSTALLATION (SRIM.3533) (MOD. 4799)</b> Spares for:—	—	—	—	
10D/17815	†	<b>BOX</b> , junction, Type 157 ... ..	1	—	B	
10AJ/118	†	<b>RACK</b> , mounting, Type 933 ... ..	1	—	C	
		Attaching parts for Ref. 10AJ/118:—				
28D/1010031	A25/8E	Bolt, 1/4 BSF ... ..	4	—	C	
28W/9418921	SP.13/E	Washer ... ..	4	—	C	
10D/17818	†	<b>RECEIVER</b> , Type R1964 ... ..	1	—	A	
10D/17819	†	<b>RECEIVER</b> , Type R1965 ... ..	1	—	A	
	E.G.4.82.1107	<b>UNIT CONTROL, TYPE 705 AND I.L.S. SWITCH, INSTALLATION (SRIM.3533) (MOD. 4799)</b> Spares for:—	—	—	—	
5CW/8815	AS.10512L-1	<b>PLATE</b> , adapter (Alt. R60/61—Mod. 5100) ...	1	—	C	
5CW/4706404	AS.10512M-1	<b>SHROUD</b> , terminal (Alt. R60/61—Mod. 5100) ...	1	—	C	
5CW/1047690	†	<b>SWITCH</b> (Pre-Mod. 5100) ... ..	1	—	C	
		Attaching parts for Ref. 5CW/1047690:—				
28S/9419435	A31/B12	Screw, 4 BA ... ..	2	—	C	
5CW/9235	AS.10512A-2	<b>SWITCH</b> (Alt. R60/61—Mod. 5100) ... ..	1	—	B	
10L/263	†	<b>UNIT</b> , control, Type 705 ... ..	1	—	A	

Ref. No.	Part No.							No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6			M.R. L.M.	

**RADIO**  
**A.R.I.23099, ULTRA UA60, INSTALLATION**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.G4.82.1013	<b>A.R.I.23099, ULTRA UA60, INSTALLATION (SRIM. 3533) (MOD. 4799)</b> Spares for:—	—	—	—	
5831-99-945 -2676	†	<b>AMPLIFIER</b> , Type UA6070, on navigator's starboard wall	1	—	A	
6110-99-945 -2673	†	<b>BOX</b> , distribution, Type UA6043 on navigator's starboard wall	1	—	A	
5935-99-948 -3324	†	<b>BOX</b> , jack, Type UA6075W, in starboard wheel well	1	—	A	
5831-99-945 -2674	†	<b>BOX</b> , station, Type UA6014/F, pilot's, first and second navigator's	3	—	A	
	SCB.79380	<b>BRACKET</b> , assembly, jack box (SRIM.3533) (Mod. 4799) Attaching parts for SCB.79380:—	1	L.72	—	
28D/9133011	A25/2C	Bolt, 2 BA ... ..	4	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..	4	—	C	
28W/9419402	SP.13/C	Washer ... ..	4	—	C	
	E.B6.82.799	<b>CABLE ASSEMBLY</b> , I/C 29, from external terminal block at frame 19 to bulkhead break at frame 29	1	—	—	
	E.B6.82.797	<b>CABLE ASSEMBLY</b> , I/C 28, from bulkhead break at frame 29 to terminal block, rear fuselage at frame 32	1	—	—	
	E.G4.82.1123	<b>CABLE ASSEMBLY</b> , from distribution box to radio junction box and i/c ground crew amplifier switch on pilot's coaming panel (Alt. R60/61—Mod. 5100)	1	—	LM	
	E.G4.82.1125	<b>CABLE ASSEMBLY</b> , from i/c isolation switch on pilot's coaming panel to radio junction box (Alt. R60/61—Mod. 5100)  (See Cable Chart for Breakdown Spares)	1	—	LM	
	SCA.78015/58	<b>CONNECTOR</b> , from amplifier to distribution box (SRIM.3533) (Mod. 4799)	1	—	—	
	SCA.78015/59	<b>CONNECTOR</b> , from distribution box to pilot's station box (SRIM.3533) (Mod. 4799)	1	—	—	
	SCA.78015/60	<b>CONNECTOR</b> , from pilot's station box to first navigator's station box (SRIM.3533) (Mod. 4799)	1	—	—	
	SCA.78015/61	<b>CONNECTOR</b> , between first and second navigator's station boxes (SRIM. 3533) (Mod. 4799)	1	—	—	
	SCA.78015/62	<b>CONNECTOR</b> , from distribution box to second navigator's station box ((SRIM.3533) (Mod. 4799)	1	—	—	
	SCA.78015/63	<b>CONNECTOR</b> , from pilot's station box to throttle box plug break (SRIM.3533) (Mod. 4799)	1	—	—	
	SCA.78015/64	<b>CONNECTOR</b> , from first navigator's station box to transmit switch (SRIM.3533) (Mod 4799)	1	—	—	
	SCA.78015/65	<b>CONNECTOR</b> , from second navigator's station box to transmit switch (SRIM.3533) (Mod. 4799)	1	—	—	
	SCA.78015/66	<b>CONNECTOR</b> , from transient protection unit to i/c master switch on take-off panel (SRIM.3533) (Mod. 4799)	1	—	—	

**RADIO**  
**A.R.I.23099, ULTRA UA60, INSTALLATION**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	SCA.78015/67	<b>CONNECTOR</b> , from distribution box to radio junction box and i/c ground crew amplifier switch on pilot's coaming panel (SRIM.3533) (Mod. 4799) (Pre-Mod. 5100)						1	—	—	
	SCA.78015/68	<b>CONNECTOR</b> , from i/c isolation switch on pilot's coaming panel to radio junction box (SRIM.3533) (Mod. 4799) (Pre-Mod. 5100)						1	—	—	
	SCA.78015/69	<b>CONNECTOR</b> , from distribution box to transient protection unit (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/100	<b>CONNECTOR</b> , from radio junction box to pressure bulkhead (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/101	<b>CONNECTOR</b> , from pressure bulkhead to terminal block at frame 19 (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/102	<b>CONNECTOR</b> , from terminal block at frame 19 to jack box (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/56	<b>CONNECTOR</b> , from radio junction box to distribution box (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/57	<b>CONNECTOR</b> , from radio junction box to distribution box (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.79381	<b>FAIRLEAD</b> , starboard wheel bay (Make from Ref. 5F/9400951) (SRIM.3533) (Mod. 4799)						1	—	LM	
5CW/4400171	NSF.8804/B102 or 5CW/9240 AS.10512A-7 5CW/9268 AS.10512D-7 5CW/5839 NSF.8810/B104	<b>SWITCH</b> , transmit, second navigator's ... ..						Ref	—	C	
		<b>SWITCH</b> (Alt. R60/61—Mod. 5100) ... ..						Ref	—	B	
		<b>SWITCH</b> , tone and transmit, first navigator's ...						Ref	—	B	
		<b>SWITCH</b> , i/c isolation and ground crew amplifier on pilot's coaming panel and i/c master on take-off panel						Ref	—	C	
5CW/4408107	AS.10512B-2	<b>SWITCH</b> , i/c (Alt. R60/61—Mod. 5100) ... ..						Ref	—	B	
5CW/9235	AS.10512A-2	<b>SWITCH</b> , amplifier (Alt. R60/61—Mod. 5100) ...						Ref	—	B	
5CW/1933296	PAGE B1640	<b>SWITCH</b> , push, on pilot's throttle lever ... ..						Ref	—	C	
5831-99-948 -3317	†	<b>UNIT</b> , transient protection, Type UA6003 ... ..						1	—	A	

**RADIO**  
**A.R.I.23143/1 AND 23143/4, TWIN P.T.R.175, INSTALLATION**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.G.4.82 1003	<b>A.R.I. 23143/1 &amp; 23143/4, TWIN P.T.R.175, INSTALLATION (SRIM. 3533) (MOD. 4799)</b> Spares for:—	—	—	—	
	E.B.6.82.335	<b>AERIAL, LOWER, INSTALLATION</b> ... .. Spares for:—	—	—	—	
10B/2222399	†	<b>AERIAL</b> , Type 16-1 (SRIM. 3800) (Mod. 5049) ... Attaching parts for Ref. 10B/2222399:—	1	—	A	
28D/1212806	AS.1248/6C	Bolt; 2 BA ... ..	6	—	C	
1438504	E.B.6.82.1415	Plate, mounting ... ..	1	—	C	
28W/9419402	SP.13/C	Washer ... ..	6	—	C	
	E.B.6.82.337	<b>STRUCTURE, U.H.F., AERIAL, INSTALLATION</b> Spares for:—	—	—	—	
33434	E.B.6.82.341	<b>BRACKET</b> , support ... .. Attaching parts for E.B.6.82.341:—	1	S.510	C	
28D/9133012	A25/3C	Bolt; 2 BA ... ..	4	—	C	
28M/1278190	AGS.2001/C/1	Nut; 2 BA ... ..	4	—	C	
28W/9419475	SP.15/C	Washer ... ..	4	—	C	
	E.B.6.82.611	<b>AERIAL, UPPER, INSTALLATION</b> ... .. Spares for:—	—	—	—	
10B/2222399	†	<b>AERIAL</b> , Type 16-1 (SRIM. 3800) (Mod. 5049) ... Attaching parts for Ref. 10B/2222399:—	1	—	A	
28D/1212806	AS.1248/6C	Bolt; 2 BA ... ..	6	—	C	
40605	E.B.6.82.1417	Plate, mounting ... ..	1	—	C	
28W/9419402	SP.13/C	Washer ... ..	6	—	C	
	SCD.40370	<b>AERIAL, WHIP, AT RIB NO. 4, PORT BOMB DOOR, INSTALLATION (SRIM. 3533) (MOD. 4799)</b> Spares for:—	—	—	—	
10B/9513781	†	<b>AERIAL</b> ... .. Attaching parts for Ref. 10B/9513781:—	1	—	A	
28D/1007981	AS.1248/½C	Bolt; 2 BA ... ..	4	—	C	
	SCC.31142	<b>CONDUIT</b> , 1" o/d. x 20 SWG ... .. Attaching parts for SCC.31142:—	1	L.54	—	
28D/9436920	A25/1C	Bolt; 2 BA ... ..	2	—	C	
28E/1053257	AS 5418/16	Chip, "P" ... ..	1	—	C	
28M/1278190	AGS.2001/C/1	Nut; 2 BA ... ..	1	—	C	
28S/9992533	A32/C20	Screw; 2 BA ... ..	1	—	C	
28W/9419402	SP.13/C	Washer ... ..	3	—	C	
	SCC.31145	<b>COVER</b> , 16 SWG ... .. Attaching parts for SCC.31145:—	1	L.72	—	
28D/1007982	AS.1248/1C	Bolt; 2 BA ... ..	QR	—	C	
28D/1013284	AS.1248/2C	Bolt; 2 BA ... ..	QR	—	C	
10AL/290	†	<b>GROMMET</b> , Type 123 ... ..	1	—	C	
	SCD.79442	<b>AERIAL, WHIP, AT RIB 18, PORT BOMB DOOR, INSTALLATION (SRIM. 3533) (MOD. 4799)</b> Spares for:—	—	—	—	
10B/9513781	†	<b>AERIAL</b> ... .. Attaching parts for Ref. 10B/9513781:—	1	—	A	
28D/1007981	AS.1248/½C	Bolt; 2 BA ... ..	4	—	C	

**RADIO**  
**A.R.I.23143/1 AND 23143/4, TWIN P.T.R.175, INSTALLATION**

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	SCC.79485	<b>CONDUIT</b> , 1" o/d. x 20 SWG ... ..						1	L.54	—	
		Attaching parts for SCC.79485:—									
28D/1200119	A25/4C	Bolt, 2 BA ... ..						2	—	C	
28E/1053257	AS.5418/16	Clip, "P" ... ..						1	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..						1	—	C	
28S/9131095	A31/C14	Screw, 2 BA ... ..						1	—	C	
28W/9419402	SP.13/C	Washer ... ..						3	—	C	
	SCB.79398	<b>COVER</b> , assembly ... ..						1	—	—	
		Attaching parts for SCB.79398:—									
28D/1013284	AS.1248/2C	Bolt, 2 BA ... ..						14	—	C	
10AL/290	†	<b>GROMMET</b> , Type 123 ... ..						1	—	C	
6110-99-945	†	<b>BOX</b> , distribution, Type UA6043 on starboard wall (SRIM. 3533) (Mod. 4799)						1	—	A	
-2673											
	SCA.78015/1	<b>CONNECTOR</b> , from muting unit interconnecting box No. 1 to MEP (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/2	<b>CONNECTOR</b> , from muting unit interconnecting box No. 2 to MEP (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/3	<b>CONNECTOR</b> , from radio junction box to ECP (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/4	<b>CONNECTOR</b> , from radio junction box to pressure bulkhead (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/5	<b>CONNECTOR</b> , from UA6043 distribution box to radio junction box (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/6	<b>CONNECTOR</b> , from UA6043 distribution box to radio junction box (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/7	<b>CONNECTOR</b> , from radio junction box to CU1607/4 and CU1607/7 control units (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/8	<b>CONNECTOR</b> , from CU1607/7 control unit to pressure bulkhead (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/9	<b>CONNECTOR</b> , from pressure bulkhead to No. 1 muting unit interconnecting box (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/10	<b>CONNECTOR</b> , from No.2 muting unit interconnecting box to control receiver muting (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/11	<b>CONNECTOR</b> , from No.1 muting unit interconnecting box to No.1 T/R, PTR175 (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/12	<b>CONNECTOR</b> , from No.1 T/R, PTR175 to upper UHF aerial (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/13	<b>CONNECTOR</b> , from No.2 T/R, PTR175 to lower UHF aerial (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/14	<b>CONNECTOR</b> , from C1607/4 control unit to pressure bulkhead (SRIM.3533) (Mod. 4799)						1	—	—	
	SCA.78015/15	<b>CONNECTOR</b> , from pressure bulkhead to No. 2 muting unit interconnecting box (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/16	<b>CONNECTOR</b> , from No. 2 muting unit interconnecting box to No.2 T/R, PTR175 (SRIM. 3533) (Mod. 4799)						1	—	—	
	SCA.78015/17	<b>CONNECTOR</b> , from No.1 T/R, PTR175 to forward aerial in port bomb-door (SRIM. 3533) (Mod. 4799)						1	—	—	

**RADIO**  
**A.R.I.23143/1 AND 23143/4, TWIN P.T.R.175, INSTALLATION**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	SCA.78015/18	<b>CONNECTOR</b> , from No. 2 T/R, PTR175 to rear aerial in port bomb-door (SRIM.3533) (Mod.4799)	1	—	—	
	SCA.78015/110	<b>CONNECTOR</b> , from pilot's starboard instrument panel to radio junction box (SRIM.3533) (Mod.4799)	1	—	—	
	SCA.78015/111	<b>CONNECTOR</b> , from radio junction box to ECP (SRIM.3533) (Mod.4799)	1	—	—	
	E.G4.82.1089	<b>CONTROL, MUTING AND INTERCONNECTING BOX, NO. 2, PTR, REAR FUSELAGE, INSTALLATION (MOD. 4799)</b> Spares for:—	1	—	—	
10AD/9326361	†	<b>BOX</b> , interconnecting ... ..	1	—	B	
5E/4189	†	<b>CABLE</b> , Uninyvin 8 ... ..	QR	—	C	
5E/4185	†	<b>CABLE</b> , Uninyvin 16 ... ..	QR	—	C	
5X/9400056	AS.2675	<b>FERRULE</b> ... ..	2	—	C	
5X/9400055	AS.2674	<b>FERRULE</b> ... ..	1	—	C	
5X/9400051	AS 2672	<b>FERRULE</b> ... ..	2	—	C	
5X/4491624	12318	<b>LUG</b> ... ..	2	—	C	
	E.G5.82.181	<b>PANEL, ASSEMBLY</b> ... .. Spares for:—	1	—	—	
5X/9402802	AS.2633	<b>BLOCK</b> , terminal, 19 amp. ... ..	1	—	C	
5X/9402792	AS.2651	<b>BLOCK</b> , terminal, 37 amp. ... .. Attaching parts for Ref. 5X/9402802 and 5X/9402792:—	1	—	C	
28S/9995376	A32/B20	Screw, 4 BA ... ..	2	—	C	
28W/9419465	SP.13/B	Washer ... ..	2	—	C	
5CZ/1053794	†	<b>BLOCK</b> , terminal, 2-way ... .. Attaching parts for Ref. 5CZ/1053794:—	2	—	C	
28S/1200041	A31/A24	Screw, 6 BA ... ..	2	—	C	
28W/9419464	SP.13/A	Washer ... ..	2	—	C	
5X/9402796	AS.2601	<b>COVER</b> , 19 amp. ... ..	1	—	C	
5X/9435997	AS.2638	<b>COVER</b> , 37 amp. ... ..	1	—	C	
10L/9433247	†	<b>CONTROL</b> , muting receiver ... .. Attaching parts for Ref. 10L/9433247:—	1	—	A	
28S/1200034	A31/B16	Screw, 4 BA ... ..	4	—	C	
28W/9419465	SP.13/B	Washer ... ..	4	—	C	
	E.G5.82.183	<b>PLATE, MOUNTING, ASSEMBLY</b> ... .. Spares for:—	1	—	—	
	E.B6.82.433	<b>BRACKET</b> , assembly ... ..	1	—	—	
28E/9492696	TERRY 80/3	<b>CLIP</b> ... ..	1	—	C	
10F/9321487	†	<b>RELAY</b> , magnetic, Type 1741 ... .. Attaching parts for Ref. 10F/9321487:—	1	—	B	
28S/5694	A32/B40	Screw, 4 BA ... ..	2	—	C	
28W/9419465	SP.13/B	Washer ... ..	2	—	C	
5X/9402799	AS 2606	<b>SOCKET</b> , assembly, 19 amp. ... ..	2	—	C	
5X/9402798	AS.2641	<b>SOCKET</b> , assembly, 37 amp. ... ..	2	—	C	
10H/2206		<b>SOCKET</b> , Type 359 ... ..	1	—	C	
		Attaching parts for E.G4.82.1089:—				
28S/9997545	A31/C16	Screw, 2 BA ... ..	8	—	C	

**RADIO**  
**A.R.I.23143/1 AND 23143/4, TWIN P.T.R.175, INSTALLATION**

Ref. No.	Part No.	Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
					M.R. L.M.	
		1 2 3 4 5 6				
	E.G4.80.1403	<b>PANEL, ASSEMBLY, INSTRUMENTS, STARBOARD, PILOT'S (MOD. 4799)</b>	Ref	—	—	
		Spares for:—				
5CW/1047692	†	<b>SWITCH</b> , S.P. on/off, tone 1 and 2 ... ..	Ref	—	C	
5CW/1047693	†	<b>SWITCH</b> , S.P. changeover, pilot's/navigator's ...	Ref	—	C	
	E.G4.80.1333	<b>PANEL, ASSEMBLY, SIDE, NAVIGATOR'S</b>	Ref	—	—	
		Spares for:—				
5CZ/5692	C5165Y Mk.4	<b>INDICATOR</b> , magnetic ... ..	Ref	—	C	
5CW/9268	AS.10512D-7	<b>SWITCH</b> , tone/transmit ... ..	Ref	—	B	
	E.G5 82.149	<b>TRANSMITTER/RECEIVER, NO. 2, PTR/175, REAR FUSELAGE, INSTALLATION</b>	—	—	—	
		Spares for:—				
10AS/9428544	†	<b>MOUNTING</b> , Type MT.1477 ... ..	1	—	A	
		Attaching parts for Ref. 10AS/9428544:—				
28D/9436920	A25/1C	Bolt, 2 BA ... ..	16	—	C	
28W/9419402	SP.13/C	Washer ... ..	16	—	C	
10D/9711781	†	<b>TRANSMITTER/RECEIVER, PTR/175</b> ... ..	1	—	A	
	SCD.78698	<b>TRANSMITTER/RECEIVER, NO. 1, PT/175, CENTRE FUSELAGE, INSTALLATION (SRIM.3533) (MOD. 4799)</b>	—	—	—	
		Spares for:—				
10AD/9326361	†	<b>BOX</b> , interconnecting ... ..	1	—	B	
		Attaching parts for Ref. 10AD/9326361:—				
28S/7105755	A217/C14	Screw, 8 UNC ... ..	4	—	C	
28W/9156626	SP.122/C	Washer ... ..	4	—	C	
	SCD.78697	<b>BRACKET</b> , assembly, control mounting ... ..	1	L.72	—	
		Attaching parts for SCD.78697:—				
28D/1212315	A60/2E	Bolt, 1/4" BSF ... ..	4	—	C	
28W/9418921	SP.13/E	Washer ... ..	4	—	C	
10L/9433247	†	<b>CONTROL</b> , muting, receiver ... ..	1	—	A	
		Attaching parts for Ref. 10L/9433247:—				
28S/1200034	A31/B16	Screw, 4 BA ... ..	4	—	C	
28W/9419465	SP.13/B	Washer ... ..	4	—	C	
10AS/9428544	†	<b>MOUNTING</b> , Type MT.1477 ... ..	1	—	A	
		Attaching parts for Ref. 10AS/9428544:—				
28D/1007972	A25/1/2C	Bolt, 2 BA ... ..	16	—	C	
28M/1278190	AGS.2001/C/1	Nut, 2 BA ... ..	16	—	C	
28W/9419402	SP.13/C	Washer ... ..	16	—	C	
10D/9711781	†	<b>TRANSMITTER/RECEIVER, PTR/175</b> ... ..	1	—	A	
10L/1070030	†	<b>UNIT</b> , control, Type C.1607/7, navigator's coaming panel (SRIM. 3533) (Mod. 4799)	1	—	A	
10L/9455739	†	<b>UNIT</b> , control, Type C.1607/4, starboard instrument panel	2	—	A	



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

