

## INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
<b>CONTROLS, ENGINE (Section B)</b>		
Engine Controls in Centre Fuselage	EA1-47-125	B.1
Engine Controls in Nose Fuselage	EA1-47-5	B.1
Engine Controls in Port Wing	EA3-47-21	B.1
Engine Controls in Starboard Wing	EA3-47-22	B.1
<b>CONTROLS, FLYING (Section B)</b>		
Aileron Controls in Port Wing	EA1-45-13	BA.1
Aileron Controls in Starboard Wing	EA1-45-14	BA.1
Flap, Operating, Port	EA1-20-701	BA.1
Flap, Operating, Starboard	EA1-20-700	BA.1
Flying Controls in Centre Fuselage	EA3-45-379	BC.1
Flying Controls in Cockpit	EA3-45-5011	BB.1
Flying Controls in Rear Fuselage	EA3-45-385	BC.1
<b>ELECTRICAL (Section C)</b>		
Electrical Equipment in Centre Fuselage	EH5-81-349	CA.1
Electrical Equipment in Front Fuselage	EH5-81-341	C.1
Electrical Equipment in Rear Fuselage	EH5-81-355	CB.1
Electrical Equipment in Port Wing	EA3-81-5551	CC.1
Electrical Equipment in Starboard Wing	EA3-81-5552	CD.1
<b>EQUIPMENT, AIRCRAFT (Section D)</b>		
Equipment in Pressure Cabin	EH5-80-1	D.1
<b>EQUIPMENT, ANCILLARY (Section E)</b>		
Ground Equipment	EA3-88-5029	E.1
<b>FUSELAGE (Section F)</b>		
Centre Portion	EA3-00-5043	F.1
Centre Structure	EA3-11-5001	F.2
Front Portion	EA3-10-5899	FA.1
Nose Portion	EH5-00-5	FB.1
Rear Portion	EA3-12-5001	FC.1
Rear Fuselage and Tail Unit	EH5-00-123	FC.3
<b>MAIN PLANES (Section G)</b>		
Main Plane, Port	EA3-00-5011	G.1
Main Plane, Starboard	EA3-00-5012	GA.1
<b>MISCELLANEOUS ATTACHMENTS (Section H)</b>		
	—	H.1
<b>POWER INSTALLATION (Section J)</b>		
Cowling, Engine, Port	EA1-50-395	J.1
Cowling, Engine, Starboard	EA1-50-396	J.1
Engine Mounting and Attachments, Port	EA1-51-1	JA.1
Engine Mounting and Attachments, Starboard	EA1-51-2	JA.1
R.A.3 Engine Installation, Port	EA1-00-103	JB.1
R.A.3 Engine Installation, Starboard	EA3-00-5010	JB.3

## INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
RADAR, RADIO (Section K) Radar, GEE 3, Installation Radar, Cossor I.F.F./S.S.R. Installation Radar, TACAN Installation	EA3-90-5001 EH5-82-43 EH5-82-41	KB.1 KBA.1 KBB.1
Radio, I.L.S. in Centre Fuselage Radio, I.L.S. in Front Fuselage Radio, I.L.S. in Port Wing Radio, I.L.S. in Starboard Wing Radio, U.H.F. AN-ARC 52, Installation Radio, W.T. and I.C. Installation	EA3-82-5091 EA3-82-5089 EA3-82-5093 EA3-82-5094 19C/30529 EA3-82-5127	KD.1 KD.2 KD.8 KD.9 KC.1 KE.1
SERVICES (Section L) Cabin Pressure System De-Misting System Fuel System in Centre Fuselage Hydraulic Equipment in Front Fuselage Hydraulic Equipment in Centre Fuselage Oxygen System Window Launcher Heating System	EA3-73-5053 EA3-76-5001 EA3-57-5015 EA3-73-5005 EH5-73-101 EH5-71-1 EA3-75-5127	LA.1 LB.1 LC.1 LD.1 LD.4 LE.1 LF.1
TAIL UNIT (Section M) Tailplane and Elevators	— EA3-00-5007	M.1 M.1
TANKS (Section N)	—	N.1
UNDERCARRIAGE (Section P)	—	P.1

This file was downloaded  
from the RTFM Library:

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

