

GENERAL ASSEMBLY OF AIRCRAFT

Ref. No.	Part No.	Description						No. off	Matl Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6				
	EH5-00-1	GENERAL ASSEMBLY OF AIRCRAFT						—	—	—	
		Spares for:—									
	EA1-47-3	CONTROLS, ENGINE (See Section B)						—	—	—	
	EA1-45-5035	CONTROLS, FLYING (See Section B)						—	—	—	
	EA1-20-10733	DOOR, UNDERCARRIAGE, C/W MECHANISM, PORT, ASSEMBLY (See AP.101B-0402-3A)						—	—	—	
	EA1-20-10734	DOOR, UNDERCARRIAGE, C/W MECHANISM, STARBOARD, ASSEMBLY (See AP.101B-0402-3A)						—	—	—	
	EA1-00-103	ENGINE, R.A.3. PORT, INSTALLATION (See Section J)						—	—	—	
	EA3-00-5010	ENGINE, R.A.3. STARBOARD, INSTALLATION (See Section J)						—	—	—	
	EH5-81-1	EQUIPMENT, ELECTRICAL (See Section C)						—	—	—	
	EA3-88-5029	EQUIPMENT, GROUND AND MAINTENANCE (See Section E)						—	—	—	
	EH5-82-39	EQUIPMENT, RADAR (See Section K)						—	—	—	
	EH5-82-1	EQUIPMENT, RADIO (See Section K)						—	—	—	
6A/6486	EA1-20-6515	FATIGUE METER, L.H. INNER WING						1	—	A	
	EA1-60-7	FATIGUE METER BRACKET						1	—	—	
	EA1-60-7	FIRE PROTECTION SYSTEM (See AP.101B-0402-3A)						—	—	—	
	EH5-57-1	FUEL, 300 GALLON TANK (See Sect. LC)						—	—	—	
	EA3-57-519	FUEL, TANK VENT OUTLET (See AP.101B-0402-3A)						—	—	—	
	EH5-00-121	FUSELAGE, CENTRE, ASSEMBLY (See Section F)						—	—	—	
	EH5-00-5	FUSELAGE, FRONT, ASSEMBLY (See Section F)						—	—	—	
	EH5-00-123	FUSELAGE, REAR AND TAIL UNIT (See Section F)						—	—	—	
	EA1-00-23	FUSELAGE, FRONT TO CENTRE ASSEMBLY (See AP.101B-0402-3A)						—	—	—	
	EA1-00-25	FUSELAGE, CENTRE TO REAR ASSEMBLY (See AP.101B-0402-3A)						—	—	—	
	EA3-73-5001	HYDRAULIC SYSTEM (See Sect. LD)						—	—	—	
	EH5-71-1	OXYGEN SYSTEM (See Sect. LE)						—	—	—	
	EA3-20-4103	PANELS, ADDITIONAL ACCESS, INNER WING LOWER SURFACE, LH (Mod. 5015) (See AP.101B-0402-3A)						—	—	—	
	EA3-20-4104	PANELS, ADDITIONAL ACCESS, INNER WING LOWER SURFACE, RH (Mod. 5015) (See AP.101B-0402-3A)						—	—	—	
	EA3-20-4105	PANELS, ADDITIONAL ACCESS, OUTER WING LOWER, FWD OF SPAR, LH (Mod. 5015) (See AP.101B-0402-3A)						—	—	—	
	EA3-20-4106	PANELS, ADDITIONAL ACCESS, OUTER WING LOWER, FWD OF SPAR, RH (Mod. 5015) (See AP.101B-0402-3A)						—	—	—	
	EA3-20-4107	PANELS, ADDITIONAL ACCESS, OUTER WING LOWER, AFT OF SPAR, LH (Mod. 5015) (See AP.101B-0402-3A)						—	—	—	
	EA3-20-4108	PANELS, ADDITIONAL ACCESS, OUTER WING LOWER, AFT OF SPAR, RH (Mod. 5015) (See AP.101B-0402-3A)						—	—	—	

GENERAL ASSEMBLY OF AIRCRAFT

Ref. No.	Part No.							Description	No. off	Matl Spec.	Cl. of Equip.		Plate No.
		1	2	3	4	5	6				M.R.	L.M.	
	EA3-00-5011							WING, PORT, ASSEMBLY (See Section G)	—	—	—	—	
	EA3-00-5012							WING, STARBOARD, ASSEMBLY (See Section G)	—	—	—	—	
	EA1-00-21							WING TO FUSELAGE ASSEMBLY, LH (See AP.101B-0402-3A)	—	—	—	—	
	EA1-00-22							WING TO FUSELAGE ASSEMBLY, RH (See AP.101B-0402-3A)	—	—	—	—	

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

