

RESTRICTED

CONTROLS

ENGINE

REF. NO.	PART NO.	DESCRIPTION					No. OFF	MATL. SPEC.	Class of Equip.	Plate and Illust'n. No.
		1	2	3	4	5			M.R.	
	EA1-47-5	CONTROL				ENGINE, IN NOSE FUSELAGE, ASSEMBLY Spares for:- See AP 4326B Vol.3, page 33	-	-	-	
	EA3-47-21	CONTROL				ENGINE, IN PORT WING ASSEMBLY Spares for:- See AP 4326B Vol.3, page 47	-	-	-	
	EA3-47-22	CONTROL				ENGINE, IN STARBOARD WING ASSEMBLY Spares for:- See AP 4326B Vol.3, page 53	-	-	-	
	EA1-47-125	CONTROL				ENGINE, IN CENTRE FUSELAGE Spares for:- See AP 4326B Vol.3, page 59	-	-	-	

RESTRICTED

**RESTRICTED**

CONTROLS  
FLYING  
AILERON AND FLAP MECHANISM IN  
PORT AND STARBOARD WINGS

REF. NO.	PART NO.	DESCRIPTION					No. OFF	MATL. SPEC.	Class of Equip.	Plate and Illust'n.
									M.R.	No.
		1	2	3	4	5				
	EA1-45-13	CONTROLS	FLYING,	AILERON,	PORT WING,		-	-	-	
			ASSEMBLY							
			Spares for:- See AP.4326B							
			Vol.3, page 19.							
	EA1-45-14	CONTROLS	FLYING,	AILERON STARBOARD	WING,		-	-	-	
			ASSEMBLY							
			Spares for:- See AP.4326B							
			Vol.3, page 25.							
	EA1-20-701	CONTROLS	FLAP OPERATING	PORT,			-	-	-	
			ASSEMBLY							
			Spares for:- See AP.4326B							
			Vol.3, page 67.							
	EA1-20-700	CONTROLS,	FLAP OPERATING	STARBOARD			-	-	-	
			ASSEMBLY							
			Spares for:- See AP.4326B							
			Vol.3, page 79							

CONTROLS  
FLYING IN COCKPIT

Ref. No.	Part No.							Description	No. off	Mtl. Spec.	Cl. of Equip. M.R. L.M.	Plate No.
		1	2	3	4	5	6					
	EA3-45-5011							CONTROLS, FLYING IN COCKPIT, ASSEMBLY	—	—	—	
								Spares for:—Identical to assembly No. EA3-45-3, AP.101B-0402-3A except for the following.				
								Delete:—				
	EA3-45-5							CONTROLS AND FIXINGS ON PILOT'S FLOOR, GROUP	—	—	—	
	EA3-45-7							PEDALS, PILOT'S RUDDER CONTROL BAR, GROUP	—	—	—	
								Add:—				
	EA3-45-5003							CONTROLS AND FIXINGS ON PILOT'S FLOOR, GROUP				
								Spares for:—Identical to assembly No. EA3-45-5, AP.101B-0402-3A except for the following:—				
								Delete:—				
1464	EA3-45-13							COLUMN CONTROL, PILOT'S, GROUP	1	—	A	
								Add:—				
	EH5-45-1							COLUMN CONTROL, PILOT'S, GROUP (Mod. 5028)	1	—	—	
								Spares for:—Identical to assembly No. EA3-45-13, AP.101B-0402-3A except for the following:—				
								Delete:—				
20664	EA3-45-473							CABLE, brake assembly	1	—	C	
	EA3-81-1785							CABLE, RT. 13, press to mute switch to TB at control column	1	—	—	
73	EA1-45-125							CONTROL, ELEVATOR, GROUP	1	—	A	
								Add:—				
14532	EA3-45-5017							CABLE, brake assembly	1	—	C	
	EA3-82-5157							CABLE, RT. 13 PRESS TO MUTE SWITCH TO TB. AT CONTROL COLUMN, GROUP	1	—	—	
								Consisting of:—				
5E/3113	—							CABLE, Duprensheath 6	QR	—	C	
5K/9107067	EEAS.146/C							SLEEVE, 1 in. long	2	—	C	
5K/9107065	EEAS.146/A							SLEEVE, 3/4 in. long	4	—	C	
1/39243	EA3-45-539							CONTROL, ELEVATOR, ASSEMBLY (Mod. 5028)	1	—	A	
								Spares for:—See AP.101B-0402-3A				

CONTROLS  
FLYING IN COCKPIT

Ref. No.	Part No.							Description	No. off	Matl Spec.	Cl. of Equip.	Plate No.
		1	2	3	4	5	6				M.R. L.M.	
							Add:—(Contd.)					
	EA3-45-5005						PEDALS, PILOT'S RUDDER BAR CONTROL, GROUP	—	—	—		
							Spares for:—Identical to assembly No. EA3-45-7, AP.101B-0402-3A except for the following:—					
							Delete:—					
	EA3-45-457						CONTROL, CABLE HYDRAULIC BRAKE ASSEMBLY (Mod. 1165)	—	—	—		
101	EA3-45-63						LEVER, rudder control, c/w sprocket	1	—	C		
	EA3-45-249						UNIT BRAKE CONTROL, GROUP	1	—	—		
							Add:—					
	EA3-45-5007						CONTROL CABLE, HYDRAULIC BRAKE, ASSEMBLY	—	—	—		
							Spares for:—					
22270	EA3-45-461						BLOCK, pully support	2	DTD.5024	C		
22271	EA3-45-465						BLOCK, tapped	2	S.92	C		
22272	EA3-45-467						BLOCK, tapped	2	S.92	C		
	EA3-45-5015						BRACKET, cable guide, assembly	1	—	—		
							Spares for:—					
3459	EA6-45-291						BLOCK, cable adjusting	1	—	C		
	EA3-45-5019						BRACKET, at pedestal	1	—	—		
	EA3-45-5013						BRACKET, pulley, 18 SWG	1	S.3 or S.84	—		
12224	EA3-45-463						GUIDE, cable	2	—	C		
12225	EA3-45-459						PULLEY, at control column, assembly	1	—	C		
12226	EA3-45-469						WASHER, thrust at pulley	4	DTD.5024	C		
32712	EA3-45-5047						LEVER and boss, assembly (Mod. 2737)	1	—	—		
	EA3-45-5009						UNIT, BRAKE CONTROL, ASSEMBLY	—	—	—		
							Spares for:—					
	EA3-10-5791						BRACKET, brake valve, assembly	1	—	—		
	EA3-45-5025						BRACKET, bellcrank lever	1	—	—		
2025	EA3-45-189						CAM, plate, guide	1	DTD.5024	C		
14529	EA3-45-5031						LEVER, BELLCRANK, ASSEMBLY	1	—	B		
							Spares for:—					
	OILITE. CT.4						BEARING, $\frac{5}{8}$ in. long, '0608	1	BS.1131			
2026	EA3-45-191						LEVER, slotted, valve operating	1	S.96	C		
14530	EA3-45-5021						LINK, bellcrank lever to valve operating lever	1	S.96	C		
14531	EA3-45-5029						LINK, connecting ball joints	1	S.96	C		
2027	EA3-45-195						PIN, connecting bellcrank lever to brake unit lever	1	S.96	C		
	EA3-45-5023						TUBE, bearing bellcrank lever to bracket	1	S.1			

RESTRICTED

CONTROLS  
FLYING  
IN CENTRE AND REAR FUSELAGE

REF. NO.	PART NO.	DESCRIPTION					No. OFF	MATL. SPEC.	Class of Equipmt.	Plate and Illust'n. No.
		1	2	3	4	5			M.R.	
	EA3-45-379	CONTROLS,				FLYING IN CENTRE FUSELAGE ASSEMBLY Spares for:- See AP 4326B Vol.3, Page 115	-	-	-	
	EA3-45-385	CONTROLS,				FLYING IN REAR FUSELAGE ASSEMBLY Spares for:- See AP 4326B Vol.3, Page 123	-	-	-	

RESTRICTED



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

