

CHAP	5	FLT SYST	SERVICING PROCEDURES		AP101B-1000-5A3 E	
SP NO	505	CONTINUED	LIGHTNING		Section 1 (1st Edition)	
SHEET	2	AL 12			AC NO DATE	
Safety and Servicing Notes are to be complied with throughout the work detailed on this card.					SERVICING RECORD	
					(1)	(2)
					(3)	(4)
					(5)	
<p style="text-align: center;">FLT SYST</p> <p>3. <u>General</u></p> <p>3.1 Instrument master switch. Set to 'OFF'.</p> <p>3.2 External power supplies. (Ac and dc). (i) Set to 'OFF'. (ii) Disconnect and remove from aircraft.</p> <p>3.3 Pitot/Static test set. Disconnect and remove from aircraft.</p>						
SMS/80/453/18A						

SMS 17A



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

ENGINE
INHIBITED
DO NOT
TURN
PROP