

CHAP	5	FLT SYST	SERVICING PROCEDURES LIGHTNING	AP101B-1000-5A3 E	
SP NO	518	CONTINUED		Section 1	
SHEET	2	AL 12		(1st Edition)	
			AC NO DATE		

Safety and Servicing Notes are to be complied with throughout the work detailed on this card.

SERVICING RECORD

(1)	(2)	(3)	(4)	(5)
-----	-----	-----	-----	-----

FLT SYST

- 2. Testing (Contd)
- 2.4 Type 11 test set press to deflect switch. Operate.
- 2.5 Rudder trailing edge. Ensure moves to Starboard and then decays to neutral.
- 2.6 Type 11 test set press to deflect switch. Release.
- 2.7 Rudder trailing edge. Ensure moves to Port then decays to neutral.
- 2.8 Dither setting. Carry out SP379.
- 2.9 PCU.
 - (a) Stab switch.)
 - (b) Master switch.)
 Set to 'OFF'.
- 2.10 Instrument master switch.)
- 2.11 MRG On/Off switch.)
- Set to 'OFF'.
- 3. General
- 3.1 External power supplies.
 - (i) Set to 'OFF'.
 - (ii) Disconnect and remove from aircraft.
- 3.2 Type 11 test set. Disconnect from aircraft test socket.
- 3.3 Hydraulic ground rigs.
 - (i) Set to 'OFF'.
 - (ii) Disconnect and remove from aircraft.

SMS 17A

SMS/80/543/48A

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.



LIGHTNING MK. 1
COVER PITOT HEAD
EB2-88-511