

CHAP	5	AIR RADAR	SERVICING PROCEDURES LIGHTNING	AP101B-1000-5A3 F Section 1 (1st Edition)				
SP NO	501	CONTINUED		AC NO DATE				
SHEET	2			SERVICING RECORD				
Safety and Servicing Notes are to be complied with throughout the work detailed on this card.			(1)	(2)	(3)	(4)	(5)	
AIR RADAR								
2.	<u>Built-in Self Test</u>							
2.3	CU 16929.							
	(a) Self Test button.	Release.						
	(b) Function switch.	Set to 'NORM' and allow a one minute warm up period.						
	(c) Self Test button.	(i) Depress (ii) Ensure Green confidence lamp lights.						
2.4	Secondary warning panel.	Ensure IFF warning lamp extinguishes.						
2.5	CU 16929.							
	(a) Self Test button.	Release.						
	(b) Function switch.	Set to 'EMGY'.						
	(c) Self Test button.	(i) Depress and ensure Green confidence lamp lights. (ii) Release.						
	(d) Function switch.	Set to 'OFF'.						
2.6	Secondary warning panel.	Ensure IFF warning lamp lights.						
3.	<u>General</u>							
3.1	Installation power supplies.	Switch off.						
RM 52011/91A								

SMS 17A

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

