

CHAP	2	AIR COMMS	SERVICING PROCEDURES LIGHTNING	AP101B-1000-5A3F ² Section (1st Edition)				
SP NO	100	CONTINUED		AC NO DATE				
SHEET	2	AL19		SERVICING RECORD				
Safety and Servicing Notes are to be complied with throughout the work detailed on this card.				(1)	(2)	(3)	(4)	(5)
AIR COMMS								
2.	<u>Built-in Self Test</u> (Contd)							
2.3	Indicator 48 AMR.		(i)	Ensure off flag has cleared.				
			(ii)	Depress 'press to test' and ensure indicator feeds 100 ft PLUS OR MINUS 15 ft and low warning light does not illuminate.				
			(iii)	Rotate index setting Bug to over 100 ft and ensure low height warning is indicated on both indicator and remote warning light as Bug passes indicated height.				
			(iv)	Decrease index setting Bug height below indicated height and ensure low height warning extinguishes.				
			(v)	'Press to Test' release.				
3.	<u>Overall System Check</u>							
3.1	Indicator 48 AMR.		(i)	Set bug height to zero ft ensuring the 'OFF' flag remains cleared and that low height indicators are both extinguished.				
			(ii)	Set bug height to approximate 20 ft and ensure both low height indicators illuminate.				
SMS/82/37/8A				Continued				

SMS 17A



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.