

## Chapter I GENERAL INFORMATION

## LIST OF CONTENTS

	<i>Para.</i>
<i>Introduction</i> ... ..	1

## LIST OF TABLES

	<i>Table</i>
<i>Access to equipment</i> ... ..	1

## LIST OF ILLUSTRATIONS

	<i>Fig.</i>
<i>Location diagrams</i>	
<i>Wireless installation</i> ... ..	1
<i>Wireless installation in cockpit...</i>	2

**WARNING**

The relevant safety precautions detailed on the LETHAL WARNING marker card must always be observed before entering the cockpit or servicing the aircraft.

**Introduction**

1. This chapter gives the location of the components and the cockpit controls of the U.H.F. and telebriefing systems and the instrument landing system. The component locations are shown in fig.1

and the controls in fig.2. Power supplies for the equipment are described in Sect. 6, Chap.11. The systems are described in subsequent chapters of this Section, reference being made, where necessary, to other Air Publications from which further information may be obtained.

**TABLE 1**  
**Access to equipment**

ITEM	ACCESS PANEL
U.H.F. Standby T/R unit	22P
U.H.F. Main T/R unit	30P
Homing RF & A.F. units	22P
Localizer-marker receiver (R 1964)	69P
Voltage regulator, Type 60	69P
Glide path receiver (R 1965)	87P

RESTRICTED

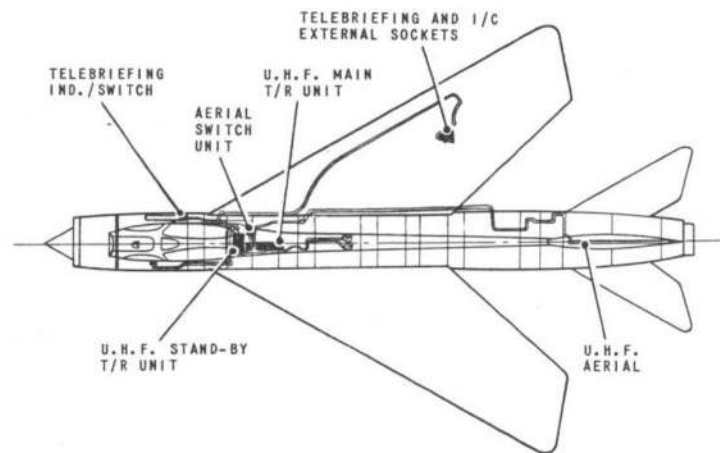
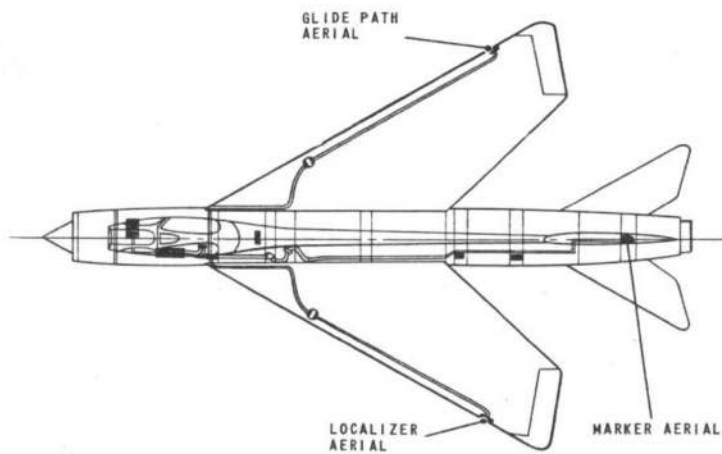
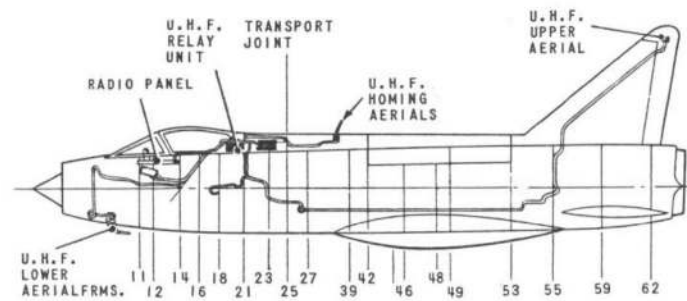
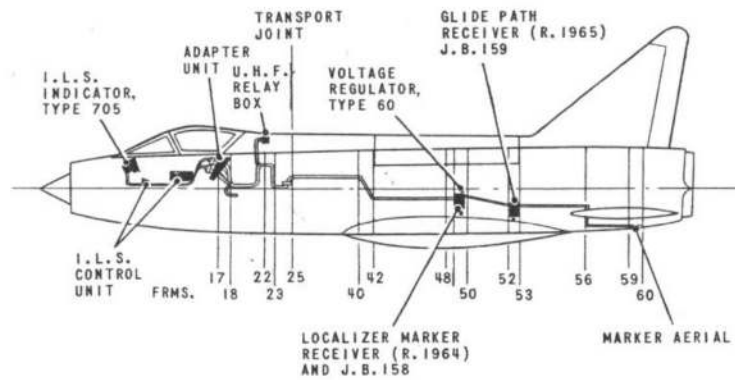


FIG. 1. WIRELESS INSTALLATION

RESTRICTED

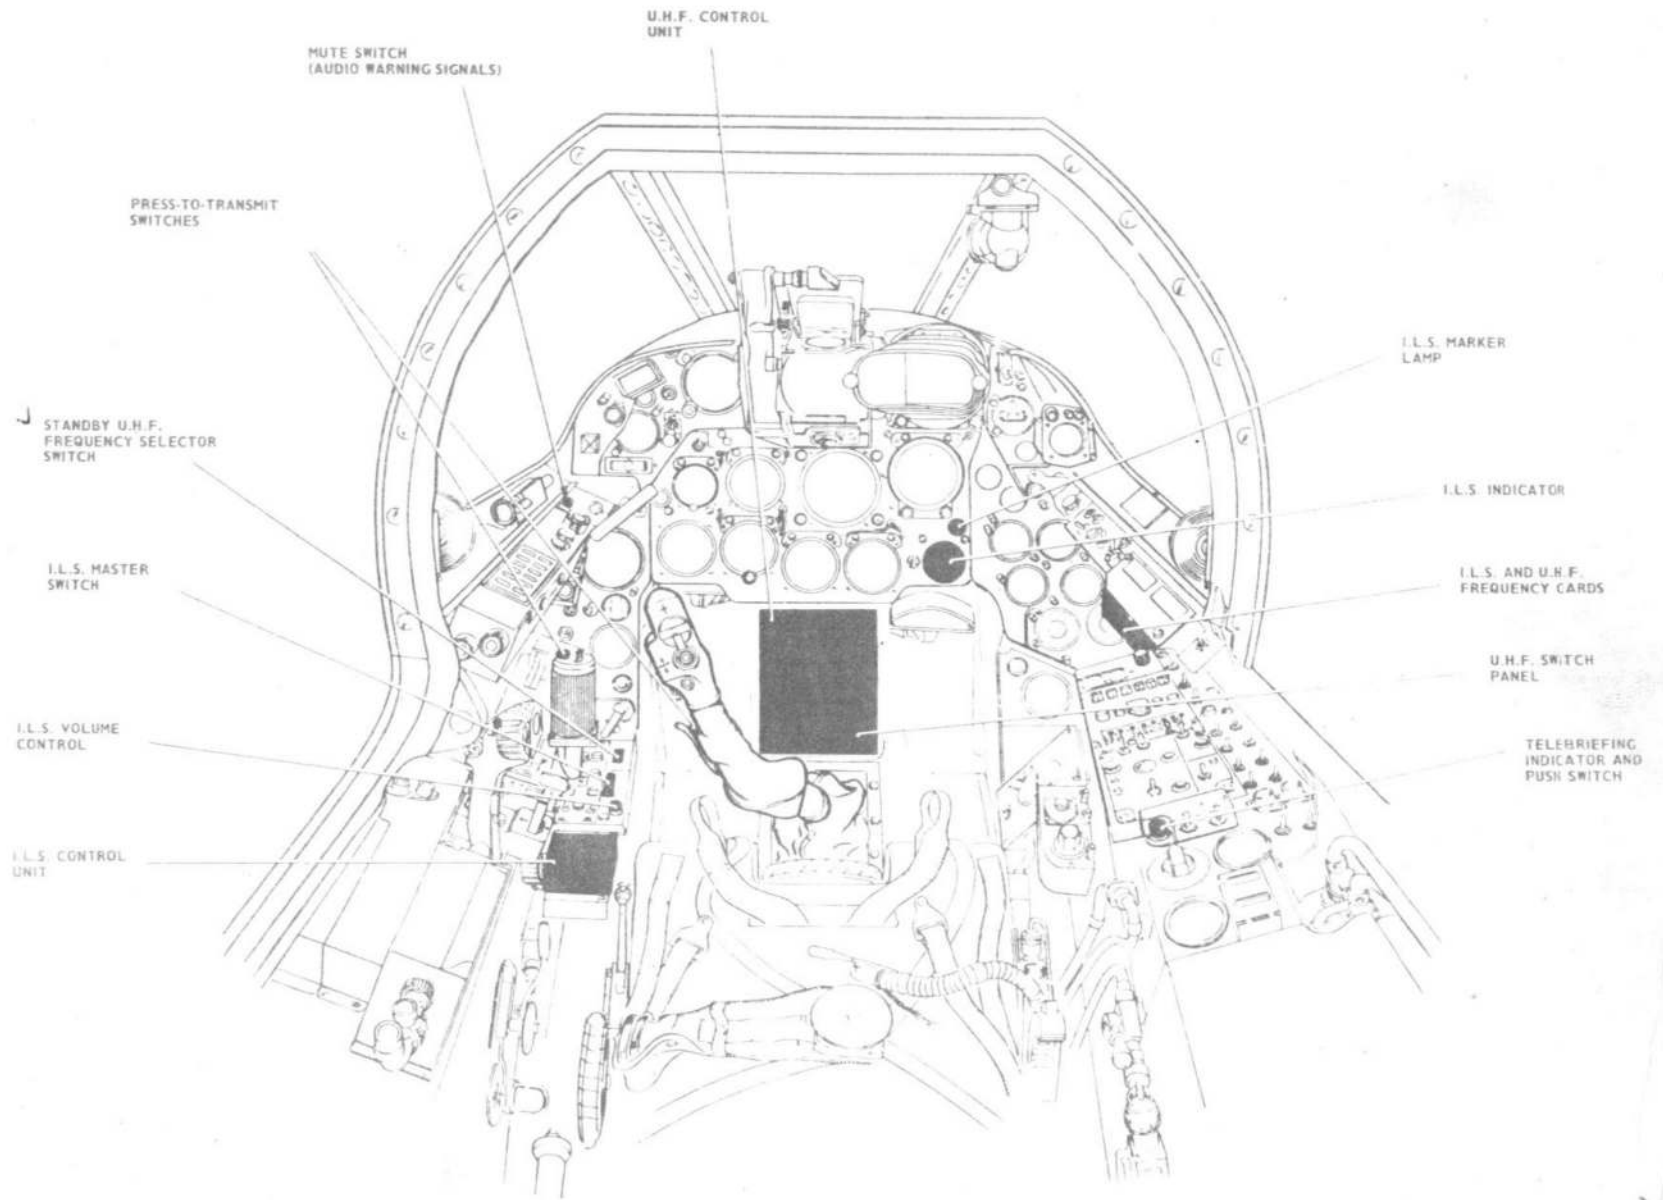


FIG. 2 WIRELESS INSTALLATION IN COCKPIT

◀ MOD 1556, 4499 INCORPORATED ▶



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

