

STARTER SYSTEM IN REAR FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
	-	STARTER SYSTEM IN REAR FUSELAGE, ASSEMBLY .. (E.F2.53.1) Consisting of:-	-	-	-	158/1
	-	SYSTEM, starter, in spine, assembly (E.F2.53.295)	-	-	-	158/2
		(Mod. 4477) Spares for:-				
2900	E.B2.53.37	BOLT, special, banjo coupling at outward vent valve ..	1	L65	C	158/3
10592	E.F2.53.87	BOLT, special, pump to solenoid pipe, banjo coupling ..	2	L65	C	158/4
2903	E.B2.53.153	BOLT, special, banjo coupling, No. 2 engine air	2	L65	C	158/5
		delivery pipe to pump				
10593	E.F2.53.85	BODY, special, pump to solenoid pipe, banjo coupling ..	2	L65	C	158/6
7514	E.B3.53.53	HOSE, connecting starter tank drain pipe to valve	1	Butyl AB47	C	158/7
		assembly				
6110	E.B3.53.55	HOSE, tank to pump supply line connection	2	Butyl AB47	C	158/8
	or					
37486	†	HOSE, "75 i/d x "9 o/d x 20" long	QR	AB47	C	
		Attachments:-				
28E/9129090	AGS.605/O	Clip, hose	2	-	C	158/9
7515	E.B2.53.407	HOSE, tank overspill connecting	1	Butyl AB47	C	158/10
		Attachments:-				
28E/1011791	AGS.606/B	Clip, hose	1	-	C	158/11
10438	E.F2.53.81	NIPPLE, coupling, body to pipe	8	BAC.M37	C	158/12
10439	E.F2.53.153	NIPPLE, coupling, pipe to pipe	4	BAC.M37	C	158/13
12872	E.B3.53.33	PIPE, assembly, tank overspill drain	1	L56	C	158/14
2918	E.B3.53.61	PIPE, assembly, air delivery, No. 1 engine pump, from ..	1	L54	C	158/15
		coupling aft of frame 25 to pump connection				
2919	E.B3.53.63	PIPE, assembly, air delivery, No. 2 engine pump, from ..	1	L54	C	158/16
		pump to coupling aft of frame 36				
10692	E.B2.53.69	PIPE, assembly, outward vent valve to coupling	1	L54	C	158/17
		forward of frame 29				
10594	E.B3.53.71	PIPE, assembly, inward vent valve to coupling aft of ..	1	L54	C	158/18
		frame 31				
2929	E.B3.53.101	PIPE, assembly, air delivery, No. 2 engine, from	1	L56	C	158/19
		coupling aft of frame 36 to coupling forward of frame 42				
1504400	E.F2.53.309	PIPE, assembly, fuel by-pass, from L.H. tank con-	1	L56	C	158/20
		nection to No. 1 engine solenoid valve forward connection (Mod. 4477)				
1504402	E.B3.53.593	PIPE, assembly, fuel by-pass, from R.H. tank con-	1	L56	C	158/21
		nection to No. 2 engine solenoid valve forward connection (Mod. 4477)				
8051	E.B2.53.169	PIPE, assembly, drain, from No. 1 engine pump unit ..	1	L56	C	158/22
8052	E.B3.53.171	PIPE, assembly, drain, from No. 2 engine pump unit ..	1	L56	C	158/23
1504396	E.F2.53.301	PIPE, assembly, fuel, starter delivery, No. 1 engine	1	L56	C	158/24
		from coupling at frame 31 to solenoid valve forward connection (Mod. 4477)				
1504395	E.L2.53.97	PIPE, assembly, fuel, starter delivery, No. 1 engine, ...	1	L56	C	158/25
		from coupling forward of frame 26 to coupling at frame 31 (Mod. 4477)				
1504397	E.F2.53.303	PIPE, assembly, from No. 1 engine fuel pump to	1	L56	C	158/26
		solenoid valve forward connection (Mod. 4477)				
1504398	E.F2.53.305	PIPE, assembly, from No. 2 engine fuel pump to	1	L56	C	158/27
		solenoid valve forward connection (Mod. 4477)				
1504401	E.F2.53.311	PIPE, assembly, fuel, starter, No. 2 engine solenoid ...	1	L54	C	158/28
		valve to coupling at frame 42 (Mod. 4477)				
1504399	E.F2.53.307	PIPE, assembly, drain, from starter tank to valve	1	L54	C	158/29
		assembly (Mod. 4477)				
37F/21024	PLESSEY CK.18823	PUMP, fuel, No. 1 engine starter	1	-	A	158/30

SERVICES

STARTER SYSTEM IN REAR FUSELAGE

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index	1 2 3 4 5 6 7										
							1	2	3	4	5	6	7				
37F/21025	PLESSEY CK.18824	PUMP, fuel, No. 2 engine starter	1	—	A	158/31											
6102234	E.F.2.53.319	TANK, iso-propyl nitrate, group (Mod. 4622)	1	—	B	159/1											
		Consisting of:—															
10602	E.F.2.53.225	ADAPTOR, tank drain	1	BAC.M37	C	159/2											
10603	E.F.2.53.15	CAP, filler, assembly	1	—	C	159/3											
		Spares for:—															
33461	PLESSEY 9420-AH-24A	CAP, assembly	1	—	C	159/4											
33462	PLESSEY 561-1-0212	FLANGE, and nipple, assembly	1	—	C	159/5											
28N/2001694	AGS.2030/59	CIRCLIP, filter retaining	1	—	C	159/6											
2938	E.B.2.53.99	FILTER	1	Stainless Steel	B	159/7											
28M/1010996	A.24/CP	NUT, 2 BA, plain	10	—	C	159/8											
10604	E.F.2.53.19	RING, bolt retaining	1	—	C	159/9											
28D/1007285	AS.1242/1B	SCREW, 4 BA, 90° c'sk head	2	—	C	159/10											
	E.F.2.53.317	SHELL, tank, assembly (Mod. 4502)	1	—	C	159/11											
2939	E.B.2.53.27	VALVE, outward vent, group	1	—	B	159/12											
		Spares for:—															
2940	E.B.2.53.33	DISC, spring retaining	1	L72	C	159/13											
2941	E.B.2.53.295	NUT, special, 4 BA	1	—	C	159/14											
2942	E.B.2.53.35	SPRING	1	DTD326A	C	159/15											
	E.B.2.53.31	VALVE	1	DTD525	—	159/16											
28W/9143227	SP14/B	WASHER, 4 BA, plain	1	—	C	159/17											
2943	E.B.2.53.41	VALVE, inward vent, assembly	1	—	C	159/18											
6102172	E.B.3.53.275	WASHER, sealing (Mod. 4622)	1	Butyl Rubber	C	159/19											
6102173	E.F.2.53.321	WASHER, sealing, 1/32" thick (Mod. 4622)	1	Butyl Rubber	C	159/20											
28W/9416643	SP47/C	WASHER, spring, 2 BA	10	—	C	159/21											
28W/6659	AGS.568/B	WASHER, drain adaptor sealing	1	—	C	159/22											
28W/9454067	AGS.568/F	WASHER, vent valve sealing	2	—	C	159/23											
30A/3055	†	WIRE, locking, 22 SWG	QR	DTD189	C	159/24											
8478	E.B.3.53.217	VALVE, bleed, at inward vent valve, assembly	1	—	B	159/25											
		Consisting of:—															
	E.B.3.53.209	BOLT, banjo	1	L65	—	159/26											
	E.B.3.53.213	BUTTON	1	BAC.M37	—	159/27											
	E.B.3.53.211	SPINDLE	1	3AC.M37	—	159/28											
	E.B.3.53.215	SPRING, 20 SWG	1	DTD326A	—	159/29											
37F/21030	PLESSEY CK.19996L	VALVE, solenoid, No. 1 engine	8	—	A	158/32											
37F/21031	PLESSEY CK.19996R	VALVE, solenoid, No. 2 engine	1	—	A	158/33											
2935	E.B.2.53.297	WASHER, plain, at banjo coupling No. 2 engine air delivery pipe to pump	2	L34	C	158/34											
10607	E.B.2.53.447	WASHER, plain, at banjo coupling No. 2 engine air delivery pipe to pump	2	L34	C	158/35											
30A/2296	†	WIRE, locking, 20 SWG	QR	DTD189	C	158/36											
	—	SYSTEM, starter, aft of frame 42, assembly (E.F.2.53.11)	—	—	—	160/1											
		Spares for:—															
12879	E.F.2.53.253	COUPLING, flanged, No. 2 engine, starter fuel delivery forward of low pressure switch	1	L65	C	160/2											
		Attachments:—															
28D/9133012	A.25/3C	Bolt, 2 BA, hex. head	2	—	C	160/3											
28M/1278190	AGS.2001/C/1	Nut, stiff, 2 BA	2	—	C	160/4											
10609	E.F.2.53.83	Ring, 'O', special	1	—	C	160/5											
28W/9419475	SP15/C	Washer, 2 BA, plain	2	—	C	160/6											



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

