

FIRE EXTINGUISHING SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
	-	FIRE EXTINGUISHING SYSTEM, ASSEMBLY ..... (E.F.2.60.1) (MK. 2 A/C)	-	-	-	
	-	FIRE EXTINGUISHER SYSTEM, ASSEMBLY ..... (E.F.4.60.1) (MK. 2A A/C)	-	-	-	
		Spares for:-				
	E.F.3.60.77	BLOCK, support, pipe clips at frame 39 (Mk. 2A A/c) ...	2	L64	-	43/1
	E.B.2.60.155	BLOCK, cable retaining .....	4	L65	C	43/2
R	28D/1218385	Attachments:- Bolt, 4 BA, c'sk head .....	4	-	C	43/3
	27N/264	BOTTLE, fire extinguisher (Mk. 2 A/c) .....	2	-	A	43/4
	27N/346	BOTTLE, fire extinguisher (Mk. 2A A/c) .....	2	-	A	43/5
	11141	BRACKET, L.H., Graviner nozzle pipe clip attachment .. on frame 39 (Mk. 2 A/c)	1	L59	C	43/6
		Attachments:-				
	28D/9436920	Bolt, 2 BA, hex. head .....	1	-	C	43/7
	28D/9133011	Bolt, 2 BA, hex. head .....	1	-	C	43/8
	28M/1278190	Nut, stiff, 2 BA .....	2	-	C	43/9
R	13908	BRACKET, saddle clip at frame 39 (Mk. 2A A/c) .....	2	L72	-	43/10
	11142	BRACKET, pipe clip mounting at frame 36, starboard ...	1	L72	C	43A/1
		Attachments:-				
	28D/9436920	Bolt, 2 BA, hex. head .....	2	-	C	43A/2
	28M/1278190	Nut, stiff, 2 BA .....	2	-	C	43A/3
	E.F.4.60.35	BRACKET, pipe clip forward of frame 39 (Mod. 4328) .. (Mk. 2A A/c)	1	L72	-	43A/4
	7880	CABLE, assembly, fire extinguisher bottle steady .....	2	-	C	43/11
	12K/1316	CARTRIDGE, fire extinguisher bottle, 2-pin, Mk. 3 .....	2	-	C	43/12
		(A716/3)				
	12K/1317	CARTRIDGE, fire extinguisher bottle, 3-pin (Mk. 3) ....	2	-	C	43/13
		(A717/3)				
	7635	CLAMP, pipe, at frame 42, port and starboard .....	2	-	C	43A/5
	18638	CLIP, saddle, at frame 39 (Mk. 2A A/c) .....	3	S521	C	43/14
		Attachments:-				
	28D/9133012	Bolt, 2 BA, hex. head .....	4	-	C	43/15
	28M/1278190	Nut, stiff, 2 BA .....	4	-	C	43/16
	18639	Washer, "D" .....	4	L72	C	43/17
R	28F/1036556	CONNECTOR, bulkhead pipe, at frame 45, port and .... starboard	2	-	C	43/18
		Attachments:-				
	28D/1010658	Bolt, 4 BA, hex. head .....	10	-	C	43/19
	28D/15161	Bolt, 4 BA, hex. head .....	2	-	C	43/20
	28F/9152415	Plate, washer .....	2	-	C	43/21
	28M/1278189	Nut, stiff, 4 BA .....	12	-	C	43/22
	11143	Tab, locking .....	4	L72	-	43/23
	17976	FAIRLEAD, assembly, at frame 45 (Mod. 1878) .....	2	-	C	43/24
		Attachments:-				
	28D/1008149	Bolt, 4 BA, hex. head .....	8	-	C	43/25
	28M/1086618	Nut, stiff, 4 BA .....	8	-	C	43/26
	28W/9419474	Washer, 4 BA, plain .....	8	-	C	43/27

SERVICES

FIRE EXTINGUISHING SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
17977	E.B.2.60.183	FAIRLEAD, assembly, at frame 48, port (Mod. 1878) ...	1	—	C	43/28
28D/1008149	A25/2B	Attachments:— Bolt, 4 BA, hex. head .....	4	—	C	43/29
28M/1086618	AGS.2002/B/1	Nut, stiff, 4 BA .....	2	—	C	43/30
28W/9419474	SP15/B	Washer, 4 BA, plain .....	4	—	C	43/31
17978	E.B.2.60.184	FAIRLEAD, assembly, at frame 48, starboard .....	1	—	C	43/32
		(Mod. 1878)				
		Attachments:—				
28D/1008149	A25/2B	Bolt, 4 BA, hex. head .....	4	—	C	43/33
28M/1086618	AGS.2002/B/1	Nut, stiff, 4 BA .....	2	—	C	43/34
28W/9419474	SP15/B	Washer, 4 BA, plain .....	4	—	C	43/35
7636	KING A/C	GASKET, pipe clamp .....	2	—	C	43A/6
27N/265	C.11604/12/B GRAVINER Type A594	INDICATOR, pressure relief discharge, assembly .....	2	—	C	43/36
		Spares for:—				
27N/308	GRAVINER A515	DISC, nylon, c/w sealing ring .....	1	—	C	43/37
6003	E.B.2.60.131	NIPPLE, at fire bottle junction box and pipe coupling ...	4	BAC.M37	C	43/38
11468	E.B.2.75.1081	NIPPLE, at coupling at firefloor between frames 48 .....	1	BAC.M37	C	43A/7
		and 49, port				
2812	E.B.2.75.1083	NIPPLE, pipe coupling .....	11	BAC.M37	C	43A/8
35088	E.F.3.60.169	PACKING, radius, pipe clip at frame 47 (Mk. 2A A/c) ...	1	L72	C	43A/9
11144	E.B.2.60.133	PAD, fire extinguisher bottle mounting .....	2	—	C	43/39
28P/9702453	AGS.1551/2	PIN, pipe clamp locking .....	2	—	C	43A/10
32661	E.F.2.60.21	PIPE, assembly, lower engine forward fire extinguisher ...	1	T55	C	43A/11
		run, from pipe clamp aft of frame 42 to				
		coupling aft of frame 36, starboard				
32662	E.F.2.60.29	PIPE, assembly, upper engine forward fire extinguisher ...	1	T55	C	43A/12
		run, from bottle junction box to coupling on				
		firefloor at frame 46, starboard				
32663	E.F.2.60.31	PIPE, assembly, upper engine aft fire extinguisher run, ...	1	T55	C	43A/13
		from coupling at firefloor between frames 48				
		and 49 to coupling at frame 49, port				
		(Mk. 2 A/c)				
32664	E.F.2.60.33	PIPE, assembly, upper engine aft fire extinguisher run, ...	1	T55	C	43A/14
		from coupling forward of frame 48 to				
		coupling at firefloor between frames 48 and				
		49, port (Mk. 2 A/c)				
32665	E.F.2.60.41	PIPE, assembly, lower engine forward fire extinguisher ...	1	T55	C	43A/15
		run, from coupling aft of frame 36 to				
		coupling at frame 34, starboard				
32666	E.F.2.60.43	PIPE, assembly, branch nozzle, lower engine forward ....	1	T55	C	43A/16
		fire extinguisher run, from coupling at frame				
		34 to coupling between frames 29 and 31,				
		starboard				
32667	E.F.2.60.47	PIPE, assembly, lower engine aft fire extinguisher run ...	1	T55	C	43A/17
		from bottle junction box to pipe clamp at				
		frame 42, port (Mk. 2 A/C)				
32668	E.F.2.60.49	PIPE, assembly, lower engine forward fire extinguisher ...	1	T55	C	43A/18
		run, from bottle junction box to pipe clamp				
		at frame 42, starboard				
	E.F.2.60.57	PIPE, assembly, branch, lower engine aft fire extinguisher	1	T55	—	43A/19
		run, from pipe clamp at frame 42 and				
		coupling at frame 39, port (Mk. 2 A/c)				

FIRE EXTINGUISHER SYSTEM

Ref. No.	Part No.	Description							No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
		1	2	3	4	5	6	7				
	E.F.2.60.63	PIPE, assembly, branch nozzle upper engine forward fire . . . . .							1	T55	-	43A/20
32672	E.F.2.60.65	extinguisher run, from coupling on fire- floor at frame 46 and coupling at frame 47, starboard (Mk. 2 A/c)							1	T55	C	43A/21
32673	E.F.2.60.67	PIPE, assembly, transverse nozzle, upper engine forward . . . . .							1	T55	C	43A/22
	E.F.2.60.69	fire extinguisher run, from coupling at frame 47, starboard to pipe clip at frame 47, port							1	T55	-	43A/23
	E.F.2.60.95	PIPE, assembly, transverse nozzle, upper engine aft fire . . . . .							1	T55	C	43A/24
	E.F.2.60.97	extinguisher run, from coupling at frame 49, port, to pipe clips on frame 50							1	T55	-	43A/25
17691	E.B.2.60.101	PIPE, assembly, transverse nozzle, lower engine aft fire . . . . .							1	T55	C	43A/26
	E.B.2.60.111	extinguisher run, from coupling at frame 29 port to pipe clip at frame 39, starboard (Mk. 2 A/c)							1	T55	-	43A/27
30564	E.B.2.60.165	PIPE, assembly, upper engine aft fire extinguisher run, . . . . .							1	T55	C	43A/28
13799	E.B.2.60.173	from bottle junction box to coupling forward of frame 47, port (Mk. 2 A/c)							1	T55	-	43A/29
13800	E.B.2.60.174	PIPE, assembly, upper engine fire extinguisher run, from . . . . .							1	T55	C	43A/30
19705	E.B.2.60.175	coupling forward of frame 47 to coupling forward of frame 48, port (Mk. 2 A/c)							1	T55	-	43A/31
19706	E.B.2.60.177	PIPE, assembly, lower engine forward fire extinguisher . . . . .							1	T55	C	43A/32
18653	E.F.3.60.115	run, from coupling between frames 29 and 31 to coupling at frame 29, starboard							1	T55	-	43A/33
18651	E.F.3.60.111	PIPE, assembly, transverse nozzle, lower engine forward . . . . .							1	T66	-	43A/27
33622	E.F.3.60.153	fire extinguisher run, from coupling at frame 29 starboard to pipe clips at frame 29							1	T55	C	43A/28
18645	E.F.3.60.91	PIPE, assembly, nozzle, lower engine aft fire extinguisher run, from coupling at frame 39 to pipe clip at frame 39, port (Mk. 2 A/c)							1	T55	C	43A/28
1440696	E.F.4.60.19	PIPE, assembly, from banjo connection on fire extin- . . . . .							1	L54	C	43/40
		guisher bottle head to bulkhead pipe connection on frame 45, port (Mk. 2 A/c)							1	L54	C	43/41
		PIPE, assembly, from banjo connection on fire extin- . . . . .							1	L54	C	43/41
		guisher bottle head to bulkhead pipe connector on frame 45, starboard (Mk. 2 A/c)							1	L54	C	43/42
		PIPE, assembly, from bulkhead pipe connector on frame . . . . .							1	L54	C	43/43
		45 to pressure relief discharge indicator, port (Mk. 2 A/c)							1	L54	C	43/43
		PIPE, assembly, from bulkhead pipe connector on frame . . . . .							1	L54	C	43/43
		45 to pressure relief discharge indicator, starboard (Mk. 2 A/c)							1	L54	C	43/43
		PIPE, assembly, upper engine aft run, from coupling . . . . .							1	T55	C	43A/29
		at firefloor between frames 48 and 49 to coupling at frame 49 (Mk. 2A A/c)							1	T55	C	43A/29
		PIPE, assembly, upper engine aft run, from coupling . . . . .							1	T55	C	43A/30
		forward of frame 4 to coupling at firefloor between frames 48 and 49 (Mk. 2A A/c)							1	T55	C	43A/30
		PIPE, assembly, from bottle junction box to pipe clamp . . . . .							1	T55	C	43A/31
		aft of frame 42, port (Mk. 2A A/c)							1	T55	C	43A/31
		PIPE, assembly, branch, from pipe clamp aft of frame 42 . . . . .							1	-	C	43A/32
		to couplings, port and starboard forward of frame 39 (Mk. 2A A/c)							1	-	C	43A/32
		PIPE, assembly, branch, from coupling on firefloor at . . . . .							1	-	C	43A/33
		frame 46 to nozzle, upper engine run, and coupling at frame 47, starboard (Mk. 2A A/c)							1	-	C	43A/33

SERVICES

FIRE EXTINGUISHING SYSTEM

Ref. No.	Part No.	Description	No. off	Matl. Spec.	Cl. of Equip. M.R. L.M.	Fig. and Index
34259	E.F3.60.163	PIPE, assembly, transverse, nozzle, lower engine aft run, from coupling forward of frame 37 port to nozzle attachment aft of frame 39, starboard (Mk. 2A A/c)	1	—	C	43A/34
18657	E.F3.60.123	PIPE, assembly, upper engine aft run, from bottle junction box to coupling forward of frame 47 port (Mk. 2A A/c)	1	T55	C	43A/35
18658	E.F3.60.125	PIPE, assembly, upper engine aft run, from coupling forward of frame 47 to coupling forward of frame 48, port (Mk. 2A A/c)	1	T55	C	43A/36
18644	E.F3.60.71	PIPE, assembly, nozzle, lower engine aft run, from branch pipe coupling to nozzle forward of frame 39, port (Mk. 2A A/c)	1	—	C	43A/37
18659	E.F3.60.139	PIPE, assembly, from banjo connection on fire extinguisher bottle head to bulkhead connection at frame 45, port (Mk. 2A A/c)	1	L54	C	43/44
18660	E.F3.60.140	PIPE, assembly, from banjo connection on fire extinguisher bottle head to bulkhead connection at frame 45, starboard (Mk. 2A A/c)	1	L54	C	43/45
35085	E.F3.60.159	PIPE, assembly, from bulkhead connection at frame 45, port to pressure relief indicator connection (Mk. 2A A/c)	1	L54	C	43/46
35086	E.F3.60.160	PIPE, assembly, from bulkhead connection at frame 45, starboard to pressure relief indicator connection (Mk. 2A A/c)	1	L54	C	43/47
26FZ/21984	EEAS.20/3CU	TAB, locking, at frames 34, 46 and 49	3	S515	C	43A/38
11145	EEAS.20/8CR	TAB, locking, at pressure relief discharge indicator	2	L72	C	43/48
	AS.2808/5/02	TUBE, distance (Mk. 2A A/c)	2	—	—	43A/39
	AS.2808/5/035	TUBE, distance (Mk. 2A A/c)	1	—	—	43A/40
	AS.2808/5/075	TUBE, distance (Mk. 2A A/c)	1	—	—	43A/41
	EEAS.239/3C	WASHER, "D"	1	S511	—	43A/42
11146	E.F2.60.45	WASHER, special, pipe fairlead attachment on fire floor between frames 48 and 49, port	6	L65	C	43A/43
30A/3055	†	WIRE, locking, 20 SWG	QR	DTD183	C	43A/44

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

