

HYDRAULIC FAILURES

Services System Failure

Gauge fluctuating and/or reducing to red sector. Services
◀ fail to operate when selected. Pointer in white sector
indicates electrical fault ▶

GW arming switch ... OFF
Autopilot master ... OFF
Feel OFF
Speed Less than 400 knots

Gentle manoeuvres only

Airbrake Make congruent selection
◀ Land ASAP ▶

Before landing:

Undercarriage ... DOWN on normal selector
Flaps DOWN
◀ Speed 200 knots ▶
Emergency u/c ... Pull and hold to furthest
extent (flaps may lower)

After landing:

Brake chute Stream
HP cocks OFF
Brakes Avoid maxareting
Hook (F6) Pull if required

Services Lost

Undercarriage normal lowering
Flaps
Airbrakes
GW

Services with Accumulator

Wheelbrakes
Nosewheel centring and anti-shimmy
Autostabs
Canopy
Feel and feel simulator

This file was downloaded
from the RTFM Library:

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

