

Internal Checks—continued

AC supplies	Connected (if available)
Services pressure	Pointer in red sector
DC supplies	Connected
Voltmeter	28 volts (24 volts if trolley-acc)
Instrument master	On
Engine master	On
Inverter	NORMAL (black)
AI radar:			
Transmitter	Off
Ground test	Normal
Main on/off	On
Tacan	ON, channel selected, A/G
MRG	ON (roller blind rotates)
ILS	ON, channel selected
Rad alt (post-mod 4846)	On
UHF:			
Function	T/R
Channel	Selected
UHF set	NORMAL
UHF power	NORMAL
Aerial	LOWER
Mute switch (T5)	Unmuted
Standby UHF	Check as required

Strap in, adjust rudder pedals, remove and stow seat pins

(continued)



This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.

