

Internal Checks—continued

F3 and F6 only (T5, see Card 6)

Canopy operating handle	Up	
Ram air valve	CLOSED (fully back)
Demist lever	Operate over full range. Leave slightly open
Canopy jettison handle	Fully down
Throttle servo control	ENGAGE. Check spring release. Leave DISENGAGED
Telebrief switch/light (F3)		Condition
UHF standby channel	GUARD
Emergency U/C	Fully down
Ventral tank emergency transfer switch (F6)	VENTRAL TANK (guarded)

Centre Left Side

Emergency canopy jack release lever	Outboard. Check press-to-release button out
JPT controllers	AUTO (wired)
Throttles	Check full range including reheat. Set at HP COCKS OFF
Feel	ON (guarded)

Upper Left Side

SWP	Cover hinge pin engaged. Day/night screen as required. Test
AAR switch	NORMAL

(continued)

Internal
(contd)

4

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

