

Internal Checks — continued

Navigation display:

Compass mode	...	COMP/DG to COMP, check window black. Synchronised and annunciating. Check heading pointer control. Standby DI synchronised (blue light out)
ILS mode	Check display and control of localiser index. Switch off ILS, display centralises
TAC/DL modes	...	Check display and off-set function
VP/ILS	ILS
Tacan off-set computer	...	As required
UHF volume	As required
E2B compass	Compare with nav display
Accelerometer	Reset
Fuel transfer	Switch central, light out
Rad alt (post-mod 4846)	...	Test. Check warning lights (2). Warning flag retracted
Flap fuel	Press, check contents
Fuel test	Check gauges at FULL and EMPTY. (F6) Note ventral and overwing empty datum
RPM indicators	Zero
Nozzle position indicators	...	Condition
JPT indicators	Condition

Upper Right Side

Voltmeter	28 volts
Telebrief light (F6)	...	Condition
AWP	Mute switch depressed, light out. Day/night as required. All lights on except TTC and ICE. Test, all lights on

(continued)

Internal
(contd)

5

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

