

**Internal Checks (T5) — continued****Front Left**

Accelerometer	...	...	Reset
Undercarriage indicator			Three green lights. Test alternative bulbs. Day/night as required
Trims	...	...	Test each pole for live circuit (first sortie of day). Check trim movement. Set:
			Rudder ... Neutral
			Aileron ... Neutral
			Tailplane ... T/O

**Front**

JPT indicators	...	...	Condition
Flap indicator	...	...	Condition
RPM indicators	...	...	Zero
Brake parachute selector			Fully in
Nozzle position indicators			Condition
Autopilot trim indicator			Masked off scale

**Standby flight instruments:**

DI	...	...	Erect
Artificial horizon	...	...	Flag not visible, erect
ASI	...	...	Pointer vertically down
Altimeter	...	...	Set zero
Generator switch	...	...	NORMAL
Feel	...	...	ON (guarded)

**Left Pedestal**

Flap fuel	...	...	Press. Check contents
Fuel test	...	...	Check gauges at FULL and EMPTY
Ventral transfer switch			NORMAL
Fuel transfer	...	...	Switch central, light out
Rudder bar adjuster	...	...	Vertical
Telebrief light	...	...	Condition
VP/ILS	...	...	ILS
VP sensitivity	...	...	MAX
Navigation lights	...	...	As required
Taxi lights	...	...	OFF

*(continued)*

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

