

PART 5
ILLUSTRATIONS

◀ **List of Chapters**

			Chap
COCKPIT ILLUSTRATIONS	1 ▶

PART 5**◀ CHAPTER 1 — COCKPIT
ILLUSTRATIONS**

Contents						▶
					Fig	
Cockpit — Left Side	1	
Cockpit — Forward View	2	
Cockpit — Right Side	3	
Cockpit — Lower Left Side	4	
Cockpit — Starter Panel	5	

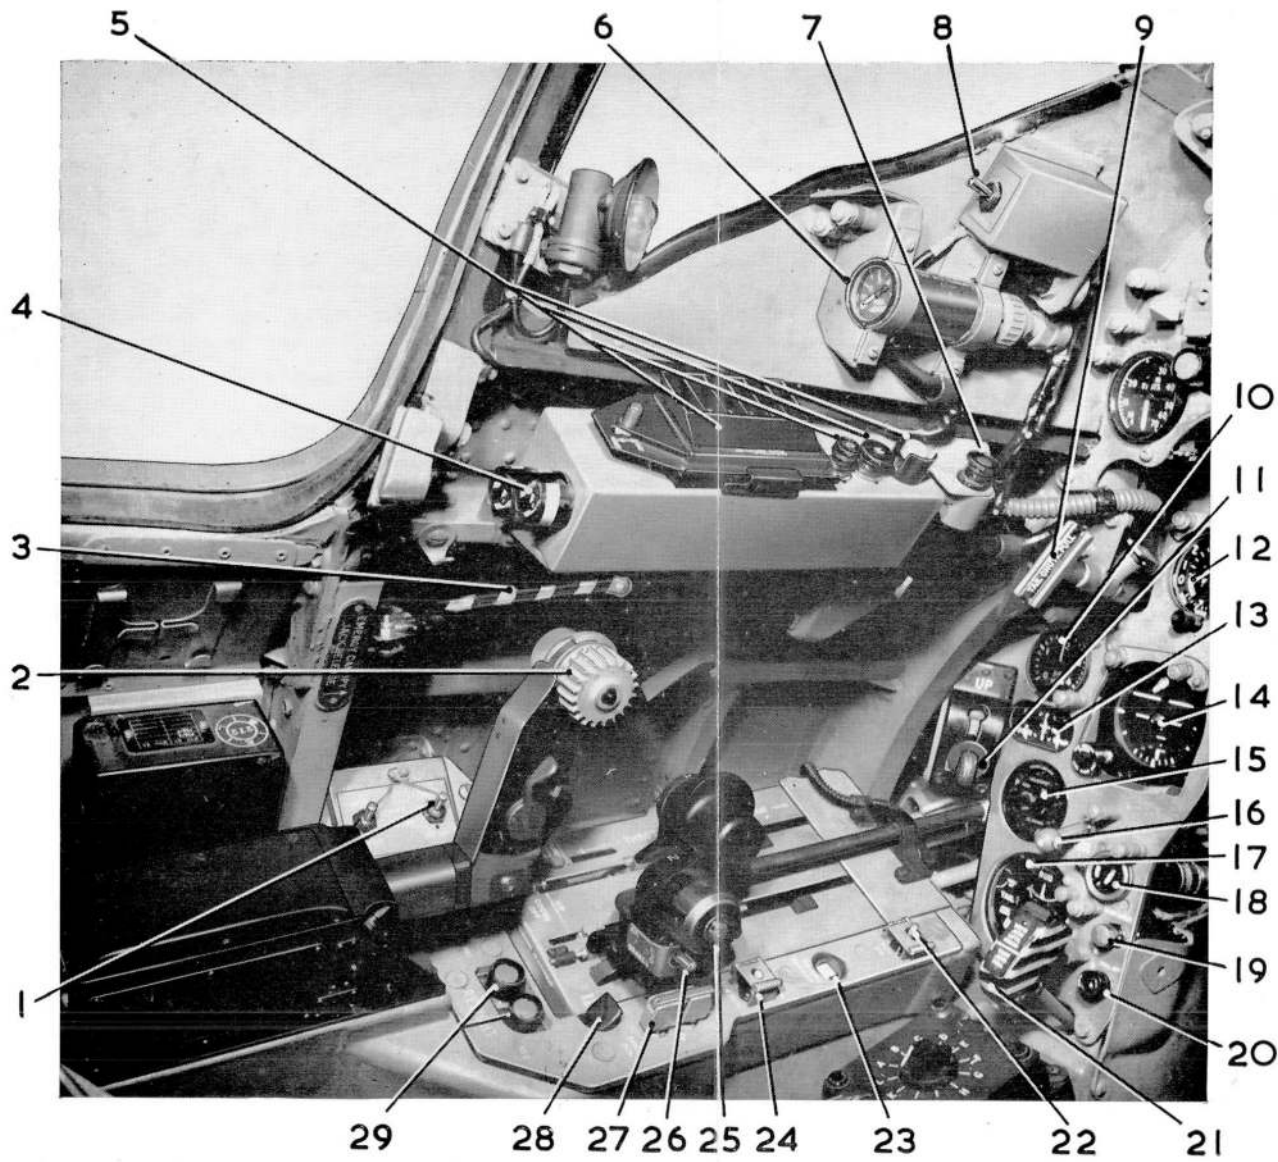


Fig. 1 COCKPIT—PORT SIDE

KEY TO FIGURE 2

1. Nosewheel steering switch (inoperative)
2. G90 camera pushbutton
3. Two-axis trim switch
4. Rate of climb indicator
5. FCS engage switch
6. Attitude indicator
7. Main altimeter
8. Standby ASI
9. Brake parachute jettison pushbutton
10. High intensity lights switch
11. Standby inverter switch
12. Standby inverter indicator
13. Oxygen flow indicator
14. Strip speed display
15. Flight refuelling probe light switch
16. Standby direction indicator
17. Flight refuelling tanks full indicator panel
18. Emergency lights switch
19. Light fighter sight/CRT switch
20. Attention light
21. AI computer programme switch
22. Rudder bar adjusting handle
23. CRT display brightness control
24. Accelerometer *(starboard windscreen strut - port-mod 4808/4664)*
25. FCS mode indicator (repeater)
26. Voltmeter
27. Wing-to-wing fuel transfer switch
28. Wing-to-wing fuel transfer indicator
29. Navigation display
30. Fuel gauges
31. Nozzle position indicators
32. Engine RPM gauges
33. JPT gauges
34. UHF control unit
35. Tacan offset computer
36. ILS volume control
37. UHF set selector
38. UHF aerial switch
39. UHF power switch
40. Brake lever parking catch

AC
13



Fig. 2 COCKPIT—FORWARD VIEW

KEY TO FIGURE 3

1. Master armament selector
2. Fuel contents gauge test switch
3. Fuel contents test pushbutton (flap tanks contents)
4. S-band homer control unit
5. Arming indicator
6. Cockpit lighting switch—port
7. Cockpit lighting switch—port forward
8. Cockpit lighting switch—centre
9. Cockpit lighting switch—starboard forward
10. Cockpit lighting switch—starboard
11. Cockpit temperature selector
12. Cockpit lighting switch—E2B compass/standby DI
13. Camera iris switch
14. Camera master switch
15. Auxiliary warning panel
16. Navigation lights switch
17. Frequency card light switch
18. AWP test pushbutton
19. AWP day/night switch
20. Swinging arm floodlight
21. Taxi lights switch
22. Missile telemetry switch
23. Cabin altimeter
24. Oxygen contents gauge
25. Engine start pushbuttons
26. Ignition switches *Starter isolation switch*
27. Oxygen regulator
28. IFF master switch
29. Standby generator switch
30. FCS pilot's controller
31. RB emergency retract pushbutton
32. GW fire control reset pushbutton
33. GW pairs/singles switch
34. GW arming switch
35. AI recorder switch
36. Starter panel
37. GW armed time indicator or pure air pressure gauge

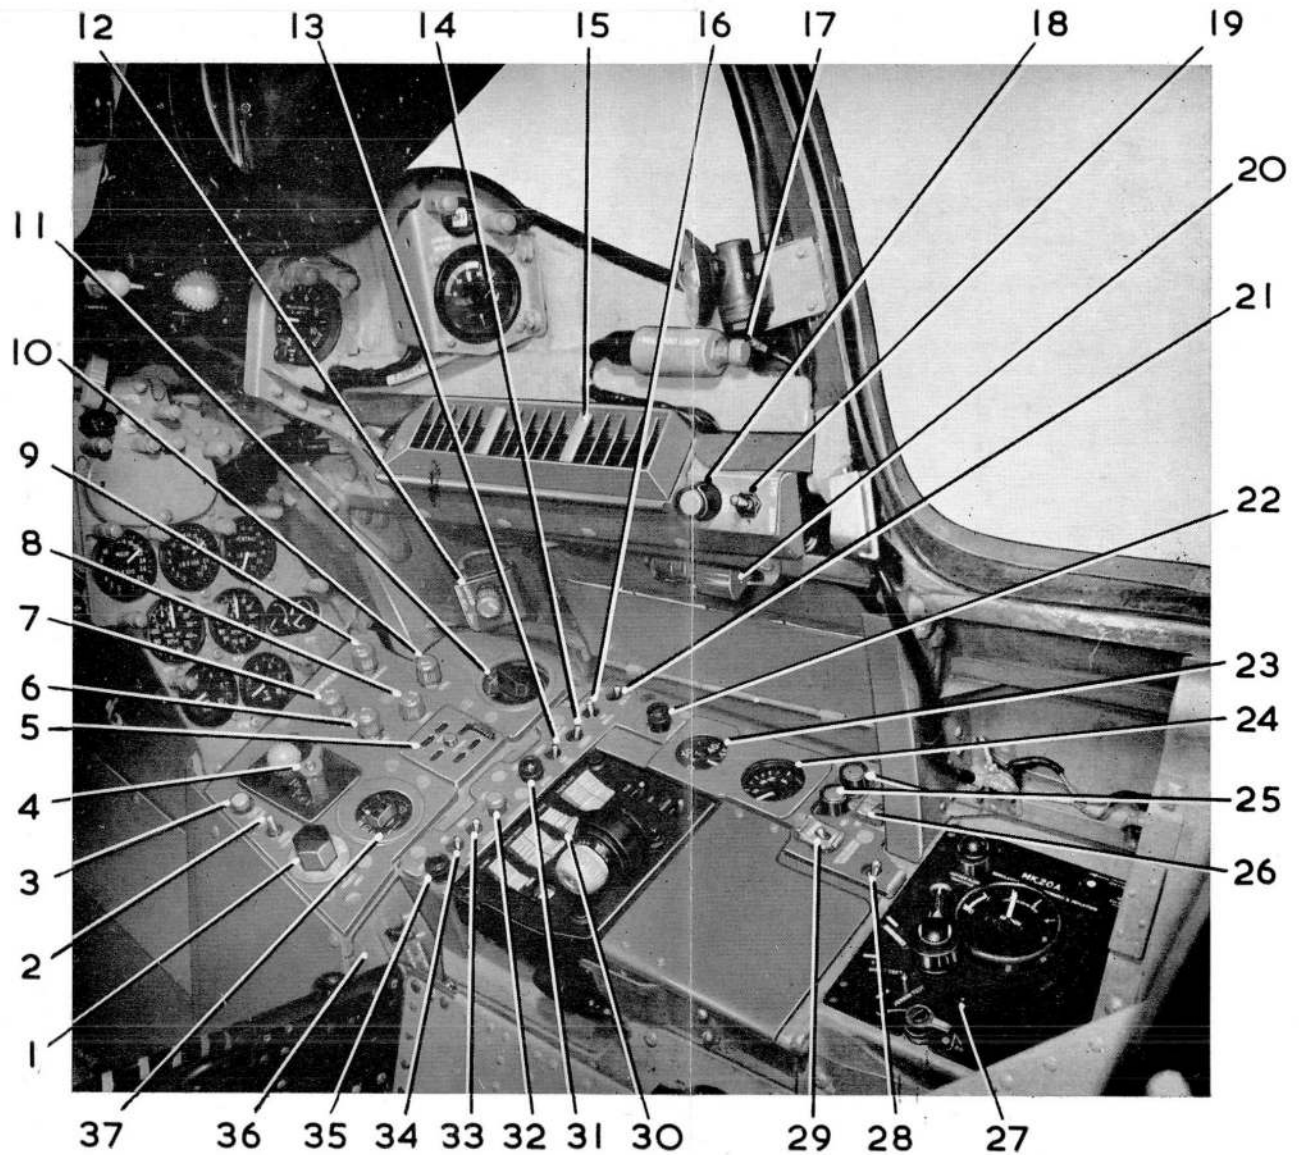


Fig. 3 COCKPIT—STARBOARD SIDE

RESTRICTED

KEY TO FIGURE 4

1. Demisting control lever
2. Ram air valve control
3. Throttle servo control
4. Ventral tank emergency transfer switch
5. ILS control unit
6. Undercarriage emergency lowering control
7. UHF standby set channel selector
8. Telebriefing indicator switch
9. Tacan control unit
10. Canopy jettison handle

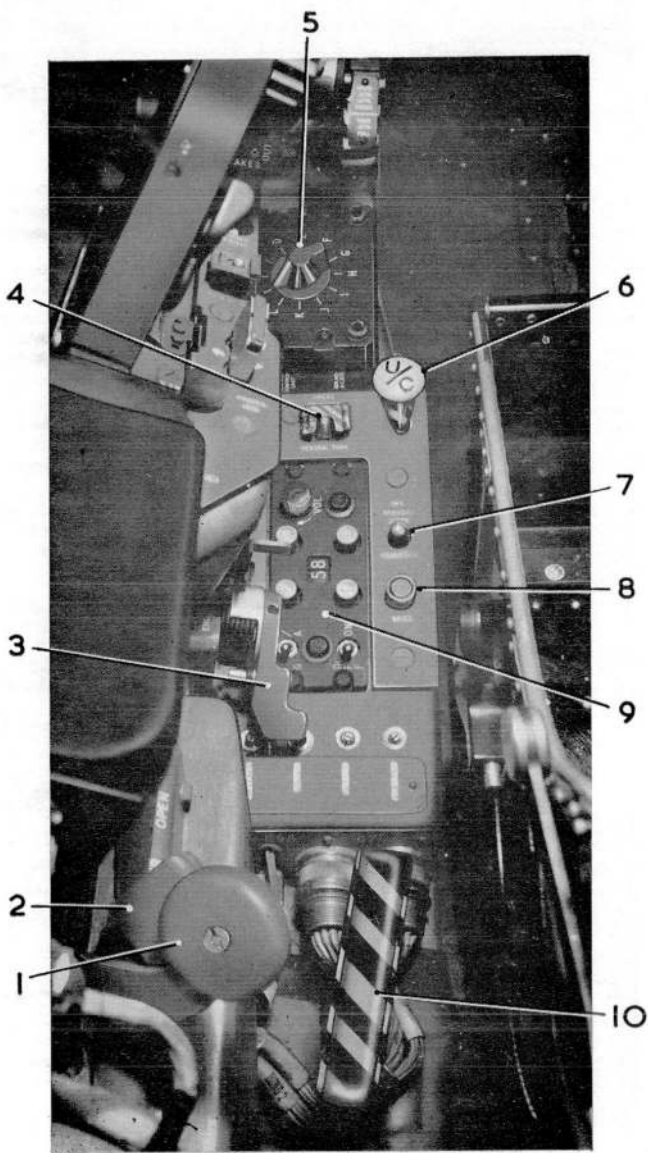


Fig. 4 COCKPIT—LOWER PORT SIDE



Fig. 5 COCKPIT—STARTER PANEL

RESTRICTED





This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rftm

Please see site for usage terms,
and more aircraft documents.

