


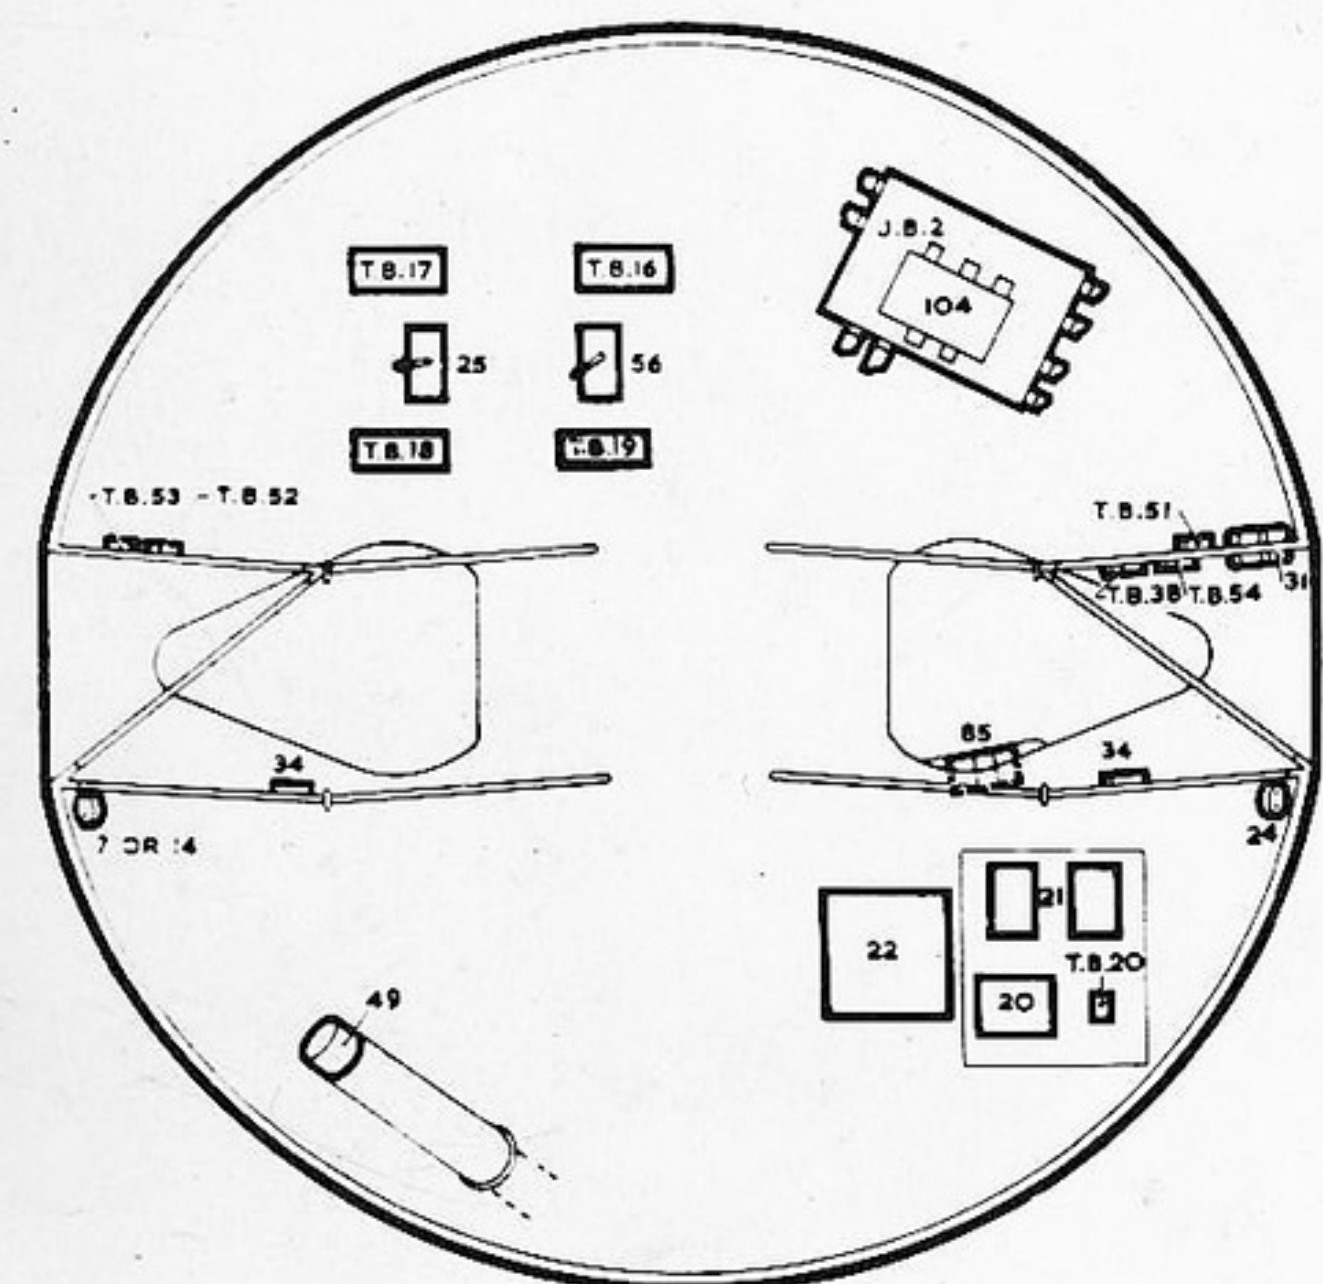
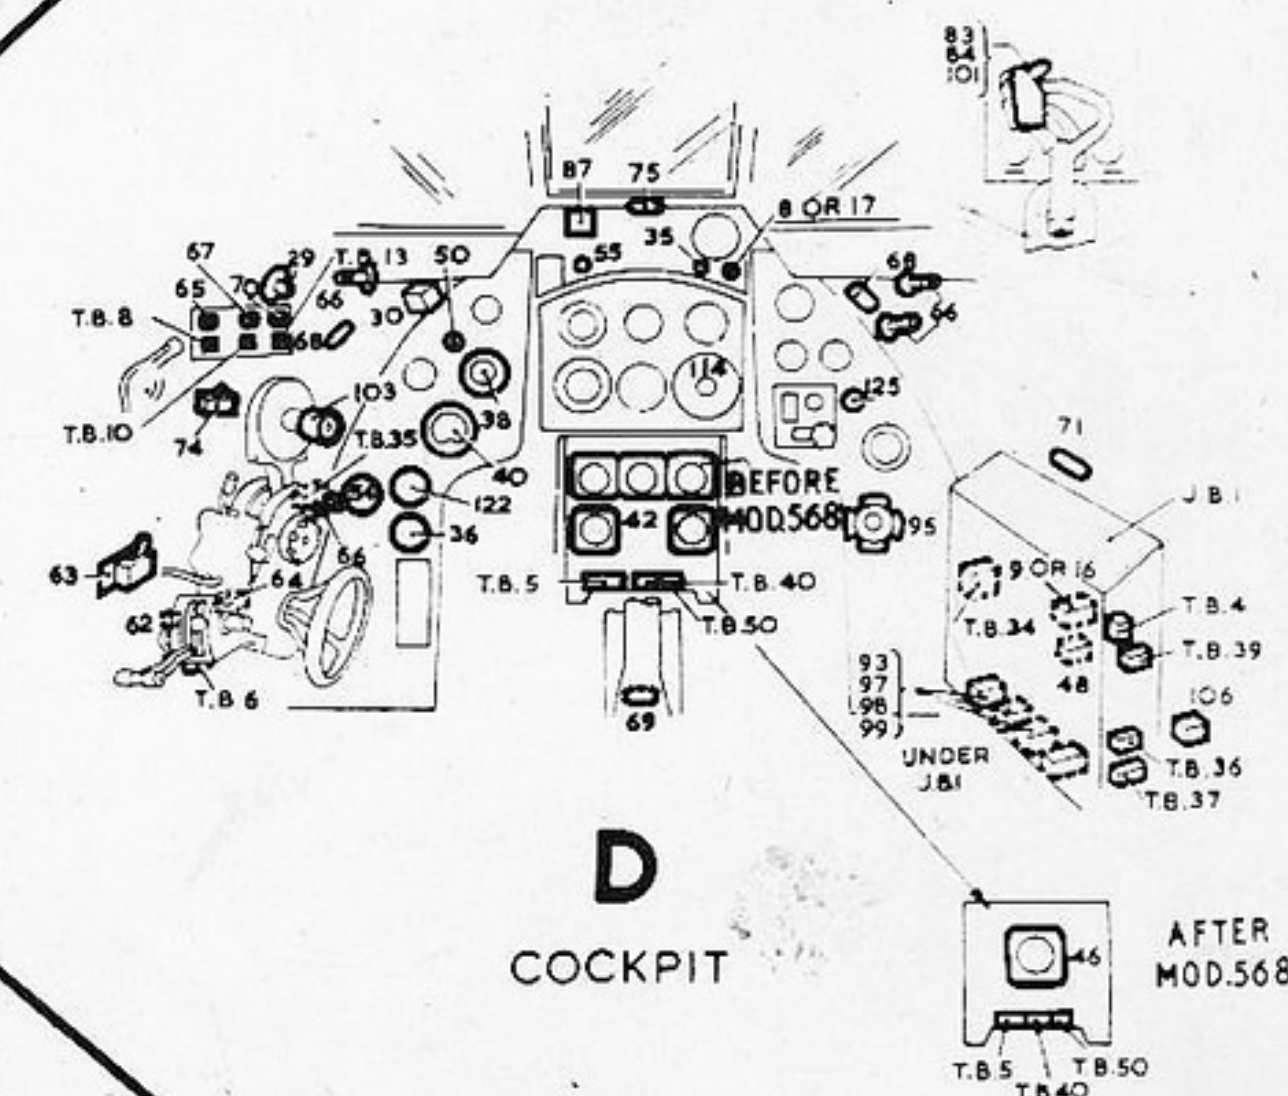
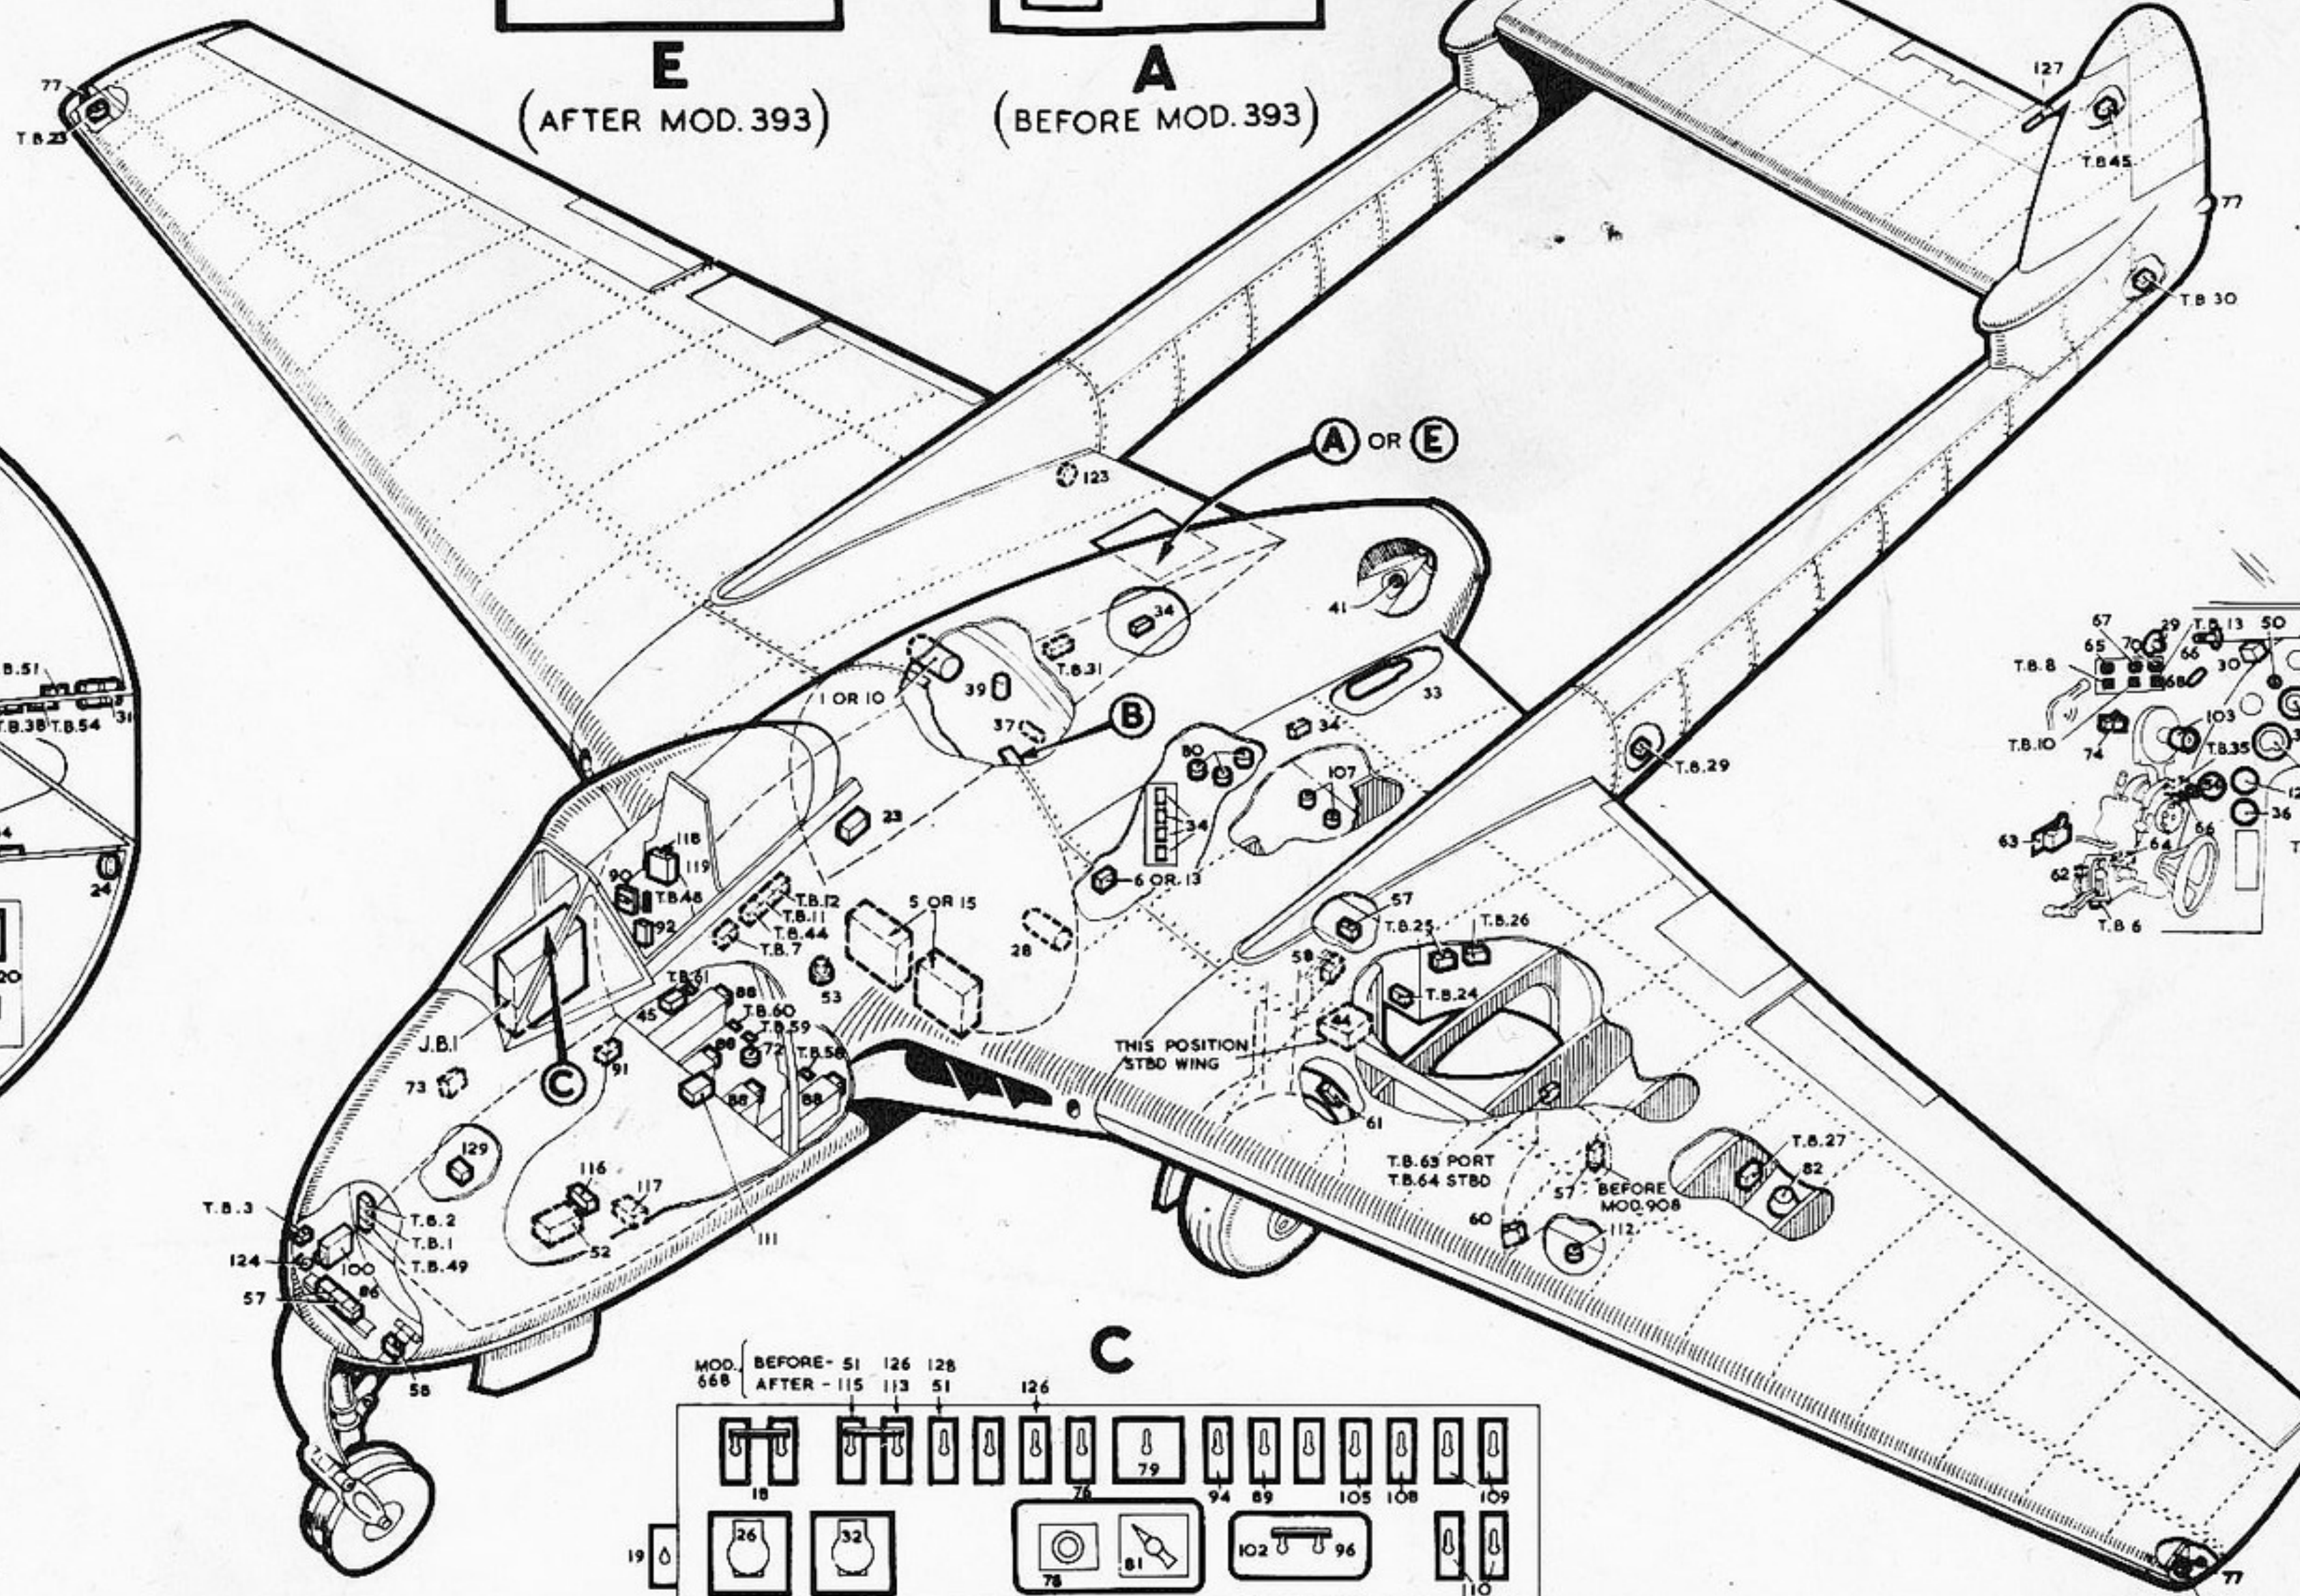


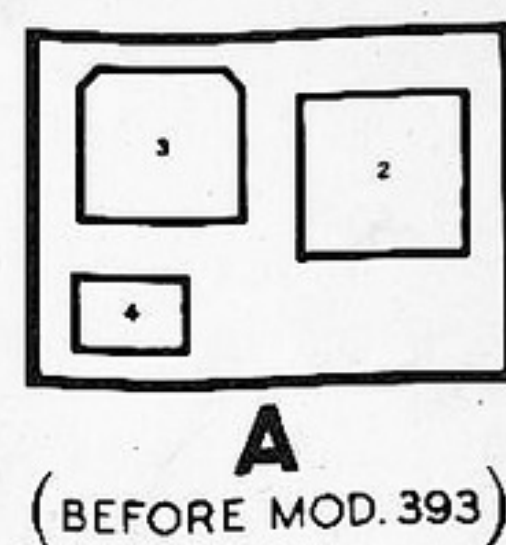

LOOKING FORWARD

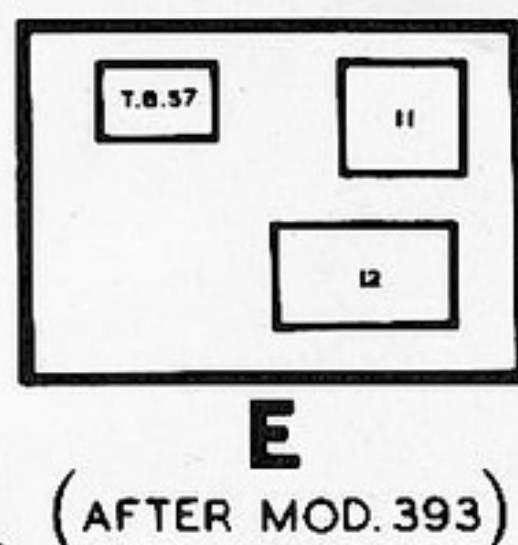

COCKPIT

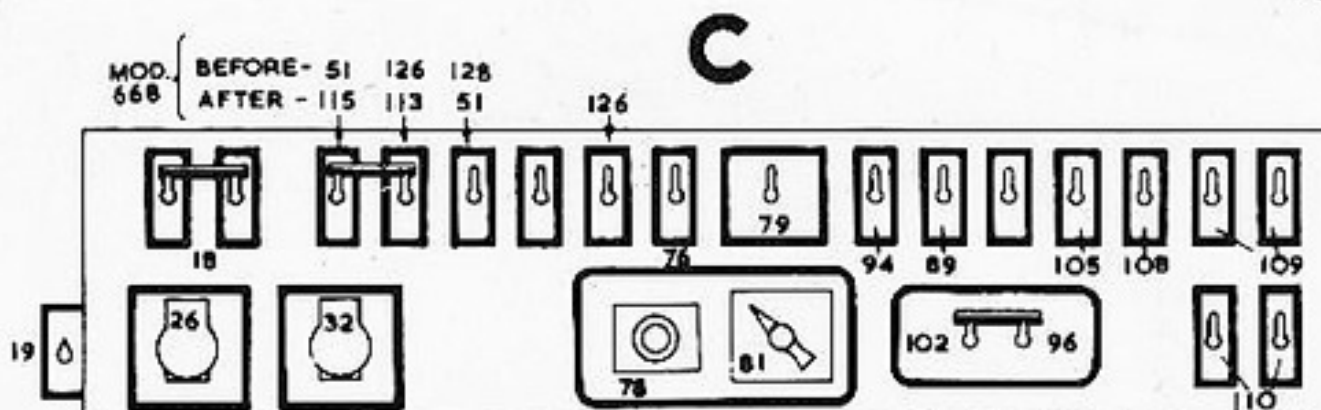

POWER SUPPLY (BEFORE MOD. 393)

- 1 GENERATOR, TYPE 41
- 2 GENERATOR SUPPRESSOR, TYPE W
- 3 VOLTAGE REGULATOR, TYPE 124
- 4 CUT-OUT, TYPE 10
- 5 BATTERY, 24 V, 35 AMP, 100
- 6 GROUND FLIGHT SWITCH
- 7 GROUND TEST SOCKET
- 8 POWER FAILURE WARNING LAMP
- 9 RECTIFIER AND RESISTANCE

POWER SUPPLY (AFTER MOD. 393)

- 10 GENERATOR, TYPE 41
- 11 SUPPRESSOR, TYPE 1
- 12 VOLTAGE REGULATOR AND CUT-OUT UNIT, TYPE A
- 13 GROUND FLIGHT SWITCH
- 14 GROUND TEST SOCKET
- 15 RECTIFIER AND RESISTANCE
- 16 POWER FAILURE WARNING LAMP

ENGINE SERVICES

- 1 MASTER SWITCHES (2)
- 2 AUXILIARY STARTING SWITCH
- 3 TIME SWITCH (STARTER PANEL)
- 4 RELAYS (STARTER PANEL)
- 5 RESISTANCE-STARTER PANEL
- 6 SLOW ENGAGEMENT RELAY
- 7 STARTER SOCKET
- 8 STARTER MOTOR
- 9 STARTER RELAY
- 10 BOOSTER COIL (2)

FIRE EXTINGUISHER AND FIRE WARNING

- 11 EXTINGUISHER PUSH-SWITCH
- 12 EXTINGUISHER BOTTLE

ENGINE SERVICES (Cont.)

- 13 FIRE EXTINGUISHER & FIRE WARNING (Cont.)
- 34 FLAME SWITCHES (4 BEFORE MOD. 344)
- 35 WARNING LAMP

MISCELLANEOUS

- 36 OIL TEMPERATURE INDICATOR
- 37 OIL TEMPERATURE BULB
- 38 TACHOMETER INDICATOR
- 39 TACHOMETER GENERATOR
- 40 EXHAUST GAS THERMOCOUPLE INDICATOR
- 41 EXHAUST GAS THERMOCOUPLE

FUEL SYSTEM

- 42 CONTENTS INDICATORS (5) (BEFORE MOD. 548)
- 43 CONTENTS TRANSMITTERS (5) (BEFORE MOD. 548)
- 44 CONTENTS POWER UNIT (AFTER MOD. 548)
- 45 CONTENTS SELECTOR UNIT (AFTER MOD. 548)
- 46 CONTENTS INDICATOR (AFTER MOD. 548)
- 47 CONTENTS TANK UNITS (5) (AFTER MOD. 548)
- 48 PRESSURE WARNING RESISTANCE
- 49 PRESSURE WARNING PRESSURE SWITCH
- 50 PRESSURE WARNING LAMP
- 51 BOOSTER PUMP SWITCH
- 52 BOOSTER PUMP SUPPRESSOR, TYPE P1
- 53 BOOSTER PUMP

UNDERCARRIAGE

- 54 INDICATOR
- 55 WARNING LAMP
- 56 THROTTLE MICRO SWITCH
- 57 UP MICRO SWITCHES (4 AFTER MOD. 106)
- 58 LEG LOCK MICRO SWITCHES (3)
- 59 DOWN MICRO SWITCHES (3) (AFTER MOD. 106)
- 60 DOOR MICRO SWITCHES (3) (AFTER MOD. 106)
- 61 LEVER LOCK MICRO SWITCH
- 62 LEVER LOCK MICRO SWITCH
- 63 OVERRIDE SWITCH
- 64 LEVER LOCK SOLENOID

INTERIOR LIGHTING

- 65 U.V. LAMP DIMMER
- 66 U.V. LAMP (4)
- 67 RED FLOODLAMP DIMMER
- 68 RED FLOODLAMP (2)
- 69 CONTROL COIL FLOODLAMP
- 70 J.B.1 FLOODLAMP DIMMER
- 71 J.B.1 FLOODLAMP
- 72 GUN COMPARTMENT LAMP
- 73 EMERGENCY LAMP SWITCH
- 74 EMERGENCY LAMP

EXTERIOR LIGHTING

- 75 NAVIGATION LAMP SWITCH
- 76 NAVIGATION LAMP (3)
- 77 IDENTIFICATION LAMP PUSH-SWITCH
- 78 IDENTIFICATION LAMP SELECTOR SWITCH
- 79 IDENTIFICATION LAMP (3)
- 80 IDENTIFICATION LAMP (3)
- 81 LANDING LAMP SWITCH
- 82 LANDING LAMP

GUN FIRING, GUN SIGHT AND CAMERA

- 83 SAFETY SWITCH
- 84 GUN FIRING SWITCH
- 85 RELAYS, TYPE P OR Q (3)
- 86 SAFETY MICRO SWITCH
- 87 SOUNDS COUNTER (IF FITTED)
- 88 FIRING SOLENOIDS (4)

GUN SIGHT

- 89 VOLTAGE REGULATOR, TYPE 22
- 90 SUPPRESSOR, TYPE P2
- 91 SUPPRESSOR, TYPE P
- 92 RELAY

CAMERA

- 93 MASTER SWITCH
- 94 FOOTAGE INDICATOR

GUN FIRING, GUN SIGHT AND CAMERA (Cont.)

- 95 CAMERA (Cont.)
- 96 SELECTOR RELAY, TYPE P2
- 97 MASTER RELAY, TYPE P2
- 98 RELAY, TYPE Q1
- 99 RELAY, TYPE P1
- 100 CAMERA
- 101 PUSH-SWITCH

ROCKET PROJECTILES AND BOMBS

- 102 R.P./BOMBS SELECTOR SWITCH
- 103 R.P./BOMBS FIRING PUSH-SWITCH

ROCKET PROJECTILES

- 104 RELAY AND RESISTANCE BOX
- 105 RELAY SWITCH
- 106 AUTO SELECTOR
- 107 FIRING SOCKETS (4)

BOMBS

- 108 DISTRIBUTOR SWITCH
- 109 SELECTOR SWITCHES (2)
- 110 FUZZING SWITCH (2)
- 111 DISTRIBUTOR
- 112 RELEASE SOCKETS (2)

G4F COMPASS, ARTIFICIAL HORIZON AND TURN AND SLIP (AFTER MODS. 648 AND 897)

- 113 TURN AND SLIP SWITCH
- 114 TURN AND SLIP INDICATOR
- 115 COMPASS SWITCH
- 116 INVERTER CONTROL, TYPE 12
- 117 INVERTER, TYPE 10A
- 118 CIRCUIT BREAKER
- 119 FUSE BOX
- 120 SUPPRESSOR
- 121 RELAY

MISCELLANEOUS

- 122 FLAP INDICATOR
- 123 FLAP TRANSDUCER
- 124 CABIN PRESSURE WARNING VALVE
- 125 CABIN PRESSURE WARNING LAMP
- 126 PRESSURE HEAD HEATER SWITCH
- 127 PRESSURE HEAD HEATER
- 128 A1 COMPASS SWITCH (BEFORE MOD. 441)
- 129 A1 COMPASS SUPPRESSOR (BEFORE MOD. 441)

JUNCTION BOXES

- 130 J.B.1
- 131 J.B.2

TERMINAL BLOCK

- 132 O.33
- 133 E.13
- 134 E.13
- 135 IN. J.B.1
- 136 IN. J.B.1
- 137 IN. J.B.1
- 138 IN. J.B.1
- 139 IN. J.B.1
- 140 IN. J.B.1
- 141 IN. J.B.1
- 142 IN. J.B.1
- 143 IN. J.B.1
- 144 IN. J.B.1
- 145 IN. J.B.1
- 146 IN. J.B.1
- 147 IN. J.B.1
- 148 IN. J.B.1
- 149 IN. J.B.1
- 150 IN. J.B.1
- 151 IN. J.B.1
- 152 IN. J.B.1
- 153 IN. J.B.1
- 154 IN. J.B.1
- 155 IN. J.B.1
- 156 IN. J.B.1
- 157 IN. J.B.1
- 158 IN. J.B.1
- 159 IN. J.B.1
- 160 IN. J.B.1
- 161 IN. J.B.1
- 162 IN. J.B.1
- 163 IN. J.B.1
- 164 IN. J.B.1
- 165 IN. J.B.1
- 166 IN. J.B.1
- 167 IN. J.B.1
- 168 IN. J.B.1
- 169 IN. J.B.1
- 170 IN. J.B.1
- 171 IN. J.B.1
- 172 IN. J.B.1
- 173 IN. J.B.1
- 174 IN. J.B.1
- 175 IN. J.B.1
- 176 IN. J.B.1
- 177 IN. J.B.1
- 178 IN. J.B.1
- 179 IN. J.B.1
- 180 IN. J.B.1
- 181 IN. J.B.1
- 182 IN. J.B.1
- 183 IN. J.B.1
- 184 IN. J.B.1
- 185 IN. J.B.1
- 186 IN. J.B.1
- 187 IN. J.B.1
- 188 IN. J.B.1
- 189 IN. J.B.1
- 190 IN. J.B.1
- 191 IN. J.B.1
- 192 IN. J.B.1
- 193 IN. J.B.1
- 194 IN. J.B.1
- 195 IN. J.B.1
- 196 IN. J.B.1
- 197 IN. J.B.1
- 198 IN. J.B.1
- 199 IN. J.B.1
- 200 IN. J.B.1

VAMPIRE FB Mk.5 AND 9 - Electrical Installation

A.T.P.

RESTRICTED

ASSOCIATED PUBLICATION - A 4099E			
A.L. No.	AMENDMENT DESCRIPTION	DATE	INITIALS
4551			
3		JULY 1951	

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

