

RESTRICTED

A.P. 129—FLYING

VOLUME 1

PART 2 : FLIGHT, ENGINE, AND ANCILLARY INSTRUMENTS

SECTION 3 : COMPASSES

CHAPTER 1 : INTRODUCTION TO COMPASSES AND SELSYN TRANSMISSION

	<i>Paras.</i>
Introduction	1
SELSYN TRANSMISSION	
Data Selsyns	7-15
Signal Selsyns	16-22

CHAPTER 2 : G.4 GYRO-MAGNETIC COMPASSES

Introduction	1-2
Purpose	3
Implementation	4
Construction	5-10

GENERAL PRINCIPLES OF OPERATION

Detector Unit	13-15
Selsyn Units	16-17
Summary of Basic Features	18
Presentation of Compass Indications	19-23
Master Indicator	24
Annunciator	25-27
D.G./Compass Selector Switch	28
Synchronizing Knob	29-33
Deviation Corrector	34

PREPARATION FOR FLIGHT

Starting the Mk. 4F	35
Starting the Mk. 4B	36
Pre-Flight Checking of Mk. 4 Compasses	37-38
Pilot's Serviceability Checks	39

OPERATING LIMITS 40

MONITOR AND A.C. SUPPLY FAILURE

Magnetic Monitoring Failure... ..	41
A.C. Supply Failure	42

RESTRICTED

RESTRICTED

CHAPTER 3: THE D.R. COMPASS MK. 1 AND HEADING INDICATOR MK. 1

	<i>Paras.</i>
Introduction	1
Purpose	2-3
Implementation... ..	4-6
Description	7-20
Switching On, Testing, and Operation	21-23
Heading Indicator Mk. 1	24-28

CHAPTER 4: SELF-CONTAINED MAGNETIC COMPASSES

Purpose	1
Implementation... ..	2
Construction	3

P-TYPE COMPASSES

Errors	4-5
Accuracy	6
Pilot's Serviceability Checks	7
Operation	8-10
Swinging Procedure	11

E-TYPE COMPASSES

Errors	14
Accuracy	15
Pilot's Serviceability Checks	16
Operation	17-19
Swinging Procedure	20-23



This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.

