

**RESTRICTED**

**A.P. 129—FLYING**

**VOLUME 1**

**PART 2 : FLIGHT, ENGINE, AND ANCILLARY INSTRUMENTS**

**SECTION 5 : ELECTRICALLY-OPERATED FLIGHT INSTRUMENTS**

**CHAPTER 1 : TURN AND SLIP INDICATORS**

	<i>Paras.</i>
Purpose ... ..	1
Implementation...	2-3

**CONSTRUCTION AND OPERATION**

Mk. 2 ... ..	5-9
Mk. 2A ... ..	10-14
Mks. 2 and 2A Power Supply ... ..	15

**CHAPTER 2 : ARTIFICIAL HORIZONS**

Mk. 3 ... ..	1-8
Mk. 3B ... ..	9-13
Mk. 3C ... ..	14
Mk. 4 Series ... ..	15-21

**CHAPTER 3 : RADAR ALTIMETER, S.C.R. 718A**

Purpose ... ..	1
Implementaticn...	2
Construction ... ..	3
Limitations ... ..	4-6

**OPERATION**

Switching On ... ..	7-9
Reading the Indicator ... ..	10-15
Reading the Indicator at Altitudes Above 5,000 feet ... ..	16-17
Reading the Indicator at 5,000 feet and Multiples Thereof ... ..	18-20
Use for Low-Level Terrain Clearance Indication ... ..	21-23
Fault Finding ... ..	24-27

<b>SECURITY AND JAMMING ... ..</b>	<b>28-29</b>
------------------------------------	--------------

**RESTRICTED**

**CHAPTER 4: LOW-LEVEL RADIO ALTIMETERS**

**A.Y.F.**

*Paras.*

Purpose ... ..	1
Implementation...	2
Construction ... ..	3
Limitations and Performance...	4-9
Operation ... ..	10-14
Interference ... ..	15-18

**MK. 5**

Range and Accuracy ... ..	19
Implementation...	20
Operation ... ..	21-25

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

