

GENERAL ASSEMBLY OF AIRCRAFT

| Ref. No. | Part No. | Description | No. off | Matl. Spec. | Cl. of Equip. | Plate No. |
|----------|---------------|---|---------|-------------|---------------|-----------|
| | | | | | M.R. L.M. | |
| | E.A9.00.1 | GENERAL ASSEMBLY OF AIRCRAFT Spares for:— | — | — | — | |
| | E.A9.97.1 | Armament, Ancillary Equipment (see Page 3) ... | — | — | — | |
| | E.A9.00.9 | Armament, Interdictor Role (see Page 15) ... | — | — | — | |
| | E.B6.00.25 | Armament, Bomber Role (see Page 63) ... | — | — | — | |
| | | Canopy to Fuselage, Assembly (see Page 773) ... | — | — | — | |
| | | Centre, Fuselage to Rear Fuselage Attachment Details (see Page 1042) | — | — | — | |
| 3058 | E.A1.20.10733 | Door, Undercarriage, c/w Mechanism, Port, Assembly (see Page 847) | 1 | — | A | |
| 3059 | E.A1.20.10734 | Door, Undercarriage, c/w Mechanism, Starboard, Assembly (see Page 869) | 1 | — | A | |
| | E.A9.47.1 | Engine Controls (see Page 101) | — | — | — | |
| | E.A9.45.1 | Flying Controls (see Page 183) | — | — | — | |
| | E.A9.000.111 | Front Fuselage to Centre Fuselage Attachment, Details (see Page 1041) | — | — | — | |
| | E.A9.00.49 | Fuselage, Centre Portion, Assembly (see Page 653) | 1 | — | — | |
| | E.A9.88.1 | Ground Equipment (see Page 625) | — | — | — | |
| | E.A1.00.81 | Jettisonable Wing Tank to Wing, Attachment Details, Port (see Page 1044) | — | — | — | |
| | E.A1.00.82 | Jettisonable Wing Tank to Wing, Attachment Details, Starboard (see Page 1044) | — | — | — | |
| 21949 | E.A9.00.5 | Nose Fuselage, Assembly (see Page 727) | 1 | — | A/MR | |
| | E.A9.00.15 | R.A.7. Engine Installation, Port (see Page 1135) ... | — | — | — | |
| | E.A9.00.16 | R.A.7. Engine Installation, Starboard (see Page 1149) | — | — | — | |
| | E.A9.00.45 | Rear Fuselage and Tail Unit, Assembly (see Page 749) | — | — | — | |
| 12867 | E.A3.00.505 | Tank, Jettison, Wing Tip, Port, c/w, Attachment Details, less Detonators and Vortex Generators (Pre-Mod. 2395) (see Page 775) | 1 | — | A | |
| 12868 | E.A3.00.506 | Tank, Jettison, Wing Tip, Starboard, c/w, Attachment Details, less Detonators and Vortex Generators (Pre-Mod. 2395) (see Page 787) | 1 | — | A | |
| 12140 | E.A9.00.11 | Wing, Port, Assembly (see Page 893) | 1 | — | A | |
| 12141 | E.A9.00.12 | Wing, Starboard, Assembly (see Page 917) | 1 | — | A | |
| | E.B6.00.21 | Wing to Fuselage, Attachment Details, Port (see Page 1039) | — | — | — | |
| | E.B6.00.22 | Wing to Fuselage, Attachment Details, Starboard (see Page 1040) | — | — | — | |

GENERAL ASSEMBLY OF AIRCRAFT

| Ref. No. | Part No. | 1 | 2 | 3 | 4 | 5 | 6 | Description | No. off | Matl. Spec. | Cl. of Equip. | Plate No. |
|----------|-------------|---|---|---|---|---|---|--|---------|-------------|---------------|-----------|
| | | | | | | | | | | | M.R. | |
| 14717 | E.B6.00.347 | | | | | | | Tank, Jettison, Port, c/w, Attachment Details and Vortex Generators, less Detonators (Mod. 2395) (see Page 777) | 1 | — | A | |
| 14718 | E.B6.00.348 | | | | | | | Tank, Jettison, Starboard, c/w, Attachment Details and Vortex Generators, less Detonators (Mod. 2395) (see Page 787) | 1 | — | A | |

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.



LIGHTNING MK. 1
COVER PITOT HEAD
EB2-88-511