

Chapter 22

SWITCH, MAGNETIC, TYPE 15A, No. 1 (ROTAX D9401)

LIST OF CONTENTS

	Para.		Para.
Introduction	1	Coil resistance test	5
Description	2	Millivolt drop tests	6
Servicing	4	Insulation resistance tests	8
		Resetting interlock mechanism	9

LIST OF ILLUSTRATIONS

	Fig.		Fig.
Type 15A, No. 1 switch	1	Diagram of internal connections	3
View of switch with covers removed	2		

LEADING PARTICULARS

Voltage:

Main contacts	112-V, d.c.
Auxiliary contacts	28-V, d.c.
Operating coil	28-V, d.c.
Tripping coil	28-V, d.c.
Resistance of operating coil at 20 deg. C.	3.7 ohm \pm 5 per cent
Resistance of tripping coil at 20 deg. C.	36 ohm \pm 5 per cent

Current rating

Main contacts	80 amperes
Auxiliary contacts	5 amperes
Length	5.500 in.
Width	5.437 in.
Height	5.062 in.
Operational temperature range	-65 deg. C. to +50 deg. C.
Operational ceiling	50,000 ft.
Weight	5 lb.

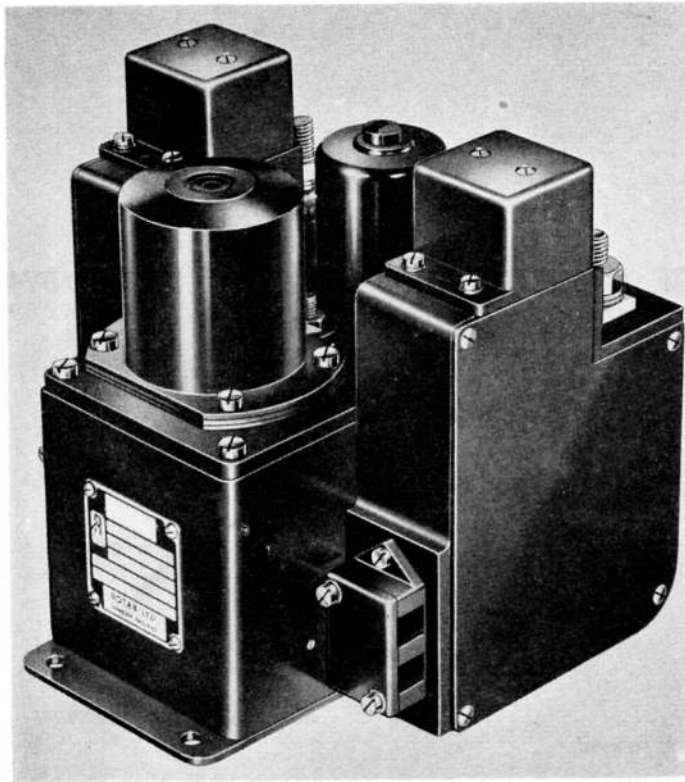


Fig. 1. Type 15A, No. 1 switch

Introduction

1. This unit is included in the series of magnetically operated single pole contactors described in A.P.4343, Vol. 1, Sect. 11, Chap. 17, and is designed for the remote switching of 112 volt circuits whose current ratings do not exceed 80 amperes. The switch is mechanically latched and therefore suitable for applications where continuous rating is required.

DESCRIPTION

2. This unit is generally similar to others in the D 9400 series (A.P.4343, Vol. 1, Sect. 11, Chap. 17) with the exception that neither a bi-metal element nor an economy resistance is fitted. The switch may, therefore, only be tripped manually or magnetically.

3. For details of operation and installation, reference should be made to the chapter mentioned in para. 2.

SERVICING

4. In addition to the servicing detailed in A.P.4343, Vol. 1, Sect. 11, Chap. 17, the following tests should be applied.

Coil resistance test

5. Measure the resistance of each coil between the appropriate terminals on the four-way terminal block (see fig. 3). When corrected to an ambient temperature of 20 deg. C. the resistance of the operating coil should be 3.7 ohm \pm 5 per cent and the resistance of the tripping coil should be 36 ohm \pm 5 per cent.

Millivolt drop tests

6. Allow the rated current of 80 amperes to flow through the 112 volt circuit and test the following potential drops; they should not exceed the values given.

(1) across each pair of contacts	20 millivolt
(2) across each flexible braid	25 millivolt
(3) across each joint	5 millivolt
(4) across the main terminals	110 millivolt

RESTRICTED

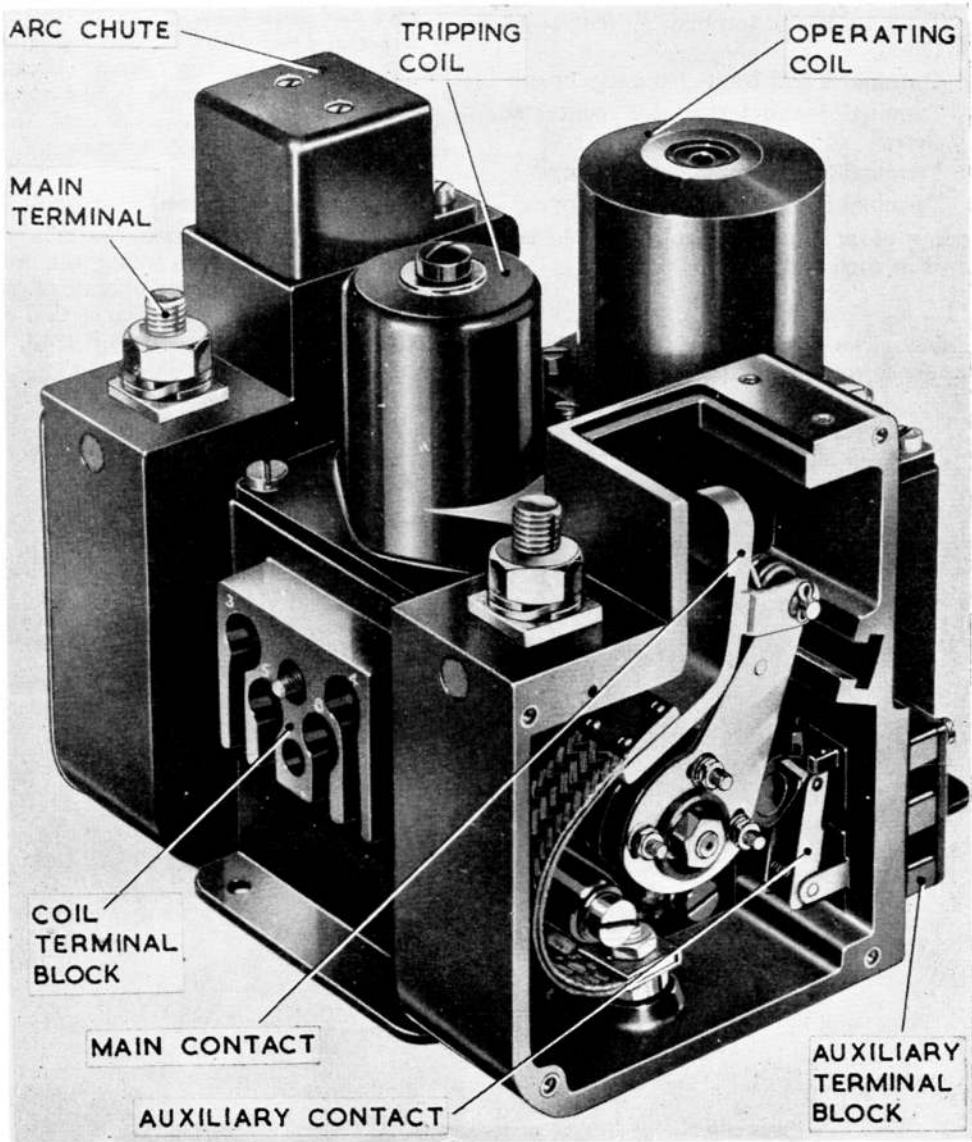


Fig. 2. View of switch, with covers removed

7. With 5 amperes flowing, the potential drop between the terminals of each auxiliary switch should not exceed 20 millivolt. With 7.5 amperes flowing, the potential drop between the top of the coil safety switch should not exceed 80 millivolt.

Insulation resistance tests

8. Measure the insulation resistance between the following points, using a 250 volt insulation resistance tester.

- (1) Terminal 1 and terminal 2 (contacts open)
- (2) Terminal 1 and terminals 3, 5, 6, 7, 9, 10 and frame (contacts closed)
- (3) Terminal 3 and terminals 5, 7, 8 and 9 (contacts open)
- (4) Terminals 5 and terminals 7, 8 and 9 (contacts open)
- (5) Terminal 7 and terminals 8, 9 and frame (contacts open)

- (6) Terminal 8 and terminal 9 and frame (contacts open)
- (7) Terminal 9 and terminal 10 (contacts closed)
- (8) Terminal 9 and frame (contacts open)
- (9) Terminal 5 and terminal 6 (contacts closed)
- (10) Terminal 3 and frame (contacts open)
- (11) Terminal 5 and frame (contacts open)

A reading of at least 2 megohm should be obtained in each test.

Note . . .

The values given in these insulation resistance tests apply to units being tested under normal

workshop conditions. Due allowance should be made for the climatic conditions of the locality and those of the aircraft servicing area or dispersal point where the tests are being conducted. In particularly damp climate, the readings will be low enough to give apparently sufficient reason for rejection and in these instances discretion should be exercised.

Resetting interlock mechanism

9. In the event of the main contacts welding as the result of excessive arcing, the interlock mechanism of the unit will operate to prevent further operation. Remedial action should be taken in accordance with A.P.4343, Vol. 1, Sect. 11, Chap. 17.

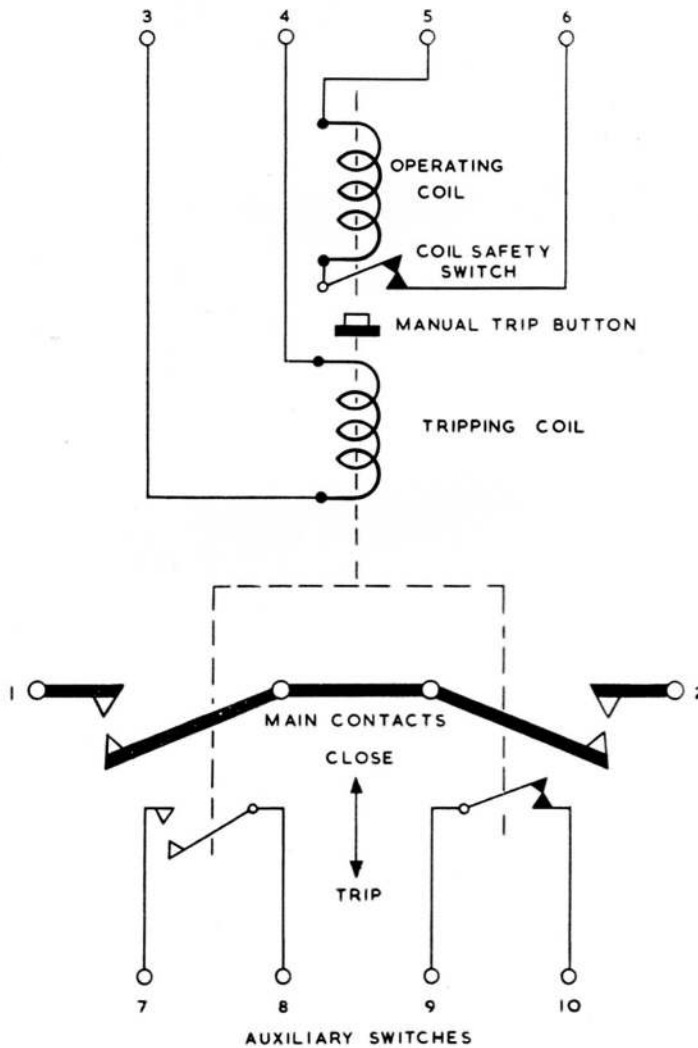


Fig. 3. Diagram of internal connections

RESTRICTED

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

