

## Chapter 30

# ACTUATOR, WESTERN, TYPE EJ 50, Mk. 35 AND 35A

### LIST OF CONTENTS

	Para.		Para.
<i>Introduction</i> ....	1	<i>Worm</i> ....	6
<i>Dismantling, inspection, repair and re-assembly</i> ....	2	<i>Electrical connection</i> ....	7
<i>End fittings</i> ....	3	<b>Testing</b>	
<i>Fixing centres and stroke</i> ....	4	<i>Actuator</i> ....	8
<i>Reduction gears</i> ....	5	<i>Motor</i> ....	9

### LIST OF ILLUSTRATIONS

	Fig.		Fig.
<i>Fixed end fitting</i> ....	1	<i>Moving end fitting</i> ....	2

#### Introduction

1. This actuator differs from that described in A.P.4343, Vol. 6, Sect. 17, Chap. 2 App. 15 on Western EJ 50 series in respect of end fittings, length and time of stroke, reduction gears, worm thread and electrical connection. Details of these variations are given below.

#### DISMANTLING, INSPECTION, REPAIR AND RE-ASSEMBLY

2. These are all described in A.P.4343, Vol. 6, Sect. 17, Chap. 2, App. 15.

#### End fittings

3. This actuator is attached at the fixed

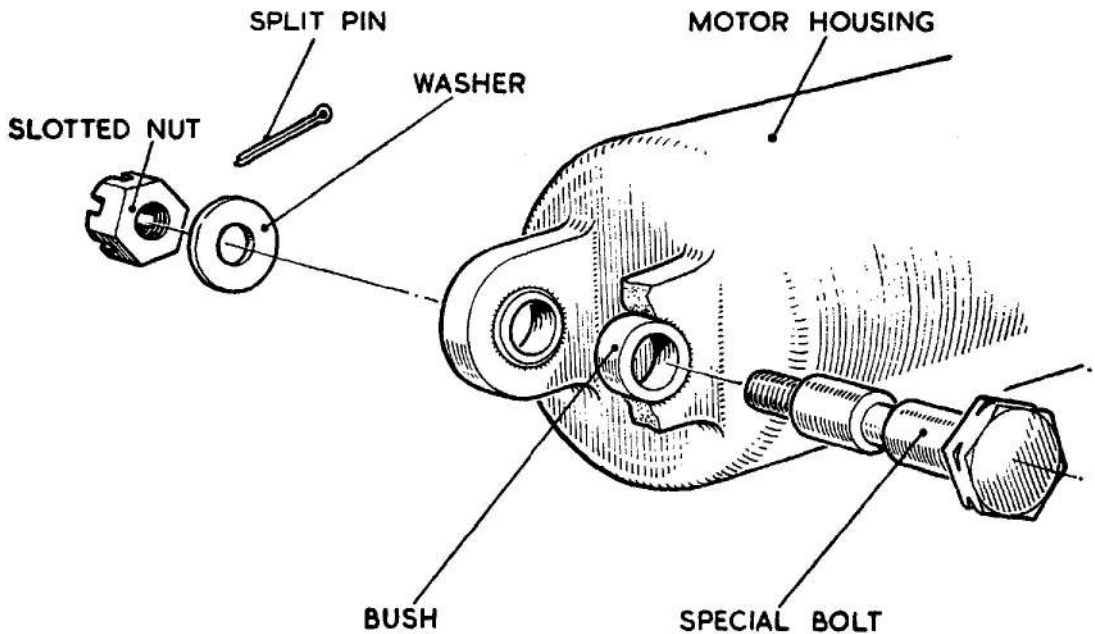


Fig. 1. Fixed end fitting



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

