

PART VI

ILLUSTRATIONS

Cockpit—Port side	1
Cockpit—Forward view	2
Cockpit—Starboard side	3

KEY TO FIGS. 1, 2 & 3.

1. Cockpit temperature selector.
2. Cockpit temperature control.
3. Cockpit pressure master switch.
4. Flood flow control switch.
5. Cockpit pressure warning test switch.
6. Tailplane motor circuit breaker.
7. Hood motor circuit breaker.
8. Radar test switch.
9. Undercarriage emergency air pressure gauge.
10. Flaps emergency air pressure gauge.
11. Brakes accumulator pressure gauge.
12. Crowbar.
13. L.P. cock control.
14. Airbrake test switch.
15. Hood rail locking indicator (one of four).
16. V.H.F. controllers.
17. V.H.F. changeover switch.
18. Throttle friction control.
19. Press-to-transmit switch.
20. Airbrake control switch.
21. ARI. 18044 switches.
22. Hood motor control and clutch release.
23. Telebriefing switch and warning light.
24. Radar ranging target reject switch.
25. Undercarriage emergency lowering control.
26. Selector dimmer control.
27. Radar ranging on/off switch and supply indicator.
28. Tailplane standby motor control.
29. H.P. pump isolating valve switch and warning light.
30. Aileron and rudder trim indicator.
31. Aileron and rudder trim control and locking device.
32. H.P. cock control.
33. Relighting pushbutton.
34. Hood jettison control.
35. Triple pressure gauge.
36. Undercarriage warning light.
37. Undercarriage position indicator.
38. Airbrake position indicator.
39. Undercarriage selector pushbuttons.
40. Flaps control and position indicator.
41. Flaps emergency lowering control.
42. Hydraulic pressure warning light.
43. Aileron and elevator power indicators.
44. Aileron and elevator power selector switches.
45. Tailplane position indicator.

46. GGS emergency lowering control.
47. Tailplane main motor control switch.
48. GGS master switch.
49. Radar ranging "locked-on" light.
50. E2 compass.
51. Windscreen de-icer control switch.
52. Fire warning light and extinguisher pushbutton.
53. Accelerometer.
54. Cockpit pressure altimeter.
55. Cockpit pressure warning light.
56. Oxygen contents gauge.
57. Mk. 17 oxygen regulator.
58. Camera aperture switch.
59. Audio warning cut-out switch.
60. Fuel low pressure warning indicator.
61. ARI. 5849 indicator.
62. Generator failure warning lights.
63. Starter pushbutton, starter master switch, ignition switch, pressure head heater switch, G45 camera switch and battery master switch.
64. Port fuel transfer failure indicator.
65. Fuel contents check switch.
66. Starboard fuel transfer failure indicator.
67. Fuel contents gauges.
68. Booster pump switches.
69. Emergency light switch.
70. Cockpit lighting switches.
71. IFF control switches.
72. Anti-G on/off control.
73. Anti-G test button.
74. Anti-G pressure gauge.
75. Booster pumps ammeter test socket.
76. Booster pumps circuit breakers.
77. Starter circuit breaker.
78. Mk. 4F compass test panel.
79. Booster-pump test switch.
80. Butt test switch.
81. ARI. 5849 control panel.
82. Oxygen emergency control.
83. Navigation lights switch.

NOTE.—The engine anti-icing switch and indicator are not illustrated. They are situated together below Item 69.


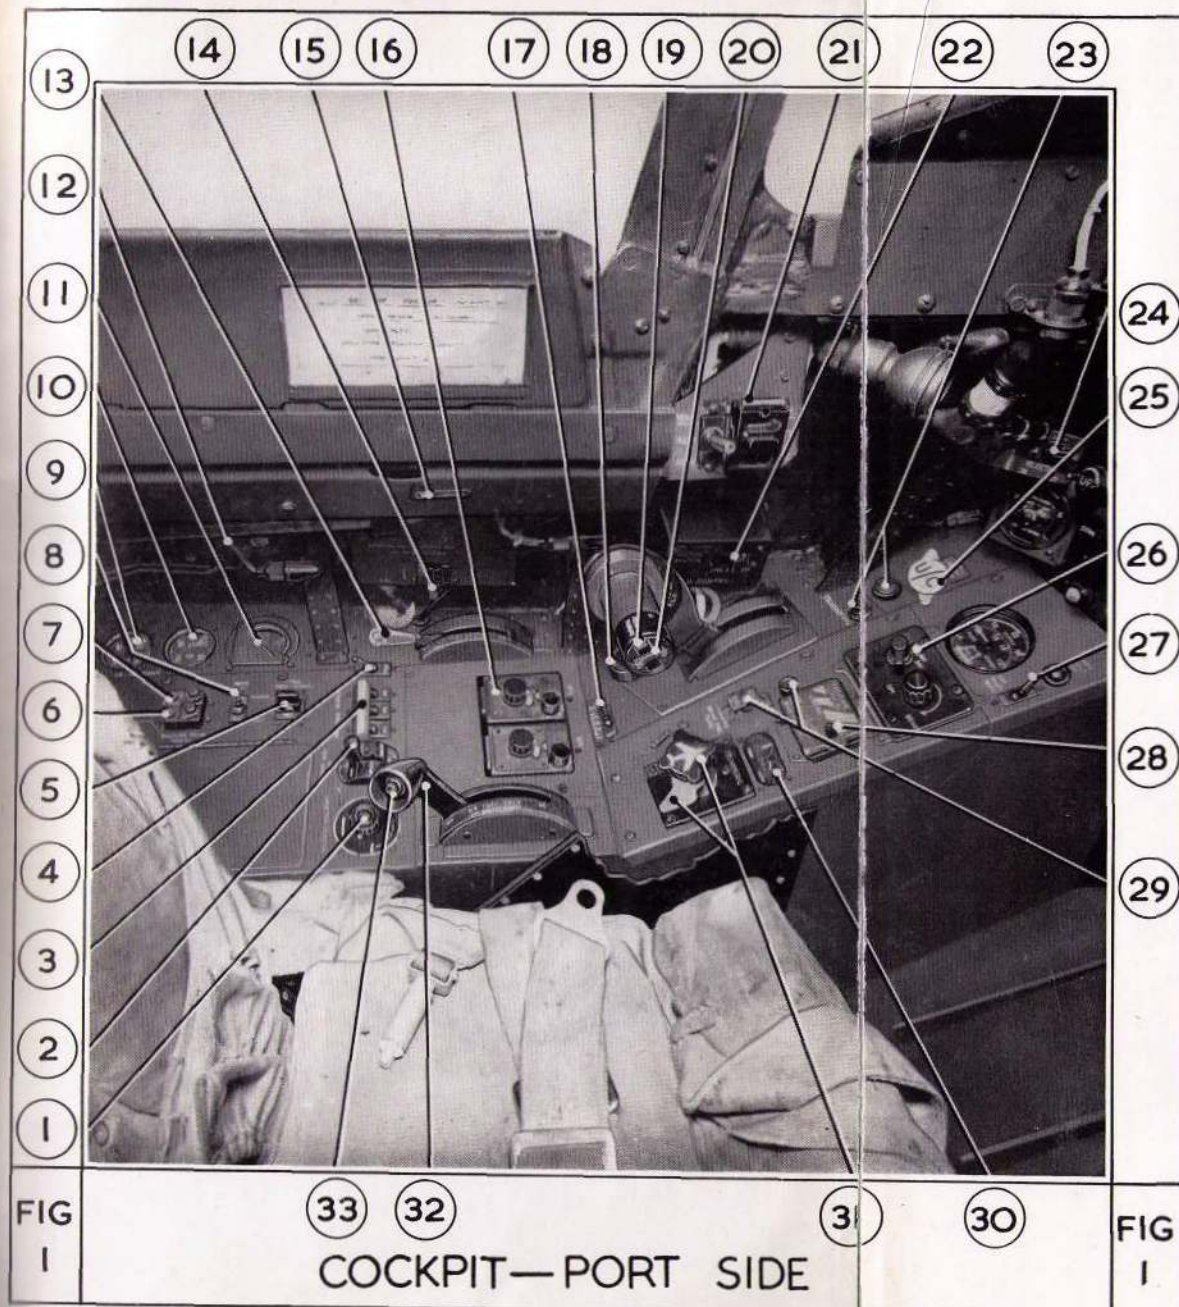


FIG
I

COCKPIT—PORT SIDE

FIG
I

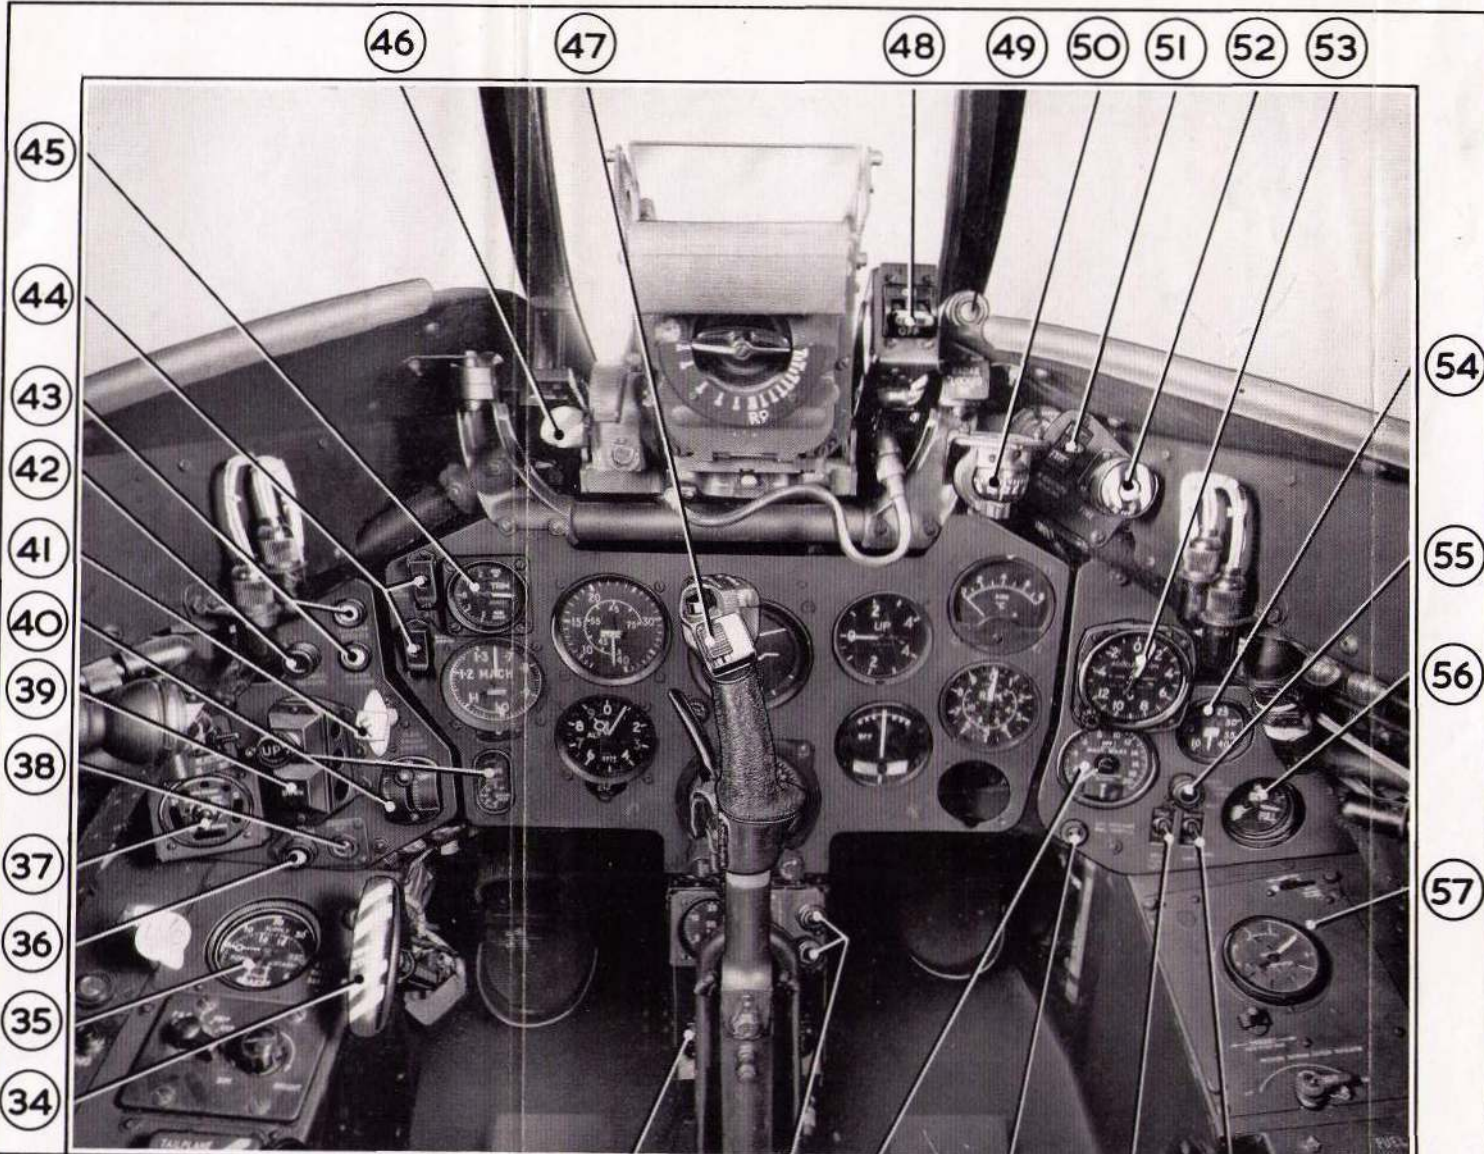

46

47

48

49

50

51

52

53

45

44

43

42

41

40

39

38

37

36

35

34

54

55

56

57

63

62

61

60

59

58

FIG
2

COCKPIT — FORWARD VIEW

FIG
2

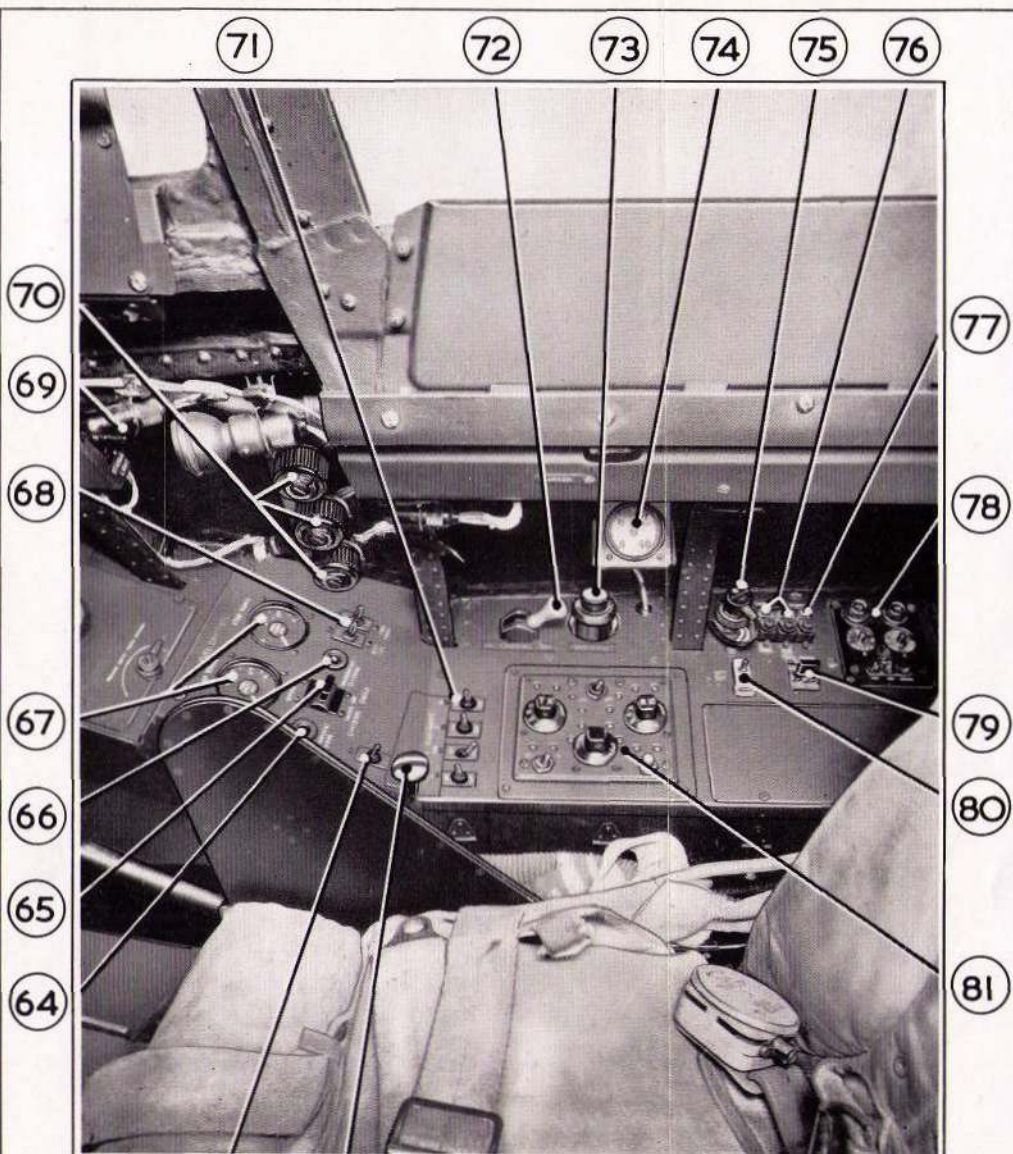


FIG 3

83 82
COCKPIT — STARBOARD SIDE

FIG 3



This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.

