

## PART VII

# ILLUSTRATIONS

### KEY TO FIGURE 1

1. Cockpit temperature selector
2. Cockpit temperature control
3. Cockpit pressure master switch
4. Flood flow control switch
5. Tailplane motor circuit breaker
6. Hood motor circuit breaker
7. Undercarriage emergency air pressure gauge
8. Flaps emergency air pressure gauge
9. Radar test switch
10. Cockpit pressure warning test switch
11. Brakes accumulator pressure gauge
12. Bombs/R.P. switch
13. Bomb fuzing switch
14. Pylon stores jettison pushbutton
15. Airbrake test switch
16. L.P. fuel cock control
17. V.H.F. controllers and change-over switch
18. Throttle damper
19. Hood motor control and clutch release
20. Throttle lever
21. A.R.I.18044 control
22. Press-to-transmit switch
23. Radar ranging target reject switch
24. Airbrake control switch

25. Telebriefing switch and warning light
26. Triple pressure gauge
27. Hood jettison control
28. Selector dimmer control
29. Follow-up tailplane interconnection switch
30. Tailplane standby motor control
31. Top temperature limiter control switch
32. Aileron and rudder trim indicators
33. H.P. pump isolating switch (Avon Mod. 748)
34. Rudder and aileron trim control
35. H.P. pump isolating warning light
36. H.P. cock control and relight button

#### KEY TO FIGURE 2


37. Radar ranging switch and indicator
38. Airbrake position indicator
39. Undercarriage emergency lowering control
40. Undercarriage warning light
41. Flaps control and position indicator
42. Undercarriage position indicator
43. Undercarriage selector pushbuttons
44. Flaps emergency lowering control
45. Aileron power selector switch and indicator—post-mod. 452 (hydraulic pressure warning light outboard)
46. Elevator power selector switch and indicator—post-mod. 452
47. Tailplane position indicator
48. Accelerometer
49. R.P. normal/ripple switch
- ~~51/50~~ R.P. selector switch
- ~~50/51~~ "Clear aircraft" switch
52. G.G.S. manual lowering control
53. Aileron and elevator manual emergency selector pushbuttons (mod. 502)
54. G.G.S.
55. G.G.S. master switch
56. Radar ranging "locked on" light
57. E.2 compass
58. Fire-extinguisher pushbutton and warning light
59. A.R.I. 5849 or 23013 indicator
60. Cockpit pressure altimeter

61. A.R.I. 18044 indicator
62. Cockpit pressure warning light
63. Oxygen contents gauge
64. Camera aperture switch
65. Audio warning cut out switch
66. Fuel low pressure indicator
67. Gun firing and bomb/R.P. release safety catches
68. Camera firing switch
69. Tailplane incidence control switch
70. Generator failure warning lights
71. Starter pushbutton
72. Starter master switch
73. Ignition switch
74. Pressure head heater switch
75. G45 camera master switch
76. Aileron spring feel adjuster (Mod. 188)
77. Battery master switch
78. Oil pressure gauge
79. Rudder pedals adjuster

#### KEY TO FIGURE 3

80. Fuel contents gauges
81. Wing tanks (or drop tanks—Mod. 608) empty indicators
82. Oxygen regulator
83. Cockpit lighting switches
84. Engine anti-icing switch and indicator
85. Emergency lamp switch
86. Booster-pumps switches
87. Booster-pumps failure warning lights
88. Anti-G control
89. Hood rail locking indicator (one of four)
90. Anti-G test button
91. Anti-G pressure gauge
92. A.R.I. 5849 or 23013 control panel
93. Booster-pumps ammeter socket
94. Booster-pumps circuit breakers
95. Starter circuit breaker
96. Mk. 4F compass test panel
97. Booster-pumps test switch

98. Butt test switch
99. I.F.F. switches
100. Emergency oxygen control
101. Navigation lights switch
102. Fuel transfer warning indicators
103. Fuel contents engine on/engine off check switch

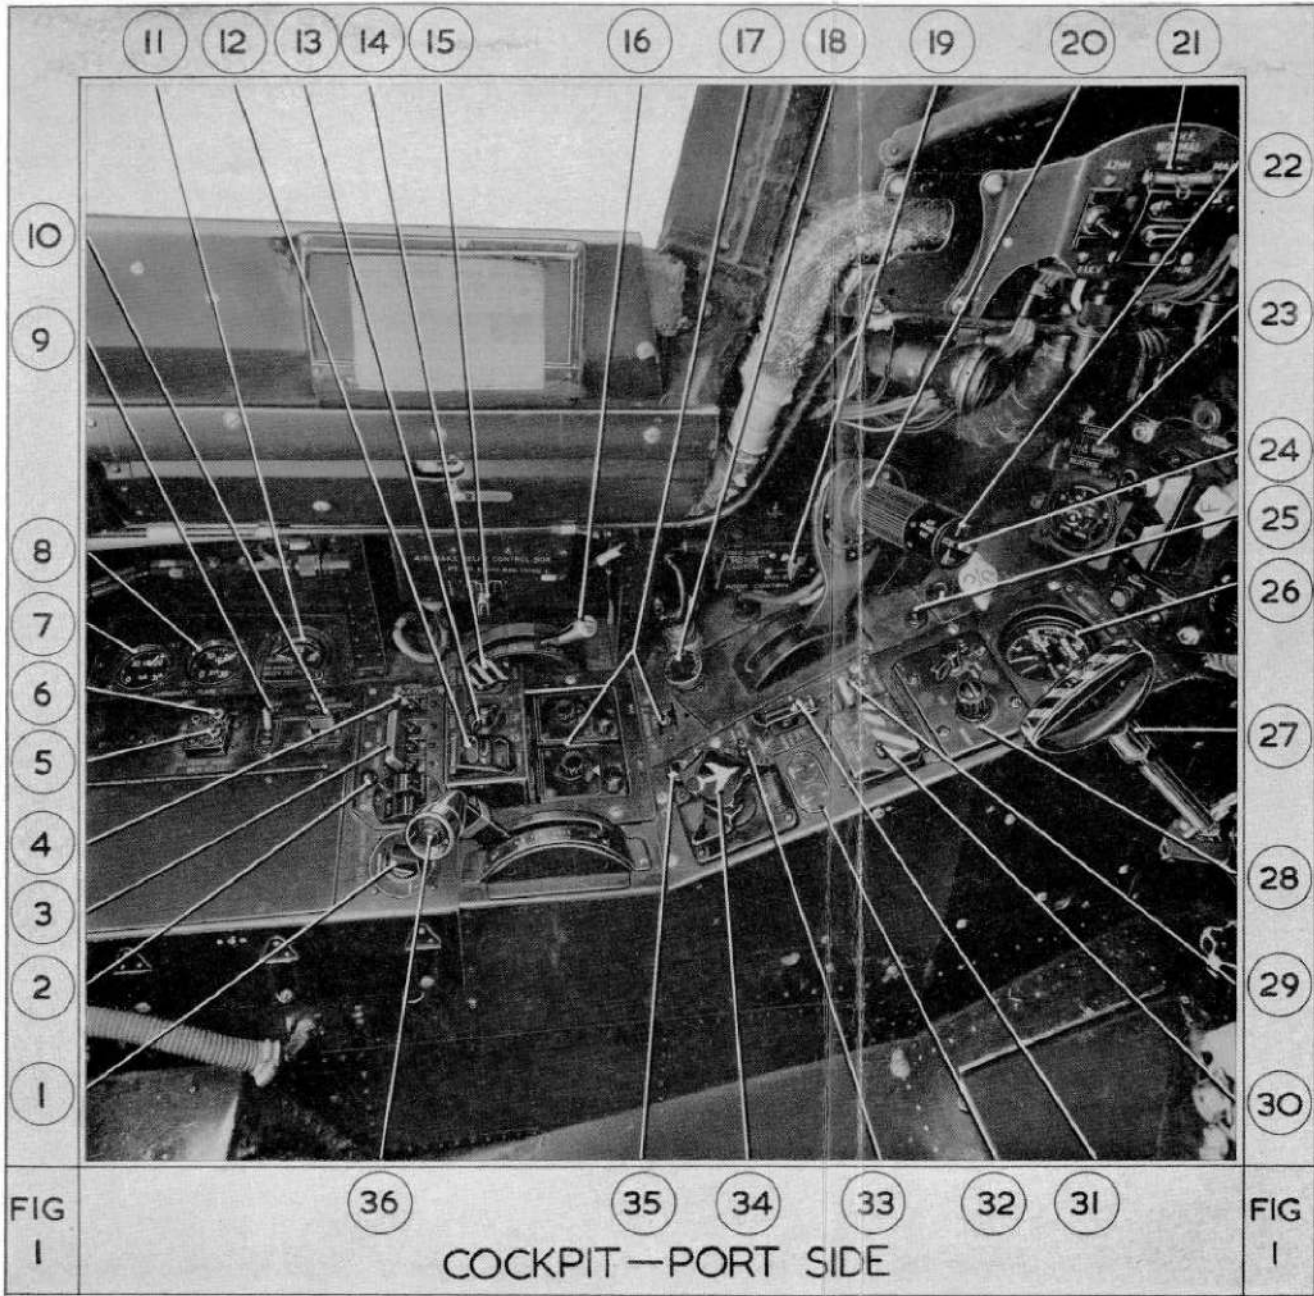

49

50

51

52

53

54

55

56

57

58

59

48

47

46

45

44

43

42

41

40

39

38

37

60

61

62

63

64

65

66

67

68

69

FIG

79

78

77

76

75

74

73

72

71


70


FIG

2

2

COCKPIT - FORWARD VIEW

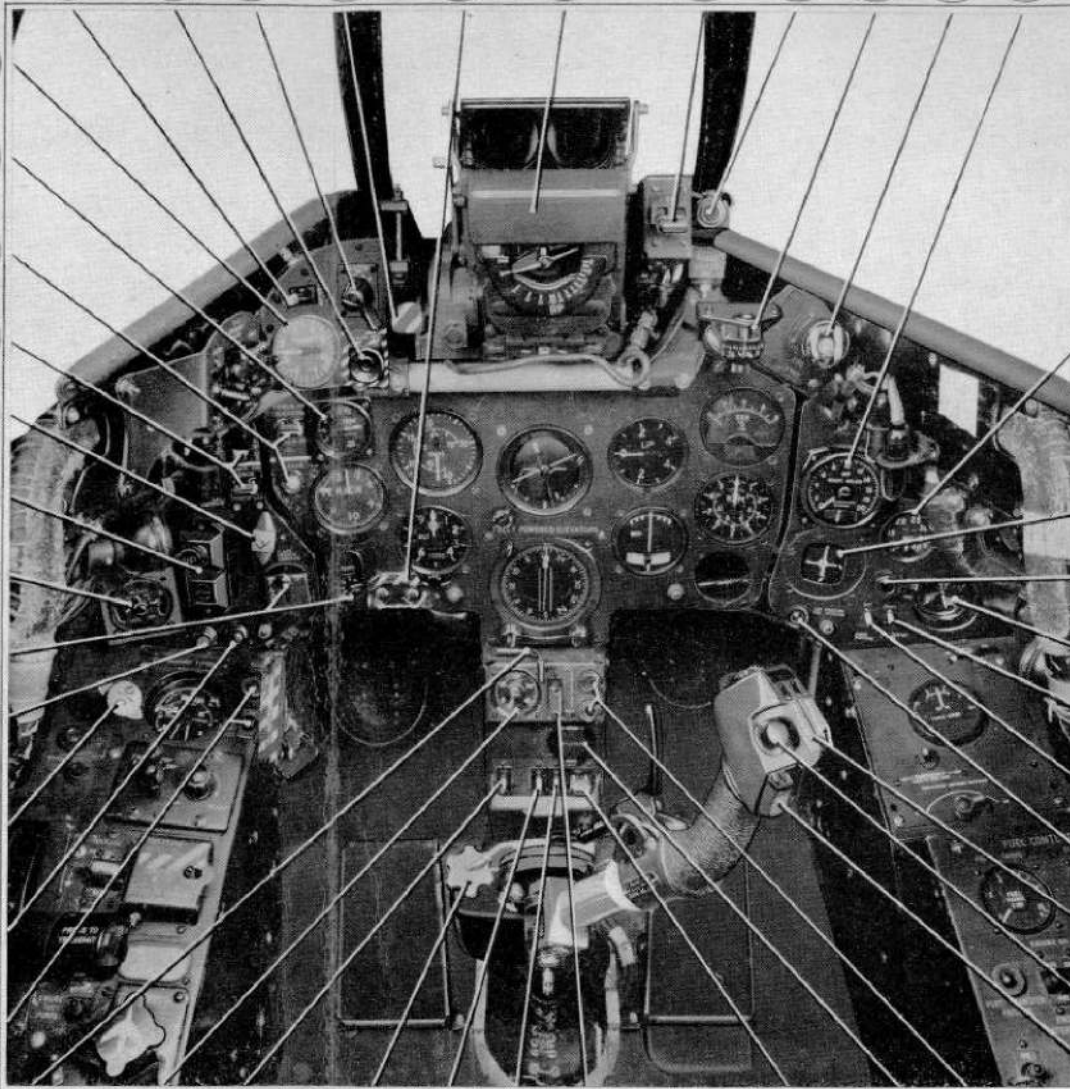

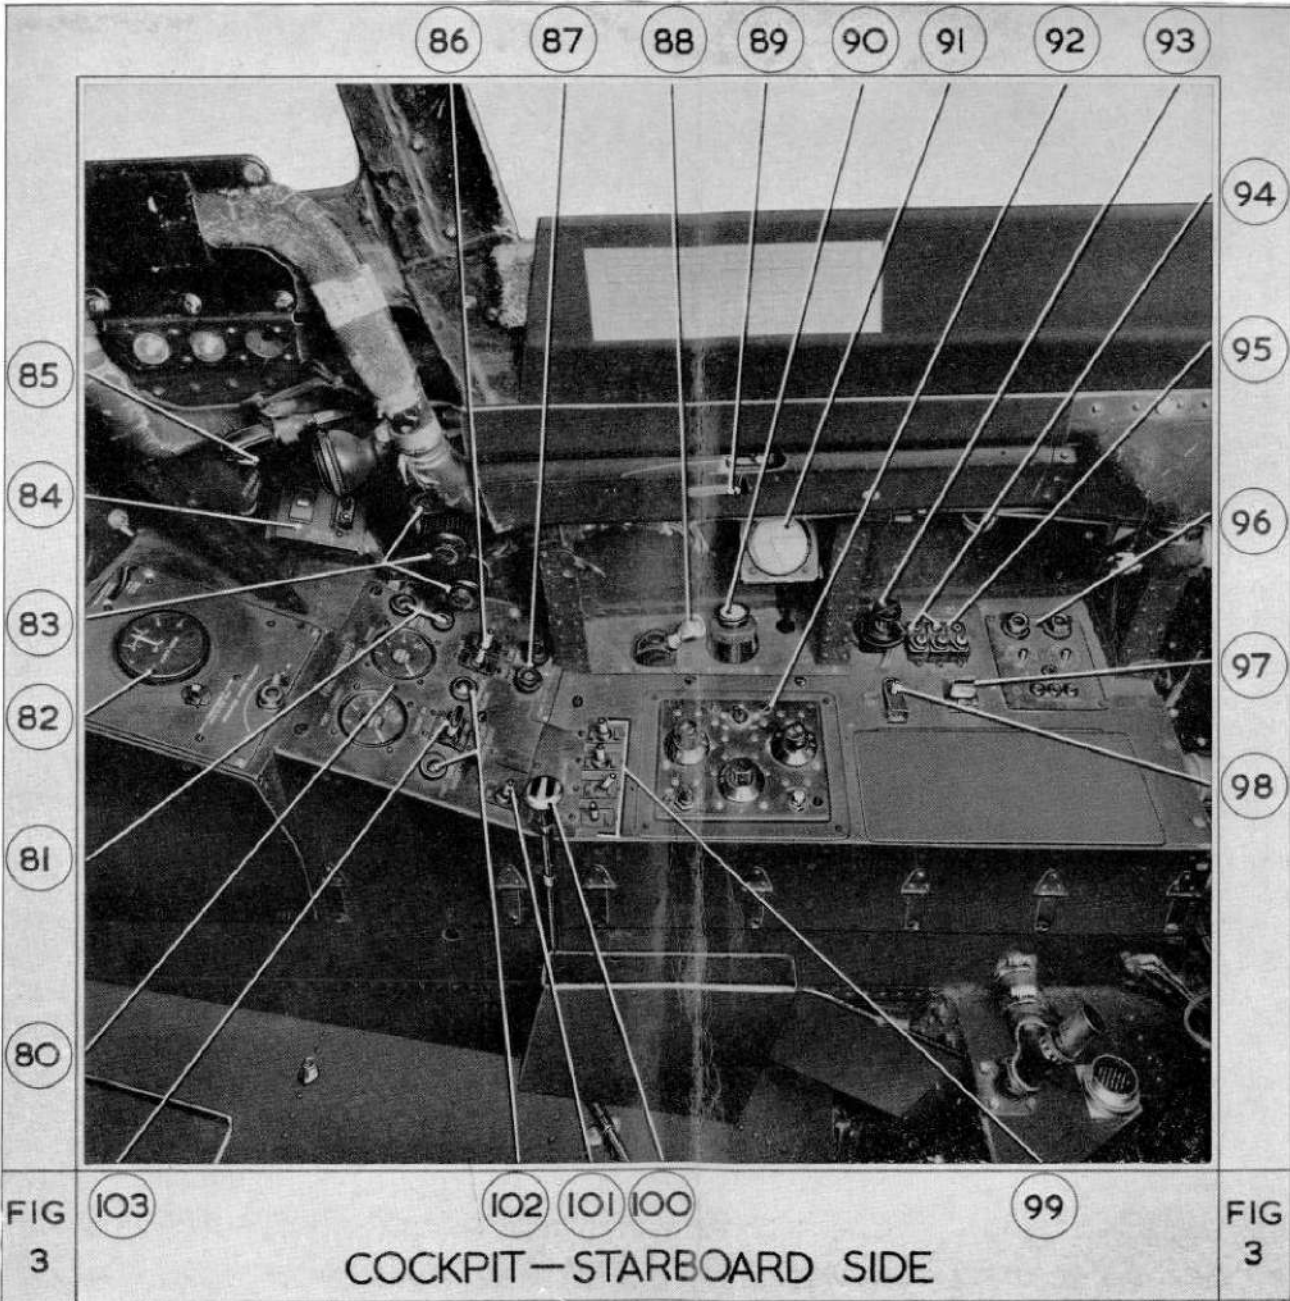



This file was downloaded from the RTFM Library. Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm) Please see site for usage terms, and more aircraft documents.