

PART VI

ILLUSTRATIONS

KEY TO FIGS. 1, 2 & 3.

1. Cockpit temperature selector.
2. Cockpit temperature control.
3. Cockpit pressure master switch.
4. Flood flow control switch.
5. Cockpit pressure warning test switch.
6. Tailplane motor circuit breaker.
7. Hood motor circuit breaker.
8. Radar test switch.
9. Undercarriage emergency air pressure gauge.
10. Flaps emergency air pressure gauge.
11. Brakes accumulator pressure gauge.
12. Crowbar.
13. L.P. cock control.
14. Airbrake test switch.
15. Hood rail locking indicator (one of four).
16. V.H.F. controllers.
17. V.H.F. changeover switch.
18. Throttle friction control.
19. Press-to-transmit switch.
20. Airbrake control switch.
21. ARI. 18044 switches.
22. Hood motor control and clutch release.
23. Telebriefing switch and warning light.
24. Radar ranging target reject switch.
25. Undercarriage emergency lowering control.
26. Selector dimmer control.
27. Radar ranging on/off switch and supply indicator.
28. Tailplane standby motor control.
29. *Not applicable to Mk. 5 aircraft.*
30. Aileron and rudder trim indicator.
31. Aileron and rudder trim control and locking device.
32. H.P. cock control.
33. Relighting pushbutton.
34. Hood jettison handle.
35. Triple pressure gauge.
36. Undercarriage warning light.
37. Undercarriage position indicator.
38. Airbrake position indicator.
39. Undercarriage selector pushbuttons.
40. Flaps selector and position indicator.
41. Flaps emergency selector.
42. Powered controls indicators.
43. Powered controls selectors.
44. Accelerometer.
45. Tailplane trim indicator.

46. G.G.S. emergency lowering control.
47. Artificial horizon fast erection button.
48. G.G.S. master switch.
49. Radar ranging indicator light.
50. E.2 compass.
51. Windscreen de-icing switch.
52. Fire warning light and extinguisher button
53. DME indicator.
54. ARI 18044 indicator.
55. Cockpit altimeter.
56. Cockpit pressure warning light.
57. Oxygen contents gauge.
58. Camera aperture switch.
59. Audio warning cut-out switch.
60. Tailplane trim control switch.
61. Generator failure warning lights.
62. Starter pushbutton.
63. Starter master switch.
64. Pressure-head heater switch.
65. G45 camera switch.
66. Ignition switch.
67. Battery master switch.
68. Rudder pedals adjusting control.
69. Emergency oxygen control.
70. Navigation lights switch.
71. Fuel transfer warning indicators.
72. Fuel contents check switch.
73. Fuel contents (lb.) gauges.
74. Oxygen regulator.
75. Wing tanks empty warning indicators.
76. Emergency lamp switch.
77. Cockpit lighting switches.
78. Booster-pumps switches.
79. IFF switches.
80. Anti-G control.
81. Anti-G test button.
82. Anti-G pressure gauge.
83. Booster-pumps ammeter socket.
84. Booster-pumps circuit-breakers.
85. Starter circuit-breaker.
86. Mk. 4F compass test panel.
87. Booster-pumps test switch.
88. Butt test switch.
89. DME control panel.

NOTE.—The following items are not keyed:—

Pylon stores control panel (aft of 16). *Not illustrated.*
 Hydraulic pressure warning light (above 39).

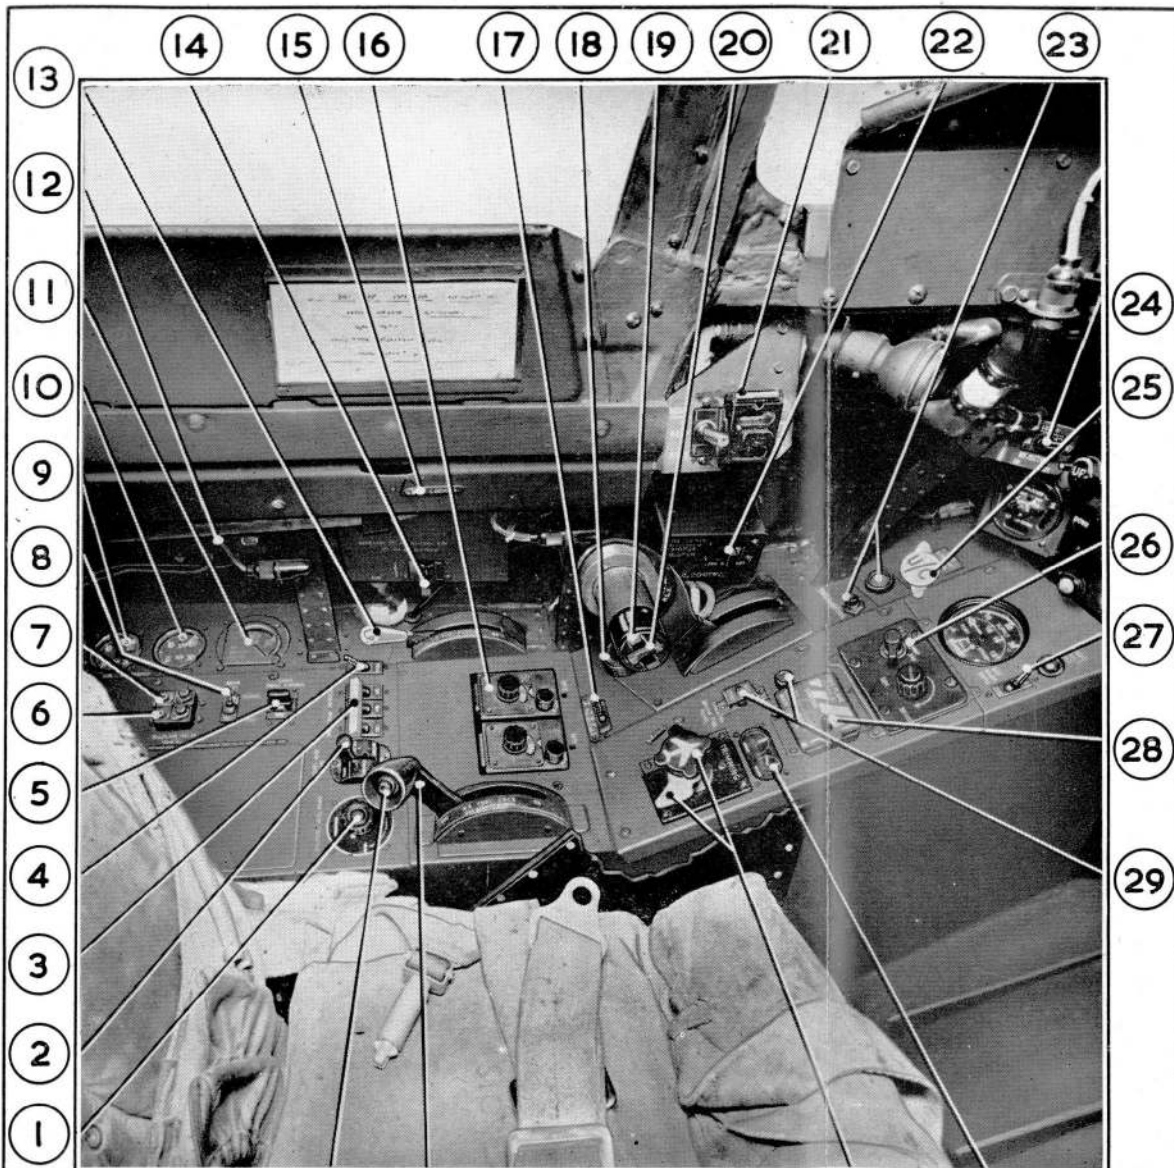


FIG
I

33 32

COCKPIT—PORT SIDE

31 30

FIG
I

44 45 46 47

48 49 50 51 52

43

42

41

40

39

38

37

36

35

34

53

54

55


56

57

58

59

60

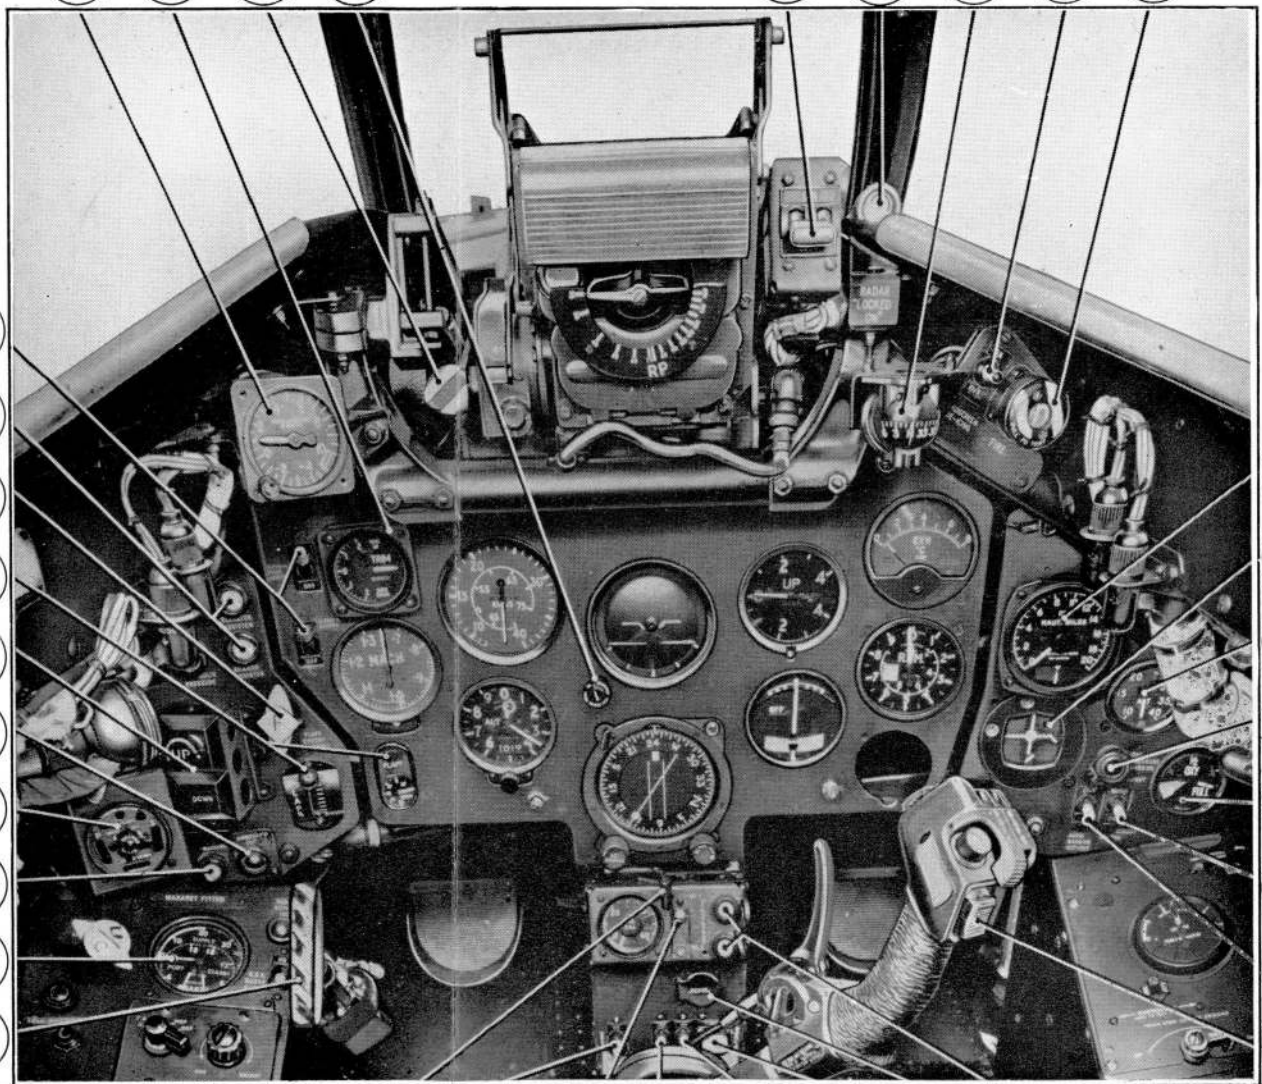

68 67 66 65 64 63 62 61

FIG
2

COCKPIT - FORWARD VIEW

FIG
2

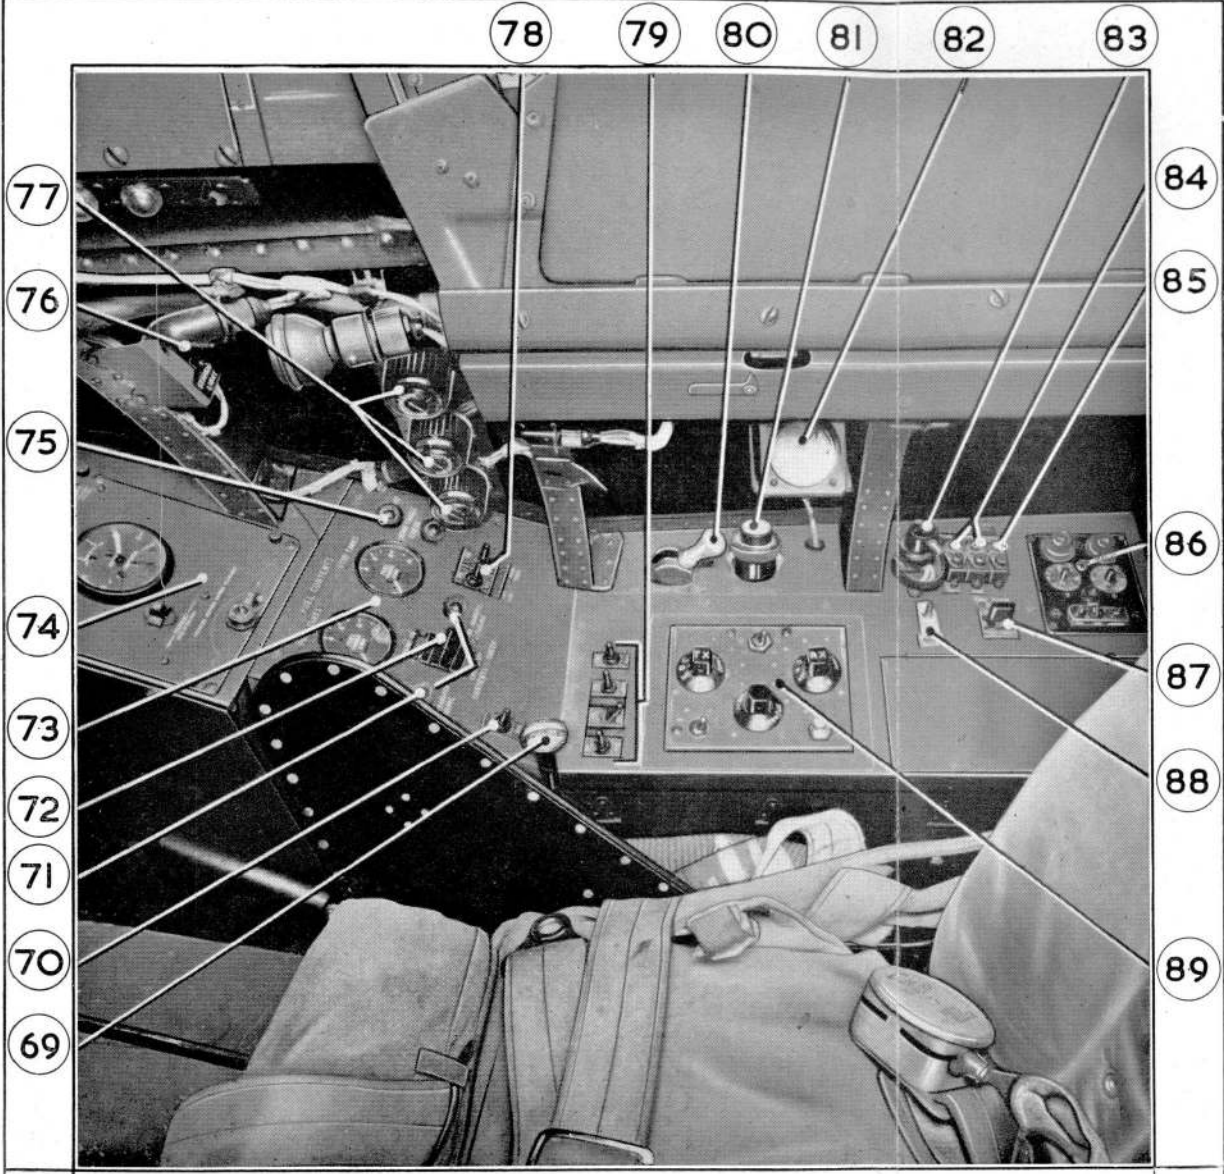


FIG
3

COCKPIT—STARBOARD SIDE

FIG
3



This file was downloaded from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms, and more aircraft documents.

