


Chap 3 ENGINES
Card 7
A.L.27

SERVICING NOTES
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Ek 2 Sect 1 (1st Ed)

1. Engine Controls. The trade N.C.O. is to be informed whenever engine controls are disturbed and is to arrange for a S.N.C.O.'s independent check to be carried out in accordance with A.P.3158, Volume 2, Leaflet B.28.
2. Engine Blanks and Covers. Blanks and covers are to be fitted except when removal is necessary for servicing operations or for flying.
3. Engine Starter Breeches. Breeches are to be unloaded before any work is commenced on an aircraft in a hanger, except Flight Servicing and Replenishment.

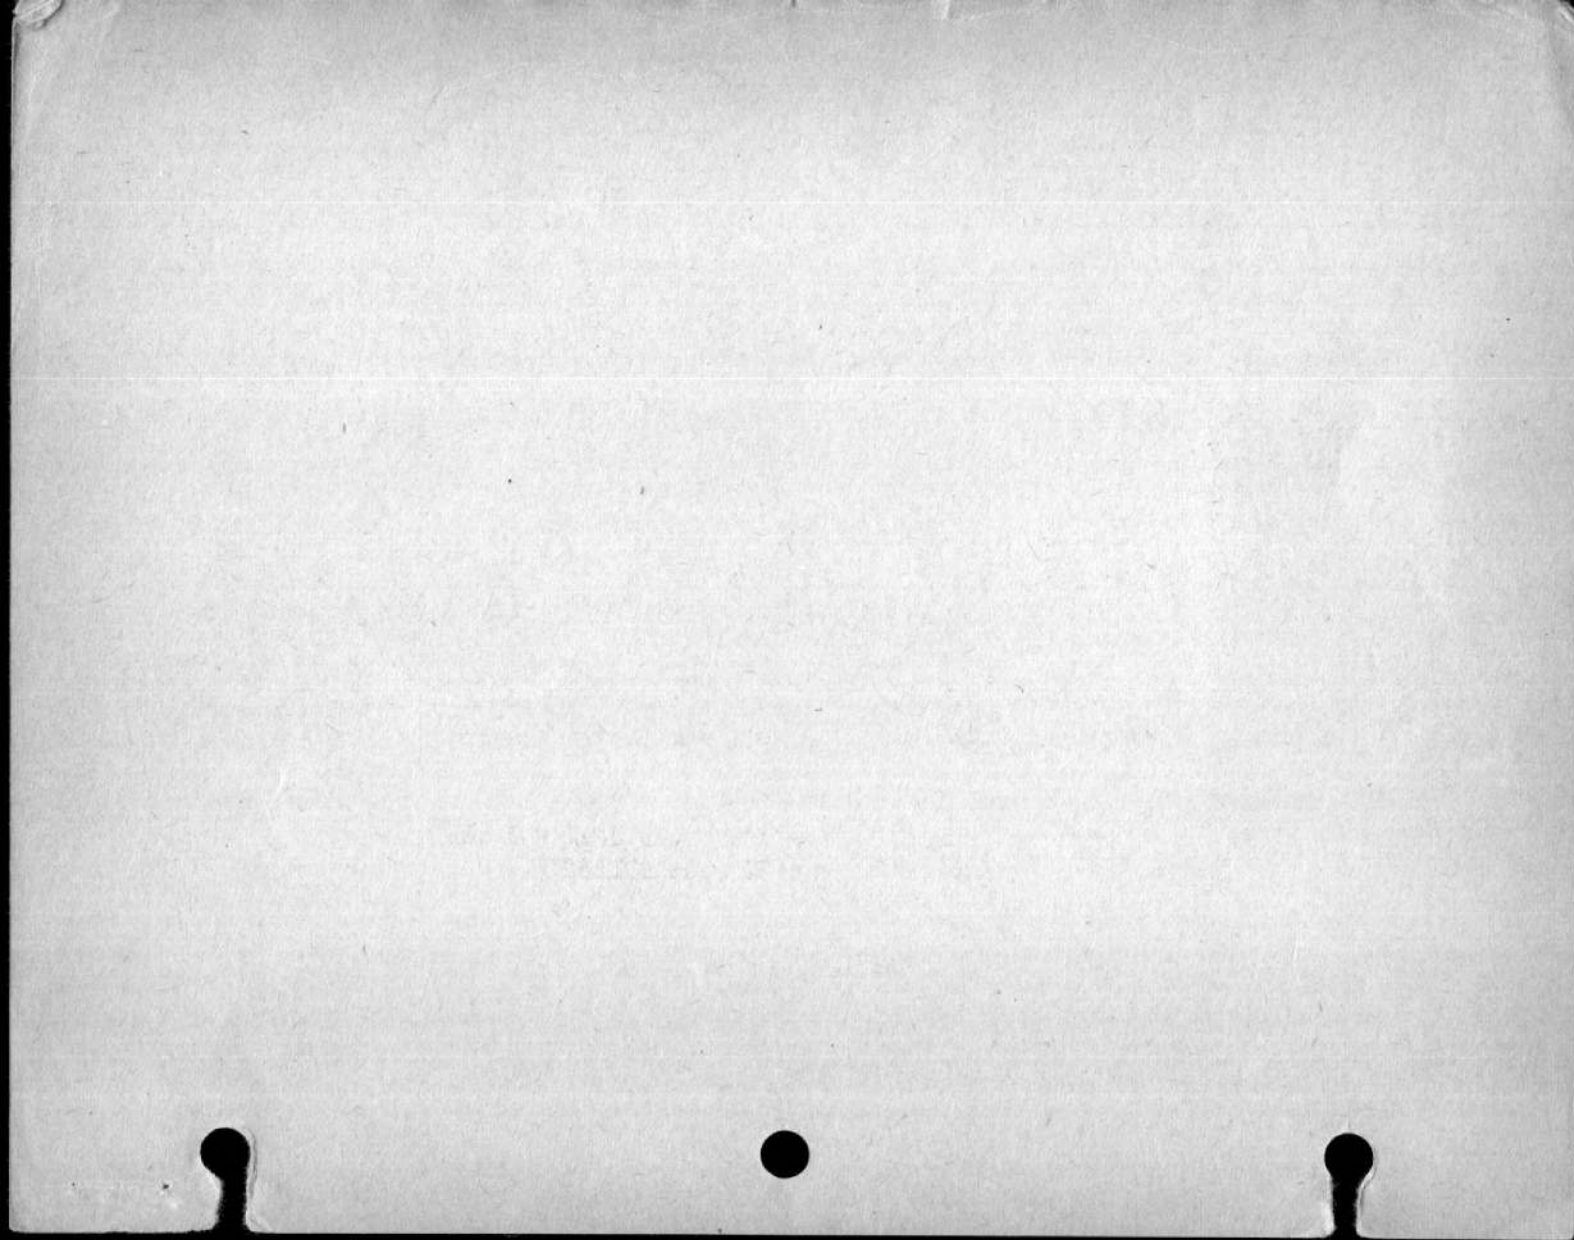



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

ENGINE
INHIBITED
DO NOT
TURN
PROP