

Chap 2 ARMAMENT
Card 5
A.L.17

REPLENISHMENTS
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
1.	<u>Initial Arming</u>		
1.1	Armament safety break.	Ensure disconnected.	Armament
1.2	Bomb master switch.)	
1.3	R.P. master switch.)	
1.4	Gun master switch.)	
1.5	Pylon selector switch.) Ensure set to 'OFF'.	"
1.6	Fuzing selector switch.)	
1.7	Butt test switch.)	
1.8	Bomb/R.P. switch.)	
1.9	Normal/Ripple switch.	Set to 'NORMAL'.	"
1.10	Ripple/Salvo/Pods switch.	Set to 'SALVO'.	"
1.11	R.P. selector switch.	Set to '2'.	"

1.12	Mounting posts.)		
1.13	Launcher rails.)		
1.14	Sway braces.)		
1.15	Front fittings.)	Examine.	Armament
1.16	Plugs and cables.)		
1.17	Triple rocket units.)		
1.18	Front and rear latch assemblies.		(i) Operate. (ii) Lubricate. (Grease, XG-278).	"
1.19	Front fittings.		Adjust.	"
1.20	Rocket firing circuit.		Test. (S.P.206)(S.P.205).	Electrical
1.21	Safety Man.		(i) Detail duties. (ii) Post.	Armament
1.22	Projectiles.		Load.	"
1.23	Safety Man.		Withdraw.	"
1.24	This Sub-item is to be carried out immediately before aircraft begins to taxi. Rocket pigtail leads.		Connect.	Armament

(Continued)

Chap 2 ARMAMENT
Card 6
A.L.17

REPLENISHMENTS
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
1.	<u>Initial Arming</u> (Contd)		
1.25	This Sub-item is applicable only to aircraft Pre Mod 1260. Armament safety break.	Connect when aircraft is at end of runway.	Armament
2.	<u>Re-arming</u>		
2.1	This Sub-item is applicable only to aircraft Pre Mod 1260 and is to be carried out at the end of the runway. Armament safety break.	Disconnect.	Armament
2.2	This Sub-item is applicable only to aircraft Post Mod 1260. Armament safety break.	Ensure disconnected.	"
N.B.	Sub-items 2.3 to 2.8 inclusive are applicable only if aircraft returns with unexpended projectiles.		

2.3	Safety Man.	(i) Detail duties. (ii) Post.	Armament
2.4	Armament selector switches.	Ensure set to 'OFF'.	"
2.5	R.P. selector switch.	Set to '2'.	"
2.6	Unexpended projectiles.	(i) Obtain Pilot's report. (ii) Remove.	"
2.7	Safety Man.	Withdraw.	"
2.8	Rocket firing circuit.	Test. (If misfires have occurred) (S.P.205) (S.P.206).	Electrical
2.9	Rocket launchers.	Examine.	Armament
2.10	R.P. distributor box.	Reset.	"
2.11	Safety Man.	(i) Detail duties. (ii) Post.	"
2.12	Projectiles.	Load.	"
2.13	Safety man.	Withdraw.	"

(Continued)

Chap 2 ARMAMENT
Card 7
A.L. 17

REPLENISHMENTS
HUNTER F.6, T.7, T.7A, G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
2.	<u>Re-arming</u> (Contd)		
2.74	This Sub-item is to be carried out immediately before aircraft begins to taxi. Rocket pigtail leads.	Connect.	Armament
2.75	This Sub-item is applicable only to aircraft Pre Mod 1260 and is to be carried out when aircraft is at end of runway. Armament safety break.	Connect.	Armament
3.	<u>Disarming</u>		
3.1	This Sub-item is applicable only to aircraft Pre Mod 1260 and is to be carried out at the end of the runway. Armament safety break.	Disconnect.	Armament
3.2	This Sub-item is applicable only to aircraft Post Mod 1260. Armament safety break.	Ensure disconnected.	"

N.B.	Sub-items 3.3, 3.6 and 3.7 are applicable only if the aircraft returns with un- expended missiles.		
3.3	Safety Man.	(i) Detail duties. (ii) Post.	Armament
3.4	Armament selector switches.	Ensure set to 'OFF'.	"
3.5	R.P. selector switch.	Set to '2'.	"
3.6	Unexpended projectiles.	(i) Obtain Pilot's report. (ii) Remove.	" "
3.7	Safety Man.	Withdraw.	"
3.8	Mounting posts.)	
3.9	Launcher rails.) (i) Examine.	"
3.10	Sway braces.) (ii) Lubricate lightly.	
3.11	Front fittings.) (Grease XG-278).	
3.12	Front and rear latches.)	
3.13	Triple socket units.)	
3.14	Plugs and cables.) Examine.	"

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

