

Chap 4 ENGINES

Card 1

A.L.25

Item
No

ITEM

OPERATION

OPERATOR

REPLENISHMENTS

HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Fuel System - Refuelling

1. Preparation

- | | | | |
|-----|--|---|---------|
| 1.1 | Refueller. | Ensure connected to 'Earth'. | Engines |
| 1.2 | Refueller bonding lead. | Ensure connected to aircraft. | " |
| 1.3 | Defuelling cock. |) Ensure set to 'OFF'. | " |
| 1.4 | L.P. fuel cock. | | |
| 1.5 | This Sub-item is applicable only to F.6,G.A.9 and F.R.10.
Ganged cocks.
(Transport joint). | Ensure set to 'ON'.
Note:- If transport joint butt strap fitted, cocks will be 'ON'. | " |
| 1.6 | Refuelling pressure relief valves. (Underside of stub wings). | Ensure free to operate. | " |

- | | | | |
|-----|--|-------------------------|---------|
| 1.7 | Refuelling coupling sealing cap. (Port wheel compartment). | Remove. | Engines |
| 1.8 | Refueller hose. | Connect. | " |
| 2. | During this Item rate of refuelling is not to exceed 150 gall/min at 50 lbf/in ² .
<u>Refuelling</u> | | |
| 2.1 | Refueller pump. | Ensure set to 'ON'. | " |
| 2.2 | Refueller control. | Ensure set to 'REFUEL'. | " |
| 2.3 | Battery master switch. |) | |
| 2.4 | Time switch. (Port wheel compartment). |) Set to 'ON'.
) | " |

(Continued)

Chap 4 ENGINES
Card 2

REPLENISHMENTS
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
---------	------	-----------	----------

2. Refuelling (Contd)

2.5 This Sub-item is applicable only to G.A.9 and F.R.10.

Drop tank refuelling selector switch.

Set as required.

Note:- Switch position control drop tank refuelling as follows:-

Engines

Drop Tanks

Switch Position

Fitted

Refuelled

(Inners and (Outers.	-	All
(Outers (only.	-	Outers
(Inners (only.	-	No

D.M.023721 (43)

(Continued overleaf)

II

All - None
configura-
tions.

III

(Inners and - Inners
(outers.
(Outers - No
(only.
(Inners - Inners
(only.

- | | | | |
|-----|------------------------------------|--|---------|
| 2.6 | Refuelling indicator lights. | Ensure illuminated. | Engines |
| 2.7 | Refuelling pressure relief valves. | Ensure venting correctly after 50 to 100 gallons of fuel has passed into aircraft. | " |
| 2.8 | Refuelling indicator lights. | Ensure extinguished when refuelling completed. | " |
| 3. | <u>General</u> | | |
| 3.1 | Fuel contents gauges. | Record contents indicated. | " |

(Continued)

Chap 4 ENGINES

Card 3
A.L.19

REPLENISHMENTS


HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5

Pt 1 Bk 2 Sect 2 (1st Ed)

Item

No	ITEM	OPERATION	OPERATOR
3.	<u>General</u> (Contd)		
3.2	Battery master switch.	Set to 'OFF'.	Engines
3.3	Refueller hose.	Disconnect.	"
3.4	Refuelling coupling. sealing cap. (Port wheel compartment).	Refit.	"
3.5	Refueller bonding lead.	Disconnect from aircraft.	"
3.6	Refueller 'Earth'.	Ensure disconnected.	"

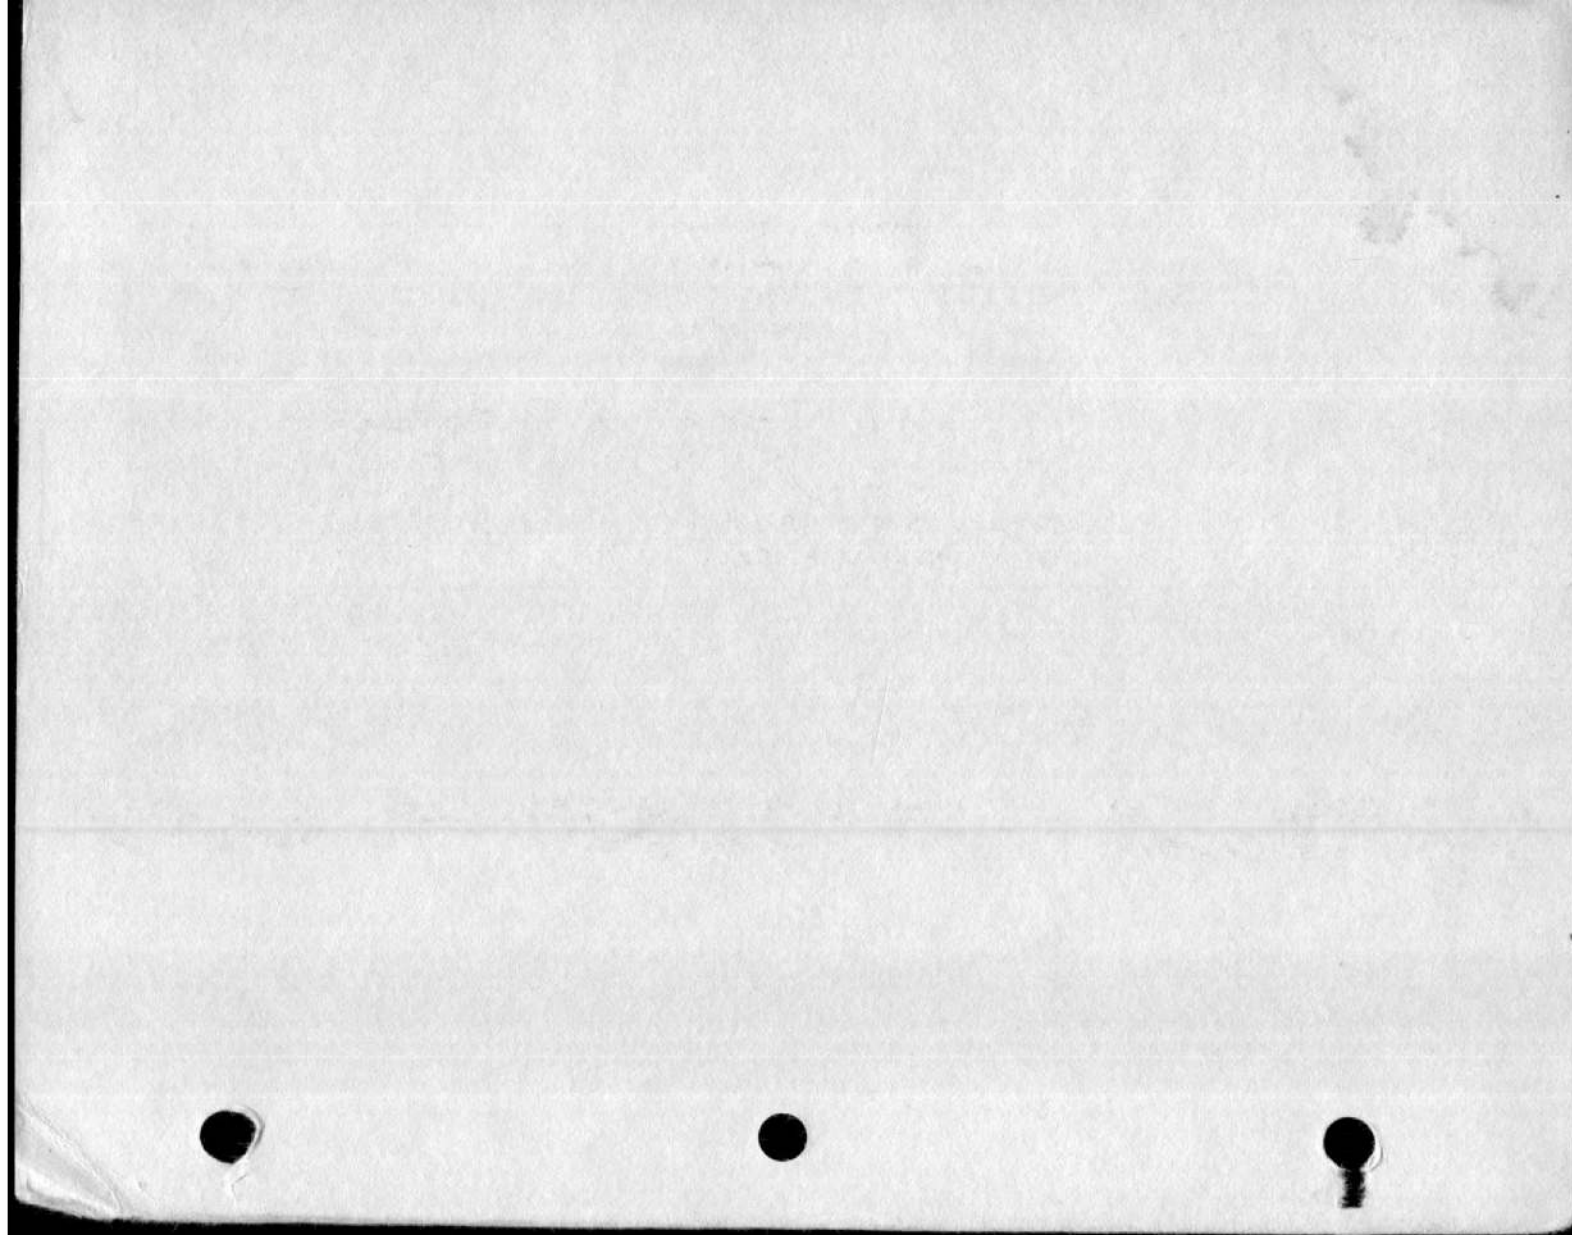



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

DO NOT HANDLE ENGINE TO MOVE STAND

DO NOT TOW
DO NOT USE STEERING BAR