

Chap 4 ENGINES  
Card 4  
A.L. 19

REPLENISHMENTS  
HUNTER F.6, T.7, T.7A, G.A.9 & F.R.10

A.P. 4347F, G, J, K & R Vol 4/5  
Pt 1 Bk 2 Sect 2 (1st Ed)

No	ITEM	OPERATION	OPERATOR
<u>Fuel System - Defuelling</u>			
1.	<u>Preparation</u>		
1.1	Refueller.	Ensure connected to 'Earth'.	Engines
1.2	Refueller bonding lead.	Ensure connected to aircraft.	"
1.3	Refuelling coupling sealing cap. (Port wheel compartment).	Remove.	"
1.4	Refueller hose.	Connect.	"
1.5	L.P. cock.	Ensure set to 'OFF'.	"

- |     |  |  |         |
|-----|--|--|---------|
| 1.6 | This Sub-item is applicable only to F.6, G.A.9 and F.R.10.<br>Tank selector cocks<br>switches. | Ensure set to 'AUTO'.  | Engines |
| 1.7 | Defuelling cock.<br>(Access engine compartment<br>door).                                       | Set to 'ON'.   | "       |
| 1.8 | External air pressure<br>supply.   | (i) Connect to aircraft spine<br>connection.<br>(ii) Apply pressure.<br>(10 p.s.i. maximum). | "       |
| 2.  | <u>Defuelling</u>  |  |         |
| 2.1 | Refueller control.   | Ensure set to 'DEFUEL'.  | "       |
| 2.2 | Aircraft fuel system.  | Defuel.  | "       |

(Continued)

Chap 4 ENGINES

Card 5

A.L.19

REPLENISHMENTS

HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5

Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
2.	<u>Defuelling</u> (Contd)		
2.3	Booster pumps.	(i) Switch on when refueller commences to suck air. (ii) Switch off when refueller sucks air again.	Engines
2.4	Refueller pump.	Ensure set to 'OFF'.	"
2.5	Defuelling cock.	(i) Set to 'OFF'. (ii) Lock.	"
3.	<u>General</u>		
3.1	External air pressure supply.	(i) Set to 'OFF'. (ii) Disconnect from aircraft.	"
3.2	Refueller hose.	Disconnect.	"

3.3 Refuelling coupling  
sealing cap.

Refit.

Engines.

3.4 Refueller bonding lead.

Ensure disconnected from  
aircraft.

"

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

