

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
AIRFRAME COMPONENTS		
General arrangement of aircraft	10-20 G 525	—
ARMAMENT		
Rocket projectiles, guided weapons (Firestreak & Bull Pup) and heavy stores ...	Circuit code	
Pilot's attack sight	AB	BA
	AS	BB
CABLES (ELECTRICAL) CHART		
	—	U
CONTROLS		
Control column	10-20 CF 10065A	CA
Flying controls in booms, fins and tailplane	10-20 CF 7677	CB
	10-20 CF 7679	
	10-20 TP 791A/1	
	10-20 TP 1091	
Flying control in fuselage	10-20 CF 9003	CC
Flying controls in extension wings	10-20 CF 9009	CD
	10-20 CF 9011	
	10-20 WF 959	
Flying controls in wing centre section	10-20 CF 9005	CE
	10-20 CF 9007	
	10-20 WF 17	
Rudder pedal arrangement	10-20 CF 1331/1	CF
Engine and auxiliary aft controls of fireproof bulkhead	10-20 CE 4503	CG
	10-20 CE 4557	
Engine and auxiliary controls in fuselage	10-20 CE 4501	CH
L.H. Console and throttle box arrangement	10-20 CE 2299	CJ
L.H. Console controls arrangement	10-20 CE 3533	CK
R.H. Console controls arrangement	10-20 CE 2997	CL
Undercarriage and wing-fold selector controls, rib No. 1, Starboard	10-20 CE 2901	CM
DECK GEAR		
Arrester hook and catapult holdback lever installation	10-20 D 691	DA
	10-20 D 713	
ELECTRICAL INSTALLATIONS		
	Circuit code	
L.A.B.S. system	AL	EAA
Aileron trim	CA	EAB
Air brake control	CD	EAC
Tailplane trim actuator	CE	EAD
Tailplane gear change	CL	EAE
Air brake position indicator	CN	EAF
Rudder trim	CR	EAG
Hydraulic temperature indicator	DB	EAH
Cabin air pressure warning	DC	EAJ
Windscreen rain shedding hot air valves	HE	EAK
Tailplane position indicator	DE	EAL
Flap indicator	DF	EAM
Oxygen supply indicator	DG	EAN
Aileron and Rudder trim indicator	DH	EAP
Fuel contents gauges... ..	DR	EAQ
Undercarriage indicator	DU	EAR
Emergency hydraulic pressure indicator	DQ	EAS
Fuel flowmeter	EF	EAT
Jet pipe temperature indicator	EJ	EAU

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
ELECTRICAL INSTALLATIONS (contd.)		
	Circuit code	
Fuel pumps low pressure warning	EK	EAV
Engine oil pressure warning	EP	EAW
Engine speed tachometers	ER	EAX
Auto pilot	FA	EAY
Lighting for night in flight refuelling	LP	EAZ
Dynamic instrument system with stand-by gyro	FD	EBA
A.M.U. and A.P.I.	FM	EBB
Pressure head heaters	FP	EBC
Contacting air speed indicator	FQ	EBD
Wing-fold, Radome and Navigator's hatch locking and indication	GW	EBE
Cabin air temperature control	HC	EBF
Fuel filter de-icing	HD	EBG
L.P. air starting	KE, JB	EBH
Jet pipe temperature control	KL	EBJ
Deck approach light	LB	EBK
Cockpit lighting	LC	EBL
Formation lights	LF	EBM
Hydraulic gauge illumination	LK	EBN
Navigation lights	LN	EBP
Taxying lights	LT	EBQ
Canopy operation	MC	EBR
Undercarriage lever lock	MU	EBS
Generators 28v., D.C.	DA, DV, KE, PA, PC, PL, PW, WJ, DV, PE, PG, PS, PR, PP	EBT EBU
Accumulators	PF	EBV
Main distribution	QJ	EBW
Jettisonable fuel tanks	QP	EBX
Fuel pumps	QT	EBY
Pressure refuelling system	RF	EBZ
U.H.F. supply	RH	ECA
T.A.C.A.N. supply	RZ	ECB
Intercom. and Telebrief supplies	SA	ECC
Radio altimeter supply	SD	ECD
A.C.115v., 2400 c.p.s. A.I.18 supply	SX	ECE
I.F.F. Mk. 10 supply	VP, XE	ECF
A.C.115v., 400 c.p.s., 1-Ph. supply (108 inverter)	VP	ECG
A.C.115v., 400 c.p.s., 1-Ph. supply (112 inverter)	PZ, SJ, VP, VX, VY, VZ, XF, XG, XH	ECH
A.C.115v., 400 c.p.s., 3-Ph. supply	WA	ECJ
Angle of attack indication	WB	ECK
Hydraulic low pressure warning	WF	ECL
Fire warning	WE, WJ	ECM
Fire extinguisher	WL	ECN
Centralised warning system	WM	ECP
Ice detector	WQ	ECQ
Flap lock indicators and elevators position warning	XK, AB	ECR
A.C.115v., 2400 c.p.s., guided weapons supply	FF	ECS
Fatigue meter	FS	ECT
Altimeter Mk. 28	FH	ECU
Artificial horizon, Mk. VI	MD	ECV
Electrically actuated seats	SS	ECW
Radar Scanner electro hydraulic valve	KT	ECX
Auto-throttle control	10-20 N 11089	ECZ
Cable conduits, ducting and accessories		

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
Heavy stores outboard pylons (SPECIAL ORDER ONLY)	10-20 N 13811 10-20 N 22569 10-20 N 13813 10-20 N 22571	EDA
Light stores inboard pylons (SPECIAL ORDER ONLY)	10-20 N 13807 10-20 A 3159A 10-20 N 3160A	EDB
Bull Pup weapon system in pylons and control pod (SPECIAL ORDER ONLY) ...	10-20 N 23045 10-20 N 21059 10-20 A 5593A 10-20 N 21069 10-20 A 5133A 10-20 A 5134A	EDC
Photographic reconnaissance (SPECIAL ORDER ONLY)	10-20 N 23299A 10-20 N 23497A	EDD
Outboard heavy stores pylon, Port, for the carriage of 2000 lbs. H.E. bomb ... (SPECIAL ORDER ONLY)	10-20 A 6209A 10-20 N 24411	EDE
EQUIPMENT, AIRCRAFT		
Equipment in fuselage	10-20 FC 1311 10-20 N 9461	FA
Instrument panels	10-20 F 1153 10-20 N 9461	FB
Transfers	10-20 G 71/1-200	FC
Electrical equipment panels	10-20 N 14755A	FD
EQUIPMENT, MISCELLANEOUS		
Scanner unit (ballast) (SPECIAL ORDER ONLY)	10-20 M 1325	GA
EQUIPMENT, GROUND (SPECIAL ORDER ONLY)		
Ground handling equipment	10-20 Y 1	HA
Special tools	10-20 Y 3	HB
EQUIPMENT, SPECIAL OPERATIONAL (SPECIAL ORDER ONLY)		
Outboard pylons and jettisonable fuel tanks (Pre Mod. 7)	10-20 PT 657 10-20 PT 837	JA
Outboard heavy stores pylons (Mod 7)	10-20 WE 5493	JB
Adaptation of outboard pylons for carriage of 1000 lbs. bombs or 25 lbs. practice bombs (for use on A/C embodying Mod. 7)	10-20 A 2519 10-20 N 2533	JD
Outboard heavy stores pylon, Port, for carriage of 2000 lbs. H.E. bomb (for use on A/C embodying Mod. 7)	10-20 WE 5493	JE
Heavy stores carried on outboard pylons (for use on A/C embodying Mod. 7) ...	10-20 PT 745 10-20 PT 807A 10-20 PT 747 10-20 G 623 10-20 A 2195 10-20 A 2199 10-20 A 2197 10-20 A 2535	JF
Inboard light stores pylons	10-20 A 1721	JG
Light stores carried on inboard pylons	10-20 A 1787 10-20 A 1815 10-20 A 1835	JH
Refuelling in flight probe, Port	10-20 WC 25671	JJ
Armament fusing units in fuselage (Mod. 5047)	10-20 N 13949	JK
(Mod. 5093)	10-20 N 22027	
(Mod. 5093)	10-20 N 23645	
(Mod. 5050)	10-20 N 13947	
(Mod. 5092)	10-20 N 22969	
Bull Pup Weapon system	10-20 A 5999	JL
Photographic reconnaissance	10-20 M 1159	JM

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
EQUIPMENT, SPECIAL OPERATIONAL (SPECIAL ORDER ONLY) (Contd.)		
Adaptation of light stores pylons for carriage of 500 lb. bombs	10-20 A 5917	JN
Installation of 25 lbs. or 28 lbs. practice bomb carrier on light stores pylons ...	10-20 G 527	JP
Conversion of 500 lbs. bomb adapter shoe for V.T. fuzing	10-20 A 5923	JQ
Conversion of 500 lbs. bomb adapter shoe for carriage of Lepus flare	10-20 A 5925	JR
Installation of G.P. 100 galls. tank on heavy stores pylons	10-20 A 6235	JS
 FUSELAGE		
Fuselage complete	10-20 F 1901	KA
Canopy installation	10-20 FC 1311	KB
Canopy jettison mechanism	10-20 FS 3209	KC
	10-20 FS 5989	
	10-20 FS 8753	
	10-20 FS 12177A	
	10-20 FS 16381A	
	10-20 FS 20183	
Canopy winding gear	10-20 FC 1029	KD
	10-20 FC 1311	
Sliding hood canopy	S10-20 FC 7	KE
Windscreen	10-20 FC 1185	KF
Cockpit seating	10-20 F 3781	KG
Air brake, fuselage	10-20 WB 1069	KH
Doors, nose access	S10-20 FS 3	KJ
	S10-20 FS 4	
Doors, fuselage access	10-20 FS 12967	KK
Hatch, navigator's	S10-20 FS 2	KL
Nose, fuselage (radome)	S10-20 FS 1	KM
Nose operating mechanism	10-20 FS 6921	KN
	10-20 FS 5675	
	10-20 FS 4063	
	10-20 FS 20879	
Scanner mounting	10-20 FS 5445	KP
Structure, fuselage	10-20 FS 10367A	KQ
 MAIN PLANES		
Wing, centre section	10-20 WC 1	LA
	10-20 WC 1115	
Boundary layer and fuselage intake panels	10-20 WC 22897A	LB
Flaps, inner (inboard portion)	S10-20 WF 1	LC
	S10-20 WF 2	
Flaps, inner (outboard portion)	S10-20 WF 9	LD
	S10-20 WF 10	
Flaps, outer	S10-20 WF 5	LE
	S10-20 WF 6	
Flap, "U" plate	S10-20 WF 7	LF
	S10-20 WF 8	
Fuel bay cowling	10-20 WC 12171	LG
Wing, extension	10-20 WE 1	LH
	10-20 WE 2	
Aileron	S10-20 WA 103	LI
	S10-20 WA 104	
Wing-fold mechanism	10-20 WC 15049/1	LK
	10-20 WC 5001	
	10-20 WC 5003	
 PIPE CHART	—	T

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
POWER INSTALLATIONS		
Engine installation	10-20 E 25	MA
Engine change unit	10-20 E 23	MB
	10-20 E 8273	
Accessory gear box	10-20 E 2503A	MC
Mounting, front, engine	10-20 EM 249	MD
Engine, cowlings, bottom	10-20 EC 5429	ME
Engine cowlings, top... ..	10-20 EC 4533A	MF
Fairing, rear cone, detachable	S10-20 EC 22	MG
De-icing system in engine bay	10-20 S 20253	MH
Fire extinguisher system	10-20 M 671	MK
	10-20 S 4425	
	10-20 S 14423	
Accessory air-intake fairing panel	10-20 EC 5841	ML
	10-20 EC 5842	
Pipes, engine wheelcase breather outlet	10-20 E 3201	MM
RADIO AND RADAR INSTALLATIONS		
Violet Picture (A.R.I. 18120/1)	10-20 R 4019	NA
	10-20 R 4021	
I.F.F. Mk. 10 and coder (A.R.I. 5848-F-4-Q-9)	10-20 R 2561	NB
	10-20 R 2539	
Intercom.	10-20 R 2557	NC
	10-20 R 2581	
Radar A.I. Mk. 18 (A.R.I. 5884)	10-20 R 3617	ND
	10-20 R 3085	
	10-20 R 3615	
	10-20 R 961	
	10-20 R 2663	
	10-20 N 23247	
Radio altimeter (A.R.I. 5378)	10-20 R 2559	NE
	10-20 R 2543	
T.A.C.A.N. (A.R.I. 18107/1)... ..	10-20 R 2563	NF
	10-20 R 2541	
Telebrief (A.R.I. 18012) (Pre Mods. 181 and 2)	10-20 R 3477	NG
(Mods. 181 and 2)	10-20 R 3559	
	10-20 R 3287	
U.H.F. Radio and external Intercom. (A.R.I. 18124/1) (Pre Mod. 181)	10-20 R 3509	NH
(Pre Mod. 181)	10-20 R 3531	
(Mod. 181)	10-20 R 3685	
(Mod. 181)	10-20 R 3687	
U.H.F. stand-by equipment (A.R.I. 23057) (Pre Mod. 181)	10-20 R 3273	NJ
(Mod. 181)	10-20 R 3557	
(Mod. 439)	10-20 R 3683	
Wide band Homer (A.R.I. 18165 and A.R.I. 18172)	10-20 R 8095	NK
Auto-tone transmission	10-20 R 9241	NL
REPAIR SECTION	—	PA

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
SERVICES		
Air conditioning installation in fuselage	10-20 V 3085	QA
Air conditioning installation in wing centre section	10-20 V 1819	QB
Ram air turbine	10-20 WC 28039	QC
Air speed indicator and A.M.U. system	10-20 S 12179	QD
	10-20 S 12195	
	10-20 S 11231	
	10-20 S 4774	
	10-20 S 4799	
	10-20 S 4801	
	10-20 S 11027	
(For A/C series XJ474 to XJ576)	10-20 Z 24283	
(For A/C series XJ577 and subsequent)	10-20 S 14981	
	10-20 S 4837	
Air Starter pipes	10-29 S 7487	QE
	10-20 S 7515	
	10-20 S 12143	
Anti "G" system	10-20 S 14641	QF
Fuel system in extension wing (Pre Mod. 2)	10-20 P 2743	QG
(Mod. 2)	10-20 P 1253	
	10-20 P 3623	
	10-20 P 8381	
	10-20 P 3615	
Fuel system at wing-fold	10-20 P 2327	QH
	10-20 P 3349	
Fuel system in wing centre section (Pre Mod. 2)	10-20 P 1183	QJ
(Mod. 2)	10-20 P 1835	
Windscreen rain shedding pipes	10-20 S 20255	QK
	10-20 S 20391	
Hydraulic brake system on main undercarriage legs	10-20 S 9369	QL
	10-20 S 9370	
Hydraulic equipment for arrester hook in rear fairing	10-20 S 3569	QM
Hydraulic installation in extension wing	10-20 S 9293	QN
Hydraulic installation in fins	10-20 S 4281	QP
	10-20 S 9295	
Hydraulic installation in fuselage	10-20 S 10925	QQ
Hydraulic installation in pump bay and trough and between trough frame and spectacle beam	10-20 S 14417	QR
	10-20 S 14413	
	10-20 S 3301A	
Hydraulic installation in tail booms	10-20 13681	QS
	10-20 13685	
Hydraulic installation in wing centre section	10-20 S 14539	QT
	10-20 WC 24349	
Oxygen installation	10-20 S 14459	QU
	10-20 S 10723	
	10-20 S 8973	
Air pressure pipes, fuel system in wing	10-20 E 5429	QV
	10-20 E 4057	
	10-20 S 7127	
	10-20 S 7128	
	10-20 P 8427	
	10-20 P 4107	
Pneumatic installation, high pressure, in fuselage	10-20 S 13981	QW
	10-20 S 11543	
	10-20 S 11791	
	10-20 FS 16481	

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
SERVICES (contd.)		
Low pressure, pneumatic system in wing centre section, for hydraulic reservoir pressurisation	10-20 S 10015 10-20 S 11619 10-20 S 6053 10-20 S 6335	QX
High pressure, pneumatic system in wing centre section (Mod. 2)	10-20 S 11719 10-20 S 9096 10-20 S 14703 10-20 S 14101	QY
Radar and T.A.C.A.N. cooling installation	10-20 V 2185 10-20 V 8763	QZ
SUMMARY OF STANDARD ITEMS	—	AD
TAIL UNIT		
Tail unit arrangement	10-20 T 7	RA
Elevator	S10-20 TE 101	RB
Fin and boom	S10-20 T 101 S10-20 T 102	RC
Rudder	S10-20 TR 1	RD
Tailplane, less elevator	S10-20 TP 8	RE
UNDERCARRIAGE		
Main undercarriage arrangement	10-20 G 7	SA
Doors, main undercarriage, inner	S10-20 U 105 S10-20 U 106	SB
Doors, main undercarriage, outer	S10-20 U 107 S10-20 U 108	SC
Door operating mechanism, main undercarriage	10-20 U 27 10-20 U 837	SD
Door lock operating mechanism, main undercarriage	10-20 U 19	SE
Radius arm, upper, main undercarriage	S10-20 U 111 S10-20 U 112	SF
Shock absorber units, main undercarriage	S10-20 U 109 S10-20 U 110	SG
Nose wheel arrangement	10-20 G 9	SH
Compression unit, nose wheel (Pre Mod. 1070)	S10-20 UN 101	SJ
(Mod. 1070, Pre Mod. 589)	S10-20 UN 107	
(Mod. 589)	S10-20 UN 108	
Door, nose wheel, aft	S10-20 UN 105	SK
Fairing, fixed, nose wheel	S10-20 UN 103	SL
Radius rod, nose wheel	S10-20 UN 102	SM

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

