

**ELECTRICAL INSTALLATIONS
INSTALLATION OF FUEL PUMPS LOW PRESSURE WARNING,
CODED "EK"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
	—	INSTALLATION OF FUEL PUMPS LOW PRESSURE WARNING, CODED "EK"	1	—	—	
	—	INSTALLATION AT PILOT'S ATTACK SIGHT PANEL, CODED "AU" (Drg. Nos. for use on Pre Mod. 2 A/C :—10-20 N 11787A Mod. 332 Pre Mod. 96, 10-20 F 2957 Mod. 332 Pre Mod. 96) (Drg. Nos. for use on Mod. 2 A/C :—10-20 N 22903 Mod. 1000, 10-20 F 3887 Mod. 728)	1	—	—	
	10-20 N 11787A/CABLES	CABLES , link (For cables circuit coded "EK") (Mod. 332 Pre Mod. 96)	QR	—	ECC	EAV1
	10-20 N 22903/CABLES	CABLES , link (For cables circuit coded "EK") (Mod. 1000)	QR	—	ECC	EAV1
	—	INDICATORS , coded "K," "L," "T," and "U," group	1	—	—	
5CZ/6696	DOWTY DN.1245Z Mk. 53	INDICATOR , electro magnetic (Mod. 1049)	4	—	P	EAV1
5CZ/6024	THORN 80/10/0287	PLATE , pressure	4	—	C	EAS1
5CZ/6412	THORN 80/10/0292	RECEPTACLE	4	—	C	EAS1
	—	INSTALLATION AT GROUP CODED "S," COCKPIT WALL, STARBOARD (Drg. Nos. for use on Pre Mod. 2 A/C :—10-20 N 12489, 10-20 N 8553) (Drg. Nos. for use on Mod. 2 A/C :—10-20 N 12977, 10-20 N 11421)	1	—	—	
	—	BLOCK , fuse, coded "S-A," group	1	—	—	EAV1
	—	BLOCK , fuse, 12-way (See sub-section EBV)	—	—	—	
10H/23864	—	FUSE , 5 amp.	2	—	C	EAV1
	10-20 N 8757A/2	CABLE , bung "Q8," coded "FA," assembly ... (Pre Mods. 7 and 2) (For cables circuit coded "EK")	1	—	ECC	EAV1
	10-20 N 12553A	CABLE , bung "Q8," coded "FA," assembly ... (Mod. 2, Pre Mod. 803) (For cables circuit coded "EK")	1	—	ECC	EAV1
	10-20 N 14487A	CABLE , bung "Q8," coded "FA," assembly ... (Mod. 803) (For cables circuit coded "EK")	1	—	ECC	EAV1
	10-20 N 13713A	CABLE , bung "Q1," coded "FB," assembly ... (Mod. 482, Pre Mod. 2) (For cables circuit coded "EK")	1	—	ECC	EAV1
	10-20 N 15683A	CABLE , bung "Q1," coded "FB," assembly ... (Mod. 702, Pre Mod. 803) (For cables circuit coded "EK")	1	—	ECC	EAV1
	10-20 N 22421A	CABLE , bung "Q1," coded "FB," assembly ... (Mods. 1091 and 803) (For cables circuit coded "EK")	1	—	ECC	EAV1

**ELECTRICAL INSTALLATIONS
INSTALLATION OF FUEL PUMPS LOW PRESSURE WARNING,
CODED "EK"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
		INSTALLATION AT FRAME 96", FORWARD, PORT (Drg. Nos. for use on Pre Mod. 2 A/C :—10-20 N 5909, 10-20 N 13463, 10-20 N 10251 and 10-20 N 8553) (Drg. Nos. for use on Mod. 2 A/C :—10-20 N 5909, 10-20 N 13463, 10-20 N 11421 and 10-20 F 2725)	1	—	—	
	DHS.456/20	BLOCK , terminal, coded "AV," group ...	1	—	—	EAV1
		BLOCK , terminal, 20-way, assembly ... (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
61	5X/9149643 5X/6465	COVER , terminal block ...	1	—	C	
61	5X/9450403 5X/3278	PILLAR , fixing, 4 BA ...	2	—	C	
	DHS.456/10	BLOCK , terminal, coded "NY," group (Pre Mod. 2)	1	—	—	EAV1
		BLOCK , terminal, 10-way, assembly ... (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
	5X/3275 PLESSEY CZ.26808	COVER , terminal block ...	1	—	C	
61	5X/9450403 5X/3278	PILLAR , fixing, 4 BA ...	2	—	C	
	DHS.456/20	BLOCK , terminal, coded "NY," group (Mod. 2)	1	—	—	EAV1
		BLOCK , terminal, 20-way, assembly ... (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
61	5X/9149643 5X/6465	COVER , terminal block ...	1	—	C	
	28M/10287	NUT , 4 BA ...	2	—	C	
	12732	PILLAR , fixing ...	2	S.93	C	
	28VV/9419401	WASHER ...	2	—	C	
	10-20 N 9/108 Mk. 10	CABLE , coded "18.AV.EKA—EKA.H.CV.10," assembly	1	—	ECC	EAV1
	10-20 N 9/108 Mk. 9	CABLE , coded "20.AV.EKB—EKB.H.CV.12," assembly	1	—	ECC	EAV1
	10-20 N 9/508 Mk. 11	CABLE , coded "5.NY.EKC—EKC.★1.D.3," assembly	1	—	ECC	EAV1
	10-20 N 9/508 Mk. 12	CABLE , coded "7.NY.EKD—EKD.★1.D.7," assembly	1	—	ECC	EAV1
	10-20 N 8729A/4	CABLE , bung "Q6," coded "FA," assembly ... (Pre Mods. 2 and 728) (For cables circuit coded "EK")	1	—	ECC	EAV1
	10-20 N 14337A	CABLE , bung "Q6," coded "FA," assembly ... (Mods. 2 and 728) (For cables circuit coded "EK")	1	—	ECC	EAV1
	10-20 N 14089A	CABLE , bung "Q3," coded "FB," assembly (Mod. 249) (For cables circuit coded "EK")	1	—	ECC	EAV1
	26DV/7529	TERMINAL , earth, station 1, coded "D," group	1	—	—	
	26DV/4969	TAG , corrosion ...	1	L.16	C	
		TERMINAL , earth, assembly ... (For breakdown see DHS. Data Sheet)	1	—	C	EAV1
	28D/11255	Attachments for DHS.437/C, Terminal :—				
	28M/10288	Boit, 2 BA ...	2	—	C	
	28VV/9419404	Nut, 2 BA ...	2	—	C	
		Washer ...	2	—	C	
		INSTALLATION AT LOWER PANEL, CODED "H" (Drg. No. for use on Pre Mod. 2 A/C :—10-20 N 9665A/2) (Drg. Nos. for use on Mod. 2 A/C :—10-20 N 15833A Pre Mod. 803, 10-20 N 15709A Mod. 803)	1	—	—	
61		BLOCK , fuse, coded "CV," group ...	1	—	—	EAV1
		BLOCK , fuse, 12-way (See sub-section EBV) ...	—	—	—	
	10H/23862	FUSE , 10 amp. ...	2	—	C	EAV1

**ELECTRICAL INSTALLATIONS
INSTALLATION OF FUEL PUMPS LOW PRESSURE WARNING,
CODED "EK"**


Ref. No.	Part No.	Description	No. of	Material Specification	Class of Store or L.M.	Place No.
		INSTALLATION AT PORT WING DECK PANEL, CODED "FA" (Drg. Nos. for use on Pre Mod. 2 A/C :— 10-20 N 13431A, 10-20 N 5883 and 10-20 N 2597) (Drg. Nos. for use on Mod. 2 A/C :—10-20 N 13301A, 10-20 N 12401 and 10-20 N 11655)	1	—	—	
	—	BLOCK, fuse, coded "W," group	1	—	—	EAV1
	—	BLOCK, fuse, 12-way (See sub-section EBV)	—	—	—	
10H/23862	—	FUSE, 10 amp.	1	—	C	EAV1
	—	BLOCK, terminal, coded "A," group	1	—	—	
	DHS.456/20	BLOCK, terminal, 20-way, assembly (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
	5X/9149643	COVER, terminal block	1	—	C	
	5X/9450403	PILLAR, fixing, 4 BA	2	—	C	
28W/9419474	SP.15/B	WASHER	2	—	C	
	DHS.456/20	BLOCK, terminal, 20-way, coded "B," assembly (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
	28D/12690	Attachments for DHS.456/20, Block :—				
	28W/9419474	Bolt, 4 BA	2	—	C	
	—	Washer	2	—	C	
	—	BLOCK, terminal, coded "C," group	1	—	—	
	DHS.456/20	BLOCK, terminal, 20-way, assembly (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
	5X/9149643	COVER, terminal block	1	—	C	
	5X/9450403	PILLAR, fixing, 4 BA	2	—	C	
28W/9419474	SP.15/B	WASHER	2	—	C	
	10-20 N 5677A/1	CABLE, coded "FC—FA," assembly	1	—	ECC	EAV1
	10-20 N 11745A	CABLE, coded "GG," assembly	1	—	ECC	EAV1
	10-20 N 5681A	CABLE, coded "PW," assembly	1	—	ECC	EAV1
		INSTALLATION AT STARBOARD WING DECK PANEL, CODED "FB" (Drg. Nos. for use on Pre Mod. 2 A/C :—10-20 N 8803A/3, 10-20 N 5883 and 10-20 N 2599) (Drg. Nos. for use on Mod. 2 A/C :— 10-20 N 14863A, 10-20 N 12401 and 10-20 N 11701)	1	—	—	
	—	BLOCK, fuse, coded "T," group	1	—	—	EAV1
	—	BLOCK, fuse, 12-way (See sub-section EBV)	—	—	—	
10H/23862	—	FUSE, 10 amp.	1	—	C	EAV1
	—	BLOCK, terminal, coded "A," group	1	—	—	
	DHS.456/20	BLOCK, terminal, 20-way, assembly (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
	5X/9149643	COVER, terminal block	1	—	C	
	5X/9450403	PILLAR, fixing, 4 BA	2	—	C	
28W/9419474	SP.15/B	WASHER	2	—	C	
	—	BLOCK, terminal, coded "C," group	1	—	—	
	DHS.456/20	BLOCK, terminal, 20-way, assembly (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
	5X/9149643	COVER, terminal block	1	—	C	
	5X/9450403	PILLAR, fixing, 4 BA	2	—	C	
28W/9419474	SP.15/B	WASHER	2	—	C	

ELECTRICAL INSTALLATIONS
INSTALLATION OF FUEL PUMPS LOW PRESSURE WARNING,
CODED "EK"

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score or L.M	Place No.
	—	BLOCK , terminal, coded "G," group	1	—	—	
	DHS.456/20	BLOCK , terminal, 20-way, assembly (For breakdown see DHS. Data Sheet)	1	—	—	EAV1
28D/12182	AS.1246/6B	BOLT , 4 BA (Mod. 963)	2	—	C	
5X/9149643	PLESSEY CZ.25111	COVER , terminal block (Pre Mod. 963)	1	—	C	
7657	DHS.870/5	PILLAR , fixing (Pre Mod. 963)	2	—	C	
26DV/12296	DHS.489/5	SPACER (Pre Mod. 963)	2	—	C	
28W/9419474	SP.15/B	WASHER	2	—	C	
	10-20 N 5679A/1	CABLE , coded "FD—FB," assembly	1	—	ECC	EAV1
	10-20 N 11747A	CABLE , coded "GH," assembly	1	—	ECC	EAV1
	10-20 N 5675A	CABLE , coded "VW," assembly	1	—	ECC	EAV1
	—	INSTALLATION AT PORT LOWER ENGINE BAY	1	—	—	
	—	SWITCH , low pressure fuel warning, coded "GG" (See sub-section MA)	—	—	—	
	—	INSTALLATION AT STARBOARD LOWER ENGINE BAY	1	—	—	
	—	SWITCH , low pressure fuel warning, coded "GH" (See sub-section MA)	—	—	—	
	—	INSTALLATION AT No. 1 FUEL TANK, PORT	1	—	—	
	—	SWITCH , low pressure fuel warning, coded "FC" (See sub-section QJ)	—	—	—	
	—	INSTALLATION AT No. 1 FUEL TANK, STARBOARD	1	—	—	
	—	SWITCH , low pressure fuel warning, coded "FD" (See sub-section QJ)	—	—	—	
	—	INSTALLATION AT PORT UNDERCARRIAGE WHEEL WELL (Drg. No. 10-20 N 2399)	1	—	—	
	—	SWITCH , low pressure fuel warning, coded "PW" (See sub-section QJ)	—	—	—	
26DV/7529	DHS.438/C	TERMINAL , earth, stn. 11, coded "B," group	1	—	—	
26DV/4969	DHS.437/C	TAG , corrosion	1	L.16	C	EAV1
		TERMINAL , earth, assembly (For breakdown see DHS. Data Sheet)	1	—	C	
		Attachments for DHS.437/C, Terminal :—				
28D/9133011	A25/2C	Bolt , 2 BA	2	—	C	
	—	INSTALLATION AT STARBOARD UNDERCARRIAGE WHEEL WELL (Drg. No. 10-20 N 2399)	1	—	—	
	—	SWITCH , low pressure fuel warning, coded "VW" (See sub-section QJ)	—	—	—	
26DV/7529	DHS.438/C	TERMINAL , earth, stn. 10, coded "B," group	1	—	—	
26DV/4969	DHS.437/C	TAG , corrosion	1	L.16	C	EAV1
		TERMINAL , earth, assembly (For breakdown see DHS. Data Sheet)	1	—	C	
		Attachments for DHS.437/C, Terminal :—				
28D/9133011	A25/2C	Bolt , 2 BA	2	—	C	
32B/—	—	TAPE , identification, numbers and letters, use from Ref. Nos. 32B/1087 to 32B/1120 inclusive, as required	QR	—	C	

EAV-1 ELECTRICAL INSTALLATION FUEL PRESSURE WARNING CODED EK

EAV-1 [A-43]

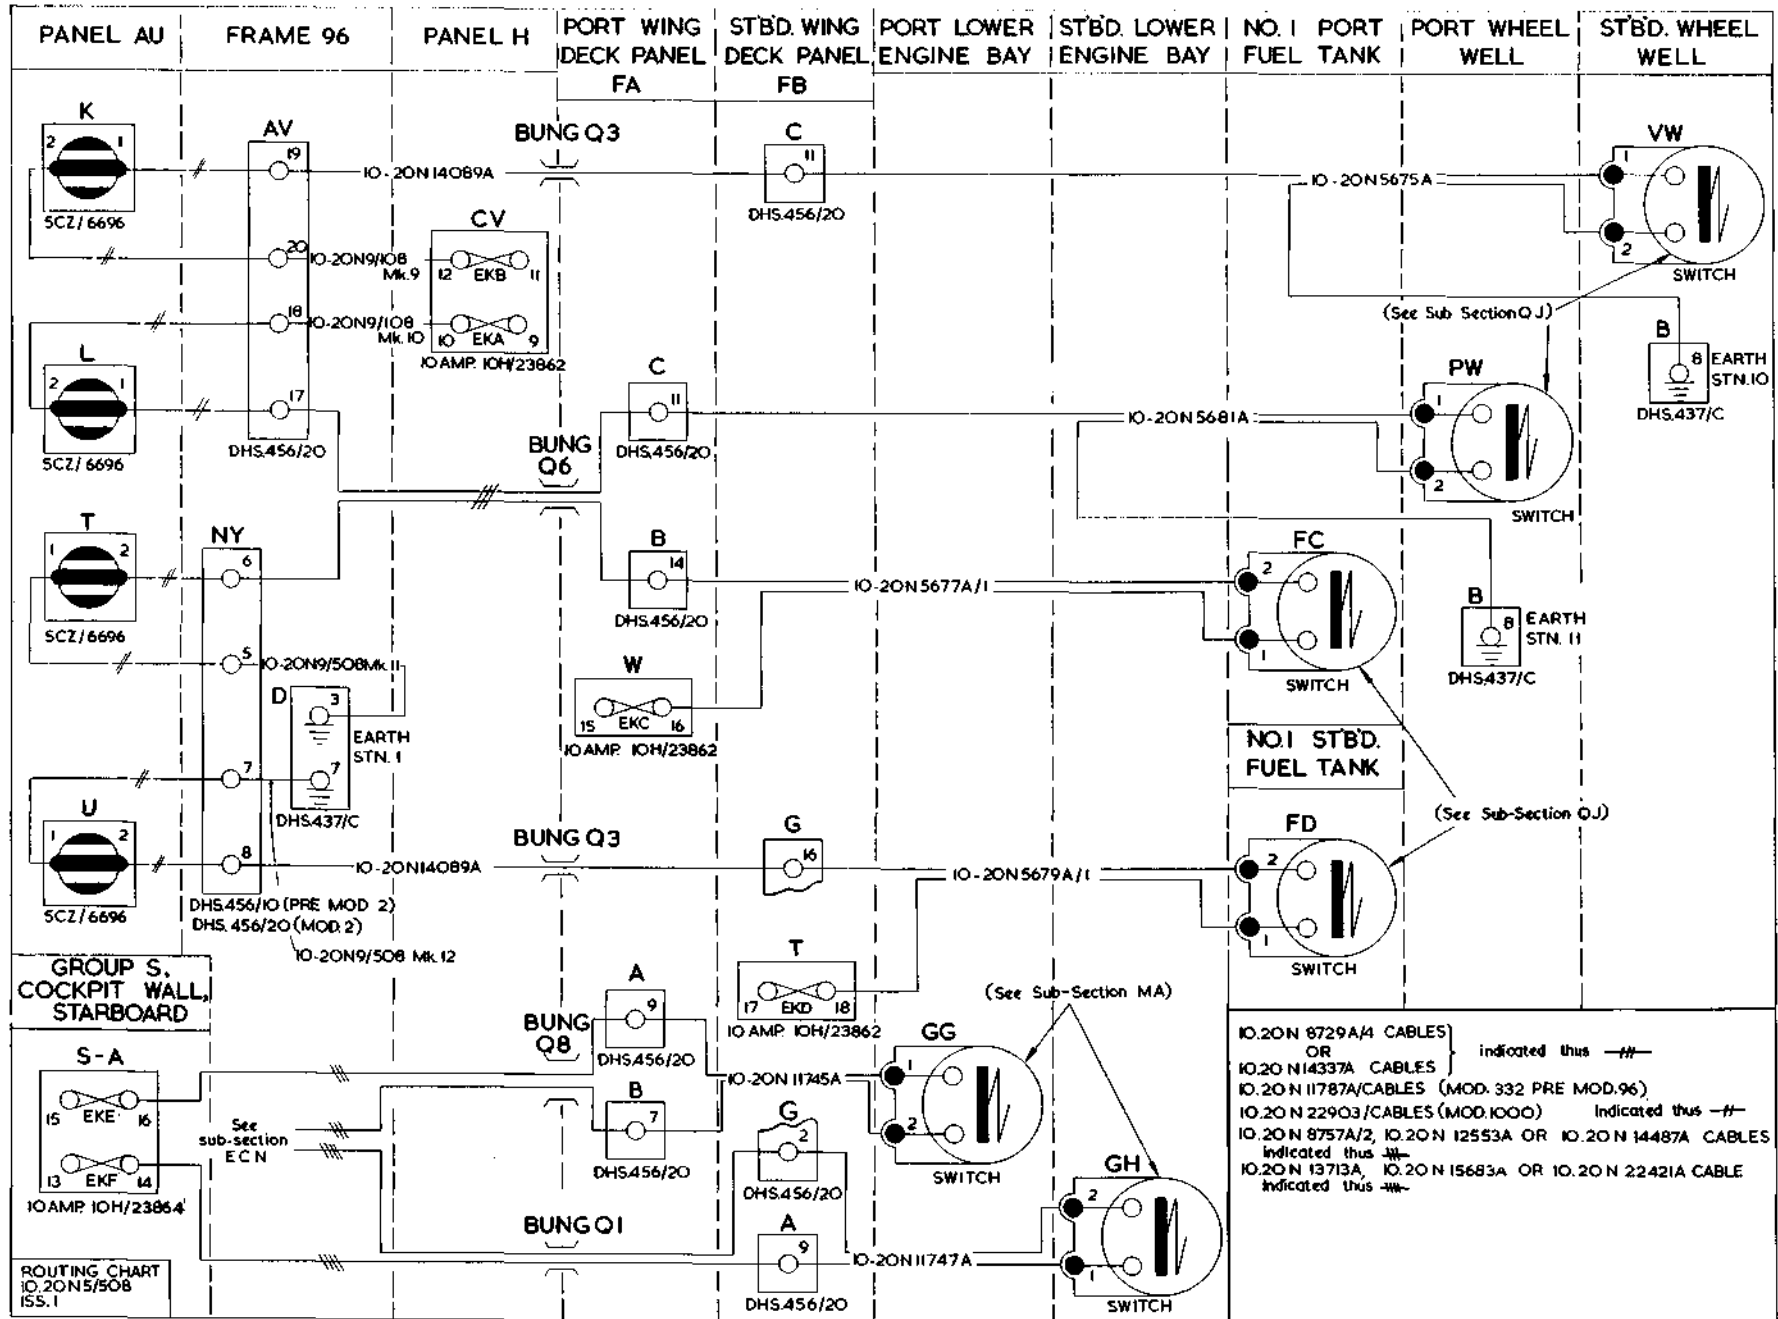

RESTRICTED

See Vixen Mk. 1

RESTRICTED

Place EAV-1

This file was downloaded
from the RTFM Library.
Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

