

**ELECTRICAL INSTALLATIONS**

**INSTALLATION OF U.H.F. SUPPLY, CODED "RF"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Place No.
	—	<b>INSTALLATION OF U.H.F. SUPPLY, CODED "RF"</b>	1	—	—	
	—	<b>INSTALLATION AT THROTTLE BOX, CODED "F"</b> (Drg. Nos. 10-20 CE 4643A Mods. 249 and 416, 10-20 CE 4429A Mod. 416, 10-20 N 13463 and 10-20 N 11421)	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, coded "A," group ... ..	1	—	—	
		<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
12732	10-20 N 8085	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
	10-20 N 7215A	<b>BLOCK</b> , terminal, coded "C," group ... ..	1	—	—	
	DHS.456/10L	<b>BLOCK</b> , terminal, assembly ... ..	1	—	—	
		<b>BLOCK</b> , terminal, 10-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
28S/9137407	A43/A8	<b>SCREW</b> , 6 BA } Use in lieu of	1	—	C	
28W/9137462	AGS.2037/A	<b>WASHER</b> } terminal No. 10	1	—	C	
	10-20 N 7327A	<b>COVER</b> , terminal block (Make from Ref. No. 5X/3275)	1	—	LM	
5X/9450403	PLESSEY Z.28426	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
	DHS.456/20L	<b>BLOCK</b> , terminal, coded "E," group ... ..	1	—	—	
		<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
		<b>BRACKET</b> , mounting (See sub-section KQ) ...	—	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
12732	10-20 N 8085	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
	10-20 N 9/665 Mk. 1	<b>CABLE</b> , coded "8.B.★1.RFA-RFA.F.A.5," assembly	1	—	ECC	
	10-20 N 9/665 Mk. 15	<b>CABLE</b> , coded "5.C.F.RFA-RFA.H.CS.12," assembly (Mod. 416)	1	—	ECC	
	10-20 N 12487A	<b>SWITCH</b> , coded "G," assembly (Mod. 416) ...	1	—	—	
	10-20 N 12487A/ CABLES	<b>CABLE</b> , assembly (For cables circuit coded "RF")	1	—	ECC	
5CW/6384	FERRANTI BXF.25853/35	<b>SWITCH</b> ... ..	1	—	C	
28S/1200056	A33/A10	Attachments for 10-20 N 12487A, Switch :— Screw, 6 BA ... ..	3	—	C	
	10-20 N 11339A	<b>SWITCH</b> , coded "H," assembly ... ..	1	—	—	
	10-20 N 11339A/ CABLES	<b>CABLE</b> , assembly ... ..	1	—	ECC	
5CW/6433	—	<b>SWITCH</b> ... ..	1	—	P	
		Attachments for 10-20 N 11339A, Switch :— Screw, 4 BA ... ..	2	—	C	
28S/1200080	A32/B8	<b>TERMINAL</b> , earth, station 1, coded "B," group	1	—	—	
26DV/7529	DHS.438/C	<b>TAG</b> , corrosion ... ..	1	L.16	C	
26DV/4969	DHS.437/C	<b>TERMINAL</b> , earth, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	C	
		Attachments for DHS.437/C, Terminal :—				
28D/11255	AS.1246/2C	Bolt, 2 BA ... ..	2	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA ... ..	2	—	C	
28W/9419404	SP.16/C	Washer ... ..	2	—	C	

**ELECTRICAL INSTALLATIONS**

**INSTALLATION OF U.H.F. SUPPLY, CODED "RF"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Plate No.
6379	DHS.181/7	<b>TUBING</b> , protecting cables from switch, coded "G," 7 m/m i/d (Pre Mod. 1101)	QR	P.V.C.	C	
13115	DHS.181/8	<b>TUBING</b> , protecting cables from switch, coded "G," 8 m/m i/d (Mod. 1101)	QR	P.V.C.	C	
	—	<b>INSTALLATION AT GROUP CODED "S," COCKPIT WALL, STARBOARD</b> (Drg. Nos. 10-20 N 12977 and 10-20 N 11421)	1	—	—	
	—	<b>BLOCK</b> , fuse, coded "S-A," group ... ..	1	—	—	
	—	<b>BLOCK</b> , fuse, 12-way (See sub-section EBV) ...	—	—	—	
10H/23864	—	<b>FUSE</b> , 5 amp. ... ..	2	—	C	
10H/23862	—	<b>FUSE</b> , 10 amp. ... ..	1	—	C	
	10-20 N 9/665 Mk. 9	<b>CABLE</b> , coded "22.A.S.RFC-RFC.H.BC.1," assembly	1	—	ECC	
	10-20 N 9/665 Mk. 10	<b>CABLE</b> , coded "20.A.S.RFD-RFD.H.CM.2," assembly	1	—	ECC	
	10-20 N 9/665 Mk. 11	<b>CABLE</b> , coded "18.A.S.RFE-RFE.H.DB.8," assembly	1	—	ECC	
		<b>INSTALLATION AT PANEL, CODED "AF"</b> (Drg. No. 10-20 N 11421) ... ..	1	—	—	
	10-20 N 9/665 Mk. 3	<b>CABLE</b> , coded "★.TML.AF.RF-RF.★2.B.2," assembly	2	—	—	
	—	<b>TERMINAL</b> , bonding, group (See sub-section NH)	1	—	ECC	
	—	<b>INSTALLATION AT P.A.S. PANEL, CODED "AU"</b> (Drg. Nos. 10-20 N 22903, 10-20 F 2725 and 10-20 F 3887)	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, coded "NY" group ... ..	1	—	—	
		<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	P	
28M/10287	AGS.2001/B/1	<b>NUT</b> , 4 BA ... ..	2	—	C	
12732	10-20 N 8085	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
28W/9419401	SP.10/B	<b>WASHER</b> ... ..	2	—	C	
	10-20 N 22903/ CABLES	<b>CABLES</b> , link (For cables circuit coded "RF") ...	QR	—	ECC	
	—	<b>SWITCH</b> , target flares, coded "Q," group ... (Mod. 1154)	1	—	—	
5CW/5650	—	<b>SHROUD</b> , switch ... .. Attachments for Ref. No. 5CW/5650, Shroud :—	1	—	P	
28M/9403517	A47/Z	Nut, 8 BA ... ..	2	—	C	
28S/9148309	A32/Z6	Screw, 8 BA ... ..	2	—	C	
28W/16096	AGS.2035/AA	Washer ... ..	2	—	C	
5CW/5056	—	<b>SWITCH</b> , push, Type A ... ..	1	—	P	

**ELECTRICAL INSTALLATIONS**

**INSTALLATION OF U.H.F. SUPPLY, CODED "RF"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
		<b>INSTALLATION AT STARBOARD REAR CONSOLE PANEL, CODED "L"</b> (Drg. Nos. 10-20 N 14123A, Mod. 439, Pre Mod. 803 and 10-20 N 14463A Mod. 803)	1	—	—	
	10-20 N 14123A/ CABLES	<b>CABLES</b> , link (Mod. 439, Pre Mod. 803) (For cables circuit coded "RF")	QR	—	ECC	
	10-20 N 14463A/ CABLES	<b>CABLES</b> , link (Mod. 803) (For cables circuit coded "RF")	QR	—	ECC	
10F/0510584	—	<b>SWITCH</b> , toggle, coded "G" ... .. (5930-99-051-0584)	1	—	P	
5CW/6433	—	<b>SWITCH</b> , tumbler, coded "F" ... .. Attachments for Ref. No. 5CW/6433, Switch:—	1	—	P	
28S/9435716	A33/B12	Screw, 4 BA ... ..	2	—	C	
26DV/7350	DHS.485	Washer, distance ... ..	2	—	C	
		<b>INSTALLATION AT LOWER PANEL, CODED "H"</b> (Drg. Nos. 10-20 N 15833A Pre Mod. 803; 10-20 N 15709A Mod. 803)	1	—	—	
	—	<b>BLOCK</b> , fuse, coded "CS," group ... ..	1	—	—	
	—	<b>BLOCK</b> , fuse, 12-way (See sub-section EBV) ...	—	—	—	
10H/23862	—	<b>FUSE</b> , 10 amp. ... ..	2	—	C	
	—	<b>BLOCK</b> , fuse, coded "CW", group ... ..	1	—	—	
	—	<b>BLOCK</b> , fuse, 12-way (See sub-section EBV)	—	—	—	
10H/23862	—	<b>FUSE</b> , 10 amp. ... ..	1	—	C	
		<b>INSTALLATION AT UPPER PANELS, CODED "H" and "H-A"</b> (Drg. Nos. 10-20 N 15777, 10-20 N 22227, 10-20 N 15771, 10-20 N 22251 and 10-20 N 13987)	1	—	—	
	—	<b>BLOCK</b> , terminal, coded "CL," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block (5940-99-914-9643)	1	—	C	
7657	DHS.870/5	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	2	—	C	
	—	<b>BLOCK</b> , terminal, coded "CM," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
	10-20 N 13731A	<b>BRACKET</b> , assembly ... ..	1	—	—	EBZ1
	10-20 N N 13729ND	<b>BRACKET</b> , bare, 20 SWG ... ..	1	L72	—	EBZ1
28M/9434251	AGS.2008/B/1	<b>NUT</b> , 4 BA, anchor ... ..	2	—	C	
		Attachments for 10-20 N 13731A, Bracket:—				
28S/9992522	A32/B16	Screw, 4 BA ... ..	2	—	C	
28W/9419465	SP.13/B	Washer ... ..	2	—	C	
		<b>COVER</b> , terminal block (5940-99-914-9643)	1	—	C	
5X/9149643	PLESSEY CZ.25111	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
12732	10-20 N 8085	<b>WASHER</b> ... ..	2	—	C	
28W/9419465	SP.13/B					

**ELECTRICAL INSTALLATIONS**

**INSTALLATION OF U.H.F. SUPPLY, CODED "RF"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Plate No.
	—	<b>BLOCK</b> , terminal, coded "CR," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block (5940-99-914-9643)	1	—	C	
12732	10-20 N 8085	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
	—	<b>BLOCK</b> , terminal, coded "CX," group, mounted on Panel "H" (Pre Mod. 803)	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block (5940-99-914-9643)	1	—	C	
13954	10-20 N 1605	<b>PILLAR</b> , fixing, 4 BA ... ..	1	—	C	
16351	10-20 N 12571	<b>PILLAR</b> , fixing, 4 BA ... ..	1	—	C	
	10-20 N 8367A	<b>PLATE</b> , mounting, terminal block, assembly	1	—	—	
28M/9434251	AGS.2008/B/1	<b>NUT</b> , 4 BA, anchor ... ..	1	—	C	
	10-20 N 8005ND	<b>PLATE</b> , bare, 16 SWG ... ..	1	L.72	LM	
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	1	—	C	
	—	<b>BLOCK</b> , terminal, coded "CX," group, mounted on Panel "H-A" (Mod. 803)	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block (5940-99-914-9648)	1	—	C	
5X/9450403	PLESSEY Z.28426	<b>PILLAR</b> , fixing, 4 BA (5340-99-945-0403)	2	—	C	
	—	<b>BLOCK</b> , terminal, coded "DB," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block (5940-99-914-9643)	1	—	C	
7657	DHS.870/5	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	2	—	C	
	10-20 N 15771/ CABLES	<b>CABLES</b> , link (Pre Mod. 803) (For cables circuit coded "RF")	QR	—	ECC	
	10-20 N 22251/ CABLES	<b>CABLES</b> , link (Mod. 803) (For cables circuit coded "RF")	QR	—	ECC	
	10-20 N 9/665 Mk. 25	<b>CABLE</b> , coded "22.CW-H.RFF-RFF.HA-CX18" assembly (Mod. 1540)	—	—	ECC	
10F/0510551	—	<b>SWITCH</b> , toggle, coded "BC" and "DM" (5930-99-051-0551)	2	—	P	
10F/—	N.S.F. 8810 K.6	<b>SWITCH</b> , toggle, coded "CP" and "DN" ...	2	—	P	
	—	<b>INSTALLATION AT REAR PRESSURE BULK-HEAD, CODED "Q"</b> (Drg. Nos. 10-20 N 10635, 10-20 N 11421 and 10-20 N 13463)	1	—	—	
	—	<b>BLOCK</b> , terminal, coded "AE," group ... ..	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block (5940-99-914-9643)	1	—	C	
5X/1004082	PLESSEY Z.50210	<b>LINK</b> , connecting terminals 13 and 14 ... (5940-99-100-4082)	1	—	C	
16671	DHS.870/1	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	
28W/9419401	SP.10/B	<b>WASHER</b> (Fit under outboard foot of terminal block)	2	—	C	
	10-20 N 23103A	<b>CABLE</b> , bung "Q1," coded "FB," assembly (Mod. 1120, Pre Mod. 803) (For cables circuit coded "RF")	1	—	ECC	



**INSTALLATION OF U.H.F. SUPPLY, CODED "RF"**

Ref. No.	Part No.	Description	QTY						Material Specification	Class of Score or L.M	Place No.
			1	2	3	4	5	6			
	10-20 N 23105A	<b>CABLE</b> , bung "Q1," coded "FB," assembly (Mods. 1120 and 803) (For cables circuit coded "RF")	1						ECC		
	10-20 N 14337A	<b>CABLE</b> , bung "Q6," coded "FA," assembly (Mod. 728) (For cables circuit coded "RF")	1						ECC		
	10-20 N 14131A	<b>CABLE</b> , bung "Q10," assembly (Mod. 356) (For cables circuit coded "RF")	1						ECC		
	10-20 N 9/665 Mk. 4	<b>CABLE</b> , coded "13.AE.Q.RF-RF.★2.B.1," assembly	1						ECC		
	10-20 N 9/665 Mk. 6	<b>CABLE</b> , coded "19.AE.Q.RFG-RFG.★2.B.3," assembly	1						ECC		
	—	<b>TERMINAL</b> , earth, station 2, coded "B," group	1						—		
26DV/7529	DHS.438/C	<b>TAG</b> , corrosion ... ..	1						C		
26DV/4969	DHS.437/C	<b>TERMINAL</b> , earth, assembly ... .. (For breakdown see DHS. Data Sheet)	1						C		
	—	Attachments for DHS.437/C, Terminal:—									
28M/10288	AGS.2001/C/1	Nut, 2 BA ... ..	2						C		
28W/9419475	SP.15/C	Washer ... ..	1						C		
	10-20 N 12539ND	Washer, spacing, 0"65 o/d x No. 11 drill i/d x 0"10 thick (12 SWG)	1					L.16	LM		
	—	<b>INSTALLATION AT PORT SIDE OF COCKPIT,</b> <b>AFT</b> (Drg. No. 10-20 N 11421)	1						—		
	10-20 N 20653A	<b>BRACKET</b> , mounting, rheostat, assembly ...	2						—	EBZ1	
	10-20 N 20655ND	<b>BRACKET</b> , bare, 18 SWG ... ..	1					L.72	LM	EBZ1	
28M/11957	AGS.2007/C/1	<b>NUT</b> , anchor, 2 BA ... ..	1						C		
	—	Attachments for 10-20 N 20653A, Bracket:—									
28D/1007981	AS.1248/1/3C	Bolt, 2 BA ... ..	2						C		
28M/10288	AGS.2001/C/1	Nut, 2 BA ... ..	2						C		
28W/9419454	SP.10/C	Washer ... ..	2						C		
	10-20 N 20515A	<b>RHEOSTAT</b> , coded "LF," assembly (Mod. 1062)	1						—		
	10-20 N 11837A	<b>CONTAINER</b> , rheostat, assembly ... .. Spares for:—	1						—	EBZ1	
28M/9434253	AGS.2007/B/1	<b>NUT</b> , anchor, 4 BA ... ..	4						C		
	—	Attachments for 10-20 N 11837A, Container:—									
28D/9137408	AS.1246/1/3B	Bolt, 4 BA ... ..	4						C		
	10-20 N 20517A/ND	<b>RHEOSTAT</b> , with mounting plate, assembly...	1						—		
5K/—	SP.95/A8	<b>GROMMET</b> , cable entry (Alternative DHS. 1790/A8)	1						C		
	10-20 N 24661A	<b>RHEOSTAT</b> , wired, assembly (Mod. 1515)	1						—		
28D/1010658	A25/1B	<b>BOLT</b> , 4 BA, cable attachment ...	2						C		
	10-20 N 24661A/ CABLES	<b>CABLES</b> , assembly ... ..	1						ECC		
	BERCO SA.75	<b>LEVER</b> , locking ... ..	1						—		
28M/10287	AGS.2001/B/1	<b>NUT</b> , 4 BA, cable attachment ...	2						C		
	10-20 N 11841	<b>PLATE</b> , mounting, 18 SWG ... ..	1					L.72	LM	EBZ1	
5CZ/6184	BERCO L.50	<b>RHEOSTAT</b> , 3 ohms, with slotted spindle	1						P		
28W/9419465	SP.13/B	<b>WASHER</b> , cable attachment ... ..	2						C		
	—	Attachments for 10-20 N 20515A, Rheostat:—									
28D/1007981	AS.1248/1/3C	Bolt, 2 BA ... ..	2						C		
	—	<b>INSTALLATION AT COCKPIT FLOOR AFT,</b> <b>PORT, CODED "ALU"</b> (Drg. No. 10-20 FS 9921A)	1						—		
	—	<b>RELAY</b> , coded "C" (See sub-section ECU)	—						—		
	—	<b>TERMINAL</b> , earth station, coded "36," group	1						—		
28M/10287	AGS.2001/B/1	<b>NUT</b> , 4 BA ... ..	2						C		
28S/9435716	A33/B12	<b>SCREW</b> , 4 BA ... ..	2						C		
26DV/4968	DHS.457	<b>TERMINAL</b> , bonding ... ..	1						C		
26DV/10901	DHS.458	<b>WASHER</b> , corrosion ... ..	1						C		

**ELECTRICAL INSTALLATIONS**

**INSTALLATION OF U.H.F. SUPPLY, CODED "RF"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or LM	Place No.
		<b>INSTALLATION AT STARBOARD WING DECK PANEL, CODED "FB"</b> (Drg. No. 10-20 N 14863A)	1	—	—	
14872	10-20 N 6555A 10-20 N 6809ND	<b>CIRCUIT-BREAKER</b> , coded "BA," group ...	1	—	—	
		<b>BRACKET</b> , mounting, circuit-breaker, assembly	1	—	C	EBZ1
		<b>BRACKET</b> , bare, 20 SWG ...	1	L.72	LM	EBZ1
		Attachments for 10-20 N 6555A, Bracket:—				
28D/1007979	AS.1246/1B	Bolt, 4 BA ...	4	—	C	
28M/10287	AGS.2001/B/1	Nut, 4 BA ...	4	—	C	
28W/9419474	SP.15/B	Washer ...	4	—	C	
5CY/4520	—	<b>CAP</b> , protecting circuit-breaker ...	1	—	C	
		Attachments for Ref. No. 5CY/4520, Cap:—				
28S/9435647	A44/A4	Screw, 6 BA ...	2	—	C	
5CY/9992777	—	<b>CIRCUIT-BREAKER</b> , Type A4 (Mod. 755) (5925-99-999-2777)	1	—	C	
	10-20 N 12137 10 N 1955	<b>LABEL</b> ...	1	—	—	EBZ1
		<b>PLATE</b> , blanking, 24 SWG ...	2	Comm. Alum.	LM	EBZ1
28S/1008327	A32/B14	<b>SCREW</b> , 4 BA ...	4	—	C	
28W/9419474	SP.15/B	<b>WASHER</b> ...	6	—	C	
		<b>INSTALLATION AT PORT WING DECK PANEL, CODED "FA"</b> (Drg. Nos. 10-20 N 13301A and 10-20 N 11143)	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, coded "G," group ...	1	—	—	
		<b>BLOCK</b> , terminal, 20-way, assembly ... (For breakdown see DHS. Data Sheet)	1	—	—	
	10-20 N 4611A 10-20 N 4613ND	<b>CHANNEL</b> , assembly ...	2	—	—	EBZ1
28M/9434253	AGS.2007/B/1	<b>CHANNEL</b> , bare, 22 SWG ...	1	L.72	LM	EBZ1
		<b>NUT</b> , anchor, 4 BA ...	2	—	C	
		Attachments for 10-20 N 4611A, Channel				
28D/1007979	AS.1246/1B	Bolt, 4 BA ...	2	—	C	
28W/9419465	SP.13/B	Washer ...	2	—	C	
5X/1004082	PLESSEY Z.50210	<b>LINK</b> , connecting terminals 16 and 17 ... (5940-99-100-4082)	1	—	C	
14987	10-20 N 8231	<b>PILLAR</b> , fixing, 4 BA ...	2	—	C	
28W/9419474	SP.15/B 10-20 N 9/665 Mk. 7	<b>WASHER</b> ...	2	—	C	
		<b>CABLE</b> , coded "16.G.FA.RF-RF.★8.A.7," assembly	1	—	ECC	
		<b>TERMINAL</b> , earth, station 8, coded "A," group	1	—	—	
26DV/7529	DHS.438/C	<b>TAG</b> , corrosion ...	1	—	C	
26DV/4969	DHS.437/C	<b>TERMINAL</b> , earth, assembly ... (For breakdown see DHS. Data Sheet)	1	—	C	
		Attachments for DHS.437/C, Terminal:—				
28D/9436920	A25/1C	Bolt, 2 BA ...	2	—	C	
28M/10328	AGS.2002/C/1	Nut, 2 BA ...	2	—	C	
28W/9419402	SP.13/C	Washer ...	4	—	C	
32B/—	—	<b>TAPE</b> , identification, numbers and letters, use from Ref. Nos. 32B/1087 to 32B/1120 inclusive, as required	QR	—	C	

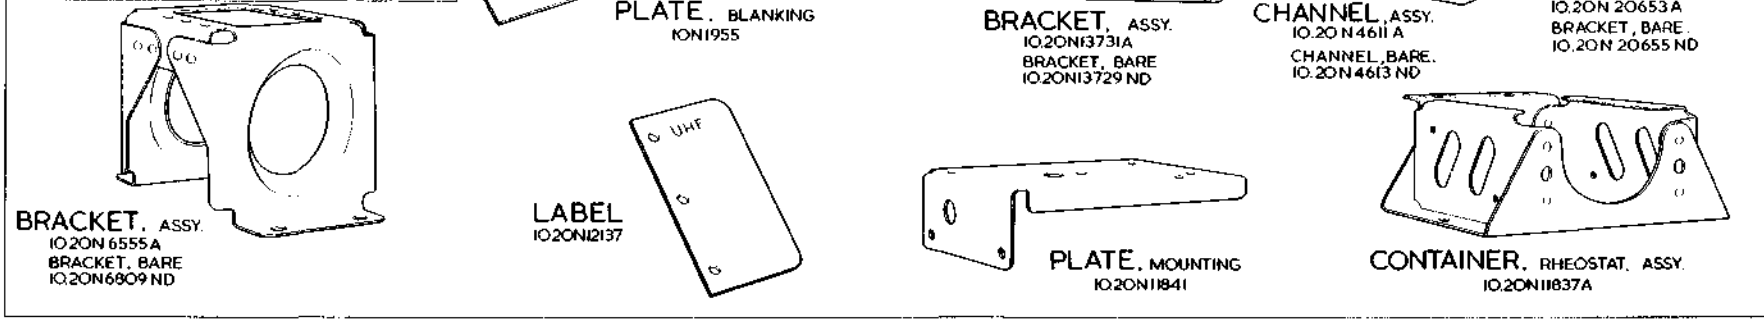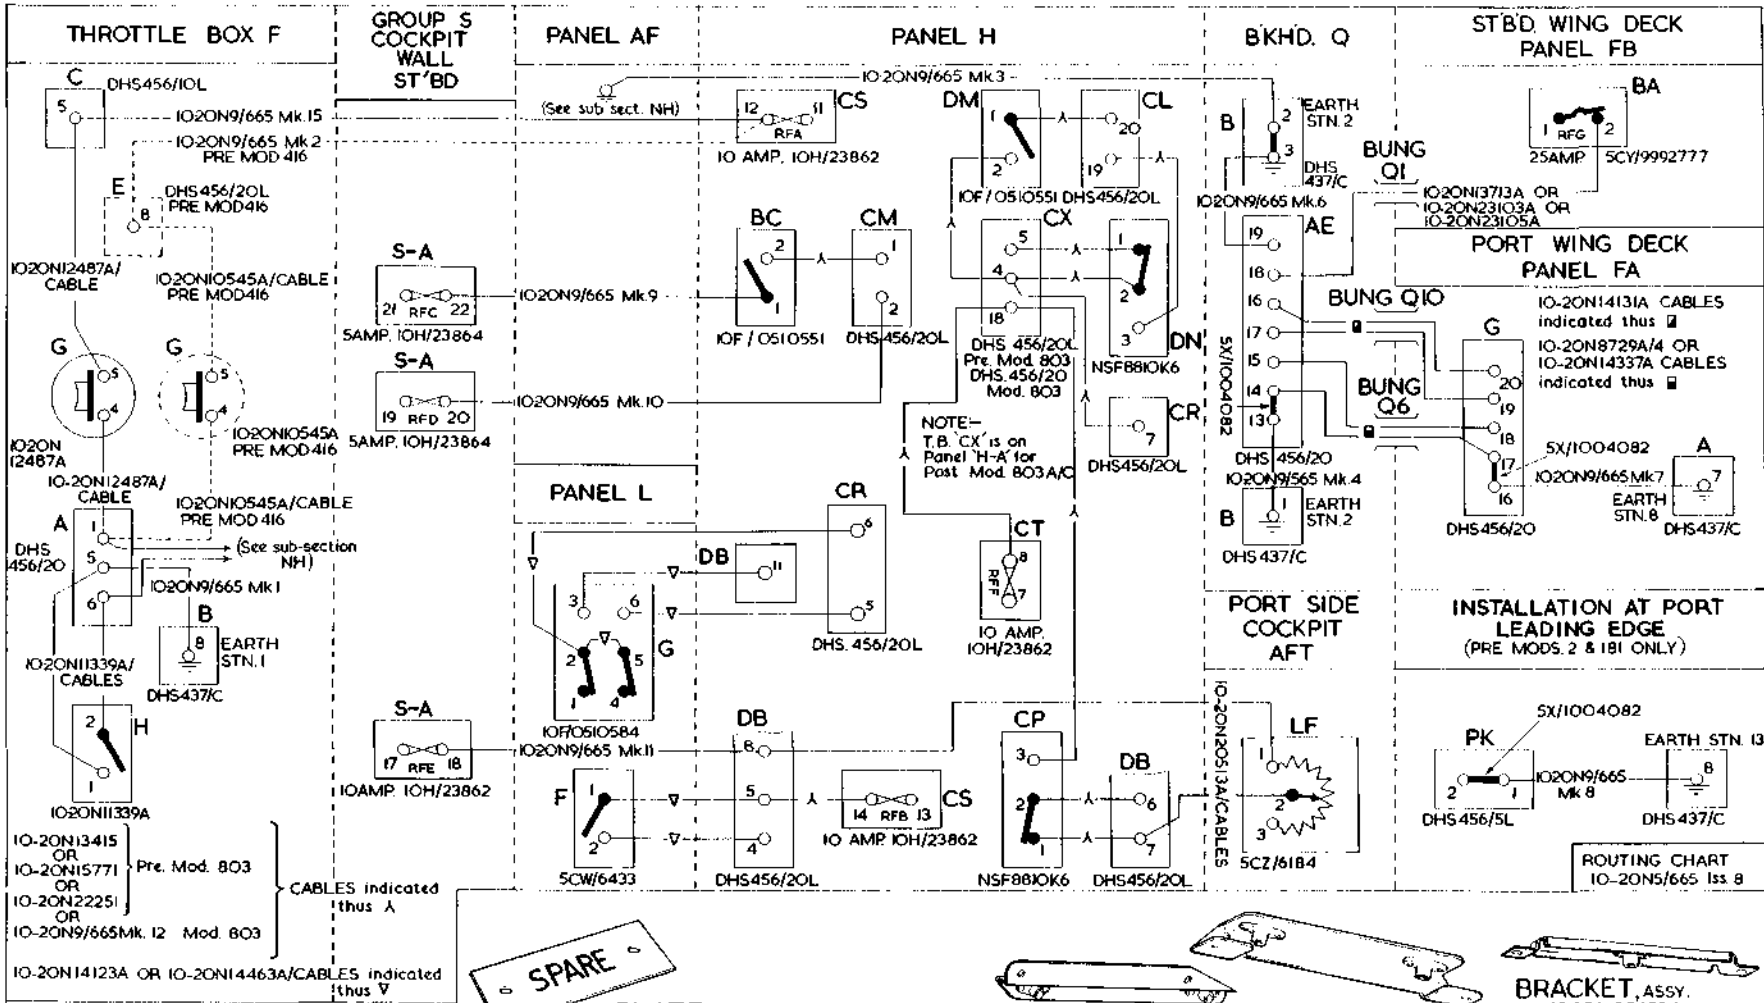

EBZ.1

ELECTRICAL INSTALLATION

EBZ.1

U.H.F. SUPPLY  
CODED RF

RESTRICTED

AL 49



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

R-Type Mk2  
pressure breathing  
mask

R-Type mask  
used on Dominie  
by RAF until 2011  
© Copyright 2011 Scott Bouch