

**ELECTRICAL INSTALLATIONS  
INSTALLATION OF INTERCOM. AND  
TELEBRIEF SUPPLIES, CODED "RZ"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Place No.
		<b>INSTALLATION OF INTERCOM. AND TELEBRIEF SUPPLIES, CODED "RZ"</b>	1	—	—	
		<b>INSTALLATION AT FRAME 96", PORT</b> (Drg. Nos. 10-20 N 13463 and 10-20 N 11421)				
	10-20 N 9/566 Mk. 1	<b>CABLE</b> , coded "2.CN.H.RZ-RZ.★1.A.2," assembly	1	—	ECC	
26DV/7529	DHS.438/C	<b>TERMINAL</b> , earth, station 1, coded "A," group	1	—	—	
26DV/4969	DHS.437/C	<b>TAG</b> , corrosion ... ..	1	L.16	C	
		<b>TERMINAL</b> , earth, assembly ... ..	1	—	C	
		(For breakdown see DHS. Data Sheet)				
		Attachments for DHS.437/C, Terminal :—				
28D/11255	AS.1246/2C	Bolt, 2 BA ... ..	2	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA ... ..	2	—	C	
28W/9419404	SP.16/C	Washer ... ..	2	—	C	
		<b>INSTALLATION AT NAVIGATOR'S RADIO PANEL, CODED "AN"</b> (Drg. Nos. 10-20 N 24069A and 10-20 N 20443)	1	—	—	
	10-20 N 24069A/ CABLES	<b>CABLES</b> , link (For cables circuit coded "RZB" (Mods. 1183 and 1371)	4	—	ECC	
5CW/9438526	DOWTY C.5162Y Mk. 3	<b>SWITCH</b> , push, Type B, "Press to talk," coded "J"	1	—	P	
		Attachments for Ref. No. 5CW/9438526, Switch :—				
28M/9403517	A47/Z	Nut, 8 BA ... ..	2	—	C	
28S/1011493	A32/Z10	Screw, 8 BA ... ..	2	—	C	
28W/1007779	AGS.2035/AA	Washer, shakeproof ... ..	2	—	C	
10F/0510579	—	<b>SWITCH</b> , toggle, "External I/C," coded "H" (Mod. 1042)	1	—	P	
		<b>INSTALLATION AT GROUP CODED "T," FUSELAGE SIDE, STARBOARD</b> (Drg. No. 10-20 N 5733)	1	—	—	
		<b>BLOCK</b> , terminal, coded "F," group ... ..	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, 20-way, assembly ... ..	1	—	—	
		(For breakdown see DHS. Data Sheet)				
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	P	ECE1
28M/10327	AGS.2002/B/1	<b>NUT</b> , 4 BA ... ..	1	—	C	
7657	DHS.870/5	<b>PILLAR</b> , fixing, 4 BA ... ..	1	S.93	C	ECE1
5X/9450403	PLESSEY Z.28426	<b>PILLAR</b> , fixing ... ..	1	—	C	ECE1
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	1	P.V.C.	C	ECE1
		<b>INSTALLATION AT LOWER PANEL, CODED "H"</b> (Drg. Nos. 10-20 N 15833A Pre Mod. 803 and 10-20 N 15709A Mod. 803)	1	—	—	
		<b>BLOCK</b> , fuse, coded "CV," group ... ..	1	—	—	
		<b>BLOCK</b> , fuse, 12-way ... ..	—	—	—	
		(See sub-section EBV)				
10H/23864	—	<b>FUSE</b> , 5 amp. ... ..	1	—	C	
		<b>BLOCK</b> , fuse, coded "CW," group ... ..	1	—	—	
		<b>BLOCK</b> , fuse, 12-way (See sub-section EBV) ... ..	—	—	—	
10H/23864	—	<b>FUSE</b> , 5 amp. (Mod. 803) ... ..	1	—	C	

**ELECTRICAL INSTALLATIONS  
INSTALLATION OF INTERCOM. AND  
TELEBRIEF SUPPLIES, CODED "RZ"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
	—	<b>INSTALLATION AT UPPER PANELS, CODED "H" AND "H-A" (Drg. Nos. 10-20 N 15777, 10-20 N 22227, 10-20 N 15771, 10-20 N 22251, 10-20 N 13987 and 10-20 N 11421)</b>	1	—	—	
	—	<b>BLOCK</b> , terminal, coded "CL," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
7657	DHS.870/5	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.93	C	
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	2	P.V.C.	C	
	—	<b>BLOCK</b> , terminal, coded "CM," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
	10-20 N 13731A	<b>BRACKET</b> , assembly ... ..	1	—	—	EBZ1
	10-20 N 13729ND	<b>BRACKET</b> , bare, 20 SWG ... ..	1	L.72	—	EBZ1
28M/9434251	AGS.2008/B/1	<b>NUT</b> , 4 BA, anchor ... ..	2	—	C	
	28S/9992522	Attachments for 10-20 N 13731A, Bracket :— Screw, 4 BA ... ..	2	—	C	
	28W/9419465	Washer ... ..	2	—	C	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
<del>5X/1004.063</del> <del>5X/6474</del>	PLESSEY Z.50211	<b>LINK</b> , commoning, 3-way, between terminals Nos. 18, 19 and 20	1	—	C	
12732	10-20 N 8085	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.93	C	
28W/9419465	SP.13/B	<b>WASHER</b> ... ..	2	—	C	
	—	<b>BLOCK</b> , terminal, coded "CN," group ... ..	1	—	—	
	DHS.456/5L	<b>BLOCK</b> , terminal, 5-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149641	PLESSEY CZ.26805	<b>COVER</b> , terminal block ... ..	1	—	C	
12732	10-20 N 8085	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.93	C	
	—	<b>BLOCK</b> , terminal, coded "CR," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
12732	10-20 N 8085	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.93	C	
	—	<b>BLOCK</b> , terminal, coded "CX," group, mounted on Panel "H" (Pre Mod. 803)	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
13954	10-20 N 1605	<b>PILLAR</b> , fixing, 4 BA ... ..	1	S.92	C	
16351	10-20 N 12571	<b>PILLAR</b> , fixing, 4 BA ... ..	1	S.93	C	
	10-20 N 8367A	<b>PLATE</b> , mouncing, terminal block, assembly	1	—	—	
28M/9434251	AGS.2008/B/1	<b>NUT</b> , 4 BA, anchor ... ..	1	—	C	
	10-20 N 8005ND	<b>PLATE</b> , bare, 16 SWG ... ..	1	L.72	LM	
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	1	P.V.C.	C	
	—	<b>BLOCK</b> , terminal, coded "CX," group, mounted on Panel "H-A" (Mod. 803)	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
5X/9450403	PLESSEY Z.28426	<b>PILLAR</b> , fixing, 4 BA ... ..	2	—	C	

**ELECTRICAL INSTALLATIONS  
INSTALLATION OF INTERCOM. AND  
TELEBRIEF SUPPLIES, CODED "RZ"**


Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Plate No.
	—	<b>BLOCK</b> , terminal, coded "DB," group ... ..	1	—	—	
	DHS.456/20L	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
7657	DHS.870/5	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.93	C	
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	2	P.V.C.	C	
	10-20 N 22737A	<b>CABLE</b> , bung "Q7," coded "FA," assembly (Mod. 1042, Pre Mod. 803) (For cables circuit coded "RZ")	1	—	ECC	
	10-20 N 22735A	<b>CABLE</b> , bung "Q7," coded "FA," assembly ... (Mods. 1042 and 803) (For cables circuit coded "RZ")	1	—	ECC	
	10-20 N 9/566 Mk. 7	<b>CABLE</b> , coded "17.CX.A.H.RZC-RZC.CW.8," assembly (Mod. 803)	1	—	ECC	
	10-20 N 15771/CABLES	<b>CABLES</b> , link (Mod. 2, Pre Mod. 803) (For cables circuit coded "RZ")	QR	—	ECC	
	10-20 N 22251/CABLES	<b>CABLES</b> , link (Mods. 2 and 803) (For cables circuit coded "RZ")	QR	—	ECC	
	10-20 N 14123A/ CABLES	<b>CABLES</b> , link (Mod. 439, Pre Mod. 803) (For cables circuit coded "RZ")	QR	—	ECC	
	10-20 N 14463A/ CABLES	<b>CABLES</b> , link (Mod. 803) (For cables circuit coded "RZ")	QR	—	ECC	
10F/0510552	—	<b>SWITCH</b> , toggle, "Ext. Inter/Com.—T/Brief." coded "DJ"	1	—	P	
10F/0510580	—	<b>SWITCH</b> , toggle, "Inter/Com. On-Emergency," coded "BN"	1	—	P	
	—	<b>INSTALLATION AT STARBOARD REAR CONSOLE PANEL, CODED "L"</b> (Drg. No. 10-20 N 14283)	1	—	—	
5CW/9438526	DOWTY C.5162Y Mk. 3	<b>SWITCH</b> , push button, Type B, "T/Brief-Press to talk," coded "H"	1	—	P	
	—	Attachments for Ref. No. 5CW/9438526, Switch :—				
28M/9403517	A47/Z	Nut, 8 BA ... ..	2	—	C	
28S/9135420	A32/Z12	Screw, 8 BA ... ..	2	—	C	
5CW/5060	DOWTY D.5194Y	Shroud ... ..	1	—	C	
	PAGE ENGINEERING C.181/B/5	<b>SWITCH</b> , push button, illuminated, green, "Ext. Inter/Com. and T/Brief," coded "J"	1	—	P	
	—	<b>INSTALLATION AT PORT WING DECK PANEL, CODED "FA"</b> (Drg. No. 10-20 N 13301A)	1	—	—	
	—	<b>BLOCK</b> , terminal, coded "G," group ... ..	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
	10-20 N 4611A	<b>CHANNEL</b> , assembly ... ..	2	—	—	EBZ1
	10-20 N 4613ND	<b>CHANNEL</b> , bare, 22 SWG ... ..	1	L.72	LM	EBZ1
28M/9434253	AGS.2007/B/1	<b>NUT</b> , anchor, 4 BA ... ..	2	—	C	
	—	Attachments for 10-20 N 4611A, Channel :—				
28D/1007979	AS.1246/1B	Bolt, 4 BA ... ..	2	—	C	
28VV/9419465	SP.13/B	Washer ... ..	2	—	C	
	14987	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.92	C	EBP2
28VV/9419474	SP.15/B	<b>WASHER</b> ... ..	2	—	C	

**ELECTRICAL INSTALLATIONS  
INSTALLATION OF INTERCOM. AND  
TELEBRIEF SUPPLIES, CODED "RZ"**

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score of L.M.	Plate No.
	—	<b>INSTALLATION AT REAR PRESSURE BULK-HEAD, CODED "Q"</b> (Drg. Nos. 10-20 N 10635, 10-20 N 14755A and 10-20 N 11421)	1	—	—	
	—	<b>BLOCK</b> , fuse, coded "L," group ... ..	1	—	—	
10H/23862	—	<b>BLOCK</b> , fuse, 12-way (See sub-section EBV) ...	1	—	—	
	—	<b>FUSE</b> , 10 amp. ... ..	1	—	C	
	—	<b>BLOCK</b> , terminal, coded "AD," group ... ..	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
	7657	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.93	C	
26DV/12296	DHS.489/5	<b>SPACER</b> ... ..	2	P.V.C.	C	
	—	<b>BLOCK</b> , terminal, coded "AF," group ... ..	1	—	—	
	DHS.456/20	<b>BLOCK</b> , terminal, 20-way, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	—	
5X/9149643	PLESSEY CZ.25111	<b>COVER</b> , terminal block ... ..	1	—	C	
	12732	<b>PILLAR</b> , fixing, 4 BA ... ..	2	S.93	C	
	10-20 N 8085	<b>CABLE</b> , coded "13.AD.Q.RZA-RZA.Q.L.4," assembly	1	—	ECC	
	10-20 N 9/566 Mk. 2	<b>CABLE</b> , coded "12.AD.Q.RZ★-RZ★.★3.B.3," assembly	1	—	ECC	
	10-20 N 9/566 Mk. 4	<b>CABLE</b> , coded "2.AF.Q.RZ★-RZ★.★2.D.3," assembly	1	—	ECC	
	—	<b>TERMINAL</b> , earth, station 2, coded "D" and station 3, coded "B," group	1	—	—	
28M/10288	AGS.2001/C/1	<b>NUT</b> , 2 BA ... ..	2	—	C	
26DV/7529	DHS.438/C	<b>TAG</b> , corrosion ... ..	2	L.16	C	
26DV/4969	DHS.437/C	<b>TERMINAL</b> , earth, assembly ... .. (For breakdown see DHS. Data Sheet)	2	—	C	
28W/9419475	SP.15/C	<b>WASHER</b> ... ..	2	—	C	
	—	<b>INSTALLATION AT FRAME No. 2, PORT BOOM</b> (Drg. Nos. 10-20 N 15561A Mods. 740 and 7; 10-20 R 3555)	1	—	—	
	10-20 N 9/566 Mk. 10	<b>CABLE</b> , coded "2.A.RS.RZB-RZB.★19.B.4," assembly	1	—	ECC	
	—	<b>TERMINAL</b> , earth, station 19, coded "B," group	1	—	—	
28D/9436920	A25/1C	<b>BOLT</b> , 2 BA ... ..	2	—	C	
28M/10288	AGS.2001/C/1	<b>NUT</b> , 2 BA ... ..	2	—	C	
26DV/7529	DHS.438/C	<b>TAG</b> , corrosion ... ..	1	L.16	C	
26DV/4969	DHS.437/C	<b>TERMINAL</b> , earth, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	C	
28W/9419402	SP.13/C	<b>WASHER</b> ... ..	2	—	C	
	—	<b>INSTALLATION AT FRAME No. 2, STARBOARD BOOM</b> (Drg. Nos. 10-20 N 10075 Pre Mod. 7, 10-20 N 15563A Mods. 740 and 7; 10-20 R 3555)	1	—	—	
	10-20 N 9/566 Mk. 9	<b>CABLE</b> , coded "2.A.VU.RZB-RZB.★18.B.4," assembly	1	—	ECC	
	—	<b>TERMINAL</b> , earth, station 18, coded "B," group	1	—	—	
28D/9436920	A25/1C	<b>BOLT</b> , 2 BA ... ..	2	—	C	
28M/10288	AGS.2001/C/1	<b>NUT</b> , 2 BA ... ..	2	—	C	
26DV/7529	DHS.438/C	<b>TAG</b> , corrosion ... ..	1	L.16	C	
26DV/4969	DHS.437/C	<b>TERMINAL</b> , earth, assembly ... .. (For breakdown see DHS. Data Sheet)	1	—	C	
28W/9419402	SP.13/C	<b>WASHER</b> ... ..	2	—	C	
32B/—	—	<b>TAPE</b> , identification, numbers and letters, use from Ref. Nos. 32B/1087 to 32B/1120 inclusive, as required	QR	—	C	

**ECB.1**  
**ELECTRICAL INSTALLATION**  
**INTERCOMM. AND TELEBRIEF SUPPLIES**  
**CODED RZ**

RESTRICTED

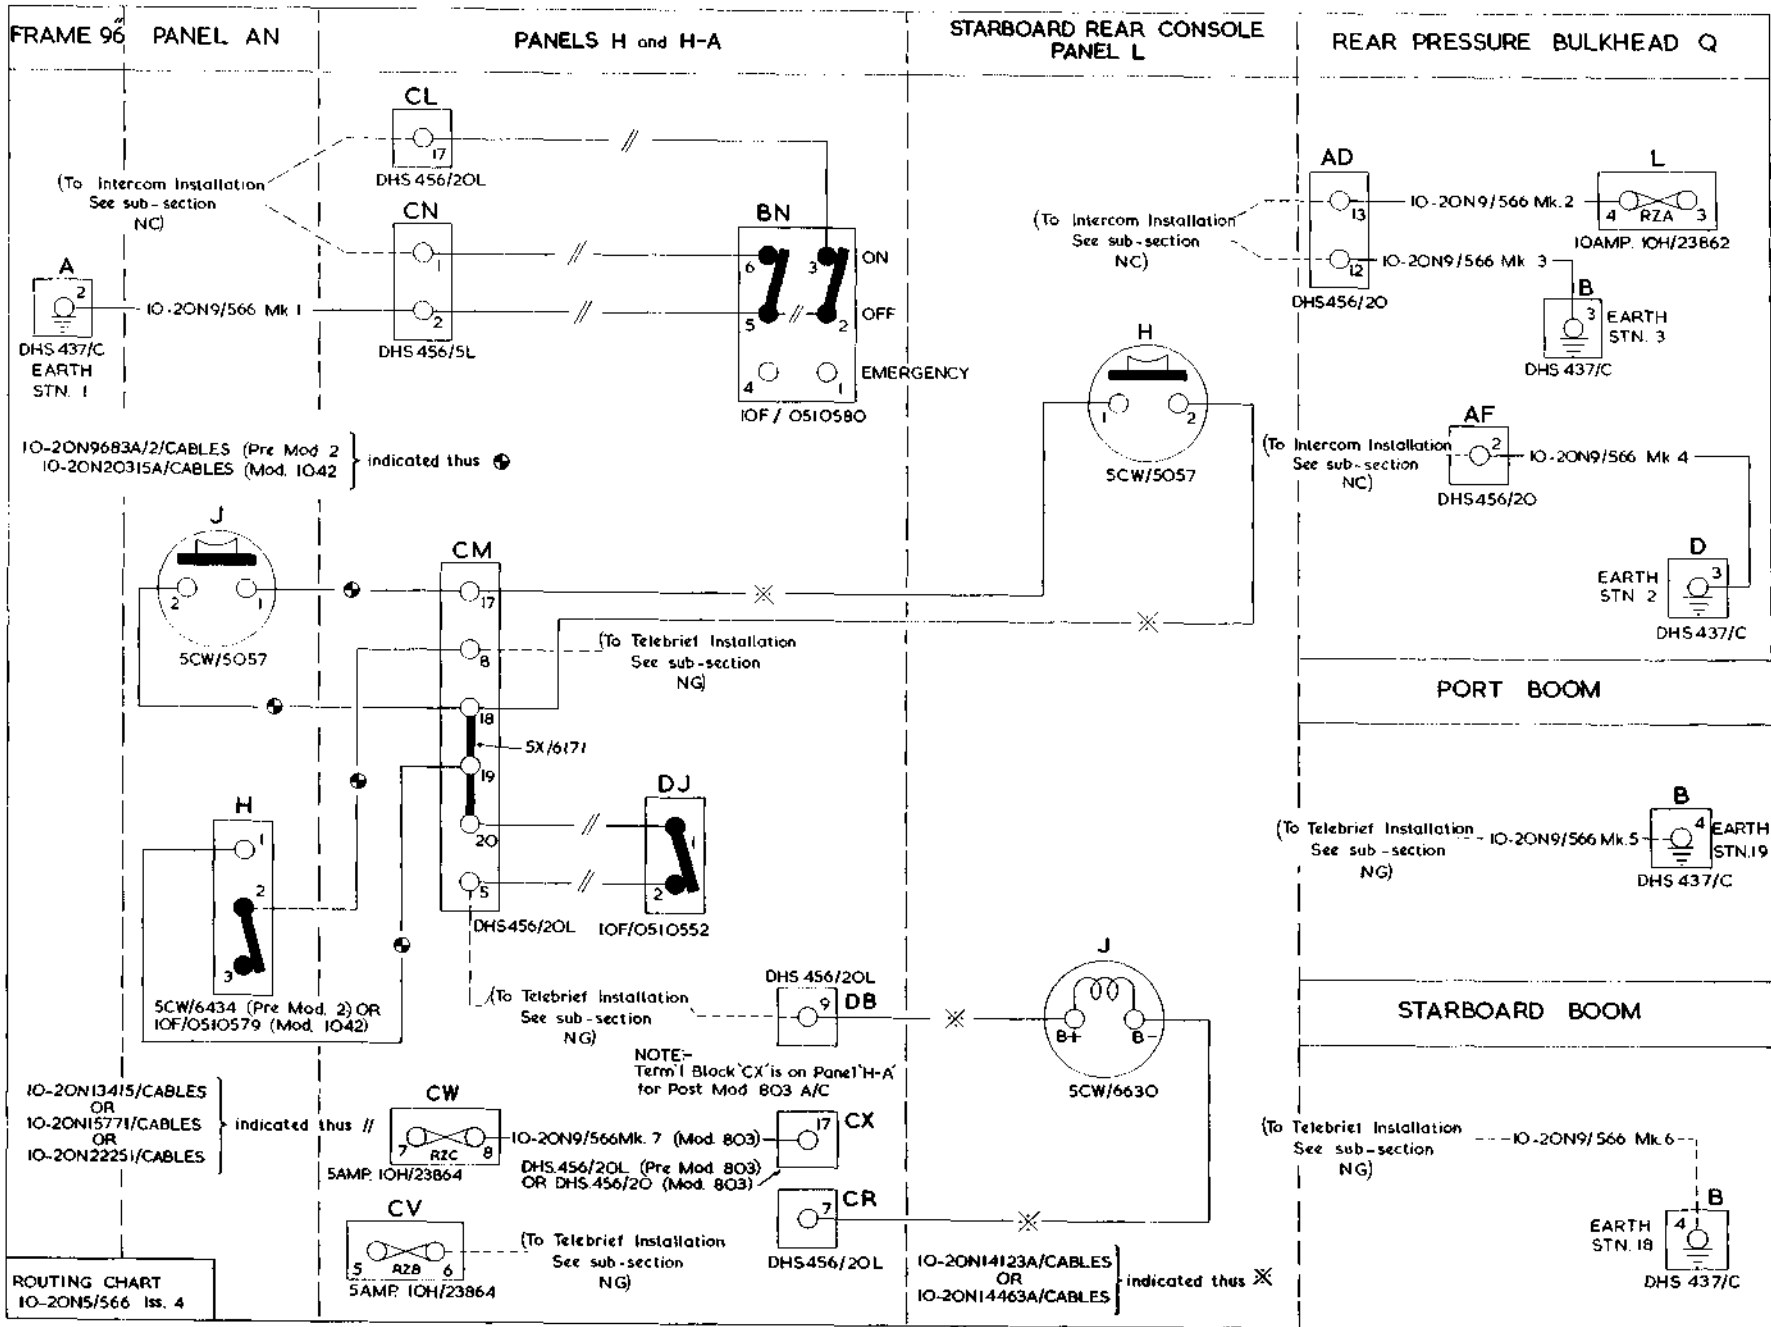

See Vixen Mk. 1

RESTRICTED

Plate ECB1



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.