

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
	—	FUEL SYSTEM IN EXTENSION WING ...	1	—	—	
	—	(Pre Mod. 2)				
	—	FUEL FEED AND REFUELLING SYSTEM IN TANKS Nos. 3 AND 4, PORT	1	—	—	QG1
	—	(10-20 P 2743) (Pre Mod. 2)				
	—	FUEL FEED AND REFUELLING SYSTEM IN TANKS Nos. 3 AND 4, STARBOARD	1	—	—	QG1
	—	(10-20 P 2743) (Pre Mod. 2)				
6262	10-20 P 2789	ADAPTER, fuel hose and relief valve mounting, No. 4 tank, at rib No. 6, aft of main spar, Port	1	DTD.424	C	QG3
6263	10-20 P 2791	ADAPTER, fuel hose and relief valve mounting, No. 4 tank, at rib No. 6, aft of main spar, Starboard	1	DTD.424	C	QG3
		Attachments for 10-20 P 2789 or 10-20 P 2791. Adapter :—				
28D/1200119	A25/4C	Bolt, 2 BA	1	—	C	
28D/12531	A25/3C	Bolt, 2 BA	3	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	4	—	C	
28W/9419475	SP.15/C	Washer	4	—	C	
6255	10-20 P 2989	ADAPTER, secured to rib No. 4A between front and main spars, to rib No. 8 between main and rear spars, and to front spar between ribs Nos. 5 and 6 for connection of fuel pump transfer valve and refuelling valve electrical connectors	4	L.64	C	QG1 QG3
6257	10-20 P 2851A	ADAPTER, secured to rib No. 8, forward of main spar for connection of transfer valve electrical connector	1	—	C	QG1 QG3
		Attachments for 10-20 P 2989 or 10-20 P 2851A. Adapter :—				
28D/1200119	A25/4C	Bolt, 2 BA	4	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	4	—	C	
27QA/533	DOWTY SP.916/20	Ring, sealing, "O" Type	1	—	C	QG3
3567	DHS.402/C	Seal, bonded	4	—	C	QG3
13095	DHS.180.Mk. 3/Z	Tag, locking	1	DTD.571	C	QG3
28W/9419475	SP.15/C	Washer	3	—	C	
28E/14074	AS.3181/16B	CLIP, bonding, terminator connector at rib No. 4A, between main spar and rear spar	1	—	C	
28E/14310	AS.3181/20B	CLIP, bonding, float valve mounting between ribs Nos. 4A and 5 at main spar between ribs Nos. 5 and 6, forward of main spar	2	—	C	
		Attachments for AS.3181/16B or AS.3181/20B. Clip :—				
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	
28W/9419465	SP.13/B	Washer (float valve mounting only)	1	—	C	
	10-20 P 4003ND	CLIP, support, jettisonable tank feed connector at rib No. 5 support strut No. 1, 18 SWG (Mod. 7)	1	S.84	LM	QG1
		Attachments for 10-20 P 4003ND, Clip :—				
28D/9133011	A25/2C	Bolt, 2 BA	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
28W/9419475	SP.15/C	Washer	1	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score or L.M.	Plate No.
28E/17634	AS.2080/14	CLIP , securing hose and cables, at rib No. 7 and aft of main spar	5	—	C	
		Attachments for AS.2080/14, Clip :—				
28D/9133011	A25/2C	Bolt, 2 BA	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
28W/9419475	SP.15/C	Washer	1	—	C	
27FR/2372	FLIGHT REFUELLING LTD. FRS.132/E/ Series 1	CONNECTOR , pipe, at refuelling valve (Pre Mod. 7) (For spares see AP.4515U, Vol. 3, Part 1)	1	—	C	QG1
27FR/2327	FLIGHT REFUELLING LTD. FRS.110/H/ Series 1	CONNECTOR , pipe, fitted at non-return valve, float valve and transfer valve (For spares see AP.4515U, Vol. 3, Part 1)	4	—	C	QG1
27FR/2328	FLIGHT REFUELLING LTD. FRS.110/I/ Series 1	CONNECTOR , pipe, fitted at float valve, refuelling valve and non-return valve (For spares see AP.4515U, Vol. 3, Part 1)	4	—	C	QG1
27FR/2329	FLIGHT REFUELLING LTD. FRS.110/K/ Series 1	CONNECTOR , pipe, fitted at fuel junction between ribs Nos. 5 and 6, forward of main spar (For spares see AP.4515U, Vol. 3, Part 1)	1	—	C	QG1
27FR/2330	FLIGHT REFUELLING LTD. FRS.110/L/ Series 1	CONNECTOR , pipe, fitted at refuelling valve (For spares see AP.4515U, Vol. 3, Part 1) (Mod. 7)	1	—	C	QG1
12519	10-20 P 3387	CONNECTOR , terminator, recirculating pipe, at rib No. 4A, between main spar and rear spar	1	DTD.423	C	QG1 QG3
		Attachments for 10-20 P 3387, Connector :—				
3415	A25/5C/DHS.514/D	Bolt, 2 BA	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
28F/11099	AGS.1148/H	Nut, 1" BSP	1	—	C	
27QA/463	DOWTY SP.911A/2	Ring, sealing, "O" Type	1	—	C	QG3
3567	DHS.402/C	Seal, bonded	1	—	C	QG3
26FN/3285	DHS.180 Mk. 3/X	Tag, locking	1	S.510	C	QG3
12520	10-20 P 3369	Washer, distance	1	L.65	C	QG3
—	—	DIFFUSER , at transfer valves between ribs Nos. 6 and 7, group	2	—	—	
6604	DHS.400/14E	BOLT , 1/2" BSF, clamp securing	4	S.1	C	QG3
17303	10-20 P 3737ND	CLAMP , half	4	DTD.245	C	QG3
10273	10-20 P 1819	DIFFUSER	1	DTD.245	C	QG3
28M/10290	AGS.2001/E/1	NUT , 1/2" BSF, clamp securing	4	—	C	
27QA/429	DOWTY SP.910A/20	RING , sealing, "O" Type	2	—	C	
28W/9419405	SP.15/E	WASHER , clamp securing	4	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off						Material Specification	Class of Store or L.M.	Place No.
			1	2	3	4	5	6			
	—	ELECTRICAL COMPONENTS (See sub-sections "EBX" and "EBY")									
7468	10-20 P 1211	HOSE , fuel tank No. 3, between booster pump and junction, at rib No. 5, between main spar and front spar, Port, assembly	1					—	C	QG1	
7469	10-20 P 1213	HOSE , fuel tank No. 3, between booster pump and junction, at rib No. 5, between main spar and front spar, Starboard, assembly	1					—	C	QG1	
		Attachments for 10-20 P 1211 or 10-20 P 1213, Hose :—									
28F/12193	AGS.1105/K	Union, adapter	1					—	C		
28F/9439111	AGS.1186/K	Washer, sealing	1					—	C		
5646	10-20 P 2561	HOSE , fuel tank No. 4, between ribs Nos. 6 and 7 and loop pipe at fuel pump between main spar and rear spar	1					—	C	QG1	
		Attachments for 10-20 P 2561, Hose :—									
28F/11201	AGS.1103/K	Union, body	1					—	C		
28F/12087	AGS.1186/K	Washer, sealing	1					—	C		
	10-20 P 1823A/1	JUNCTION , fuel tank No. 3, between ribs Nos. 5 and 6, at main spar, Port, assembly	1					—	—	QG2	
	10-20 P 1824A/1	JUNCTION , fuel tank No. 3, between ribs Nos. 5 and 6, at main spar, Starboard, assembly	1					—	—	QG2	
6282	10-20 P 39	ADAPTER	1					DTD.423	C	QG2	
	10-20 P 2807	CAGE , non-return valve... ..	1					S.84	—	QG2	
26DL/2634	6 P 135	DISC , valve	1					DTD.423	C	QG2	
6277	10-20 P 2805	ELBOW , adapter, L.H.	1					DTD.424	C	QG2	
6278	10-20 P 2806	ELBOW , adapter, R.H.	1					DTD.424	C	QG2	
		Attachments for 10-20 P 2805 or 10-20 P 2806, Elbow :—									
6372	A26/2C/DHS.514/D	Bolt, 2 BA	8					—	C	QG3	
27QA/473	DOWTY SP.911A/12	Ring, sealing, "O" Type	1					—	C	QG2	
28VV/9419434	SP.10/C	Washer	8					—	C		
10269	10-20 P 1759A	JUNCTION , fuel, L.H., assembly	1					—	C	QG2	
10270	10-20 P 1760A	JUNCTION , fuel, R.H., assembly	1					—	C	QG2	
		Spares for :—									
28M/11957	AGS.2007/C/1	NUT , 2 BA	6					—	C		
28F/12193	AGS.1105/K	UNION , adapter... ..	1					—	C		
11060	10-20 P 3325A	VALVE , relief, assembly	1					—	C	QG1	
	10-20 P 3471	BODY , valve	1					L.65	—	QG2	
	10-20 P 3227	GUIDE , valve	1					L.65	—	QG2	
11064	10-20 P 3229	NUT	1					L.65	C	QG2	
11062	10-20 P 2407	SPRING	1					DTD.215	C	QG2	
14835	10-20 P 851	VALVE	1					S.110	C	QG2	
28F/1011903	AGS.1186/G	WASHER , sealing	1					—	C		
28F/8016813	AGS.1186/J	WASHER , sealing	1					—	C		
28F/9439111	AGS.1186/K	WASHER , sealing	1					—	C		
		Attachments for 10-20 P 1823A/1 or 10-20 P 1824A/1, Junction :—									
27QA/434	DOWTY SP.910A/26	Ring, sealing, "O" Type, at main spar	1					—	C	QG2	

SERVICES

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score or L.M	Place No.
5K/3390	AS.3360/B/3/B	LEAD , bonding, flexible	23	—	C	
28S/5799	A31/B6	Attachments for AS.3360/B/3/B, Lead (per pair) :—				
28W/9419448	AGS.2035/B	Screw, 4 BA	1	—	C	
		Washer, shakeproof	1	—	C	
5K/3372	AS.3360/B/5/C	LEAD , bonding, flexible, recirculating pipe terminator connector at rib No. 4A	1	—	C	
5K/3394	AS.3360/B/6/B	LEAD , bonding, flexible, at refuelling valve between ribs Nos. 5 and 6, forward of main spar and non-return valve, between ribs Nos. 5 and 6, aft of main spar	2	—	C	
5K/4454	AS.3360/B/10/B	LEAD , bonding, flexible, at refuelling valve, between ribs Nos. 5 and 6, forward of main spar	1	—	C	
		Attachments for AS.3360/B/6/B or AS.2260/B/10/B, Lead :—				
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	
28E/14310	AS.3181/20B	Clip, bonding, refuelling valve	1	—	C	
28E/14076	AS.3181/24B	Clip, bonding, non-return valve	2	—	C	
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	
28W/9419465	SP.13/B	Washer	1	—	C	
5K/3405	AS.3360/B/3/C	LEAD , bonding, flexible, at float valve mounting main spar pipe joint, between ribs Nos. 4A and 5, aft of main spar	1	—	C	
12528	10-20 P 1937	MOUNTING , float valve, between ribs Nos. 4A and 5, at main spar, Port	1	DTD.735	C	QG1
12529	10-20 P 1938	MOUNTING , float valve, between ribs Nos. 4A and 5, at main spar, Starboard	1	DTD.735	C	QG1
		Attachments for 10-20 P 1937 or 10-20 P 1938, Mounting :—				
28D/12533	A25/5C	Bolt, 2 BA	6	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	6	—	C	
27QA/469	DOWTY SP.911/A8	Ring, sealing, "O" Type	1	—	C	QG1
3567	DHS.402/C	Seal, bonded	6	—	C	QG1
28W/9419475	SP.15/C	Washer	6	—	C	
11065	10-20 P 3273	MOUNTING , relief valve, between ribs Nos. 5 and 6, aft of main spar	1	DTD.735	C	QG3
10271	10-20 P 1845A	MOUNTING , transfer valve and diffuser, at rib No. 6, aft of main spar, Port, assembly	1	—	C	QG3
10272	10-20 P 1889A	MOUNTING , transfer valve and diffuser, at rib No. 6, aft of main spar, Starboard, assembly	1	—	C	QG3
		Attachments for 10-20 P 1845A or 10-20 P 1889A, Mounting :—				
28D/9133011	A25/2C	Bolt, 2 BA	6	—	C	
28D/12533	A25/5C	Bolt, 2 BA	4	—	C	
	10-20 WE 5565	Bracket, 18 SWG	1	L.72	LM	QG3
28M/10288	AGS.2001/C/1	Nut, 2 BA	6	—	C	
27QA/428	DOWTY SP.910A/19	Ring, sealing, "O" Type	2	—	C	QG3
3567	DHS.402/C	Seal, bonded	4	—	C	QG3
28W/9419475	SP.15/C	Washer	8	—	C	
28W/9419404	SP.16/C	Washer	2	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score or LM	Plate No.
10268	10-20 P 1829A	MOUNTING , transfer valve and diffuser, at rib No. 6, forward of main spar, assembly	1	—	C	QG3
28D/12533	A25/5C	Attachments for 10-20 P 1829A, Mounting :—				
27QA/428	DOWTY SP.910A/19	Bolt, 2 BA	4	—	C	
28W/9419475	SP.15/C	Ring, sealing, "O" Type	2	—	C	QG3
		Washer	4	—	C	
12524	10-20 P 3529A/ND	PIPE , between float valve mounting between ribs Nos. 4A and 5 and non-return valve at rib No. 5, between main spar and front spar, Port (Pre Mod. 7)	1	—	C	QG1
12541	10-20 P 1967ND	PIPE , between float valve mounting between ribs Nos. 4A and 5 and non-return valve at rib No. 5, between main spar and front spar, Port (Mod. 7)	1	—	C	QG1
12525	10-20 P 3530A/ND	PIPE , between float valve mounting between ribs Nos. 4A and 5 and non-return valve at rib No. 5, between main spar and front spar, Starboard (Pre Mod. 7)	1	—	C	QG1
12543	10-20 P 1968ND	PIPE , between float valve mounting between ribs Nos. 4A and 5 and non-return valve at rib No. 5, between main spar and front spar, Starboard (Mod. 7)	1	—	C	QG1
6283	10-20 P 935ND	PIPE , between fuel junction between ribs Nos. 5 and 6 and rotary joint at rib No. 4A, forward of main spar, Port	1	—	C	QG1
6284	10-20 P 936ND	PIPE , between fuel junction between ribs Nos. 5 and 6 and rotary joint at rib No. 4A, forward of main spar, Starboard	1	—	C	QG1
12526	10-20 P 1945A/ND	PIPE , between non-return valve and jettisonable tank feed connection at rib No. 5, Port, assembly (Pre Mod. 7)	1	—	C	QG1
12527	10-20 P 1946A/ND	PIPE , between non-return valve and jettisonable tank feed connection at rib No. 5, aft of front spar, Starboard, assembly (Pre Mod. 7)	1	—	C	QG1
12522	10-20 P 1941A/ND	PIPE , between refuelling valve and branch pipe at jettisonable tank feed connection between ribs Nos. 5 and 6, forward of main spar, Port, assembly (Pre Mod. 7)	1	—	C	QG1
12542	10-20 P 1961A/ND	PIPE , between refuelling valve and branch pipe at jettisonable tank feed connection between ribs Nos. 5 and 6, forward of main spar, Port, assembly (Mod. 7)	1	—	C	QG1
12523	10-20 P 1942A/ND	PIPE , between refuelling valve and branch pipe at jettisonable tank feed connection, between ribs Nos. 5 and 6, forward of main spar, Starboard, assembly (Pre Mod. 7)	1	—	C	QG1

SERVICES

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Plate No.
12544	10-20 P 1962A/ND	PIPE , between refuelling valve and branch pipe at jettisonable tank feed connection, between ribs Nos. 5 and 6, forward of main spar, Starboard, assembly (Mod. 7)	1	—	C	QG1
		Attachments for 10-20 P 1961A/ND, 10-20 P 1941A/ND, 10-20 P 1962A/ND or 10-20 P 1942A/ND, Pipe :—				
28D/12513	A25/2C	Bolt, 2 BA	1	—	C	
12521	DUNLOP DAS.185/10 OR	Clip	1	—	C	
28E/9128270	AS.2080/10	Clip	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
28W/9419475	SP.15/C	Washer	1	—	C	
11066	10-20 P 3481A/ND	PIPE , between adapter at main spar and non-return valve between ribs Nos. 5 and 6, tank No. 4, Port, assembly	1	—	C	QG1
11067	10-20 P 3482A/ND	PIPE , between adapter at main spar and non-return valve between ribs Nos. 5 and 6, tank No. 4, Starboard, assembly	1	—	C	QG1
		Attachments for 10-20 P 3481A/ND or 10-20 P 3482A/ND, Pipe :—				
28D/1010030	A25/7C	Bolt, 2 BA	6	—	C	
27QA/471	DOWTY SP.911A/10	Ring, sealing, "O" Type	1	—	C	QG1
3567	DHS.402/C	Seal, bonded	6	—	C	QG1
10274	10-20 P 1779A/ND	PIPE , between transfer valve at rib No. 6 and fuel junction, forward of main spar, tank No. 3, Port, assembly	1	—	C	QG1
10275	10-20 P 1780A/ND	PIPE , between transfer valve at rib No. 6 and fuel junction, forward of main spar, tank No. 3, Starboard, assembly	1	—	C	QG1
6260	10-20 P 2769A	PIPE , loop, at fuel pump in tank No. 4, between ribs Nos. 5 and 7, aft of main spar, Port, assembly	1	—	C	QG1
16187	10-20 P 4143A	PIPE , loop, at fuel pump in tank No. 4, between ribs Nos. 5 and 7, aft of main spar, Starboard, assembly	1	—	C	QG1
		Attachments for 10-20 P 2769A or 10-20 P 4143A, Pipe :—				
27F/12193	AGS.1105/K	Union, adapter	1	—	C	
28F/9439111	AGS.1186/K	Washer, sealing	1	—	C	
12517	10-20 P 3345ND	PIPE , recirculating, between ribs Nos. 4A and 5 from float valve mounting, at main spar to terminator connector on rib No. 4A, aft, between main spar and rear spar, Port	1	—	C	QG1
12518	10-20 P 3346ND	PIPE , recirculating, between ribs Nos. 4A and 5 from float valve mounting, at main spar to terminator connector on rib No. 4A, aft, between main spar and rear spar, Starboard	1	—	C	QG1

SERVICES

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Plate No.
10278	10-20 P 1789A/ND	PIPE , between transfer valve, at rib No. 6 and branch pipe off pipe between junction and non-return valve, aft of main spar, Port, assembly	1	—	C	QG1
10279	10-20 P 1790A/ND	PIPE , between transfer valve at rib No. 6 and branch pipe off pipe between junction and non-return valve, aft of main spar, Starboard, assembly	1	—	C	QG1
---	---	PUMP , fuel booster, No. 3 tank Port, and No. 4 tank Starboard, at manhole covers, group (Drg. Nos. 10-20 P 2219A and 10-20 P 2915A)	1	—	—	---
3646	10-20 P 2437A	MOUNTING , pump, assembly Spares for :—	1	—	P	LH19
3641	10-20 P 2441ND	PIN , stud retaining	4	S.110	C	LH19
3639	10-20 P 2443	STUD	2	S.80	C	LH19
3640	10-20 P 2445	STUD	2	S.80	C	LH19
5UE/6880	SELF PRIMING PUMPS SPE.802B/Mk. 3	PUMP , fuel booster (Mod. 979) Attachments for SPE.802B/Mk. 3, Pump :—	1	—	P	QG1
28M/10299	AGS.2001/E/2	Nut, 1/4" BSF	2	—	C	---
12168	10-20 P 1971	Nut, reach	2	S.80	C	QG1
28W/9436801	SP.11/E	Washer	2	—	C	---
28W/9419405	SP.15/E	Washer	2	—	C	---
28W/3099	AGS.162/D	Washer, spring	2	—	C	---
3642	10 N 915	RING , sealing	1	DHA.60/2	C	LH19
---	---	PUMP , fuel booster, No. 4 tank Port, and No. 3 tank Starboard, at manhole covers, group (Drg. Nos. 10-20 P 2913A and 10-20 P 2221A)	1	—	—	---
3638	10-20 P 2439A	MOUNTING , pump, assembly Spares for :—	1	—	P	LH19
3641	10-20 P 2441ND	PIN , stud retaining	4	S.110	C	LH19
3639	10-20 P 2443	STUD	2	S.80	C	LH19
3640	10-20 P 2445	STUD	2	S.80	C	LH19
5UE/6880	SELF PRIMING PUMPS SPE.802B/Mk. 3	PUMP , fuel booster (Mod. 979) Attachments for SPE.802B/Mk. 3, Pump :—	1	—	P	QG1
28M/10299	AGS.2001/E/2	Nut, 1/4" BSF	2	—	C	---
12168	10-20 P 1971	Nut, reach	2	S.80	C	QG1
28W/9436801	SP.11/E	Washer	2	—	C	---
28W/9419405	SP.15/E	Washer	2	—	C	---
28W/3099	AGS.162/D	Washer, spring	2	—	C	---
3642	10 N 915	RING , sealing	1	DHA.60/2	C	LH19
27QA/428	DOWTY SP.910A/19	RING , sealing, "O" Type, pipe between transfer valve at rib No. 6 and junction, forward of main spar or between junction, and non-return valve aft of main spar	2	—	C	QG1
28F/10754	AGS.1168/C	UNION , elbow, secured to adapter on rib No. 4A, between front and main spars for connection of fuel pump electrical connector	1	—	C	---

SERVICES

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or LM	Place No.
27F/2990	SELF PRIMING PUMPS SPE.14870	VALVE , float, Type UTV.1125.S. Mk. 1A, between ribs Nos. 4A and 5, forward of main spar, coded "SL," Port and "KL," Starboard (Pre Mod. 922)	1	—	P	QG1
27F/5230	OR SELF PRIMING PUMPS SPE.13552	VALVE , float, Type UTV.1125.S. Mk. 2, between ribs Nos. 4A and 5, forward of main spar, coded "SL," Port and "XL," Starboard (Pre Mod. 922)	1	—	P	QG1
27F/5521	SELF PRIMING PUMPS SPE.	VALVE , float, Type UTV.1125.S. Mk. 1B, between ribs Nos. 4A and 5, forward of main spar, coded "SL," Port and "XL," Starboard (Mod. 922)	1	—	P	QG1
27F/5370	OR SELF PRIMING PUMPS SPE.	VALVE , float, Type UTV.1125.S. Mk. 2A, between ribs Nos. 4A and 5, forward of main spar, coded "SL," Port and "XL," Starboard (Mod. 922)	1	—	P	QG1
28D/7002428	A25/6C	Bolt, 2 BA	6	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	6	—	C	
27QA/430	DOWTY SP.910/A22	Ring, sealing, "O" Type	1	—	C	QG1
28W/9419476	SP.15/C	Washer	6	—	C	
27FR/3432	FLIGHT REFUELLING LTD. 9807100/2	VALVE , non-return, fitted in pipe line between ribs Nos. 4A and 5 aft of front spar, from jettisonable tank feed connection to float valve mounting at main spar, Port (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1
	—	VALVE , non-return, tank No. 4, fitted in pipe line between ribs Nos. 5 and 6, aft of main spar, group	1	—	—	
27FR/2325	FLIGHT REFUELLING LTD. FRS.73/K	COLLAR , split, assembly	1	—	C	QG3
27FR/2329	FLIGHT REFUELLING LTD. FRS.110/K/ Series 1	CONNECTOR , pipe (For spares see AP.4515U, Vol. 3, Part 1)	1	—	C	QG3
27FR/2433	FLIGHT REFUELLING LTD. FRS.151/K/ Series 1	SEAL , rubber	1	—	C	QG3
27FR/2434	FLIGHT REFUELLING LTD. FRS.152/K/ Series 1	SLEEVE , outer	1	—	C	QG3
27FR/	FLIGHT REFUELLING LTD. 9807100/3	VALVE , non-return (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1

FUEL SYSTEM IN EXTENSION WING (PRE MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Place No.
	—	VALVE , refuelling, at junction between ribs Nos. 5 and 6, forward of main spar, group	1	—	—	
27FR/2479	FLIGHT REFUELLING LTD. FRS.73/J	COLLAR , split	1	—	C	QG3
27FR/3006	FLIGHT REFUELLING LTD. FRS.151/J/ Series 1	SEAL , rubber	1	—	C	QG3
27FR/3180	FLIGHT REFUELLING LTD. FRS.152/J	SLEEVE , outer	1	—	C	QG3
27FR/3422	FLIGHT REFUELLING LTD. 1117000/4B	VALVE , refuelling, Mk. 17, Series 4B, coded "SF," Port and "XF," Starboard (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1
11061	10-20 P 3327A	VALVE , relief, between ribs Nos. 5 and 6, aft, assembly	1	—	P	QG1
	10-20 P 3471	BODY	1	L.65	—	QG2
	10-20 P 3227	GUIDE	1	L.65	—	QG2
11064	10-20 P 3229	NUT	1	L.65	C	QG2
11063	10-20 P 161	SPRING	1	DTD.215	C	QG2
14835	10-20 P 851	VALVE	1	S.110	C	QG2
28F/1011903	AGS.1186/G	Attachments for 10-20 P 3327A, Valve :— Washer, sealing	1	—	C	
27FR/30194	FLIGHT REFUELLING LTD. 3610050	VALVE , transfer, Mk. 10, between ribs Nos. 6 and 7, aft and forward of main spar, tank No. 3, coded "SP," Port and "XR," Starboard; tank No. 4, coded "SP," Port and "XR," Starboard (Mod. 1096) (For spares see AP.4515U, Vol. 3, Part 1)	2	—	P	QG1
27F/5384	SELF PRIMING PUMPS SPE.2586	VALVE , thermal relief, Type 250/4, Mk. 1, mounted in jettisonable tank feed connector, at rib No. 5, aft of front spar	1	—	P	QG1
28F/8215	AGS.1138/B	Attachments for SPE.2586, Valve :— Washer, jointing	1	—	C	
	—	REVERSED DRAIN FUEL PUMPS INSTALLATION PORT AND STARBOARD (Drg. No. 10-20 P 8381) (Spares identical to Mod. 2 Installation, See page QG21)	1	—	—	QG5
	—	VENTING SYSTEM IN TANKS Nos. 3 AND 4, PORT AND STARBOARD (Drg. No. 10-20 P 3615) (Spares identical to Mod. 2 Installation. See page QG23)	1	—	—	QG4

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Place No.
	—	FUEL SYSTEM IN EXTENSION WING ...	1	—	—	
	—	FUEL FEED AND REFUELLING SYSTEM IN TANKS Nos. 3 and 4, PORT (Drg. Nos. 10-20 P 1253 and 10-20 P 3623)	1	—	—	QG1A
	—	FUEL FEED AND REFUELLING SYSTEM IN TANKS Nos. 3 AND 4, STARBOARD (Drg. Nos. 10-20 P 1253 (Mod. 2) and 10-20 P 3623)	1	—	—	QG1G
6262	10-20 P 2789	ADAPTER , fuel hose and relief valve mounting, tank No. 4, at rib No. 6, aft of main spar, Port	1	—	C	QG3
6263	10-20 P 2791	ADAPTER , fuel hose and relief valve mounting, tank No. 4, at rib No. 6, aft of main spar, Starboard	1	—	C	QG3
		Attachments for 10-20 P 2789 or 10-20 P 2791, Adapter :—				
28D/9133012	A25/3C	Bolt, 2 BA	3	—	C	
28D/1200119	A25/4C	Bolt, 2 BA	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	4	—	C	
26FC/11120	DHS.180.Mk. 7/X	Tag, locking	1	—	C	QG3
28W/9419475	SP.15/C	Washer	4	—	C	
14808	10-20 P 1539	ADAPTER , secured to rib No. 4A, between front and main spars and to rib No. 8, between main and rear spars for connection of fuel pump electrical connectors	2	—	C	QG1A QG1B QG3
14812	10-20 P 1541A/1	ADAPTER , secured to front spar, between ribs Nos. 5 and 6, for connection of refuelling and jettison valve electrical connectors, Starboard	1	—	C	QG1B QG3
6255	10-20 P 2989	ADAPTER , secured to front spar between ribs Nos. 5 and 6, Port, to rib No. 8, between main and rear spars, Port Starboard, and to rib No. 4A, between front and main spars Starboard, for connection of refuelling and transfer valve electrical connectors	2	—	C	QG1A QG1B QG3
6257	10-20 P 2851A	ADAPTER , secured to rib No. 8, forward of main spar, for connection of transfer valve electrical connector	1	—	C	QG1A QG1B
		Attachments for 10-20 P 1539, 10-20 P 1541A/1, 10-20 P 2989 or 10-20 P 2851A, Adapter :—				
28D/1200119	A25/4C	Bolt, 2 BA	4	—	C	
28D/9436769	A26/4C	Bolt, 2 BA, at rib No. 4A, Starboard	4	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	4	—	C	
28M/10298	AGS.2001/C/2	Nut, 2 BA, at rib No. 4A, Starboard	4	—	C	
27QA/533	DOWTY SP.916/20	Ring, sealing, "O" Type	1	—	C	QG3
6256	10 P 421	Ring, seal, at rib No. 4A, Starboard	1	—	C	QG3
26DL/5456	DHS.402/C	Seal, bonded	4	—	C	QG3
13095	DHS.180.Mk. 3/Z	Tag, locking	1	—	C	QG3
28W/9419475	SP.15/C	Washer	3	—	C	
16237	10-20 P 3995	BRACKET , attachment, refuelling valve mounting clip at rib No. 4A, Starboard (Mod. 655)	1	—	C	QG1B
		Attachments for 10-20 P 3995, Bracket :—				
28D/1011466	A26/3C	Bolt, 2 BA	2	—	C	
28M/10298	AGS.2001/C/2	Nut, 2 BA	2	—	C	
26DL/5456	DHS.402/C	Seal, bonded	2	—	C	
28W/9419475	SP.15/C	Washer	2	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Place No.
28E/1012874	AS.3181/16B	CLIP , bonding, terminator connector between main spar and rear spar at rib No. 4A	1	—	C	
28E/14310	AS.3181/20B	CLIP , bonding, float valve mounting, between ribs Nos. 4A and 5, at main spar and refuelling valve between ribs Nos. 5 and 6, forward of main spar	2	—	C	
		Attachments for AS.3181/16B or AS.3181/20B, Clip :—				
28D/1010658	A25/1B	Bolt, 4 BA	1	—	C	
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	
28W/9419465	SP.13/B	Washer, at float valve mounting	1	—	C	
	DHS.31/62	CLIP , pipe, securing thermal relief valve to jettisonable tank feed, at rib No. 5, aft of main spar, 1 3/8" i/d x 20 SWG	1	5.84	LM	
		Attachments for DHS.31/62, Clip :—				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	
28M/10328	AGS.2002/C/1	Nut, 2 BA	1	—	C	
13095	DHS.180.Mk. 3/Z	Tag, locking	1	—	C	
	10-20 P 4003ND	CLIP , support, jettisonable tank feed connection at rib No. 5, support strut No. 1, 1 1/4" o/d	1	5.84	LM	QB1A QG1B
		Attachments for 10-20 P 4003ND, Clip :—				
28D/9133011	A25/2C	Bolt, 2 BA	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
28W/9419475	SP.15/C	Washer	1	—	C	
27FR/2327	FLIGHT REFUELLING LTD. FRS.110/H/ Series 1	CONNECTOR , pipe, fitted at transfer valve, float valve, non-return valve and refuelling valve (For spares see AP.4515U, Vol. 3, Part 1)	4	—	C	QG1A QG1B
27FR/2328	FLIGHT REFUELLING LTD. FRS.110/J/ Series 1	CONNECTOR , pipe, fitted at float valve, jettison valve, refuelling valve and non-return valve (For spares see AP.4515U, Vol. 3, Part 1)	4	—	C	QG1A QG1B
27FR/2329	FLIGHT REFUELLING LTD. FRS.110/K/ Series 1	CONNECTOR , pipe, fitted at relief valve and fuel junction (For spares see AP.4515U, Vol. 3, Part 1)	2	—	C	QG1A QG1B QG3
27FR/2330	FLIGHT REFUELLING LTD. VRS.110/L/ Series 1	CONNECTOR , pipe, fitted at refuelling valve and jettison feed connection	2	—	C	QG1A QG1B
12519	10-20 P 3387	CONNECTOR , terminator, recirculating pipe at rib No. 4A, between main spar and rear spar	1	—	C	QG1A QG1B QG3
		Attachments for 10-20 P 3387, Connector :—				
3415	A25/5C/DHS.514/D	Bolt, 2 BA	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
28F/9155154	AGS.1148/H	Nut, 1" BSP	1	—	C	
27QA/463	DOWTY SP.911A/2	Ring, sealing, "O" Type	1	—	C	QG3
26DL/5456	DHS.402/C	Seal, bonded	1	—	C	QG3
26FN/3285	DHS.180 Mk. 3X	Tag, locking	1	—	C	QG3
12520	10-20 P 3369	Washer, distance	1	—	C	QG3

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store of L.M	Plate No.
	—	DIFFUSER , at transfer valves between ribs Nos. 6 and 7, tanks Nos. 3 and 4, group	2	—	—	
6604	DHS.400/14E	BOLT , 1/4" BSF, clamp securing	4	—	C	QG3
17303	10-20 P 3737ND	CLAMP , half	4	—	C	QG3
10273	10-20 P 1819	DIFFUSER	1	—	C	QG3
28M/10290	AGS.2001/E/1	NUT , 1/4" BSF, clamp securing	4	—	C	
27QA/429	DOWTY SP.910A/20	RING , sealing "O" Type	2	—	C	QG3
28W/9419405	SP.15/5	WASHER , clamp securing	4	—	C	
	—	ELECTRICAL COMPONENTS (See sub-sections EBX and EBY)	—	—	—	
16190	10-20 P 4155	GUARD , fitted to jettisonable tank feed connection on bottom skin in way of fuel pump, Port only	1	—	C	QG1A
		Attachments for 10-20 P 4155, Guard :—				
28D/9436920	A25/1C	Bolt, 2 BA	2	—	C	
	DHS.31/55	Clip, 18 SWG	2	L.72	LM	QG1A
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	—	C	
28W/9419476	SP.15/C	Washer	2	—	C	
7468	10-20 P 1211	HOSE , fuel tank No. 3, between booster pump and fuel junction, at rib No. 5, between main spar and front spar, Port	1	—	C	QG1A
7469	10-20 P 1213	HOSE , fuel tank No. 3, between booster pump and fuel junction, at rib No. 5, between main spar and front spar, Starboard	1	—	C	QG1B
		Attachments for 10-20 P 1211 or 10-20 P 1213, Hose :—				
28F/12193	AGS.1105/K	Union, adapter	1	—	C	
28F/9439111	AGS.1186/K	Washer, sealing	1	—	C	
5646	10-20 P 2561	HOSE , fuel tank No. 4, between ribs Nos. 6 and 7 and loop pipe at fuel pump between main spar and rear spar	1	—	C	QG1A QG1B
		Attachments for 10-20 P 2561, Hose :—				
28F/11201	AGS.1103/K	Union, body	1	—	C	
28F/9439111	AGS.1186/K	Washer, sealing	1	—	C	
	10-20 P 3829A	JUNCTION , fuel tank No. 3, between ribs Nos. 5 and 6, at main spar, Port, assembly	1	—	—	QG2
	10-20 P 1821A/2	JUNCTION , fuel tank No. 3, between ribs Nos. 5 and 6, at main spar, Starboard, assembly	1	—	—	QG2
6282	10-20 P 39	ADAPTER , Port	1	—	C	QG2
	10-20 P 2807	CAGE , non-return valve	1	S.84	—	QG2
26DL/2634	6 P 135	DISC , valve	1	—	C	QG2
6277	10-20 P 2805	ELBOW , adapter, Port	1	—	C	QG2
6278	10-20 P 2806	ELBOW , adapter, Starboard	1	—	C	QG2
		Attachments for 10-20 P 2805 or 10-20 P 2806, Elbow :—				
28D/1011469	A26/6C	Bolt, 2 BA, Starboard	1	—	C	
6372	A26/2C/DHS.514/D	Bolt, 2 BA, Port	8	—	C	QG2
		Starboard	7	—	C	QG2
28M/10298	AGS.2001/C/2	Nut, 2 BA, Starboard	1	—	C	
27QA/473	DOWTY SP.911A/12	Ring, sealing, "O" Type	1	—	C	QG2
28W/9419434	SP.10/C	Washer, Port	8	—	C	
		Starboard	7	—	C	
28W/9419475	SP.15/C	Washer, Starboard	1	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Plate No.
10269	10-20 P 1759A	JUNCTION , fuel, Port, assembly ...	1	—	C	QG2
14811	10-20 P 1933A	JUNCTION , fuel, Starboard, assembly ...	1	—	C	QG2
28M/11957	AGS.2007/C/1	Spares for :— NUT , 2 BA ...	6	—	C	
28F/12193	AGS.1105/K	UNION , adapter... ..	1	—	C	
15001	10-20 P 3703A	VALVE , sequence, assembly ...	1	—	C	QG2
	10-20 P 3471	BODY , valve	1	L.65	—	QG2
	10-20 P 3227	GUIDE , valve	1	L.65	—	QG2
11064	10-20 P 3229	LOCKNUT	1	—	C	QG2
11062	10-20 P 2407	SPRING	1	—	C	QG2
14835	10-20 P 851	VALVE	1	—	C	QG2
28F/101903	AGS.1186/G	WASHER , sealing	1	—	C	
28F/8016813	AGS.1186/I	WASHER , sealing, Port	1	—	C	
28F/9439111	AGS.1186/K	WASHER , sealing	1	—	C	
27QA/434	DOWTY SP.910A/26	Attachments for 10-20 P 3829A or 10-20 P 1821A/2, Junction :— Ring, sealing "O" Type, at main spar ...	1	—	C	QG2
5K/3390	AS.3360/B/3/B	LEAD , bonding, flexible	23	—	C	
28S/1008152	A31/B6	Attachments for AS.3360/B/3/B, Lead (per pair) :— Screw, 4 BA	1	—	C	
28W/9419448	AGS.2035/B	Washer, shakeproof	1	—	C	
5K/3372	AS.3360/B/5/C	LEAD , bonding, flexible, recirculating pipe connector at rib No. 4A between main spar and rear spar	1	—	C	
5K/3394	AS.3360/B/6/B	LEAD , bonding, flexible, at refuelling valve, between ribs Nos. 5 and 6, forward of main spar	1	—	C	
5K/3414	AS.3360/B/9/B	LEAD , bonding, flexible, at non-return valve, between ribs Nos. 5 and 6, aft of main spar	1	—	C	
5K/4454	AS.3360/B/10/B	LEAD , bonding, flexible, refuelling valve, between ribs Nos. 5 and 6, forward of main spar	1	—	C	
28D/1010658	A25/1B	Attachments for AS.3360/B/6/B, AS.3360/B/9/B, or AS.3360/B/10/B, Lead :— Bolt, 4 BA	1	—	C	
28E/14310	AS.3181/20B	Clip, bonding, refuelling valve	1	—	C	
28E/1012875	AS.3181/24B	Clip, bonding, non-return valve	1	—	C	
28M/10287	AGS.2001/B/1	Nut, 4 BA	1	—	C	
28W/9419465	SP.13/B	Washer	1	—	C	
5K/3405	AS.3360/B/3/C	LEAD , bonding, flexible, at float valve mounting, main spar pipe joint, between ribs Nos. 4A and 5, aft of main spar	1	—	C	
12528	10-20 P 1937	MOUNTING , float valve, between ribs Nos. 4A and 5, at main spar, Port	1	—	C	QG1A
12529	10-20 P 1938	MOUNTING , float valve, between ribs Nos. 4A and 5, at main spar, Starboard	1	—	C	QG1B
28D/9133013	A25/5C	Attachments for 10-20 P 1937 or 10-20 P 1938, Mounting :— Bolt, 2 BA	6	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	6	—	C	
27QA/469	DOWTY SP.911A/8	Ring, sealing "O" Type	1	—	C	QG1A QG1B
26DL/5456	DHS 402/C	Seal, bonded	6	—	C	QG1A QG1B
28W/9419475	SP.15/C	Washer	6	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M.	Place No.
11065	10-20 P 3273	MOUNTING , relief valve, between ribs Nos. 5 and 6, aft of main spar	1	—	C	QG3
10271	10-20 P 1845A	MOUNTING , transfer valve and diffuser at rib No. 6 aft of main spar, Port	1	—	C	QG3
10272	10-20 P 1889A	MOUNTING , transfer valve and diffuser at rib No. 6, aft of main spar, Starboard	1	—	C	QG3
		Attachments for 10-20 P 1845A or 10-20 P 1889A, Mounting :—				
28D/9133011	A25/2C	Bolt, 2 BA	6	—	C	
28D/9133013	A25/5C	Bolt, 2 BA	4	—	C	
	10-20 WE 5565	Bracket, 18 SWG	1	L.72	LM	QG3
28M/10288	AGS.2001/C/1	Nut, 2 BA	6	—	C	
27QA/428	DOWTY SP.910A/19	Ring, sealing, "O" Type	2	—	C	QG3
26DL/5456	DHS.402/C	Seal, bonded	4	—	C	QG3
28W/9419475	SP.15/C	Washer	8	—	C	
28W/9419404	SP.16/C	Washer	2	—	C	
10268	10-20 P 1829A	MOUNTING , transfer valve and diffuser at rib No. 6, forward of main spar, assembly	1	—	C	QG3
		Attachments for 10-20 P 1829A, Mounting :—				
28D/9133013	A25/5C	Bolt, 2 BA	4	—	C	
27QA/428	DOWTY SP910A/19	Ring, sealing, "O" Type	2	—	C	QG3
28W/9419475	SP.15/C	Washer	4	—	C	
11066	10-20 P 3481A/ND	PIPE , between adapter at main spar and non-return valve, between ribs Nos. 5 and 6, tank No. 4, Port, assembly	1	—	C	QG1A
11067	10-20 P 3482A/ND	PIPE , between adapter at main spar and non-return valve, between ribs Nos. 5 and 6, tank No. 4, Starboard, assembly	1	—	C	QG1B
		Attachments for 10-20 P 3481A/ND or 10-20 P 3482A/ND, Pipe :—				
28D/1010030	A25/7C	Bolt, 2 BA	6	—	C	
27QA/471	DOWTY SP.911A/10	Ring, sealing, "O" Type	1	—	C	QG1A
26DL/5456	DHS.402/C	Seal, bonded	6	—	C	QG1A QG1B
6260	10-20 P 2769A	PIPE , loop, at fuel pump in tank No. 4, between ribs Nos. 6 and 7, between main spar and rear spar, Port (Pre Mod. 984)	1	—	C	QG1A
17154	10-20 P 8059A	PIPE , loop, at fuel pump in tank No. 4, between ribs Nos. 6 and 7, between main spar and rear spar, Port (Mod. 984)	1	—	C	QG1A
16187	10-20 P 4143A	PIPE , loop, at fuel pump in tank No. 3, between ribs Nos. 6 and 7, between main spar and rear spar, Starboard	1	—	C	QG1B
		Attachments for 10-20 P 2769A, 10-20 P 8059A or 10-20 P 4143A, Pipe :—				
27F/12193	AGS.1105/K	Union, adapter	1	—	C	
27F/9439111	AGS.1186/K	Washer, sealing	1	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score or L,M	Plate No.
12541	10-20 P 1967ND	PIPE, between float valve mounting, between ribs Nos. 4A and 5 and non-return valve at rib No. 5, aft of front spar, Port	1	—	C	QG1A
28D/9133011	A25/2C	Attachments for 10-20 P 1967ND, Pipe :—				
	10-20 P 3487A	Bolt, 2 BA	1	—	C	
	DUNLOP	Bracket, at rib No. 5, strut	1	—	—	QG1A
26FC/10289	DAS.185/20	Clip, attaching pipe to bracket	1	—	C	QG1A
	OR					
28E/17131	AS.2080/20	Clip, attaching pipe to bracket	1	—	C	QG1A
28E/9128961	AGS.605 Mk. 1	Clip, attaching bracket to strut	1	—	C	
	10-20 P 3527ND	Packing, bracket, cork, 1/32" thick	1	DTD.762	LM	QG1A
28W/9419402	SP.13/C	Washer	1	—	C	
14813	10-20 P 3643ND	PIPE, between ribs Nos. 4A and 5, forward, from float valve mounting to jettison valve, Starboard	1	—	C	QG1B
6283	10-20 P 935ND	PIPE, between fuel junction, between ribs Nos. 5 and 6 and rotary joint at rib No. 4A, forward of main spar, Port	1	—	C	QG1A
14817	10-20 P 3635A/ND	PIPE, between fuel junction, between ribs Nos. 5 and 6 and rotary joint at rib No. 4A, forward of main spar, Starboard	1	—	C	QG1B
16235	10-20 P 4049A/ND	PIPE, between ribs Nos. 5 and 6, forward of main spar, from refuelling valve to jettisonable tank feed connection, Port	1	—	C	QG1A
28D/9133011	A25/2C	Attachments for 10-20 P 4049A/ND, Pipe :—				
	DUNLOP	Bolt, 2 BA	1	—	C	
12521	DAS.185/10	Clip	1	—	C	
	OR					
28E/9428270	AS.2080/10	Clip	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
28W/9419475	SP.15/C	Washer	1	—	C	
14818	10-20 P 1261A/ND	PIPE, between ribs Nos. 5 and 6, forward of main spar from refuelling valve to branch pipe at jettisonable tank feed connection, Starboard	1	—	C	QG1B
10274	10-20 P 1779A/ND	PIPE, between transfer valve at rib No. 6, forward, and fuel junction forward of main spar, tank No. 3, Port	1	—	C	QG1A
10275	10-20 P 1780A/ND	PIPE, between transfer valve at rib No. 6, forward, and fuel junction forward of main spar, tank No. 3, Starboard	1	—	C	QG1B
12517	10-20 P 3345ND	PIPE, recirculating, between ribs Nos. 4A and 5, from float valve mounting at main spar to terminator connector at rib No. 4A, aft, between main spar and rear spar, Port	1	—	C	QG1A
12518	10-20 P 3346ND	PIPE, recirculating, between ribs Nos. 4A and 5, from float valve mounting at main spar to terminator connector at rib No. 4A, aft, between main spar and rear spar, Starboard	1	—	C	QG1B

SERVICES

FUEL SYSTEM IN EXTENSION WING (MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
10278	10-20 P 1789A/ND	PIPE , between transfer valve at rib No. 6 and branch pipe off pipe between junction and non-return valve, aft of main spar, Port	1	—	C	QG1A
10279	10-20 P 1790A/ND	PIPE , between transfer valve at rib No. 6 and branch pipe off pipe between junction and non-return valve, aft of main spar, Starboard	1	—	C	QG1B
16236	10-20 P 4043A/ND	PIPE , between ribs Nos. 4A and 5, forward, from branch pipe off jettisonable tank feed connection to refuelling valve at rib No. 4A, Starboard (Mod. 655)	1	—	C	QG1B
28D/9410652	A26/1C DUNLOP DAS.185/12 OR	Attachments for 10-20 P 4043A/ND, Pipe :— Bolt, 2 BA	1	—	C	
		Clip	1	—	C	
28E/9129076	AGS.2080/12 DUNLOP DAS.185/14 OR	Clip	1	—	C	
		Clip, refuelling valve electrical connector ...	1	—	—	
28E/17634	AGS.2080/14	Clip, refuelling valve electrical connector ...	1	—	C	
28M/9436836	AGS.2010/C/2	Nut, 2 BA	1	—	C	
28W/9419475	SP.15/C	Washer	1	—	C	
	—	PUMP , fuel booster, at manhole covers, No. 3 tank, Port, No. 4 tank, Starboard, group (Drg. Nos. 10-20 P 8067A and 10-20 P 8073A) (Mod. 984)	1	—	—	
SUE/—	SELF PRIMING PUMPS SPE.21426	ADAPTER , gland drain, Port, No. 4 (Mod. 1542)	1	—	P	
SUE/—	SELF PRIMING PUMPS SPE.21427	ADAPTER , gland drain, Starboard, No. 3 ... (Mod. 1542)	1	—	P	
		Attachments for SPE.21426 or SPE.21427, Adapter :—				
20986	G.K.N. No. ²⁰¹¹ 2100	Screw, Allen, 1/2" BSF	2	—	C	
SUE/—	SELF PRIMING PUMPS SPE.21483	GASKET , gland drain adapter (Mod. 1542) ...	1	—	P	
	—	MOUNTING , pump, assembly ... (See pages LH42 and LH45)	—	—	—	
SUE/—	SELF PRIMING PUMPS SPE.1302 Mk. 4	PUMP , fuel booster (Mod. 1542)	2	—	P	QG1A QG1B
		Attachments for SPE.1302 Mk. 4 Pump :—				
28M/10299	AGS.2001/E/2	Nut, 1/2" BSF	2	—	C	
12168	10-20 P 1971	Nut, reach	2	—	C	QG1A QG1B
28W/3099	AGS.162/D	Washer, spring	2	—	C	
28W/9436801	SP.11/E	Washer	2	—	C	
28W/9419405	SP.15/E	Washer	2	—	C	
3642	10 N 915	RING , seal	2	—	C	LH19

SERVICES

FUEL SYSTEM IN EXTENSION WING (MOD. 2)

Ref. No.	Part No.	Description	No. off						Material Specification	Class of Store or L.M	Place No.
			1	2	3	4	5	6			
	—	PUMP , fuel booster, at manhole covers, No. 3 tank, Starboard, No. 4 tank, Port, group (Org. Nos. 10-20 P 8069A and 10-20 P 8071A) (Mod. 984)						1	—	—	
5UE/—	SELF PRIMING PUMPS SPE.21426	ADAPTER , gland drain, Port, No. 3 (Mod. 1542)						1	—	P	
5UE/—	SELF PRIMING PUMPS SPE.21427	ADAPTER , gland drain, Starboard No. 4 ... (Mod. 1542)						1	—	P	
20986.	G.K.N. No. 2160 ²⁶⁴	Attachments for SPE.21426 or SPE.21427, Adapter:—									
5UE/—	SELF PRIMING PUMPS SPE.21483	Screw, Allen, 1/4" BSF ...						2	—	C	
5UE/—	SELF PRIMING PUMPS SPE.1302 Mk. 4	GASKET , gland drain adapter (Mod. 1542) ... MOUNTING , pump, assembly (See sub-section LH)						1	—	P	
		PUMP , fuel booster (Mod. 1542) ...						2	—	P	QG1A QG1B
28M/10299 12168	AGS.2001/E/2 10-20 P 1971	Attachments for SPE.1302 Mk. 4, Pump:— Nut, 1/2" BSF ... Nut, reach ...						2	—	C	
28W/3099 28W/9436801 28W/9419405	AGS.162/D SP.11/E SP.15/E	Washer, spring ... Washer ... Washer ...						2	—	C	QG1A QG1B
3642 27QA/428	10 N 915 DOWTY SP.910A/19	RING , sealing ... RING , sealing, "O" Type, pipe between transfer valve at rib No. 6 and junction forward of main spar or between junction and non-return valve aft of main spar						2	—	C	QG1A QG1B
28F/15484	AGS.1168/E	UNION , elbow, secured to adapter on rib No. 4A, between front and main spars for connection of fuel pump electrical connector						1	—	C	
27F/2990	SELF PRIMING PUMPS SPE.14870	VALVE , float, Type UTV.1125.S Mk. 1A, between ribs Nos. 4A and 5, forward of main spar, Starboard (Pre Mod. 922)						1	—	P	QG1A QG1B
27F/5230	OR SELF PRIMING PUMPS SPE.13552	VALVE , float, Type UTV.1125.S Mk. 2, between ribs Nos. 4A and 5, forward of main spar, Starboard (Pre Mod. 922)						1	—	P	QG1A QG1B
27F/5521	SELF PRIMING PUMPS SPE.	VALVE , float, Type UTV.1125.S Mk. 1B, between ribs Nos. 4A and 5, forward of main spar, Starboard (Mod. 922)						1	—	P	QG1A QG1B
27F/5370	OR SELF PRIMING PUMPS SPE.	VALVE , float, Type UTV.1125.S Mk. 2A, between ribs Nos. 4A and 5, forward of main spar, Starboard (Mod. 922)						1	—	P	QG1A QG1B
28D/9133013 28M/10288 27QA/430	A25/5C AGS.2001/C/1 DOWTY SP.910/A22	Attachments for SPE.14870, SPE.—, SPE.13552 or SPE.—, Valve:— Bolt, 2 BA ... Nut, 2 BA ... Ring, sealing, "O" Type ...						6	—	C	
28W/9419475	SP.15/C	Washer ...						6	—	C	QG1A QG1B

FUEL SYSTEM IN EXTENSION WING (MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
27FR/31817	FLIGHT REFUELLING 5202075	VALVE , jettison, Mk. 2, fitted in pipe line between ribs Nos. 4A and 5, forward of main spar, between pipe to jettisonable tank feed connection and pipe to float valve mounting at main spar, Starboard, coded "YS" (Mod. 1298) (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1B
	—	VALVE , non-return, tank No. 4, fitted in pipe line between ribs Nos. 5 and 6, aft of main spar, group	1	—	—	
27FR/2325	FLIGHT REFUELLING FRS.73/K	COLLAR , split, assembly	1	—	C	QG3
27FR/2329	FLIGHT REFUELLING FRS.110/K/Series 1	CONNECTOR , pipe (For spares see AP.4515U, Vol. 3, Part 1)	1	—	C	QG3
27FR/2433	FLIGHT REFUELLING FRS.151/K/Series 1	SEAL , rubber	1	—	C	QG3
27FR/2434	FLIGHT REFUELLING FRS.152/K/Series 1	SLEEVE , outer	1	—	C	QG3
27FR/3487	FLIGHT REFUELLING 9807100/3	VALVE , non-return (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1A QG1B
27FR/3432	FLIGHT REFUELLING 9807100/2	VALVE , non-return, fitted in pipe line between ribs Nos. 4A and 5, forward, from jettisonable tank feed connection and pipe to float valve mounting at main spar, Port (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1A
	—	VALVE , refuelling, at junction between ribs Nos. 5 and 6, forward of main spar, group	1	—	—	
27FR/2479	FLIGHT REFUELLING FRS.73/J	COLLAR , split	1	—	C	
27FR/3180	FLIGHT REFUELLING FRS.152/J/Series 1	SLEEVE , outer	1	—	C	
27FR/3006	FLIGHT REFUELLING FRS.157/J	SEAL , rubber	1	—	C	
27FR/3422	FLIGHT REFUELLING 1117000/4B	VALVE , refuelling, Mk. 17, series 4, coded "SF," Port and "XF," Starboard (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1A
27FR/4322	FLIGHT REFUELLING 1117000/7	VALVE , refuelling, Mk. 17, Series 7, secured to rib No. 4A, between front and main spars, Starboard (For spares see AP.4515U, Vol. 3, Part 1)	1	—	P	QG1B

SERVICES

FUEL SYSTEM IN EXTENSION WING (MOD. 2)

Ref. No.	Part No.	Description	No. off						Material Specification	Class of Store or L.M	Place No.
			1	2	3	4	5	6			
28D/1011466	A26/3C	Attachments for 1117000/7, Valve :—									
6605	DHS.400/15/E	Bolt, 2 BA						—	C		
14815	10-20 P 3755ND	Bolt, 1/4" BSF						—	C	QG1B	
	10-20 P 3997A	Clamp, half						—	C	QG1B	
	10-20 P 3999ND	Clip, assembly (Mod. 655)						—	—	QG1B	
	10-20 P 4001ND	Clip, 18 SWG						L.72	LM	QG1B	
28M/10298	AGS.2001/C/2	Packing, cork, 1/32" thick						DTD.762	LM	QG1B	
28M/10299	AGS.2001/E/2	Nut, 2 BA						—	C		
27QA/433	DOWTY SP.910A/25	Nut, 1/4" BSF						—	C		
26DL/7260	DHS.727/C16	Ring, sealing, "O" Type						—	C	QG1B	
28W/9419475	SP.15/C	Washer, support						—	C	QG1B	
28W/7000392	SP.14/E	Washer						—	C		
		Washer						—	C		
27FR/4323	FLIGHT REFUELLING 1118065	VALVE, refuelling, Mk. 18, Series 5, fitted in pipe-line between ribs Nos. 5 and 6, between pipe to jettisonable tank feed connection and pipe to fuel junction at main spar, Starboard (Pre Mod. 1456) (For spares see AP.4515U, Vol. 3, Part 1)						—	P	QG1B	
12026	DHS.180 Mk. 1/Z	Attachment for 1118065, Valve :—						—	C	QG1B	
		Tag, locking						—	C	QG1B	
27FR/3297	FLIGHT REFUELLING 1118100	VALVE, refuelling, Mk. 18, Series 5, fitted in pipe line between ribs Nos. 5 and 6, between pipe to jettisonable tank feed connection and pipe to fuel junction at main spar, Starboard (Pre Mod. 1456) (For spares see AP.4515U, Vol. 3, Part 1)						—	P	QG1B	
12026	DHS.180 Mk. 1/Z	Attachments for 1118100, Valve :—						—	C	QG1B	
		Tag, locking						—	C	QG1B	
15002	10-20 P 3701A	VALVE, sequence, between ribs Nos. 5 and 6, aft, assembly						—	P	QG1A QG1B	
	10-20 P 3471	BODY						L.65	—	QG3	
	10-20 P 3227	GUIDE						L.65	—	QG3	
11064	10-20 P 3229	LOCKNUT						—	C	CG3	
11063	10-20 P 161	SPRING						—	C	QG3	
14835	10-20 P 851	VALVE						—	C	QG3	
28F/1011903	AGS.1186/G	Attachments for 10-20 P 3701A, Valve :—						—	C		
		Washer, sealing						—	C		
27F/5384	SELF PRIMING PUMPS SPE.2586	VALVE, thermal relief, Type 250/4, Mk. 1, mounted in jettisonable tank feed connection on bottom skin						—	P	QG1A QG1B	
28F/8014021	AGS.1138/B	Attachments for SPE.2586, Valve :—						—	C		
		Washer, jointing						—	C		
27FR/30194	FLIGHT REFUELLING 3610050	VALVE, transfer, Mk. 10, between ribs Nos. 6 and 7, aft and forward of main spar, tank No. 3, coded "SP," Port and "XP," Starboard ; tank No. 4, coded "SR," Port and "XR," Starboard (Mod. 1096) (For spares see AP.4515U, Vol. 3, Part 1)						—	P	QG1A QG1B	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
	—	REVERSED DRAIN, FUEL PUMPS INSTALLATION, PORT (Drg. No. 10-20 P 8381) (Mod. 1116)	1	—	—	QG5
	—	REVERSED DRAIN, FUEL PUMPS INSTALLATION, STARBOARD (Drg. No. 10-20 P 8381) (Mod. 1116)	1	—	—	QG5
17219	10-20 P 8179A	ADAPTER , forward of main spar at rib No. 4A, assembly	1	—	C	QG5
17212	10-20 P 8379	BODY , banjo, double-ended, at rib No. 6 Attachments for 10-20 P 8379, Body :—	1	—	C	QG5
28F/9143383	AGS.1213/B	Bolt, banjo	1	—	C	
28F/8014021	AGS.1138/B	Washer, sealing	8	—	C	
17214	10-20 P 8307	BODY , union, on pipe along main spar Attachments for 10-20 P 8307, Body :—	1	—	C	QG5
28F/8011819	AGS.904/B	Nut, union	1	—	C	
28P/1006943	SP.9/C6	Pin, split	1	—	C	
28F/9439950	AGS.1140/B	Plug, nipple	1	—	C	
17213	10-20 P 8177A	FLANGE , at rib No. 4A, forward of main spar, assembly Attachments for 10-20 P 8177A, Flange :—	1	—	C	QG5
28D/1011336	A26/4B	Bolt, 4 BA	3	—	C	
	10-20 P 8377	Gasket, "Hallite," 1/32" thick	1	DTD.378	LM	QG5
28M/10280	AGS.2001/B/3	Nut	3	—	C	
28F/9433483	AGS.1186/2	Washer, sealing	3	—	C	
28W/9143227	SP.14/B	Washer	3	—	C	
17215	10-20 P 8197	HOSE , flexible, between fuel pump and banjo body at rib No. 6	1	—	C	QG5
17216	10-20 P 8199	HOSE , flexible, between fuel pump and adapter at rib No. 4A	1	—	C	QG5
28F/8011819	AGS.904/B	NUT , union, fitted on banjo body at rib No. 6	1	—	C	
28P/1006943	SP.9/C6	PIN , split, fitted on banjo body at rib No. 6	1	—	C	
17217	10-20 P 8171A/ND	PIPE , between adapter at rib No. 6 and union body at main spar, between ribs Nos. 5 and 6, Port	1	—	C	QG5
17218	10-20 P 8172A/ND	PIPE , between adapter at rib No. 6 and union body at main spar, between ribs Nos. 5 and 6, Starboard Attachments for 10-20 P 8171A/ND or 10-20 P 8172A/ND, Pipe :—	1	—	C	QG5
28D/1212939	A61/1C	Bolt, 2 BA	2	—	C	
28E/8018279	AS.3180/4C	Clip, "P"	2	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	—	C	
28W/9419475	SP.15/C	Washer	2	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
17221	10-20 P 8317A/ND	PIPE , between union body at main spar and adapter at rib No. 4A, forward of main spar, Port, assembly	1	—	C	QG5
17220	10-20 P 8319A/ND	PIPE , between union body at main spar and adapter at rib No. 4A, forward of main spar, Starboard, assembly	1	—	C	QG5
28D/1212939	A61/1C	Attachments for 10-20 P 8317A/ND or 10-20 P 8319A/ND, Pipe :— Bolt, 2 BA } To be fitted to clip Clip, "P" } brackets on main Nut, 2 BA } spar stiffeners	2	—	C	
28E/8018279	AGS.3180/4C		2	—	C	
28M/10288	AGS.2001/C/1		2	—	C	
17432	10-20 P 8399A	PIPE , between flexible hose and banjo body at rib No. 6	1	—	C	QG5
28F/9439950	AGS.1140/B	PLUG , nipple, fitted on banjo body at rib No. 6 RING , "O." sealing, fitted at adapter at rib No. 4A SEAL , bonded, at fuel pumps UNION , reducing, fitted between fuel pumps and flexible hose	1	—	C	QG5
27QA/423	DOWTY SP.910A/8		1	—	C	
28F/9428453	AGS.1186/B		2	—	C	
28F/9439164	AGS.1109/L		2	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
	—	VENTING SYSTEM , in tanks Nos. 3 and 4, Port (Drg. No. 10-20 P 3615)	1	—	—	QG4
	—	VENTING SYSTEM , in tanks Nos. 3 and 4, Starboard (Drg. No. 10-20 P 3615)	1	—	—	QG4
28F/8011809	AGS.1104/B	ADAPTER , pipe, secured to drain valve Attachments for AGS.1104/B, Adapter :—	1	—	C	
28F/9428453	AGS.1186/B	Seal, bonded	1	—	C	
27FR/3047	FLIGHT REFUELLING LTD. FRS.175/L/ Series 1	CONNECTOR , for 1½" o/d pipes (For spares see AP.4515U, Vol. 3, Part 1)	5	—	C	QG4
27FR/3001	FLIGHT REFUELLING LTD. FRS.175/K/ Series 1	CONNECTOR , for 1½" o/d pipes (For spares see AP.4515U, Vol. 3, Part 1)	6	—	C	QG4
	—	CONNECTOR , securing pipe along rib No. 8 forward, to three-way connector at main spar, group	1	—	—	
27FR/2523	FLIGHT REFUELLING LTD. FRS.73/L	COLLAR , split	1	—	C	QG4
27FR/3008	FLIGHT REFUELLING LTD. FRS.151/L/ Series 1	SEAL , rubber	1	—	C	QG4
27FR/3528 13524	FLIGHT REFUELLING LTD. FRS.152/L 10-20 P 3237	SLEEVE , outer	1	—	C	QG4
		CONNECTOR , three-way, secured to aft face of main spar adjacent to rib No. 8, at inter-connection of pipe and pen- dulum valve, Port	1	—	C	QG4
13525	10-20 P 3238	CONNECTOR , three-way, secured to aft face of main spar adjacent to rib No. 8, at inter-connection of pipes and pen- dulum valve, Starboard Attachments for 10-20 P 3237 or 10-20 P 3238, Connector :—	1	—	C	QG4
28D/1200119	A25/4C	Bolt, 2 BA	6	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	6	—	C	
27QA/479	DOWTY SP.911A/19	Ring, sealing, "O" Type	1	—	C	QG4
26DL/5456 13095	DHS.402/C DHS.180 Mk. 3/Z	Seal, bonded Tag, locking	6 1	— —	C C	QG4 QG4
28F/102798	AGS.1129/B	COUPLING , banjo body, secured to adapter on pipe at rib No. 8, aft of main spar, for drain valve pipe Attachments for AGS.1129/B, Coupling :—	1	—	C	
28F/9423227	AGS.1135/B	Bolt, banjo	1	—	C	
28F/9428453	AGS.1186/B	Seal, bonded	2	—	C	

SERVICES

FUEL SYSTEM IN EXTENSION WING

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Place No.
17709	AERO CONTROL AC.4030/28D	COUPLING , pipe between ribs Nos. 5 and 6, aft of main spar	1	—	C	QG4
15978	10-20 P 4191	FAIRLEAD , half, pipe, secured to rib No. 6 and front spar (Mod. 893)	2	—	C	QG4
28D/9133012	A25/3C	Attachments for 10-20 P 4191, Fairlead :—				
28M/10288	AGS.2001/C/1	Bolt, 2 BA	2	—	C	
		Nut, 2 BA	2	—	C	
15979	10-20 P 4193	FAIRLEAD , half, pipe, lower, secured to rib No. 6, aft of main spar (Mod. 893)	1	—	C	QG4
15980	10-20 P 4195	FAIRLEAD , half, pipe, upper, secured to rib No. 6, aft of main spar (Mod. 893)	1	—	C	QG4
		Attachments for 10-20 P 4193 or 10-20 P 4195, Fairlead :—				
28D/1200119	A25/4C	Bolt, 2 BA	2	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	—	C	
28W/9419404	SP.16/C	Washer	2	—	C	
15977	10-20 P 4189	FAIRLEAD , half, pipe, secured to rib No. 6, between main spar and rear spar (Mod. 893)	2	—	C	QG4
		Attachments for 10-20 P 4189, Fairlead :—				
28D/9133012	A25/3C	Bolt, 2 BA	2	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	—	C	
28W/9419475	SP.15/C	Washer	2	—	C	
5K/3390	AS.3360/B/3/B	LEAD , bonding, at pipe joints	17	—	C	
		Attachments for AS.3360/B/3/B, Lead (per pair):—				
28D/9464748	A26/3B	Bolt, 4 BA	3	—	C	
28M/10297	AGS.2001/B/2	Nut, 2 BA	3	—	C	
5K/3355	AS.3360/B/4/B	LEAD , bonding, at pendulum valve, three-way connector, and pipe joints	6	—	C	
		Attachments for AS.3360/B/4/B, Lead (per pair):—				
28D/9464748	A26/3B	Bolt, 4 BA	3	—	C	
28E/1012875	AS.3181/24B	Clip, bonding, at three-way connector only	1	—	C	
28E/9128959	AS.3181/28B	Clip, bonding, at three-way connector only	1	—	C	
28M/10297	AGS.2001/B/2	Nut, 2 BA	3	—	C	
28S/9435646	A35/B6	Screw, 4 BA, at pipe joint	1	—	C	
12572	10-20 P 1891ND	PIPE , along front spar, from joint inboard of rib No. 5 to termination at top skin outboard of rib No. 4A	1	—	C	QG4
6223	10-20 P 2399ND	PIPE , along front spar, to coupling inboard of rib No. 6	1	—	C	QG4
6227	10-20 P 2395A/ND	PIPE , along front spar, from joint inboard of rib No. 7 to pendulum valve at rib No. 8, Port	1	—	P	QG4
6228	10-20 P 2396A/ND	PIPE , along front spar, from joint inboard of rib No. 7 to pendulum valve at rib No. 8, Starboard	1	—	P	QG4
		Attachments for 10-20 P 1891ND, 10-20 P 2399ND, 10-20 P 2395A/ND or 10-20 P 2396A/ND, Pipe :—				
28D/9133011	A25/2C	Bolt, 2 BA	1	—	C	
	DUNLOP DAS.344/24	Clip, "P"	1	—		QG4
28M/10288	AGS.2001/C/1	Nut, 2 BA	1	—	C	
	DHS.783/5/22	Washer, 22 SWG	1	L72	LM	QG4

SERVICES

FUEL SYSTEM IN EXTENSION WING (MOD. 2)

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score or LM	Plate No.
6224	10-20 P 2401ND	PIPE , along front spar through rib No. 5	1	—	C	QG4
		Attachments for 10-20 P 2401ND, Pipe :—				
28D/9133011	A25/2C	Bolt, 2 BA	2	—	C	
	DUNLOP DAS.344/24	Clip, " P "	2	—	C	QG4
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	—	C	
	DHS.783/5/22	Washer, 22 SWG	2	L.72	LM	QG4
6222	10-20 P 2387ND	PIPE , along rib No. 8, forward of main spar, from pendulum valve to three-way connector, aft of main spar	1	L.56	C	QG4
13528	10-20 P 3473ND	PIPE , along main spar, from three-way connector, to coupling inboard of rib No. 7	1	DHA.63	C	QG4
13529	10-20 P 3249ND	PIPE , along main spar, from coupling inboard of rib No. 7 to coupling inboard of rib No. 6	1	DHA.63	C	QG4
13530	10-20 P 3251ND	PIPE , along main spar, from coupling inboard of rib No. 6 to coupling inboard of rib No. 5, Port	1	DHA.63	C	QG4
13531	10-20 P 3252ND	PIPE , along main spar, from coupling inboard of rib No. 6 to coupling inboard of rib No. 5, Starboard	1	DHA.63	C	QG4
		Attachments for 10-20 P 3249ND, 10-20 P 3251ND or 10-20 P 3252ND, Pipe :—				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	
28E/14239	AS.3181/24/C	Clip, " P "	1	—	C	
28M/10288	AGS.2001/C/1	Nut, 2 BA, at outboard clip	1	—	C	
28VV/9419475	SP.15/C	Washer	1	—	C	
13537	10-20 P 3537A/ND	PIPE , from coupling outboard of rib No. 5, aft of main spar, terminating at rib No. 4A, Port	1	—	C	QG4
13538	10-20 P 3538A/ND	PIPE , from coupling outboard of rib No. 5, aft of main spar, terminating at rib No. 4A, Starboard	1	—	C	QG4
		Attachments for 10-20 P 3537A/ND or 10-20 P 3538A/ND, Pipe :—				
28D/9436920	A25/1C	Bolt, 2 BA	1	—	C	
28D/9133011	A25/2C	Bolt, 2 BA	1	—	C	
	10-20 P 3417	Clip, " P," 18 SWG	1	L.72	LM	QG4
28M/10288	AGS.2001/C/1	Nut, 2 BA	2	—	C	
28VV/9419475	SP.15/C	Washer (fit additional washers under head of A25/2C, Bolt)	3	—	C	
13526	10-20 P 3245ND	PIPE , from coupling between ribs Nos. 6 and 7 to coupling outboard of rib No. 5, aft of main spar, Port	1	DHA.63	C	QG4
13527	10-20 P 3246ND	PIPE , from coupling between ribs Nos. 6 and 7 to coupling outboard of rib No. 5, aft of main spar, Starboard	1	DHA.63	C	QG4
13535	10-20 P 3239A/ND	PIPE , from pendulum valve on rib No. 8 to coupling between ribs Nos. 7 and 8, aft of main spar, Port	1	—	C	QG4
13536	10-20 P 3240A/ND	PIPE , from pendulum valve on rib No. 8 to coupling between ribs Nos. 7 and 8, aft of main spar, Starboard	1	—	C	QG4

SERVICES


FUEL SYSTEM IN EXTENSION WING (MOD. 2)

Ref. No.	Part No.	Description	No. off						Material Specification	Class of Store or L.M	Place No.
			1	2	3	4	5	6			
		Attachments for 10-20 P 3239A/ND or 10-20 P 3240A/ND, Pipe :—									
28D/9436920	A25/1C	Bolt, 2 BA	1					—	C		
28D/9133011	A25/2C	Bolt, 2 BA	1					—	C		
	10-20 P 3535	Clip, "P," at rib No. 7 support strut, 18 SWG	1					L.72	LM	QG4	
28E/14353	AS.3181/28C	Clip, "P," at rib No. 8	1					—	C		
28M/10288	AGS.2001/C/1	Nut, 2 BA	—					—	C		
		at rib No. 7, strut	2					—	—		
		at rib No. 8	1					—	—		
28W/9419475	SP.15/C	Washer (fit additional washer under bolt head at rib No. 7, strut)	3					—	C		
	DHS.727/C/16	Washer, at rib No. 8, 16 SWG	1					DTD.746	LM	QG4	
	10-20 P 3243ND	PIPE , drain, from drain valve between ribs Nos. 7 and 8, aft of main spar, Port	1					—	PC	QG4	
	10-20 P 3244ND	PIPE , drain, from drain valve between ribs Nos. 7 and 8, aft of main spar, Starboard	1					—	PC	QG4	
	10-20 P 2295A	VALVE , pendulum, secured to brackets on rib No. 8, assembly	2					—	—	QG4	
17204	10-20 P 2301A	ARM , pendulum, assembly	1					—	C	QG4	
		Spares for :—									
	DHS.419/1/C/87	BUSH	1					L.64	—	QG4	
		Attachments for 10-20 P 2301A, Arm :—									
28P/14771	SP.4Z/B19	Pin, shackle	1					—	C		
28P/1007741	SP.9/C8	Pin, split	1					—	C		
	10-20 P 2297A	BODY , valve, assembly	1					—	—	QG4	
		Spares for :—									
	DHS.418/1/C/21	BUSH	2					DTD.197	—	QG4	
	10-20 P 2337	SLEEVE	1					DTD.424	—	QG4	
6229	10-20 P 2305	SEAL , valve	1					P.T.F.E.	C	QG4	
		Attachments for 10-20 P 2305, Seal :—									
28M/10327	AGS.2002/B/1	Nut, 4 BA	1					—	C		
6411	DHS.783/4/18	Washer	1					—	C	QG4	
6231	10-20 P 3001	SPINDLE , valve	1					S.96	C	QG4	
		Attachments for 10-20 P 3001, Spindle :—									
28M/10287	AGS.2001/B/1	Nut, 4 BA	1					—	C		
28W/12664	SP.14/B	Washer	1					—	C		
6230	10-20 P 3003	SPRING , spindle valve compression	1					DTD.215	C	QG4	
		Attachments for 10-20 P 2295A, Valve :—									
28D/9133011	A25/2C	Bolt, 2 BA	2					—	C		
28M/10288	AGS.2001/C/1	Nut, 2 BA	2					—	C		

QG.1

**SERVICES
FUEL FEED SYSTEM IN
EXTENSION WING**

RESTRICTED

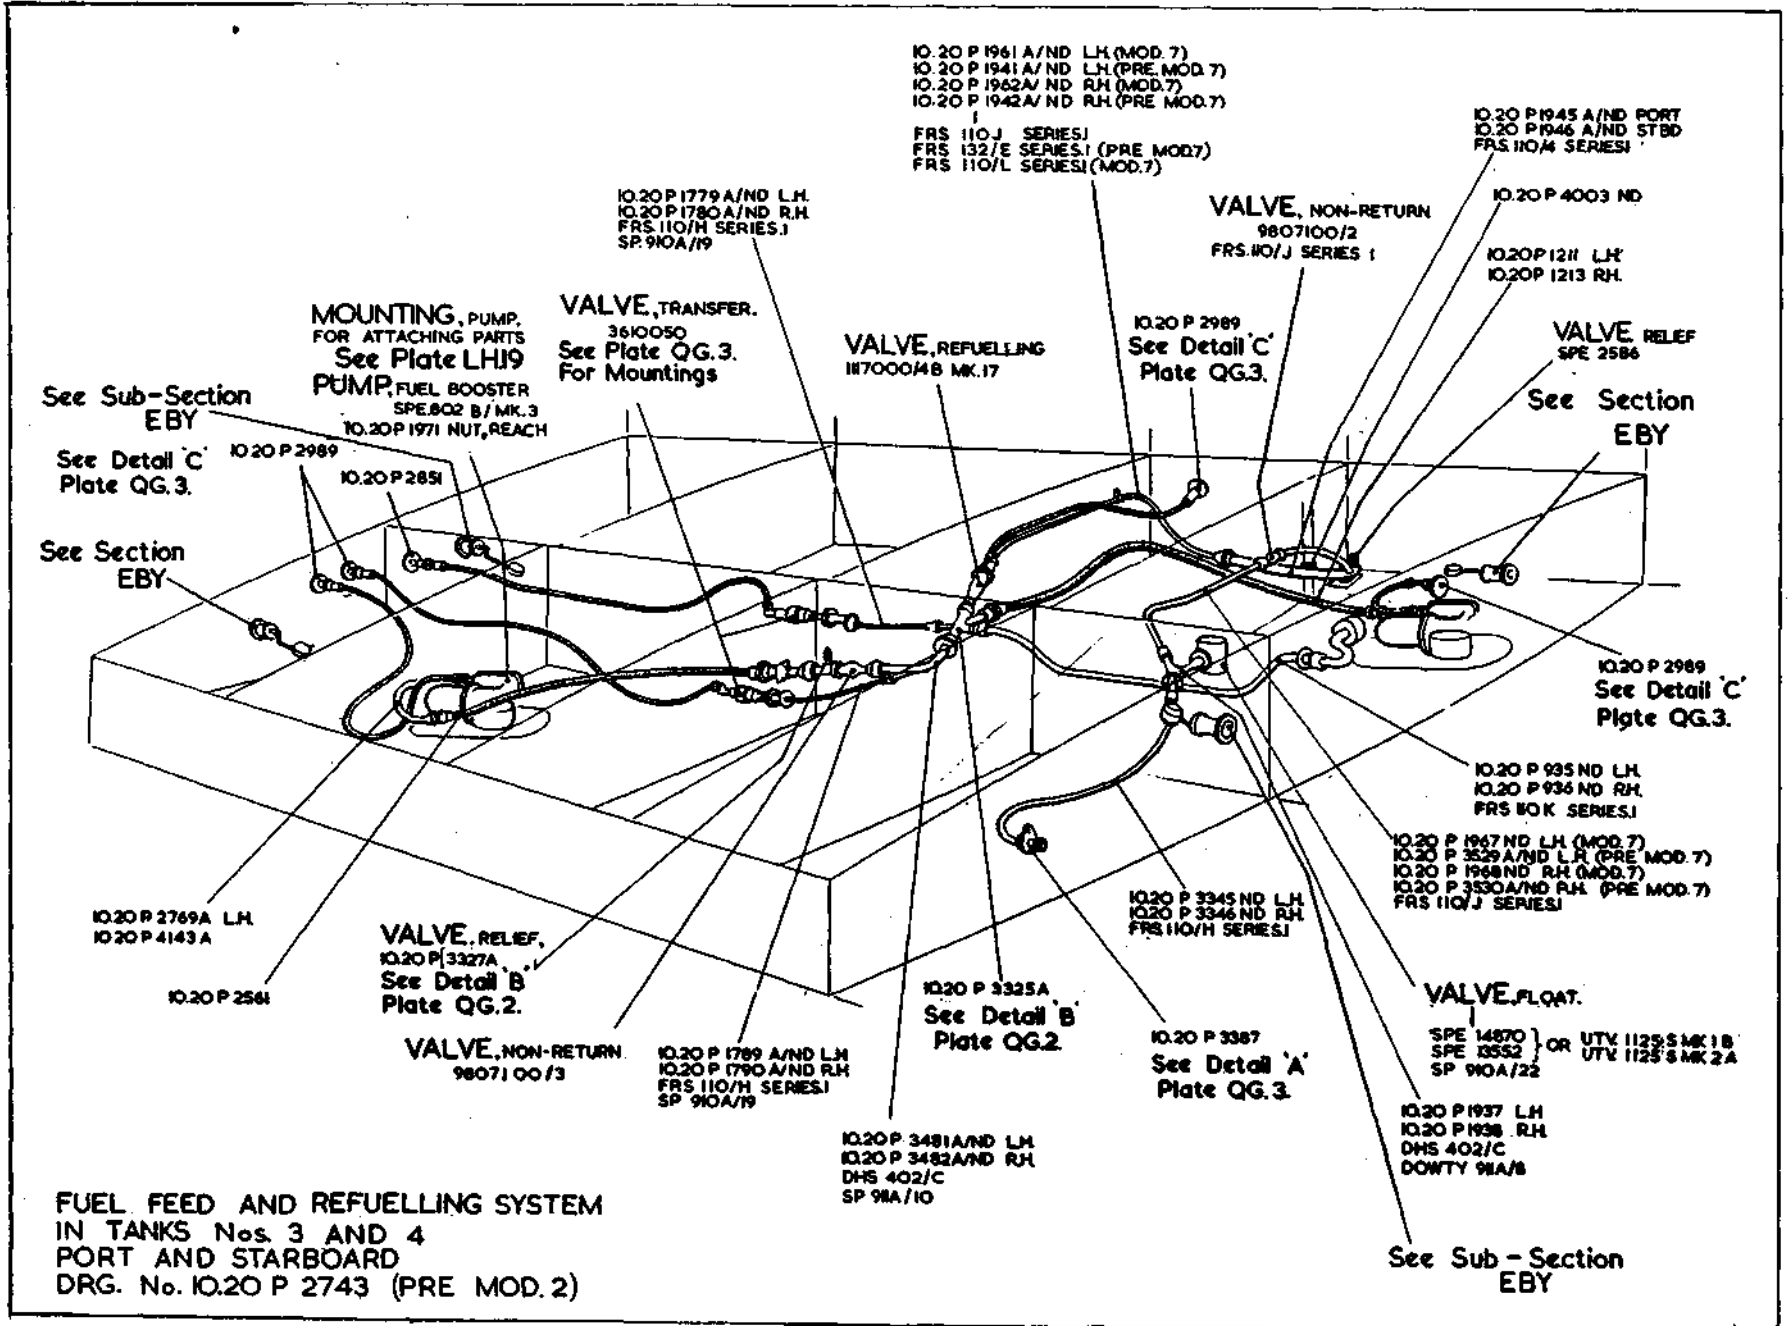

See View Mk.1

RESTRICTED


Page QG1

QG.1
VAL 801

**FUEL FEED AND REFUELLING SYSTEM
IN TANKS Nos. 3 AND 4 PORT
Drg. No.:- IO.20 P 1253 (MOD 2.)**

QG.1A
[Rev. 63]

Plate QG.1A

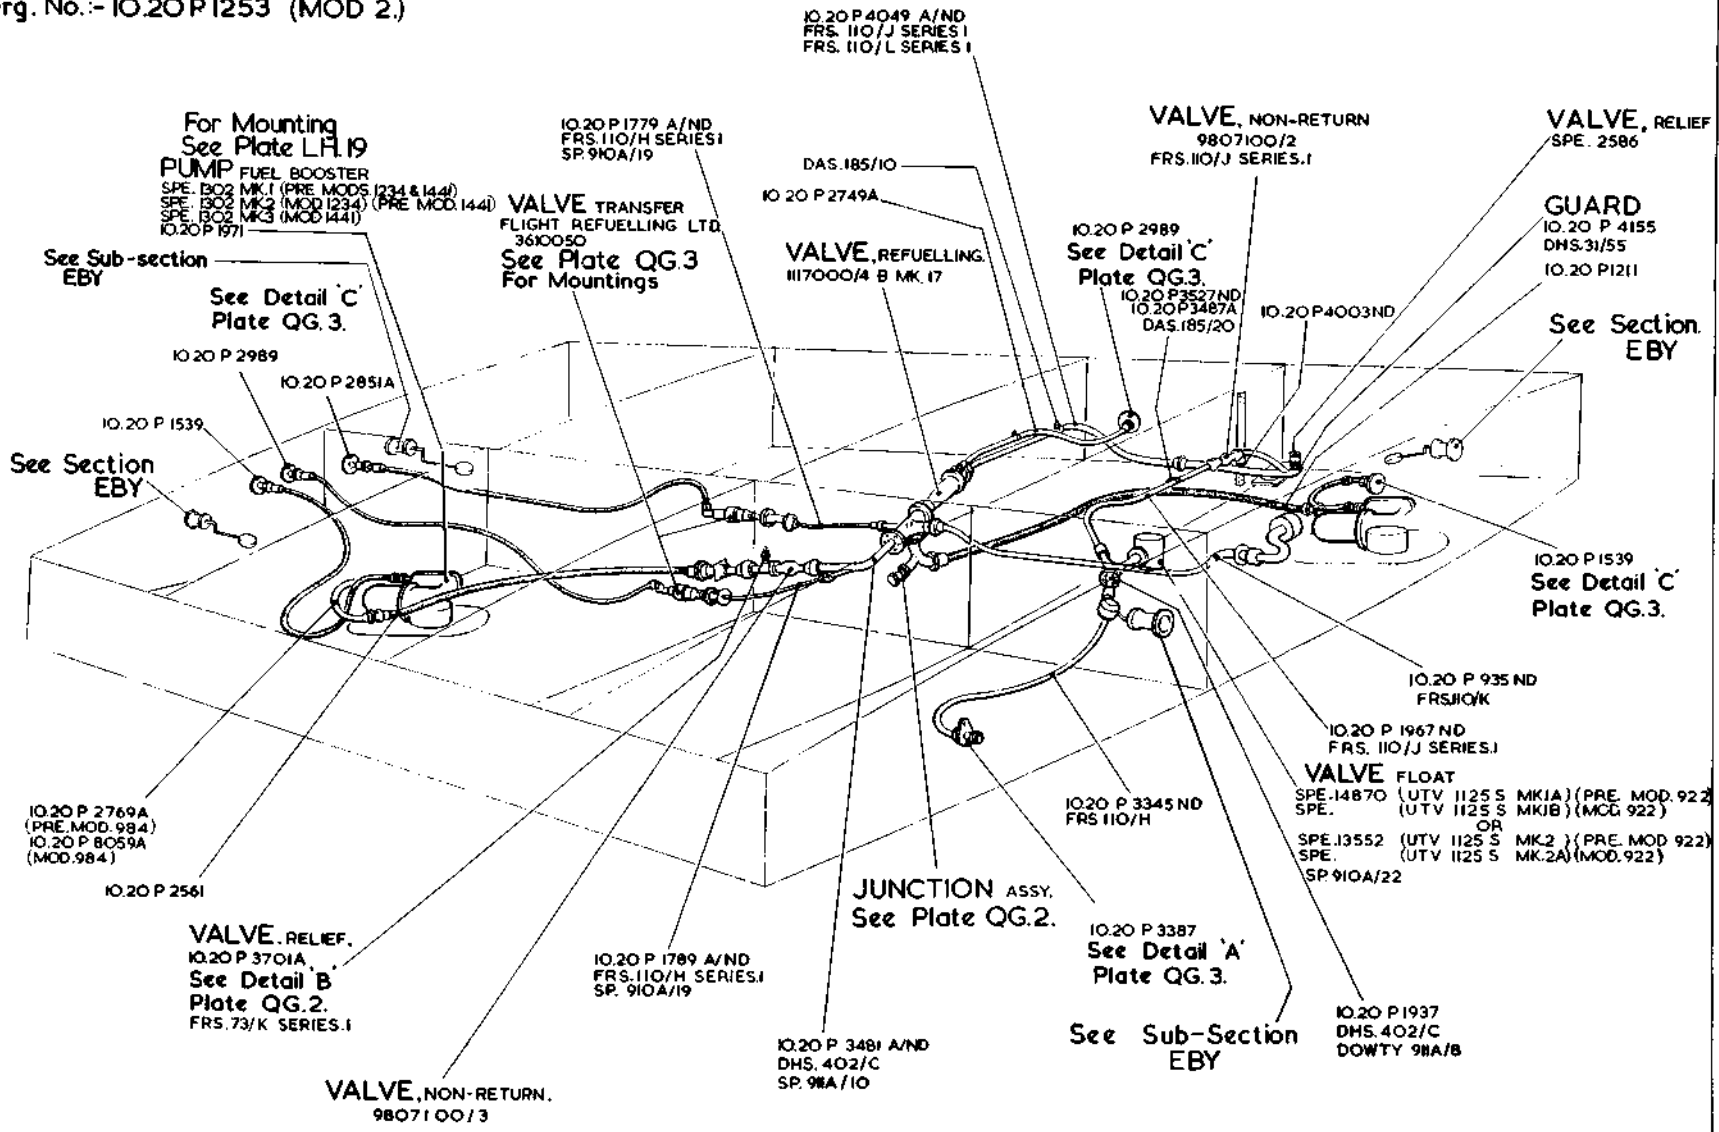

For Mounting
See Plate LH.19

PUMP FUEL BOOSTER
SPE. 1302 MK.1 (PRE. MOD. 1234 & 144)
SPE. 1302 MK.2 (MOD. 1234) (PRE. MOD. 144)
SPE. 1302 MK.3 (MOD. 144)
IO.20 P 1971

See Sub-section
EBY

See Detail 'C'
Plate QG.3.

IO.20 P 1779 A/ND
FRS. 110/H SERIES I
SP. 910A/19

**VALVE TRANSFER
FLIGHT REFUELLING LTD.**
3610050
See Plate QG.3
For Mountings

IO.20 P 4049 A/ND
FRS. 110/J SERIES I
FRS. 110/L SERIES I

DAS. 185/10

IO.20 P 2749A

VALVE, REFUELLING.
1117000/4 B MK. 17

VALVE, NON-RETURN
9807100/2
FRS. 110/J SERIES. I

VALVE, RELIEF
SPE. 2586

GUARD
IO.20 P 4155
DHS. 31/55
IO.20 P 1211

IO.20 P 2989
See Detail 'C'
Plate QG.3.

IO.20 P 3527ND
IO.20 P 3487A
DAS. 185/20

IO.20 P 4003ND

See Section
EBY

IO.20 P 2989

IO.20 P 2851A

IO.20 P 1539

See Section
EBY

IO.20 P 1539
See Detail 'C'
Plate QG.3.

IO.20 P 935 ND
FRS. 110/K

IO.20 P 1967 ND
FRS. 110/J SERIES. I

VALVE FLOAT
SPE. 14870 (UTV 1125 S MK.1A) (PRE. MOD. 922)
SPE. (UTV 1125 S MK.1B) (MOD. 922)
OR
SPE. 13552 (UTV 1125 S MK.2) (PRE. MOD. 922)
SPE. (UTV 1125 S MK.2A) (MOD. 922)
SP. 910A/22

IO.20 P 3345 ND
FRS. 110/H

JUNCTION ASSY.
See Plate QG.2.

IO.20 P 3387
See Detail 'A'
Plate QG.3.

See Sub-Section
EBY

IO.20 P 1937
DHS. 402/C
DOWTY 98A/B

IO.20 P 2769A
(PRE. MOD. 984)
IO.20 P 8059A
(MOD. 984)

IO.20 P 2561

VALVE, RELIEF.
IO.20 P 3701A,
See Detail B
Plate QG.2.
FRS. 73/K SERIES. I

IO.20 P 1789 A/ND
FRS. 110/H SERIES I
SP. 910A/19

IO.20 P 3481 A/ND
DHS. 402/C
SP. 98A/10

VALVE, NON-RETURN.
9807100/3

**SERVICES
FUEL FEED SYSTEM IN
EXTENSION WING**

RESTRICTED

RESTRICTED


QG.1A

See View Mk. 1

QG.1B

FUEL FEED and REFUELLING SYSTEM IN TANKS Nos.3 and 4. STARBOARD
Drg.Nos. 10.20 P 1253 and 10.20 P 3623 MOD.2.

▲ SEE PLATE QG.3

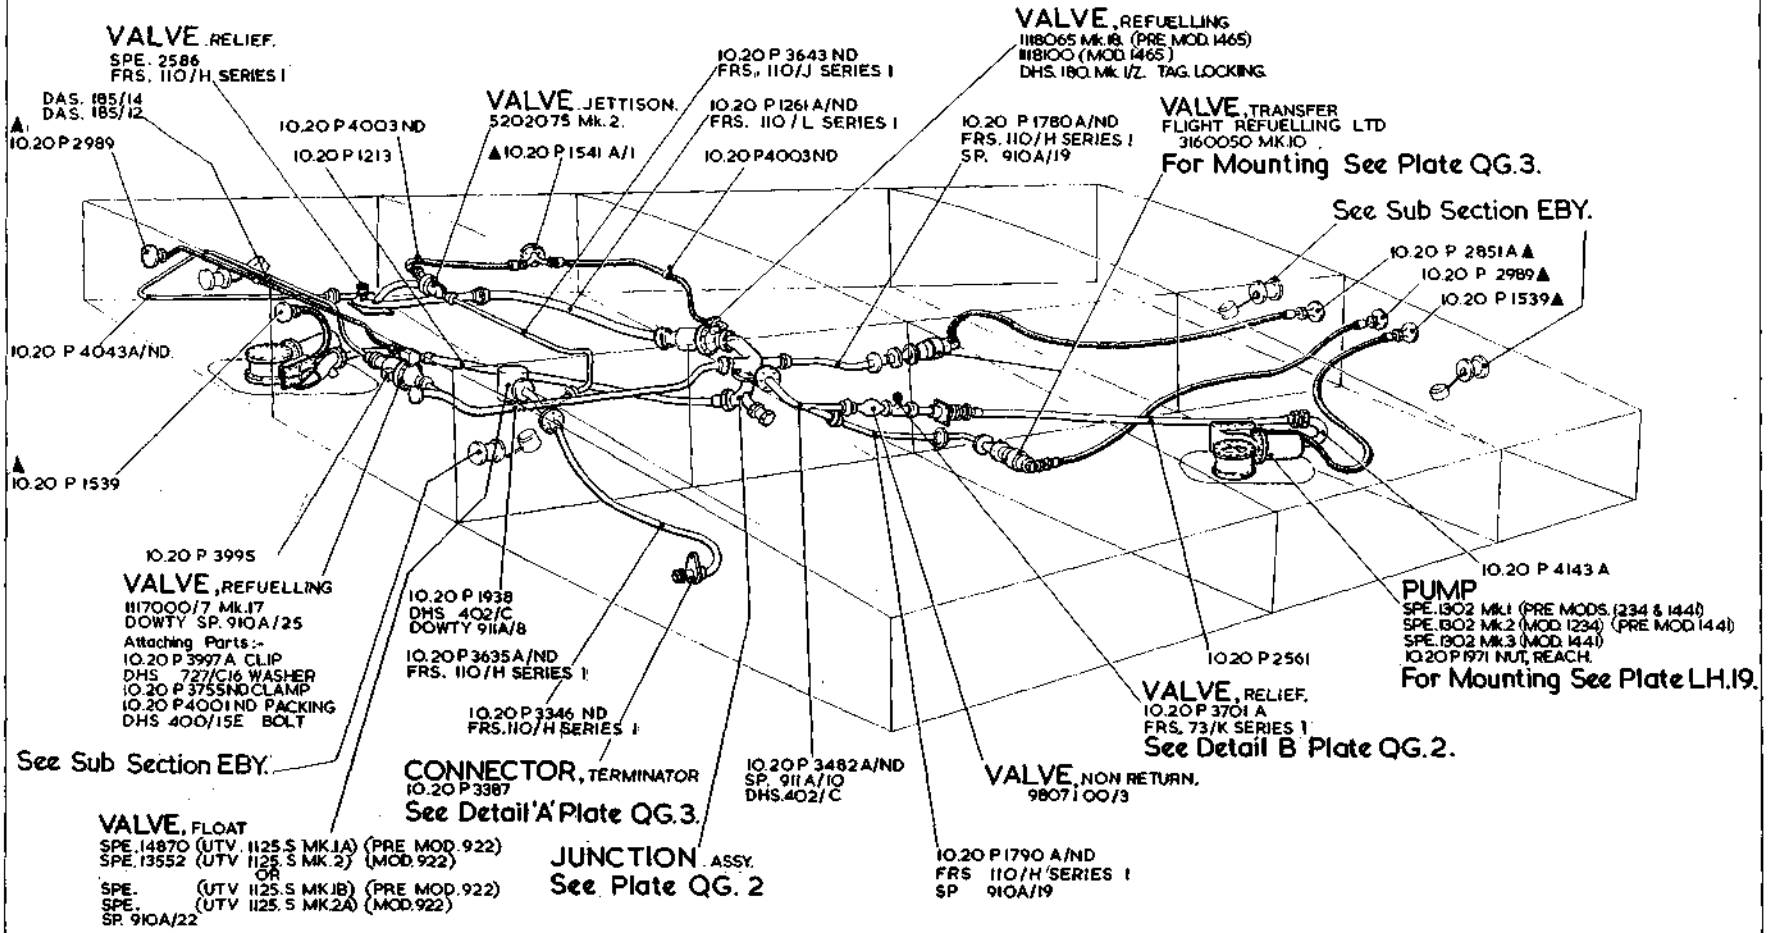

SERVICES
FUEL FEED SYSTEM IN
EXTENSION WING


RESTRICTED

RESTRICTED

QG.1B
[All of]

See VIKEN MR.1.

Plate QG.1B

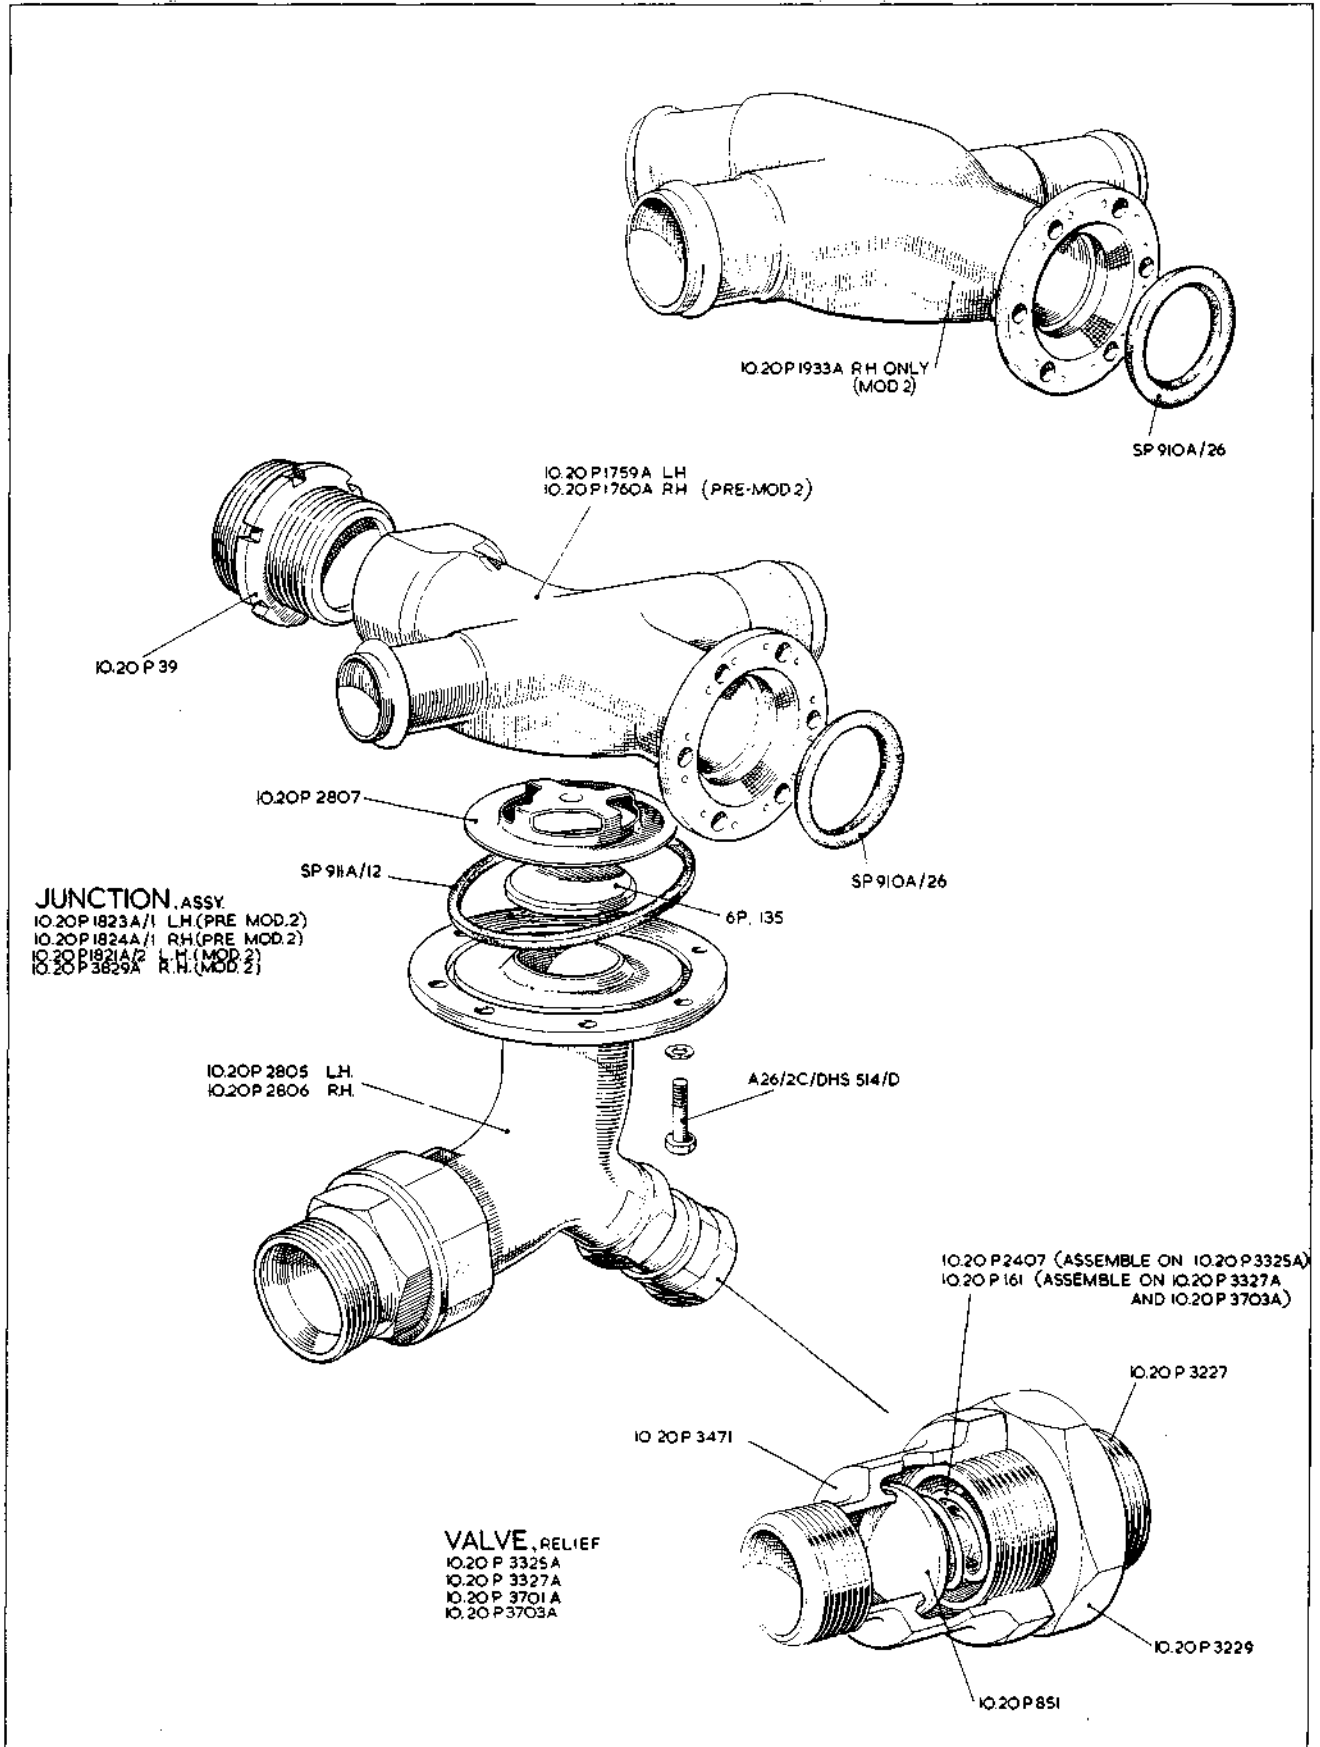


QG.2

SERVICES
FUEL FEED SYSTEM IN
EXTENSION WING

QG.2

[AL.4]

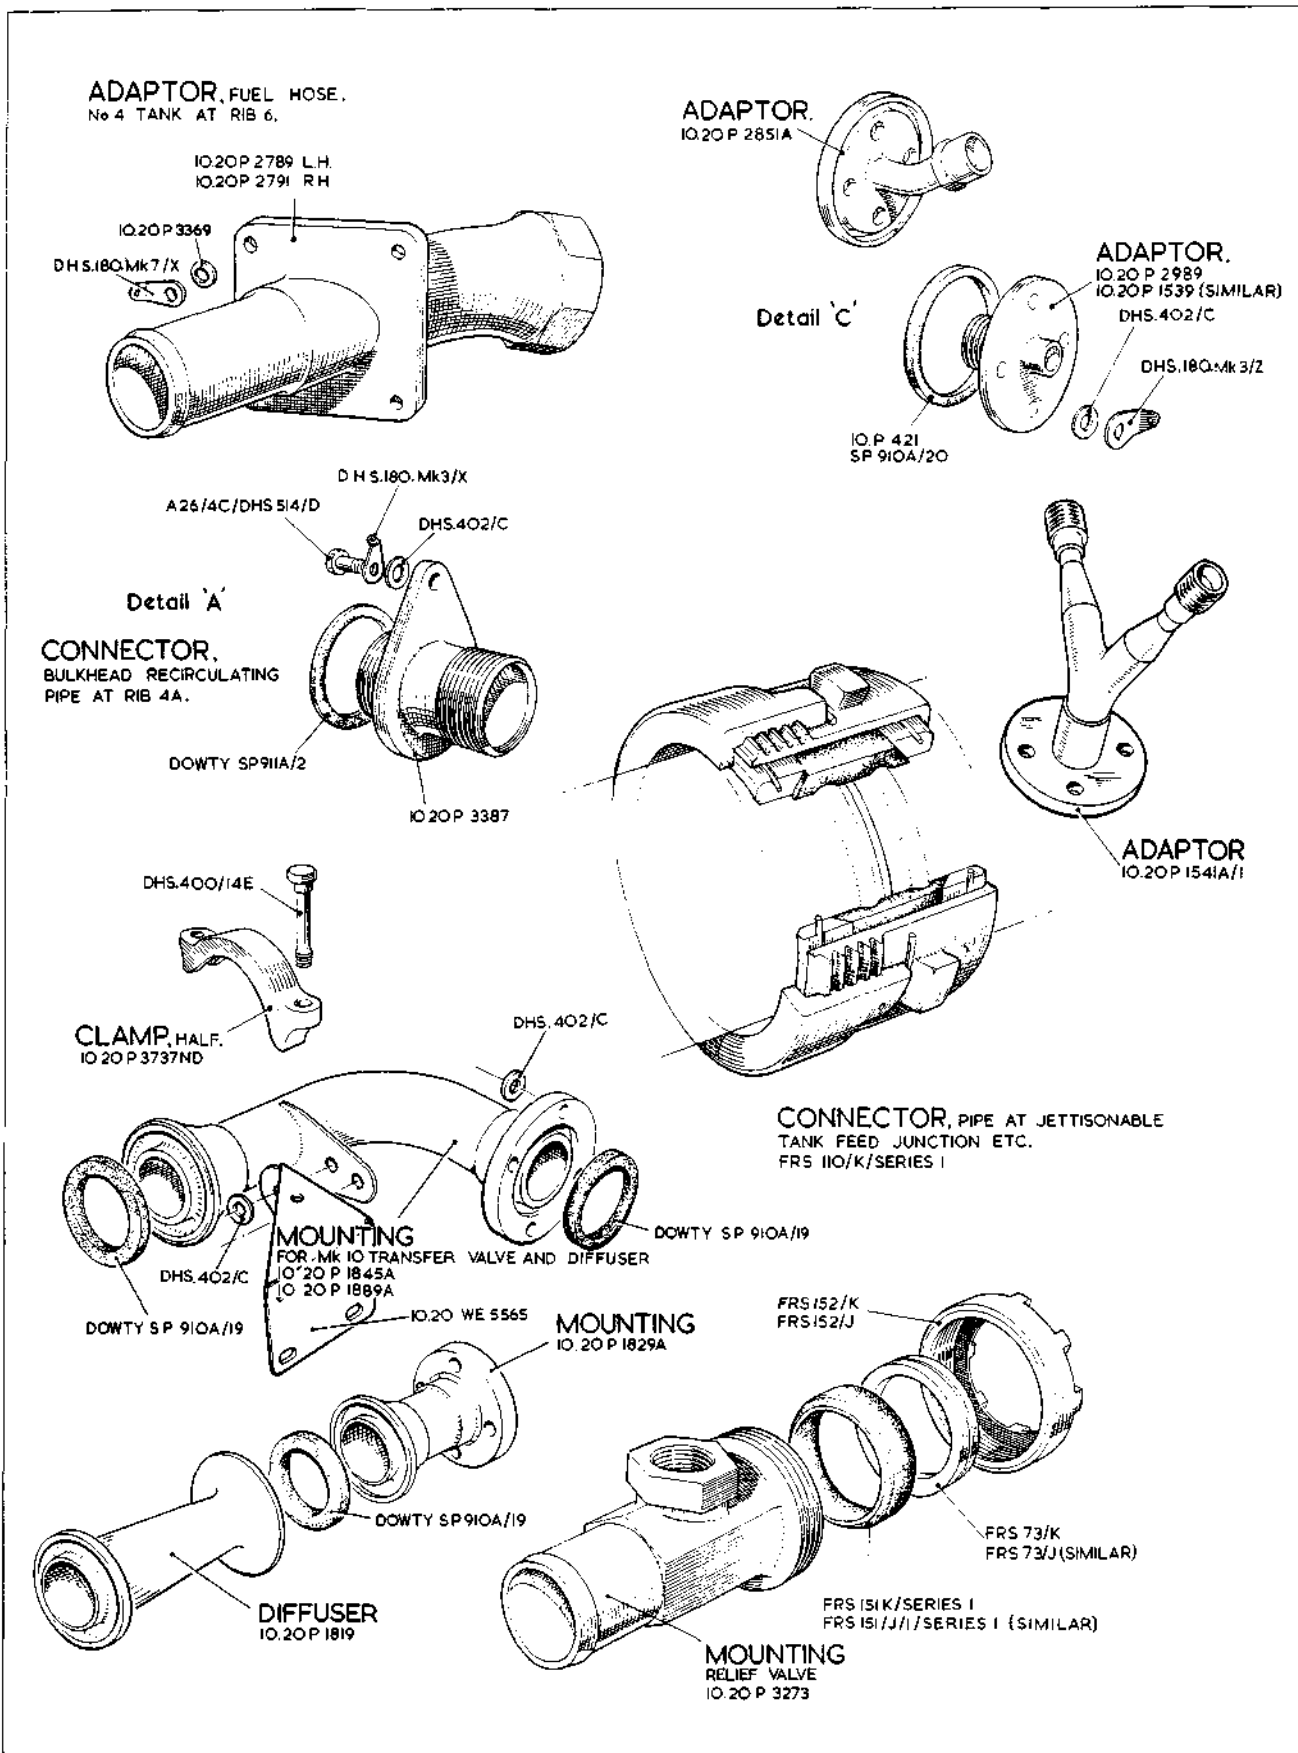

QG.3

SERVICES FUEL FEED SYSTEM IN EXTENSION WING


QG.3

[A.L.41]

QG.4

**SERVICES
FUEL FEED SYSTEM IN
EXTENSION WING**

QG4
[AL-4]

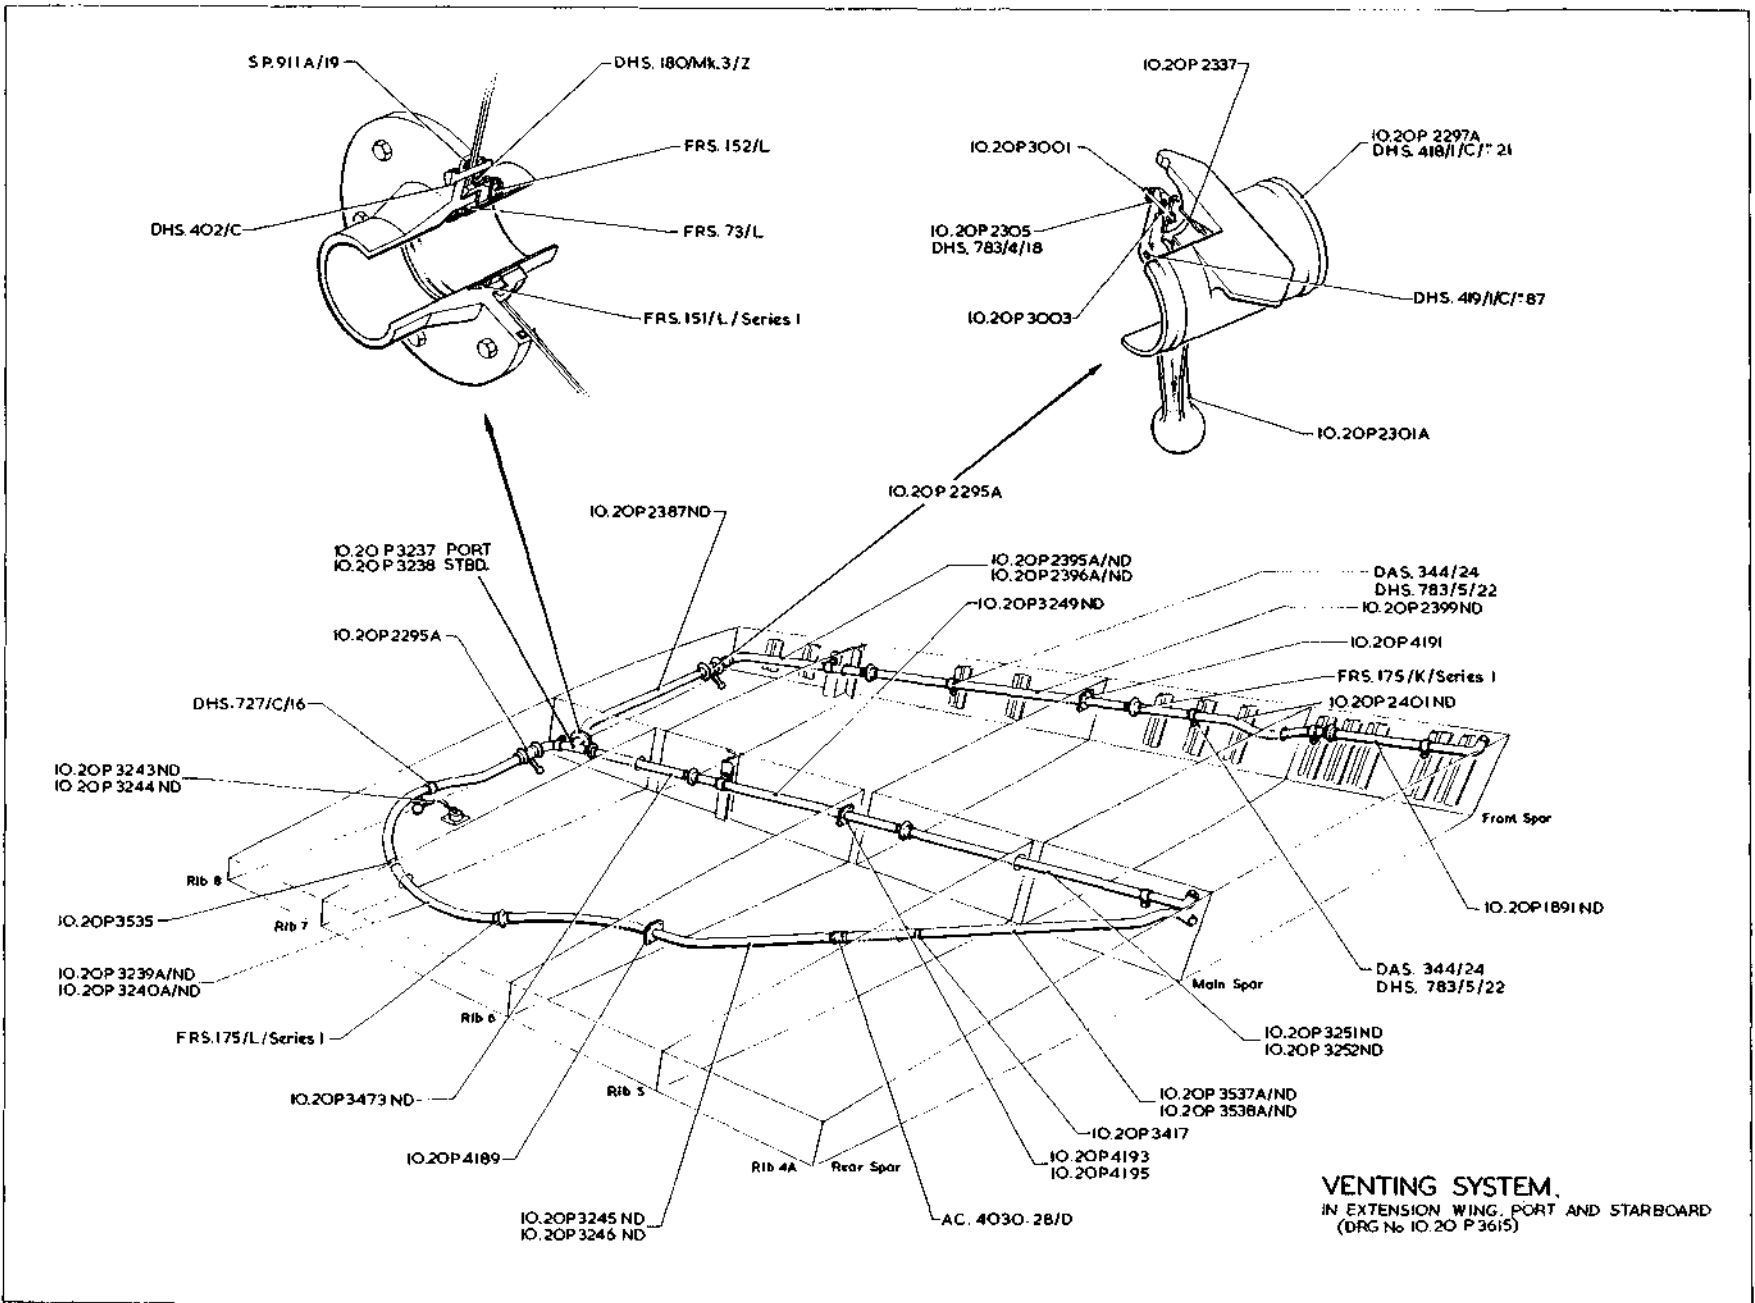


**VENTING SYSTEM,
IN EXTENSION WING, PORT AND STARBOARD
(DRG No IO.20 P 3615)**

RESTRICTED

RESTRICTED

Sec Vixen Mk.1

Plate QG4

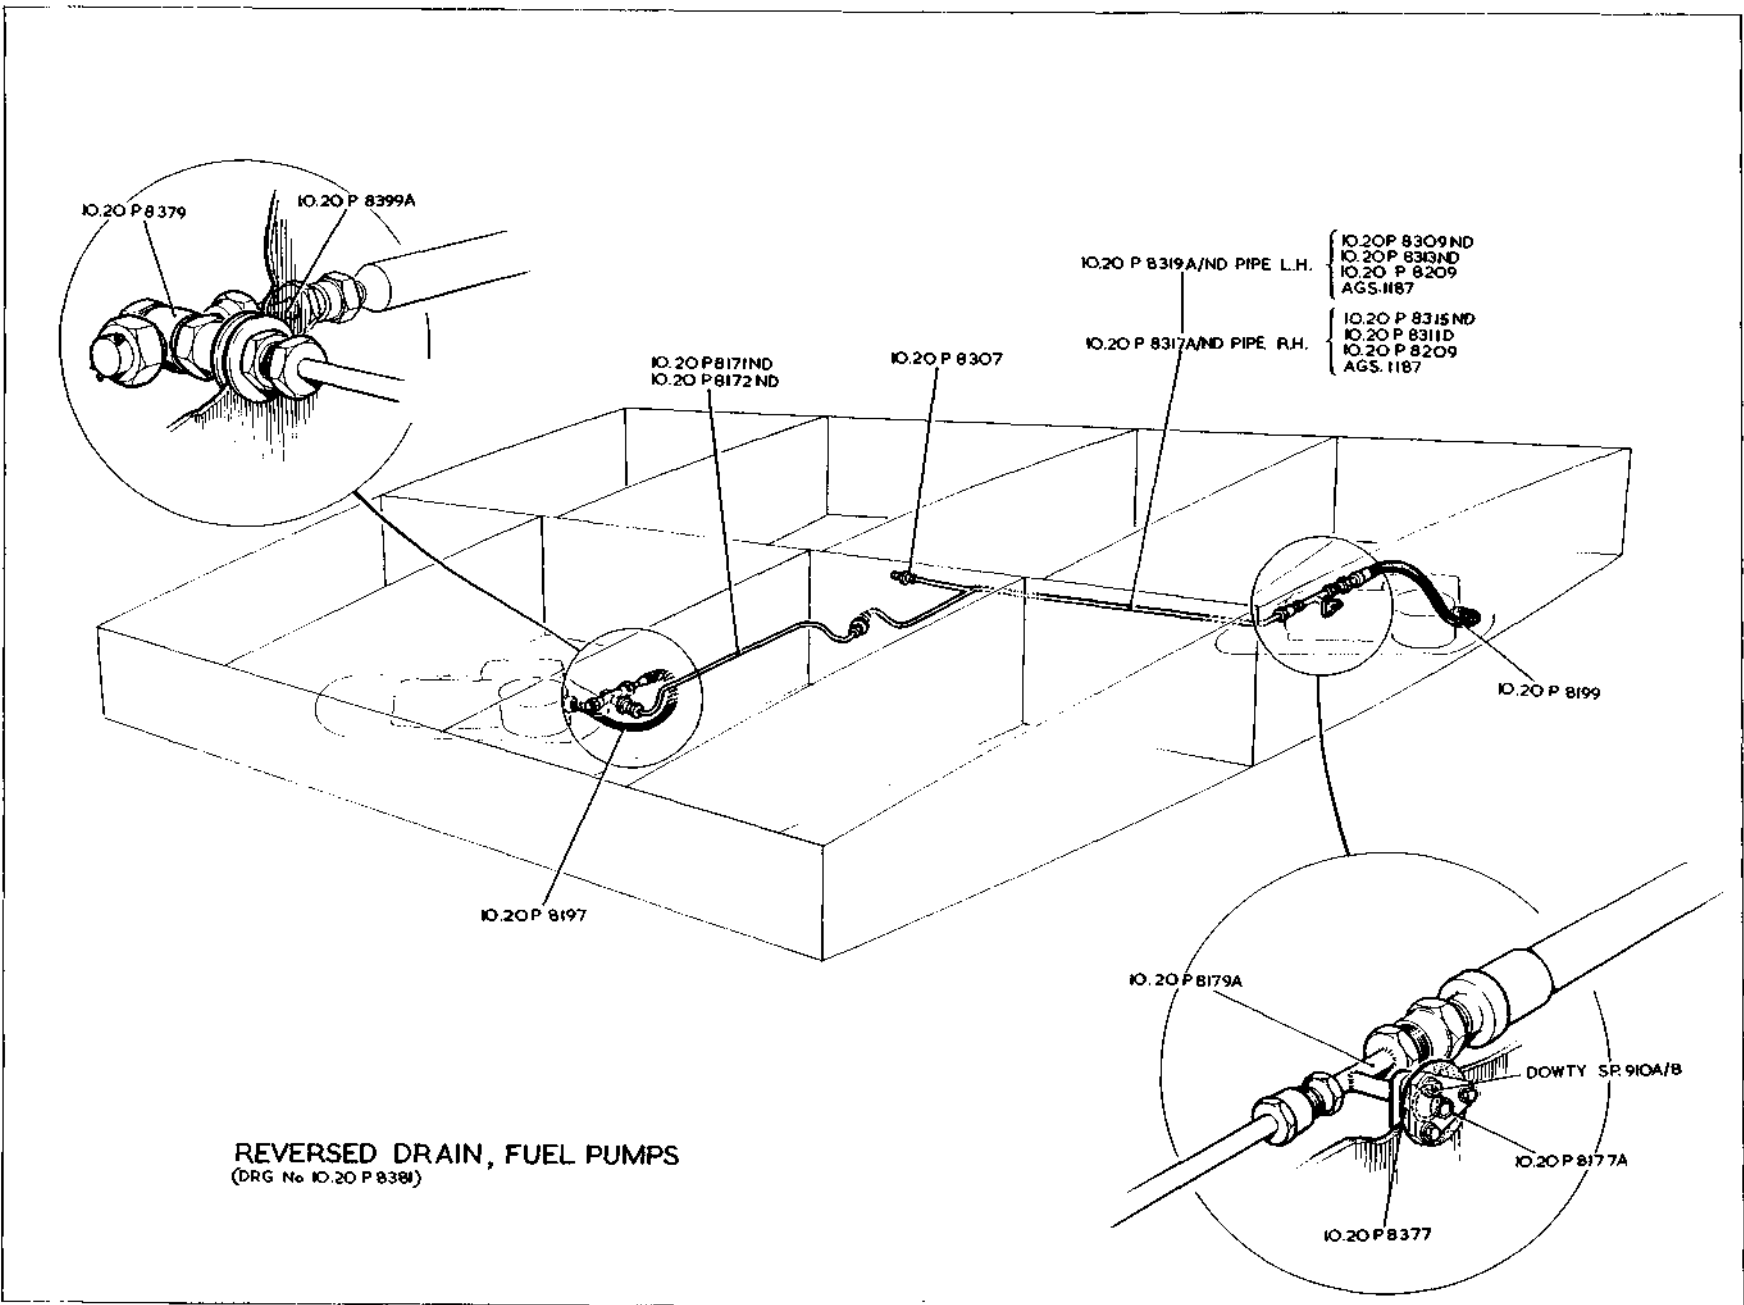

QG.5
SERVICES
FUEL FEED SYSTEM IN
EXTENSION WING

RESTRICTED

QG.5



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.