

RUDDER

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Score or L.M	Plate No.
85	S10-20 TR 1	RUDDER (Special spares assembly, complete with attachments) (Pre Mod. 1383)	2	—	P	RD1
213	S10-20 TR 2	RUDDER (Special spares assembly, complete with attachments) (Mod. 1383)	2	—	P	RD1
	10-20 TR 391A/3	RUDDER , assembly (Pre Mod. 1383)	1	—	—	
	10-20 TR 2011A	RUDDER , assembly (Mod. 1383)	1	—	—	
	10-20 TR 379A	Spares for :— BLOCK , hinge support, L.H., assembly ... (For spares use 10-20 TR 615A/ND)	1	—	—	RD1
4863	10-20 TR 615A/ND	BLOCK , hinge support, L.H., assembly ... (Spares condition)	1	—	C	
	10-20 TR 380A	BLOCK , hinge support, R.H., assembly ... (For spares use 10-20 TR 616A/ND)	1	—	—	RD1
4864	10-20 TR 616A/ND	BLOCK , hinge support, R.H., assembly ... (Spares condition)	1	—	C	
	10-20 TR 371	Spares for :— BUSH , L.H. ...	1	S.92	—	RD1
	10-20 TR 372	BUSH , R.H. ...	1	S.92	—	RD1
	10-20 TR 367	BLOCK , rudder hinge attachment ... Attachments for 10-20 TR 367, Block :—	4	S.92	—	RD1
28D/7002428	A25/6C	Bolt, 2 BA ...	3	—	C	
28M/1006473	A27/CT	Nut, 2 BA ...	3	—	C	
28W/9419475	SP.15/C	Washer ...	3	—	C	
8026	10-20 TR 399	BLOCK , trailing edge, lower ...	1	—	C	RD2
4824	10-20 TR 357	BLOCK , trailing edge, upper ...	1	—	C	RD2
4866	10-20 TR 243A	BRACKET , main hinge, assembly ... Spares for :—	1	—	C	RD1
	10 TR 21	BUSH ...	2	S.1	—	RD1
	26FN/3002	Attachments for 10-20 TR 243A, Bracket :— Bolt, 1/2" BSF ...	3	—	C	RD1
28W/9418921	SP.13/E	Washer ...	3	—	C	
	10-20 TR 679A	BRACKET , pivot, assembly (Mod. 408) (For spares use 10-20 TR 417A/ND)	1	—	C	RD1
15223	10-20 TR 417A/ND	BRACKET , pivot, assembly (Spares condition) Attachments for 10-20 TR 679A, Bracket :—	1	—	C	
28D/15689	A59/2C	Bolt, 2 BA ...	4	—	C	
28D/1007975	AS.1242/1C	Bolt, 2 BA ...	2	—	C	
28M/5808573	A27/CS	Nut, 2 BA ...	6	—	C	
28P/9527619	SP.90/C7	Pin, split (SP.9/C8) ...	6	—	C	
28W/9419454	SP.10/C	Washer ...	4	—	C	
28W/9419402	SP.13/C	Washer ...	6	—	C	
4827	10-20 TR 239A	BRACKET , rudder hinge, assembly ... Spares for :—	2	—	C	RD1
	10 TR 21	BUSH ...	2	S.1	—	RD1
	3410	Attachments for 10-20 TR 239A, Bracket :— Bolt, 1/2" BSF ...	4	—	C	RD1
	10 TR 319	Shim ...	2	LA.3	LM	RD1
28W/9418921	SP.13/E	Washer ...	4	—	C	
	10-20 TR 299ND	CAP , nose, lower ...	1	L.72	LM	RD2
	10-20 TR 301ND	CAP , nose, upper ...	1	L.72	LM	RD2
	10-20 TR 385	DIAPHRAGM , aft, centre portion ... (For spares use 10-20 TR 607ND)	1	L.72	—	RD1
4868	10-20 TR 607ND	DIAPHRAGM , aft, centre portion ... (Spares condition)	1	—	C	

TAIL UNIT
RUDDER

Ref. No.	Part No.	Description	No. off						Material Specification	Class of Store or L.M.	Place No.
			1	2	3	4	5	6			
	10-20 TR 383	DIAPHRAGM , front, centre portion (For spares use 10-20 TR 605ND)						1	L.72		RD1
4867	10-20 TR 605ND	DIAPHRAGM , front, centre portion (Spares condition)						1	—	C	
	10-20 TR 329A	DOOR , access, assembly						1	L.72	LM	RD1
28D/1007975	AS.1242/1C	Attachments for 10-20 TR 329A, Door :— Bolt, 2 BA						9	—	C	
4869	10-20 TR 347	DOOR , leading edge, L.H.						1	—	C	RD1
4870	10-20 TR 349	DOOR , leading edge, R.H.						1	—	C	RD1
		Attachments for 10-20 TR 347 or 10-20 TR 349, Doors (per pair) :— Bolt, 2 BA						13	—	C	
28D/1007975	AS.1242/1C										
14186	10-20 TR 671A	LINK , connecting, at pivot bracket, assembly ... Spares for :—						1	—	P	RD1
14188	ROSE BROS. RS.5X/CD	BEARING , end						2	—	C	RD1
12825	10-20 D 743	EXTENSION , nipple						1	—	C	RD1
28N/9156370	SP.21	NIPPLE , lubrication						1	—	C	
		Attachments for 10-20 TR 671A, Link :— Bolt, $\frac{1}{8}$ " BSF						2	—	C	
28D/16919	A59/12G	Nut, $\frac{1}{8}$ " BSF						2	—	C	
28M/5808571	A27/GS	Pin, split (SP.9/C8)						2	—	C	
28P/9527619	SP.90/C7										
17627	10-20 TR 2005A	LINK , rudder hinge, assembly (Mod. 1225) ... Spares for :—						2	—	P	RD1
2A/—	RANSOME & MARLES CN/8	BEARING , ball						1	—	C	RD1
	10-20 TR 369	BUSH						2	S.92	—	RD1
		Attachments for 10-20 TR 2005A, Link :— Bolt, $\frac{1}{8}$ " BSF						1	—	C	RD1
4826	10 CF 2801	Nut, $\frac{1}{8}$ " BSF						1	—	C	
28M/13122	A27/GS	Pin, split (SP.9/C8)						1	—	C	
28P/9527619	SP.90/C7										
	10 TR 343ND	PLATE , cover, on upper end rib						1	L.72	LM	RD1
	10 TR 345ND	PLATE , cover, on upper end rib						1	L.72	LM	RD1
	10-20 TR 397ND	PLATE , packing, at hinge support blocks						2	L.72	LM	
	10-20 TR 359	RIB , bottom (For spares use 10-20 TR 629ND) ...						1	L.72	—	RD2
10364	10-20 TR 629ND	RIB , bottom (Spares condition)						1	—	C	
	10-20 TR 235	RIB , end, upper (For spares use 10-20 TR 655ND)						1	L.72	—	RD2
11081	10-20 TR 655ND	RIB , end, upper (Spares condition)						1	—	C	
	10-20 TR 361	RIB , nose, bottom (For spares use 10-20 TR 621ND)						1	L.72	—	RD2
4818	10-20 TR 621ND	RIB , nose, bottom (Spares condition)						1	—	C	
	10-20 TR 493A/ND	SKIN , Port, assembly (Pre Mod. 1076)						1	—	—	RD2
	10-20 TR 2001A/ND	SKIN , Port, assembly (Mod. 1076)						1	—	—	RD2
	10-20 TR 405A/ND	SKIN , Starboard, assembly (Pre Mod. 1076) ...						1	—	—	RD2
	10-20 TR 2003A/ND	SKIN , Starboard, assembly (Mod. 1076)						1	—	—	RD2

TAIL UNIT

RUDDER

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or L.M	Plate No.
4860	10-20 TR 251	BOOM, bottom diaphragm, L.H.	1	—	C	RD2
4861	10-20 TR 253	BOOM, bottom diaphragm, R.H.	1	—	C	RD2
4826	10-20 TR 261	BOOM, rib No. 1, L.H.	1	—	C	RD2
4829	10-20 TR 262	BOOM, rib No. 1, R.H.	1	—	C	RD2
4830	10-20 TR 267	BOOM, rib No. 1A, L.H.	1	—	C	RD2
4839	10-20 TR 268	BOOM, rib No. 1A, R.H.	1	—	C	RD2
	10-20 TR 331ND	BOOM, rib No. 2, L.H. (For spares use 10-20 TR 633ND)	1	L.65	—	RD2
10382	10-20 TR 633ND	BOOM, rib No. 2, L.H. (Spares condition)	1	—	C	
	10-20 TR 332ND	BOOM, rib No. 2, R.H. (For spares use 10-20 TR 634ND)	1	L.65	—	RD2
10383	10-20 TR 634ND	BOOM, rib No. 2, R.H. (Spares condition)	1	—	C	
	10-20 TR 333ND	BOOM, rib No. 3, L.H. (For spares use 10-20 TR 635ND)	1	L.65	—	RD2
10384	10-20 TR 635ND	BOOM, rib No. 3, L.H. (Spares condition)	1	—	C	
	10-20 TR 334ND	BOOM, rib No. 3, R.H. (For spares use 10-20 TR 636ND)	1	L.65	—	RD2
10385	10-20 TR 636ND	BOOM, rib No. 2, R.H. (Spares condition)	1	—	C	
	10-20 TR 335ND	BOOM, rib No. 4, L.H. (For spares use 10-20 TR 637ND)	1	L.65	—	RD2
10386	10-20 TR 637ND	BOOM, rib No. 4, L.H. (Spares condition)	1	—	C	
	10-20 TR 336ND	BOOM, rib No. 4, R.H. (For spares use 10-20 TR 638ND)	1	L.65	—	RD2
10387	10-20 TR 638ND	BOOM, rib No. 4, R.H. (Spares condition)	1	—	C	
	10-20 TR 341ND	BOOM, ribs Nos. 5, 6, 9, 10, 11, 12 and 13, L.H. (For spares use 10-20 TR 639ND)	7	L.65	—	RD2
10388	10-20 TR 639ND	BOOM, ribs Nos. 5, 6, 9, 10, 11, 12 and 13, L.H. (Spares condition)	7	—	C	
	10-20 TR 342ND	BOOM, ribs Nos. 5, 6, 9, 10, 11, 12 and 13, R.H. (For spares use 10-20 TR 640ND)	7	L.65	—	RD2
10389	10-20 TR 640ND	BOOM, ribs Nos. 5, 6, 9, 10, 11, 12 and 13, R.H. (Spares condition)	7	—	C	
4831	10-20 TR 195	BOOM, rib No. 7, L.H.	1	—	C	RD2
4832	10-20 TR 197	BOOM, rib No. 7, R.H.	1	—	C	RD2
	10-20 TR 375	BOOM, rib No. 8, L.H. (For spares use 10-20 TR 425ND)	1	L.65	—	RD2
	10-20 TR 425ND	BOOM, rib No. 8, L.H. (Spares condition)	1	—	C	
	10-20 TR 377	BOOM, rib No. 8, R.H. (For spares use 10-20 TR 427ND)	1	L.65	—	RD2
	10-20 TR 427ND	BOOM, rib No. 8, R.H. (Spares condition)	1	—	C	
4837	10-20 TR 207	BOOM, rib No. 14, L.H.	1	—	C	RD2
4838	10-20 TR 208	BOOM, rib No. 14, R.H.	1	—	C	RD2
4835	10-20 TR 213	BOOM, rib No. 14A, L.H.	1	—	C	RD2
4836	10-20 TR 214	BOOM, rib No. 14A, R.H.	1	—	C	RD2
	10-20 TR 219	BOOM, rib No. 15, L.H. (For spares use 10-20 TR 631ND)	1	L.65	—	RD2
10367	10-20 TR 631ND	BOOM, rib No. 15, L.H. (Spares condition)	1	—	C	
	10-20 TR 220	BOOM, rib No. 15, R.H. (For spares use 10-20 TR 632ND)	1	L.65	—	RD2
10368	10-20 TR 632ND	BOOM, rib No. 15, R.H. (Spares condition)	1	—	C	

**TAIL UNIT
RUDDER**

Ref. No.	Part No.	Description						No. off	Material Specification	Class of Store or L.M	Place No.
		1	2	3	4	5	6				
4842	10-20 TR 225							1	—	C	RD2
4843	10-20 TR 226							1	—	C	RD2
4844	10-20 TR 231							1	—	C	RD2
4845	10-20 TR 232							1	—	C	RD2
28M/11957	AGS.2007/C/1							9	—	C	
	10-20 TR 579							1	—	C	RD2
15647	10-20 TR 421ND							1	—	C	
	10-20 TR 429							1	DTD.5020 or L.71	—	RD2
19570	10-20 TR 2007ND							1	—	—	
	10-20 TR 581							1	—	C	D2
15648	10-20 TR 423ND							1	—	C	
	10-20 TR 431							1	DTD.5020 or L.71	—	RD2
19571	10-20 TR 2009ND							1	—	—	
	10-20 TR 389A/ND							1	—	—	RD2
	10-20 TR 275							1	L.72	—	RD2
4795	10-20 TR 625ND							1	—	C	
	10-20 TR 277							1	L.72	—	RD2
4796	10-20 TR 611ND							1	—	C	
	10-20 TR 279							1	L.72	—	RD2
4797	10-20 TR 613ND							1	—	C	
4799	10-20 TR 289A							1	—	C	RD2
	10-20 TR 393ND							1	L.72	—	RD1
	10-20 TR 394ND							1	L.72	—	RD1
	10-20 TR 291ND							1	L.72	—	
4800	10-20 TR 295A							1	—	C	RD2
	10-20 TR 669A							1	L.72	—	
	10-20 TR 397ND							1	L.72	—	RD1
	10-20 TR 394ND							1	L.72	—	RD1
	10-20 TR 297ND							1	L.72	—	RD2
4801	10-20 TR 283							3	—	C	RD2
4802	10-20 TR 285							2	—	C	RD2
4803	10-20 TR 287							1	—	C	RD2
	10-20 TR 585A							1	—	—	RD2
	10-20 TR 597ND							1	L.72	—	RD2
	10-20 TR 595ND							1	L.72	—	RD2
28M/9435627	AGS.2012/E/11							1	—	C	
	10-20 TR 365A/ND							1	—	—	RD2
								1	—	—	

TAIL UNIT

RUDDER

Ref. No.	Part No.	Description	No. off	Material Specification	Class of Store or LM	Plate No.
10392	10-20 TR 643A/ND	SPAR , lower, assembly (Spares condition)	1	—	C	
	10-20 TR 593A/ND	SPAR , top, assembly (For spares use 10-20 TR 651A/ND)	1	—	—	RD2
10393	10-20 TR 651A/ND	SPAR , top, assembly (Spares condition)	1	—	C	
	10-20 TR 401	TAB , fixed	1	DTD.710	LM	
	10-20 TR 351	WEB , bottom, diaphragm (For spares use 10-20 TR 623ND)	1	L.72	—	RD2
4816	10-20 TR 623ND	WEB , bottom, diaphragm (Spares condition)	1	—	C	
	10-20 TR 353	WEB , hinge, rib No. 1 (For spares use 10-20 TR 609ND)	1	L.72	—	RD2
4805	10-20 TR 609ND	WEB , hinge, rib No. 1 (Spares condition)	1	—	C	
4804	10-20 TR 269	WEB , hinge, rib No. 1A	1	—	C	RD2
4806	10-20 TR 183	WEB , rib No. 2	1	—	C	RD2
4807	10-20 TR 185	WEB , rib No. 3	1	—	C	RD2
4808	10-20 TR 187	WEB , rib No. 4	1	—	C	RD2
4813	10-20 TR 201	WEB , ribs Nos. 5, 9, 10, 11, 12 and 13	6	—	C	RD2
4810	10-20 TR 191	WEB , rib No. 6	1	—	C	RD2
	10-20 TR 199	WEB , rib No. 7 (For spares use 10-20 TR 619ND)	1	—	—	RD2
4811	10-20 TR 619ND	WEB , rib No. 7 (Spares condition)	1	—	C	
	10-20 TR 389	WEB , rib, No. 8 (For spares use 10-20 TR 627ND)	1	—	—	RD2
4812	10-20 TR 627ND	WEB , rib, No. 8 (Spares condition)	1	—	C	
4814	10-20 TR 209	WEB , hinge, rib No. 14	1	—	C	RD2
4815	10-20 TR 215	WEB , hinge, rib No. 14A	1	—	C	RD2
4819	10-20 TR 221	WEB , rib No. 15	1	—	C	RD2
4820	10-20 TR 227	WEB , rib No. 16	1	—	C	RD2
4821	10-20 TR 233	WEB , rib No. 17	1	—	C	RD2
Attachments for 10-20 TR 391A/3, Rudder :—						
At centre hinge :—						
9619	10-20 CF 7807	Bolt	1	—	C	RD1
28M/5808571	A27/GS	Nut, $\frac{1}{16}$ " BSF	1	—	C	
28P/9527619	SP.90/C7	Pin, split (SP.9/C8)	1	—	C	
28VV/9419403	SP.13/G	Washer	1	—	C	
At top and bottom hinges :—						
28D/1213749	A30/23E	Bolt, $\frac{1}{2}$ " BSF	2	—	C	
28M/1011487	A27/ES	Nut, $\frac{1}{2}$ " BSF	2	—	C	
28P/9527619	SP.90/C7	Pin, split (SP.9/C8)	2	—	C	
28VV/9418921	SP.13/E	Washer	2	—	C	

TAIL UNIT

RUDDER

Ref. No.	Part No.	Description						No. off	Material Specification	Class of Store or L.M	Plate No.
		1	2	3	4	5	6				

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

