

PART V  
ILLUSTRATIONS

KEY TO Fig. 1

COCKPIT—LEFT HAND SIDE

1. Master switch.
2. Undercarriage selector lever.
3. Flaps selector lever.
4. Dive brakes control.
5. Canopy seal lever—early aircraft.  
High pressure fuel cock—later aircraft.
6. Throttle lever.
7. Friction adjuster.
8. Elevator trimming tab control.
9. Fuel cock lever—early aircraft.  
Low pressure fuel cock—later aircraft.

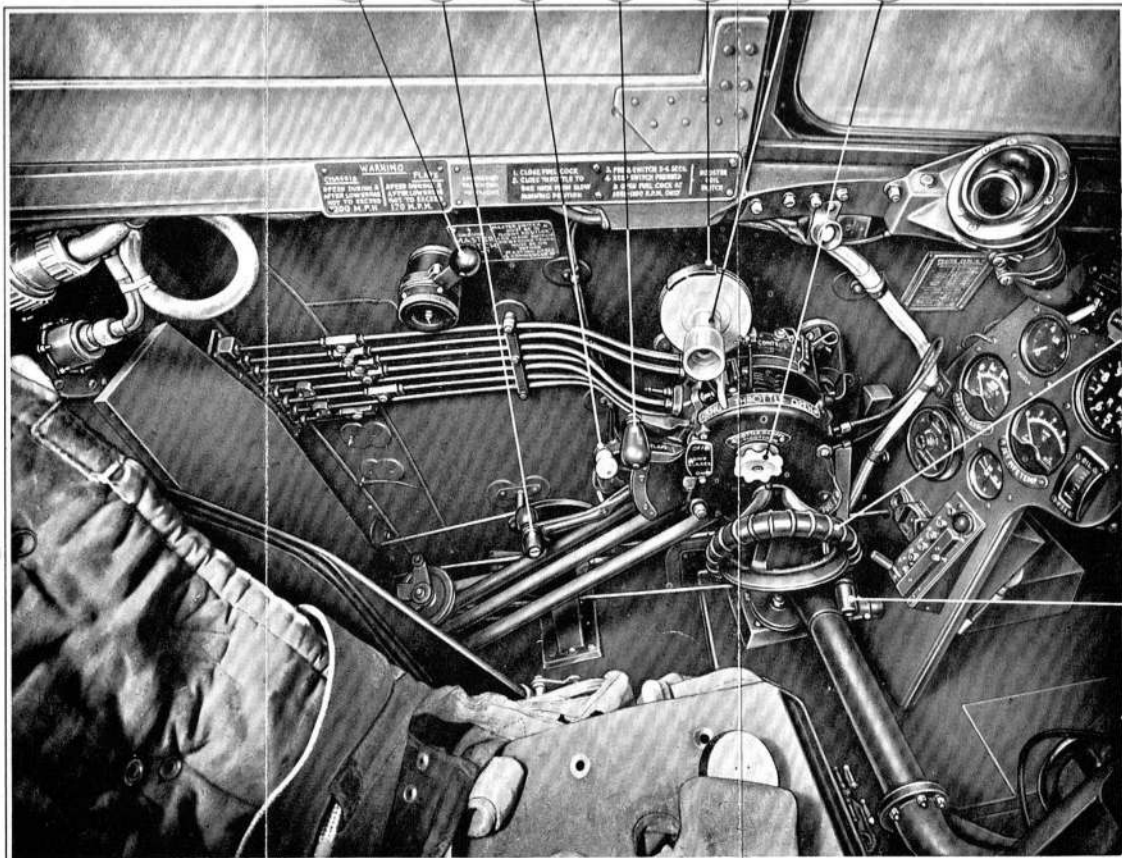


FIG.  
1

COCKPIT—LEFT HAND SIDE

FIG.  
1

KEY TO Fig. 2

COCKPIT—INSTRUMENT PANEL

10. 'G' switch.
11. Auto manual.
12. Undercarriage position indicator.
13. Rear bearing temp. gauge.
14. Flaps position indicator.
15. Jet pipe temp. gauge.
16. Burner pressure gauge.
17. R.P.M. Indicator.
18. Fuel tanks jettison switch.
19. Oil temp gauge.
20. Undercarriage warning light.
21. Elevator trim indicator.
22. Gyro gunsight.
23. Fuel pressure warning lamp.
24. Gunsight selector dimmer control.
25. R.I. Compass indicator.
26. Cabin air pressure gauge.
27. Cabin altimeter.
28. Cabin air pressure warning lamp.
29. Oxygen regulator.
30. Brakes pressure gauge.
31. Generator warning lamp.
32. Fire warning lamp.
33. Tanks contents gauges.
34. Oil pressure gauge.
35. Controller TR 1464.

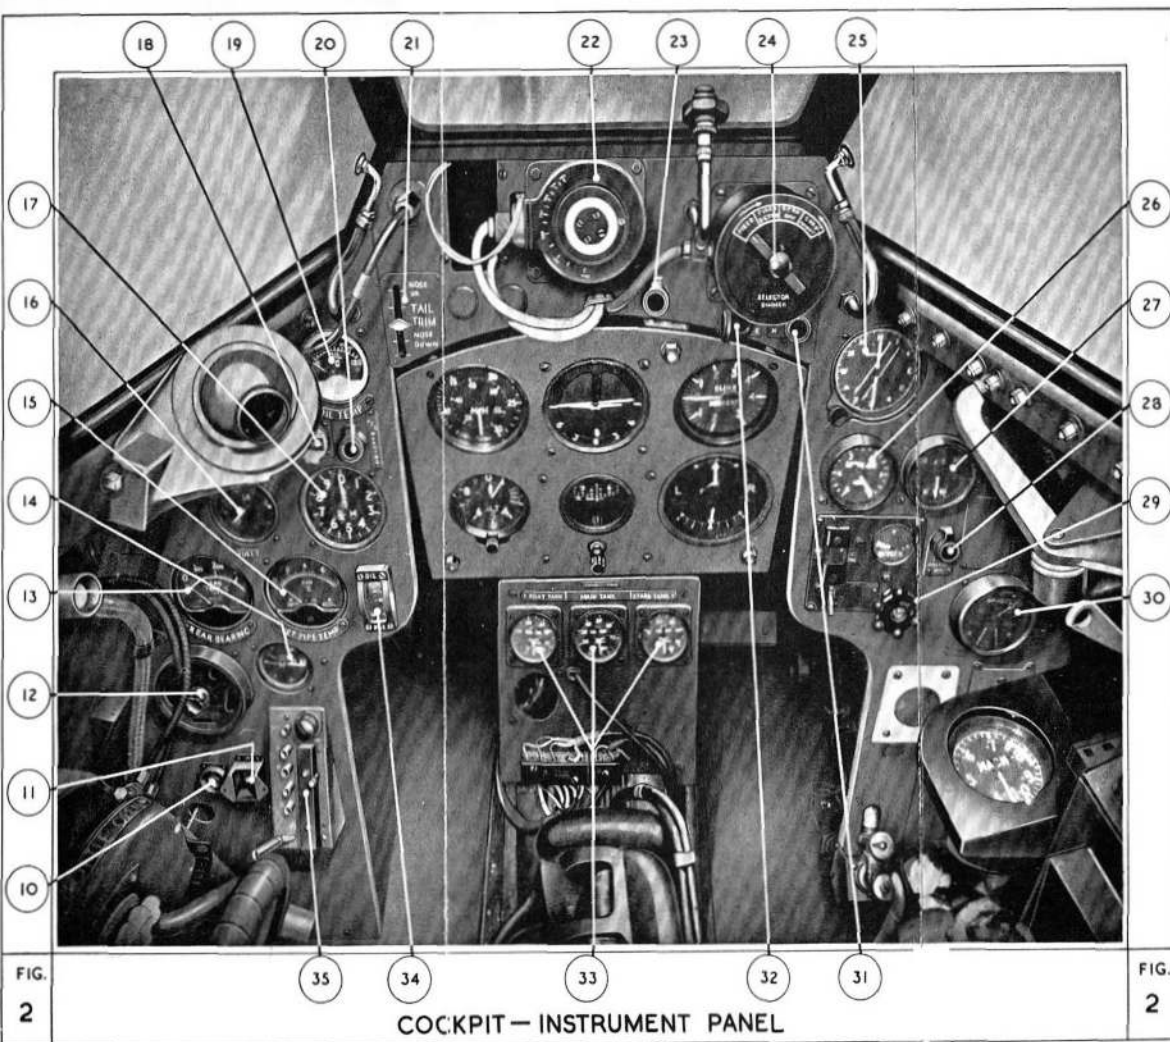


FIG.  
2

COCKPIT—INSTRUMENT PANEL

FIG.  
2

KEY TO *Fig. 3*  
**COCKPIT—RIGHT HAND  
 SIDE**

- 36. Interlinked starter switch.
- 37. Interlinked master switch.
- 38. R.I. Compass switch.
- 39. Pitot-head switch.
- 40. Navigation lights switch.
- 41. Landing lights.
- 42. Detonator R 3121.
- 43. Booster pump switch.
- 44. Gunsight switch.
- 45. Identification lights push-button.
- 46. Identification lights.
- 47. Fire extinguisher button.
- 48. Starter button.
- 49. De-icer pump.

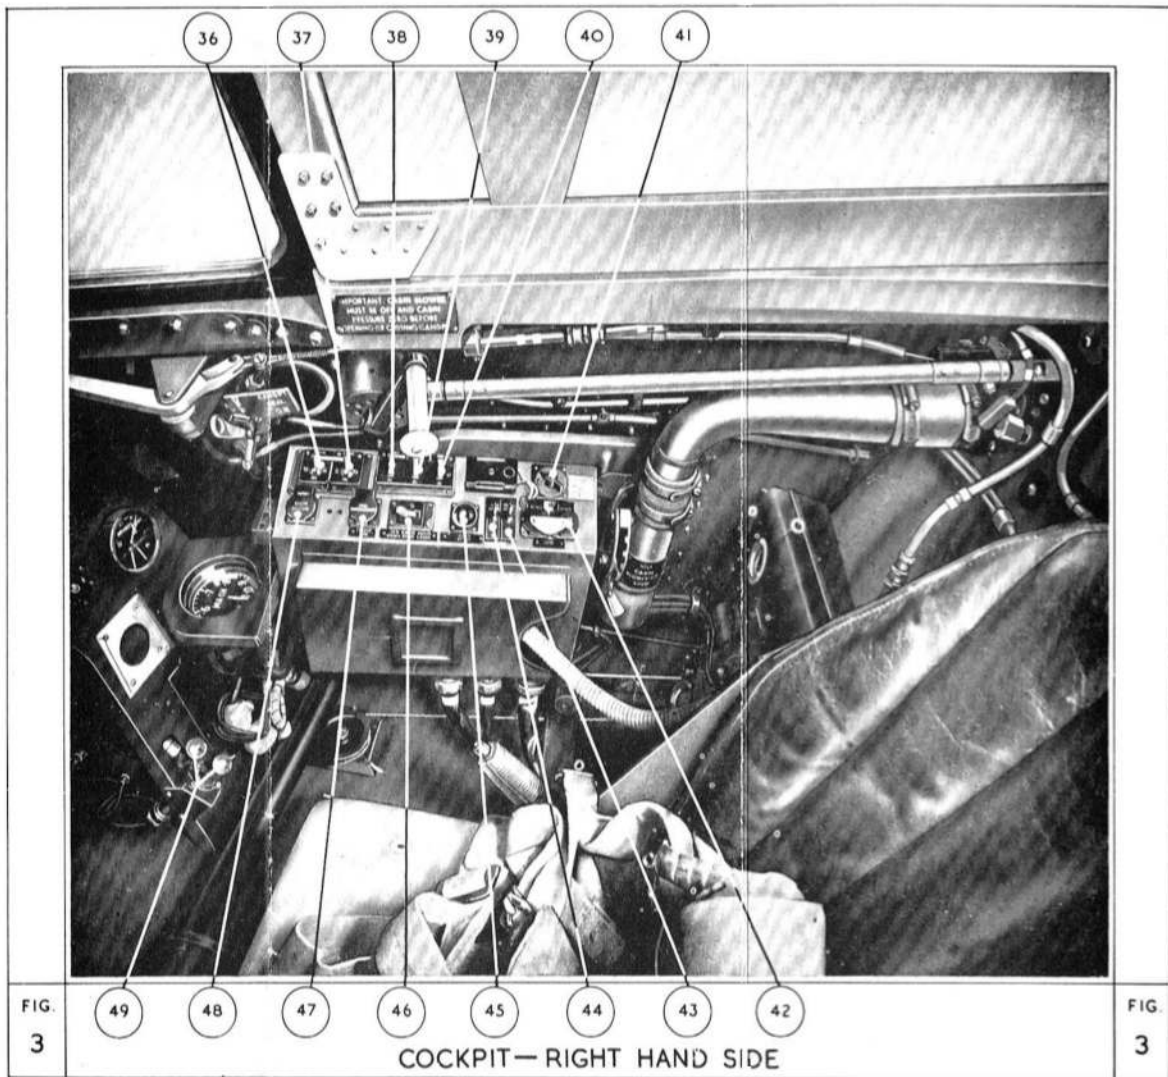


FIG.  
 3

COCKPIT—RIGHT HAND SIDE

FIG.  
 3

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

