

PART VI

ILLUSTRATIONS

KEY TO FIGS. 1, 2 and 3

1. Elevator trim control.
2. Tailwheel lock control.
3. Fine pitch stop selector switch.
4. Rudder trim control.
5. Aileron trim control.
6. Torpedo depth setting control.
7. Gyro angling unit.
8. H.P. cock control.
9. Throttle damper.
10. Propeller starting pitch and parking brake pushbutton.
11. Bombs/R.P. selector panel.
12. Hood jettison handle.
13. Press-to-transmit pushbutton.
14. Fuel tanks selector cock.
15. RATOG jettison pushbutton.
16. Airbrakes selector.
17. A.P.I. unit.
18. Outside air temperature gauge.
19. Flaps selector lever.
20. Flaps emergency control.
21. Starter pushbutton.
22. Cartridge selector switch.
23. Ignition warning light.
24. Ignition switch.
25. Aileron and rudder trim position indicator.
26. Flap position indicator.
27. Arrestor hook position warning light.
28. Undercarriage position indicator.
29. RATOG pushbutton.

30. Undercarriage selector buttons.
31. Contacting altimeter.
32. Radio altimeter.
33. Altitude limit lights (radio altimeter).
34. Contacting altimeter warning light.
35. Generator failure warning light.
36. Torquemeter pressure gauge.
37. Fuel distributor pressure gauge.
38. Reverse torque warning light.
39. Engine fire warning light.
40. Jet pipe fire warning light.
41. Fire-extinguisher pushbuttons.
42. Fuel contents gauges.
43. Oxygen regulator.
44. Pneumatic system pressure gauge.
45. Fuel level warning indicator.
46. Cockpit ventilator control.
47. Undercarriage emergency lowering control.
48. Windscreen de-icing control.
49. Seat height adjusting lever.
50. V.H.F. control panel.
51. Flight instruments and camera selector switches.
52. Armament control panel.
53. Selector dimmer control.
54. Contacting altimeter and camera container switches.
55. Hood winding handle.
56. External lights switch panel.
57. External lights noise button.
58. Ground/Flight switch.
59. Internal lights switch panel.
60. Signal pistol in stowage.
61. First-aid equipment.
62. APX.1 control panel.
63. AN/APS/13 control panel.
64. Generator field circuit-breaker.
65. ASV.16N control panel.


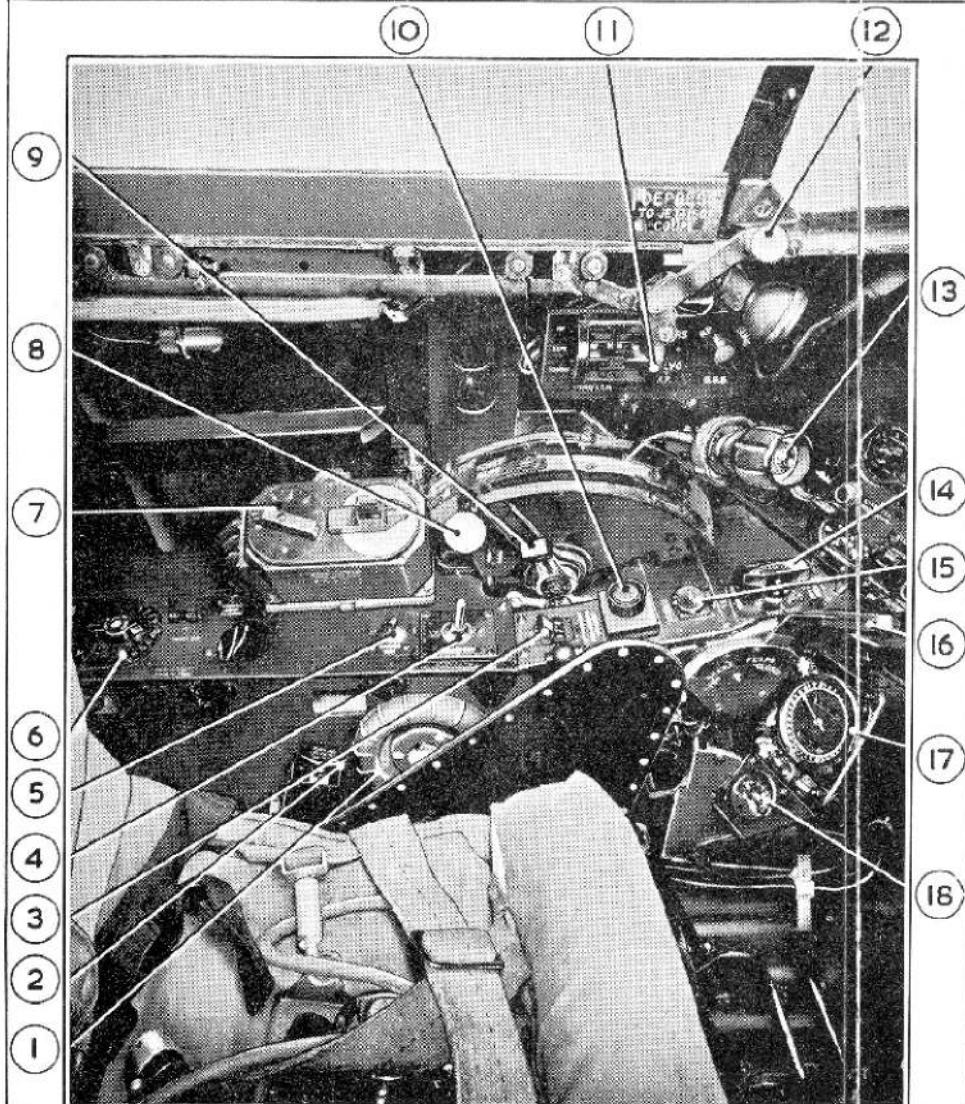


FIG
1

COCKPIT — PORT SIDE

FIG
1

32
31
30
29
28
27
26
25
24
23
22
21
20
19

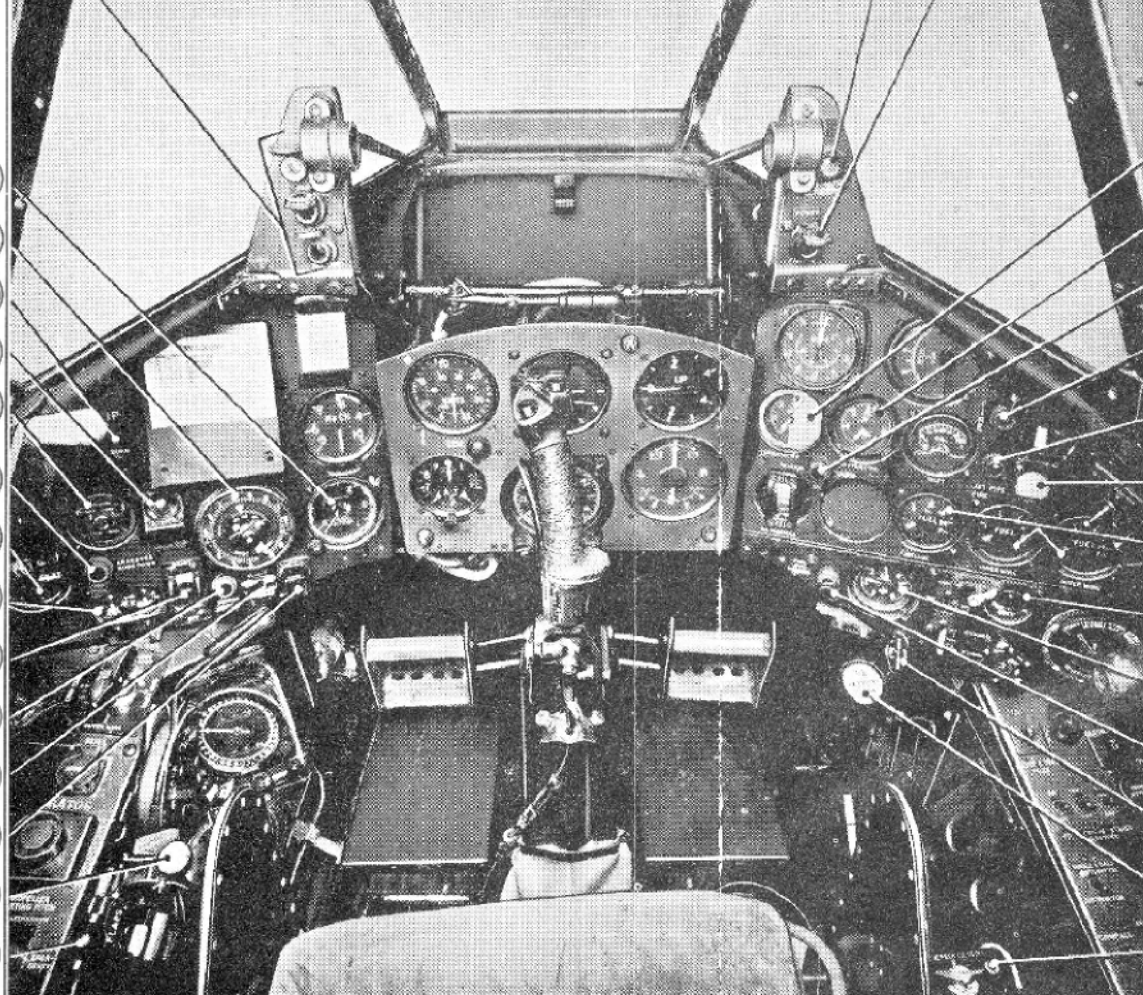

36
37
38
39
40
41
42
43
44
45
46
47
48

58

59

57

56

55

54

53

52

51

50

49

60

61

62

63

64

65

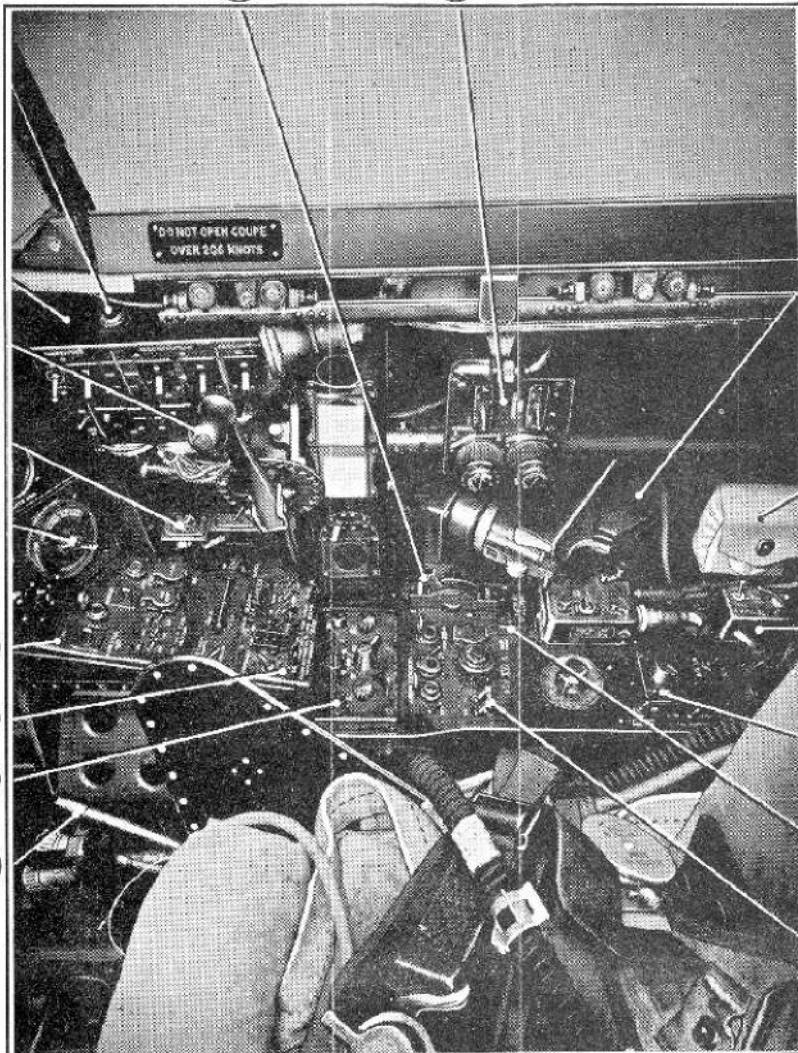


FIG 3

COCKPIT - STARBOARD SIDE

FIG 3

This file was downloaded
from the RTFM Library.
Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

