

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
AIRCRAFT		
General Arrangement	E.B6.00.1	1
ARMAMENT		
Air Deflector in Bomb Bay (Mod. 3154) (S.O.O.)	E.B6.97.301	7
Bomb Gear	E.A1.97.9	3
Bombsight Computer, Air Supply	E.B6.70.1	11
Carrier Gunsight Assembly	E.B6.97.475	18A
CONTROLS		
Aileron Controls in Wing, Port	E.A1.45.13	19
Aileron Controls in Wing, Starboard	E.A1.45.14	31
Engine Controls in Nose Fuselage	E.B6.47.3	57
Engine Controls in Wing, Port (Pre-Mod. 2393-2155-2197)	E.A6.47.87	71
Engine Controls in Wing, Port (Mod. 2393-2155-2197)	E.B6.47.293	71
Engine Controls in Wing, Starboard (Pre-Mod. 2393-2155-2197)	E.A6.47.89	75
Engine Controls in Wing, Starboard (Mod. 2393-2155-2197)	E.B6.47.295	75
Engine Controls in Centre Fuselage (Pre-Mod. 2393-2155-2197)	E.A1.47.125	43
Engine Controls in Centre Fuselage (Mod. 2393-2155-2197)	E.B6.47.297	45
Flap Operating Mechanism, Port	E.A1.20.701	87
Flap Operating Mechanism, Starboard	E.A1.20.700	99
Flying Controls in Cockpit	E.B6.45.3	113
Flying Controls in Centre Fuselage	E.A3.45.379	137
Flying Controls in Rear Fuselage	E.A3.45.385	151
ELECTRICAL INSTALLATION		
Electrical Equipment in Front Fuselage	E.B6.81.5	165
Electrical Equipment in Centre Fuselage	E.B6.81.7	257
Electrical Equipment in Rear Fuselage	E.B6.81.11	303
Electrical Equipment in Wing, Port	E.B7.81.9	327
Electrical Equipment in Wing, Starboard	E.B7.81.10	359
EQUIPMENT, AIRCRAFT		
Equipment in Pressure Cabin	E.B6.80.1	415
Equipment, L.L.A.B.S. Removable Fittings (S.O.O.)	E.B6.81.1515	435
EQUIPMENT, ANCILLARY		
Ground Equipment	E.A1.88.2	441
FUSELAGE		
Centre Portion (Pre-Mod. 1018)	E.B6.00.43	459
Centre Portion (Mod. 1018)	E.B6.00.49	462
Centre Structure (Pre-Mod. 1018)	E.B6.11.1521	469
Centre Structure (Mod. 1018)	E.B6.11.1	479
Front Portion	E.B6.10.1	503
Nose, Portion	E.B6.00.41	527
Rear Portion	E.B6.12.1	543
Rear Fuselage and Tail Unit	E.B6.00.45	559

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
MAIN PLANE	E.A3.24.1	601
Aileron, Port (Mod. 875-895)	E.A3.24.2	629
Aileron, Starboard (Mod. 875-895)	E.A1.25.1	645
Outer Flap, Port	E.A1.25.3	646
Inner Flap, Port	E.A1.25.2	649
Outer Flap, Starboard	E.A1.25.4	650
Inner Flap, Starboard	E.A1.20.10733	653
Undercarriage Door, c/w Mechanism, Port	E.A1.20.10734	665
Undercarriage Door, c/w Mechanism, Starboard	E.A6.00.11	679
Wing, Port	E.A6.00.12	693
Wing, Starboard	E.A6.20.1	709
Wing Structure, Port	E.A6.20.2	729
Wing Structure, Starboard	E.A1.00.67	753
Wing Tip, Port	E.A1.00.68	765
Wing Tip, Starboard		
MISCELLANEOUS ATTACHMENTS		
Wing to Fuselage, Port (Pre-Mod. 1018)	E.A1.00.21	779
Wing to Fuselage, Port (Mod. 1018)	E.B6.00.21	780
Wing to Fuselage, Starboard (Pre-Mod. 1018)	E.A1.00.22	780
Wing to Fuselage, Starboard (Mod. 1018)	E.B6.00.22	780
Front Fuselage to Centre Fuselage	E.A1.00.23	781
Centre Fuselage to Rear Fuselage	E.B6.00.25	781
Tail Plane to Rear Fuselage	E.B6.00.53	781
Fin to Fuselage	E.A1.00.55	782
Rudder to Fin and Fuselage	E.A1.00.57	782
Rear Fairing to Fuselage	E.A1.00.59	782
Controls to Rudder and Elevator	E.A1.00.63	782
Drop Tank to Wing, Port	E.A1.00.81	782
Drop Tank to Wing, Starboard	E.A1.00.82	782
POWER INSTALLATION		
Engine Cowling, Port	E.A6.50.493	795
Engine Cowling, Starboard	E.A6.50.495	805
Engine Mountings and Attachments, Port	E.A1.51.1	817
Engine Mountings and Attachments, Starboard	E.A1.51.2	829
R.A.7. Engine Installation, Port	E.A6.00.13	843
R.A.7. Engine Installation, Starboard	E.A6.00.14	857
RADIO AND RADAR INSTALLATION		
Radar, Front Fuselage	E.B6.90.127	873
Radar, Centre Fuselage	E.B6.90.129	875
Radar, Rear Fuselage	E.B6.90.131	877
Radio and Inter-Comm. in Centre Fuselage	E.B6.82.7	891
Radio and Inter-Comm. in Front Fuselage	E.B6.82.5	881
Radio and Inter-Comm. in Port Wing	E.B6.82.181	893
Radio and Inter-Comm. in Starboard Wing	E.B6.82.182	895

INDEX OF ASSEMBLIES

Assembly	Drawing No.	Page No.
SERVICES		
Cabin Pressure System in Centre Fuselage	E.B6.75.5	897
Cabin Pressure System in Front Fuselage	E.B6.75.3	907
Cabin Pressure System in Wing, Port (Pre-Mod. 2393-2155-2197) ...	E.B6.75.359	925
Cabin Pressure System in Wing, Port (Mod. 2393-2155-2197)	E.B6.75.825	929
Cabin Pressure System in Wing, Starboard	E.B6.75.781	941
Camera, Pipe Run (Pre-Mod. 3427 without Mod. 2197)	E.A3.75.507	949
Camera, Pipe Run (Mod. 3427 with Mod. 2197)	E.B6.75.571	951
De-Misting System	E.A3.76.215	955
Equipment in Inner Wing Leading Edge, Port (Pre-Mod. 2392-2155-2197)	E.B6.00.65	971
Equipment in Inner Wing Leading Edge, Port (Mod. 2393-2155-2197)	E.B6.00.363	973
Equipment in Inner Wing Leading Edge, Starboard (Pre-Mod. 2393-2155-2197)	E.B6.00.66	985
Equipment in Inner Wing Leading Edge, Starboard (Mod. 2393-2155-2197)	E.B6.00.364	987
Fire Protection System in Fuselage (Pre-Mod. 2614)	E.A1.60.1	1001
Fire Protection System in Fuselage (Mod. 2614)	E.B6.60.1	1002
Fire Protection System in Wing, Port	E.A1.60.3	1015
Fire Protection System in Wing, Starboard	E.A1.60.4	1027
Fuel System in Wing, Port	E.B6.57.17	1041
Fuel System in Wing, Starboard	E.B6.57.18	1055
Fuel System in Centre Fuselage	E.A3.57.67	1071
Fuel System (Nitrogen) Front Fuselage	E.A1.57.731	1099
Hydraulic Equipment in Front Fuselage	E.B6.73.3	1113
Hydraulic Equipment in Centre Fuselage	E.B6.73.5	1139
Hydraulic Equipment in Wing, Port	E.A6.73.7	1181
Hydraulic Equipment in Wing, Starboard	E.A6.73.8	1201
Hydraulic Equipment in Inner Wing Leading Edge, Port (Pre-Mod. 2393-2155-2197)	E.B6.73.23	1223
Hydraulic Equipment in Inner Wing Leading Edge, Port (Mod. 2393-2155-2197)	E.B6.73.395	1223
Hydraulic Equipment in Inner Wing Leading Edge, Starboard (Pre-Mod. 2393-2155-2197)	E.B6.73.24	1235
Hydraulic Equipment in Inner Wing Leading Edge, Starboard (Mod. 2393-2155-2197)	E.B6.73.397	1237
Oxygen System	E.B6.71.1	1251
TAIL UNIT		
Rudder, c/w Tab	E.A3.33.1	1271
Tailplane and Elevators (Pre-Mod. 2182)	E.B6.00.19	1287
Tailplane and Elevators (Mod. 2182)	E.A9.00.19	1287
TANKS		
Jettison Wing Fuel Tank, Port	E.A3.00.505	573
Jettison Wing Fuel Tank, Starboard	E.A3.00.506	585
UNDERCARRIAGE		
Main Undercarriage, Port	E.A1.40.727	1311
Main Undercarriage, Starboard	E.A1.40.728	1329
Nosewheel	E.A9.40.1	1347