

PART VI
ILLUSTRATIONS

KEY TO FIGS. 1, 2 and 3

1. Aileron spring-strut adjuster.
2. L.P. cock lever.
3. Cabin pressure control handwheel (behind seat).
4. Port aileron tab trim switch.
5. IFF and telebriefing control panel.
6. Cockpit lighting switches.
7. VHF sets controllers
8. VHF set changeover switch.
9. Tip and pylon tanks jettison switches.
10. H.P. cock lever and relight button.
11. Flap selector lever.
12. Elevator trim tab indicator.
13. Throttle damper.
14. Press-to-transmit switch.
15. Elevator trim control.
16. Airbrakes selector lever.
17. Wheel brakes pressure gauge, aileron tab-position warning light, U/C emergency retraction switch. Aileron power-failure warning light and hydraulics audio-warning cut-out switch.
18. Oxygen contents gauge.
19. Windscreen de-icing pump.
20. Anti-G test button (pilot).
21. Anti-G control lever.
22. AYP limit setting switch.
23. Undercarriage position indicator.
24. Flap position indicator.
25. Undercarriage warning light.
26. Undercarriage selector lever.
27. Radio altimeter (AYF).
28. Machmeter.
29. Generator failure warning lights (pilot).

RESTRICTED

30. AYF limit indicators.
31. GGS emergency lowering control.
32. GGS master switch.
33. GGS selector dimmer.
34. Starter master and main inverter switch.
35. Starter pushbutton.
36. Navigator's oxygen-flow indicator.
37. Fire-warning light and extinguisher pushbutton.
38. Fuel contents gauge.
39. Fuel transfer warning indicators.
40. Emergency lamp switch.
41. Standby inverter and booster pumps switches.
42. Fuel pressure warning indicator.
43. Pilot's oxygen-flow indicator.
44. Cabin pressure warning light.
45. Cabin altimeter.
46. Pilot's oxygen regulator.
47. Switches, left to right:—Camera master, camera aperture, camera ground test and L.P. pump test.
48. Switches, left to right:—Navigation lights, ident. lights, Gee inverter and power.
49. Pressure-head heater switch.
50. F.I.S. pushbutton.
51. APS.57 radar control panel.
52. Generator failure warning lights (navigator).
53. Battery isolating switch.
54. Circuit breakers, left to right:—L.P. pump, external lights, main inverter, standby inverter.
55. Main inverter failure indicator.
56. Homing/intercomm. switch.
57. Port aileron trim tab circuit breaker.
58. Crowbar.
59. GGS circuit breaker.
60. Navigator's press-to-transmit button.
61. Gun door tool.
62. Panel lamps dimmer switch.
63. Navigator's oxygen regulator.
64. Mk. 4F compass corrector box.
65. Landing lamp switch.
66. Pilot's seat-raising lever.
67. Hydraulic handpump.
68. Aileron power selector.
69. Hood jettison handle.

RESTRICTED

10 11 12 13 14 15 16 17

9

8

7

6


5

4

3

2

1

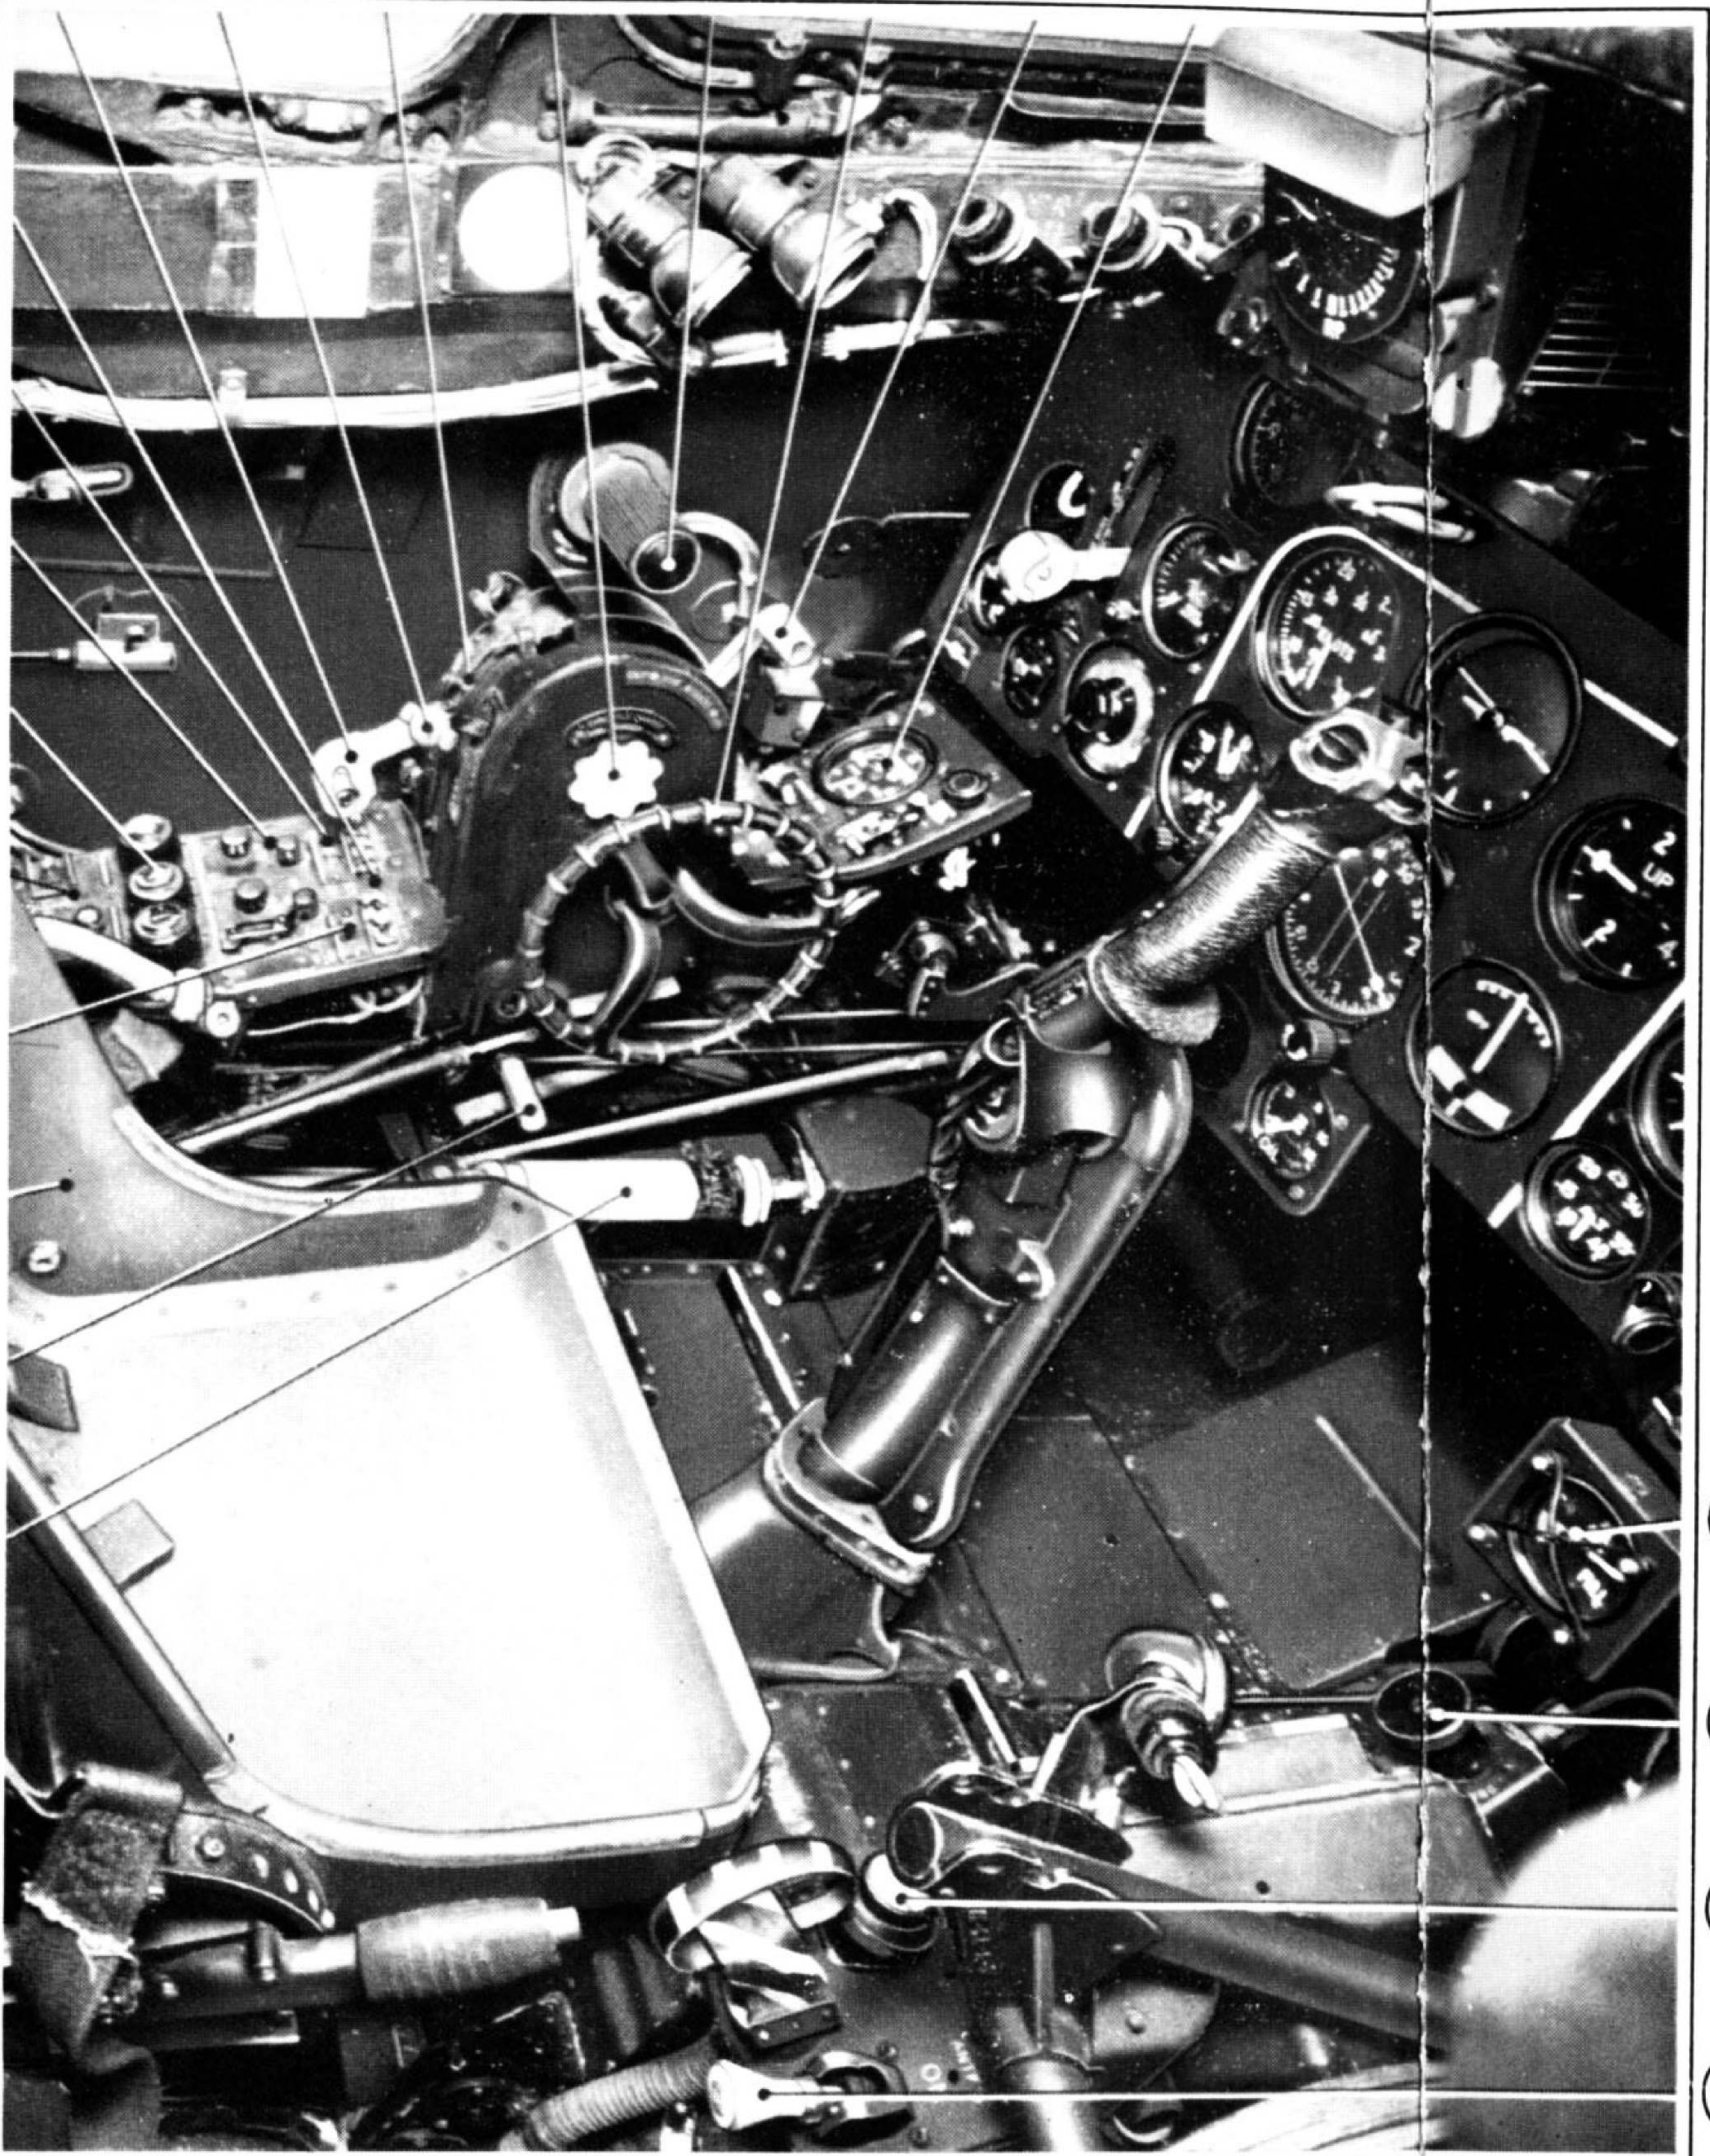

18

19

20

21

FIG
I

COCKPIT - PORT SIDE

FIG
I



FIG
2

COCKPIT - FORWARD VIEW

FIG
2

50 51 52 53 54 55 56 57 58 59

49

48

47

46

60


61

62

63

64

65

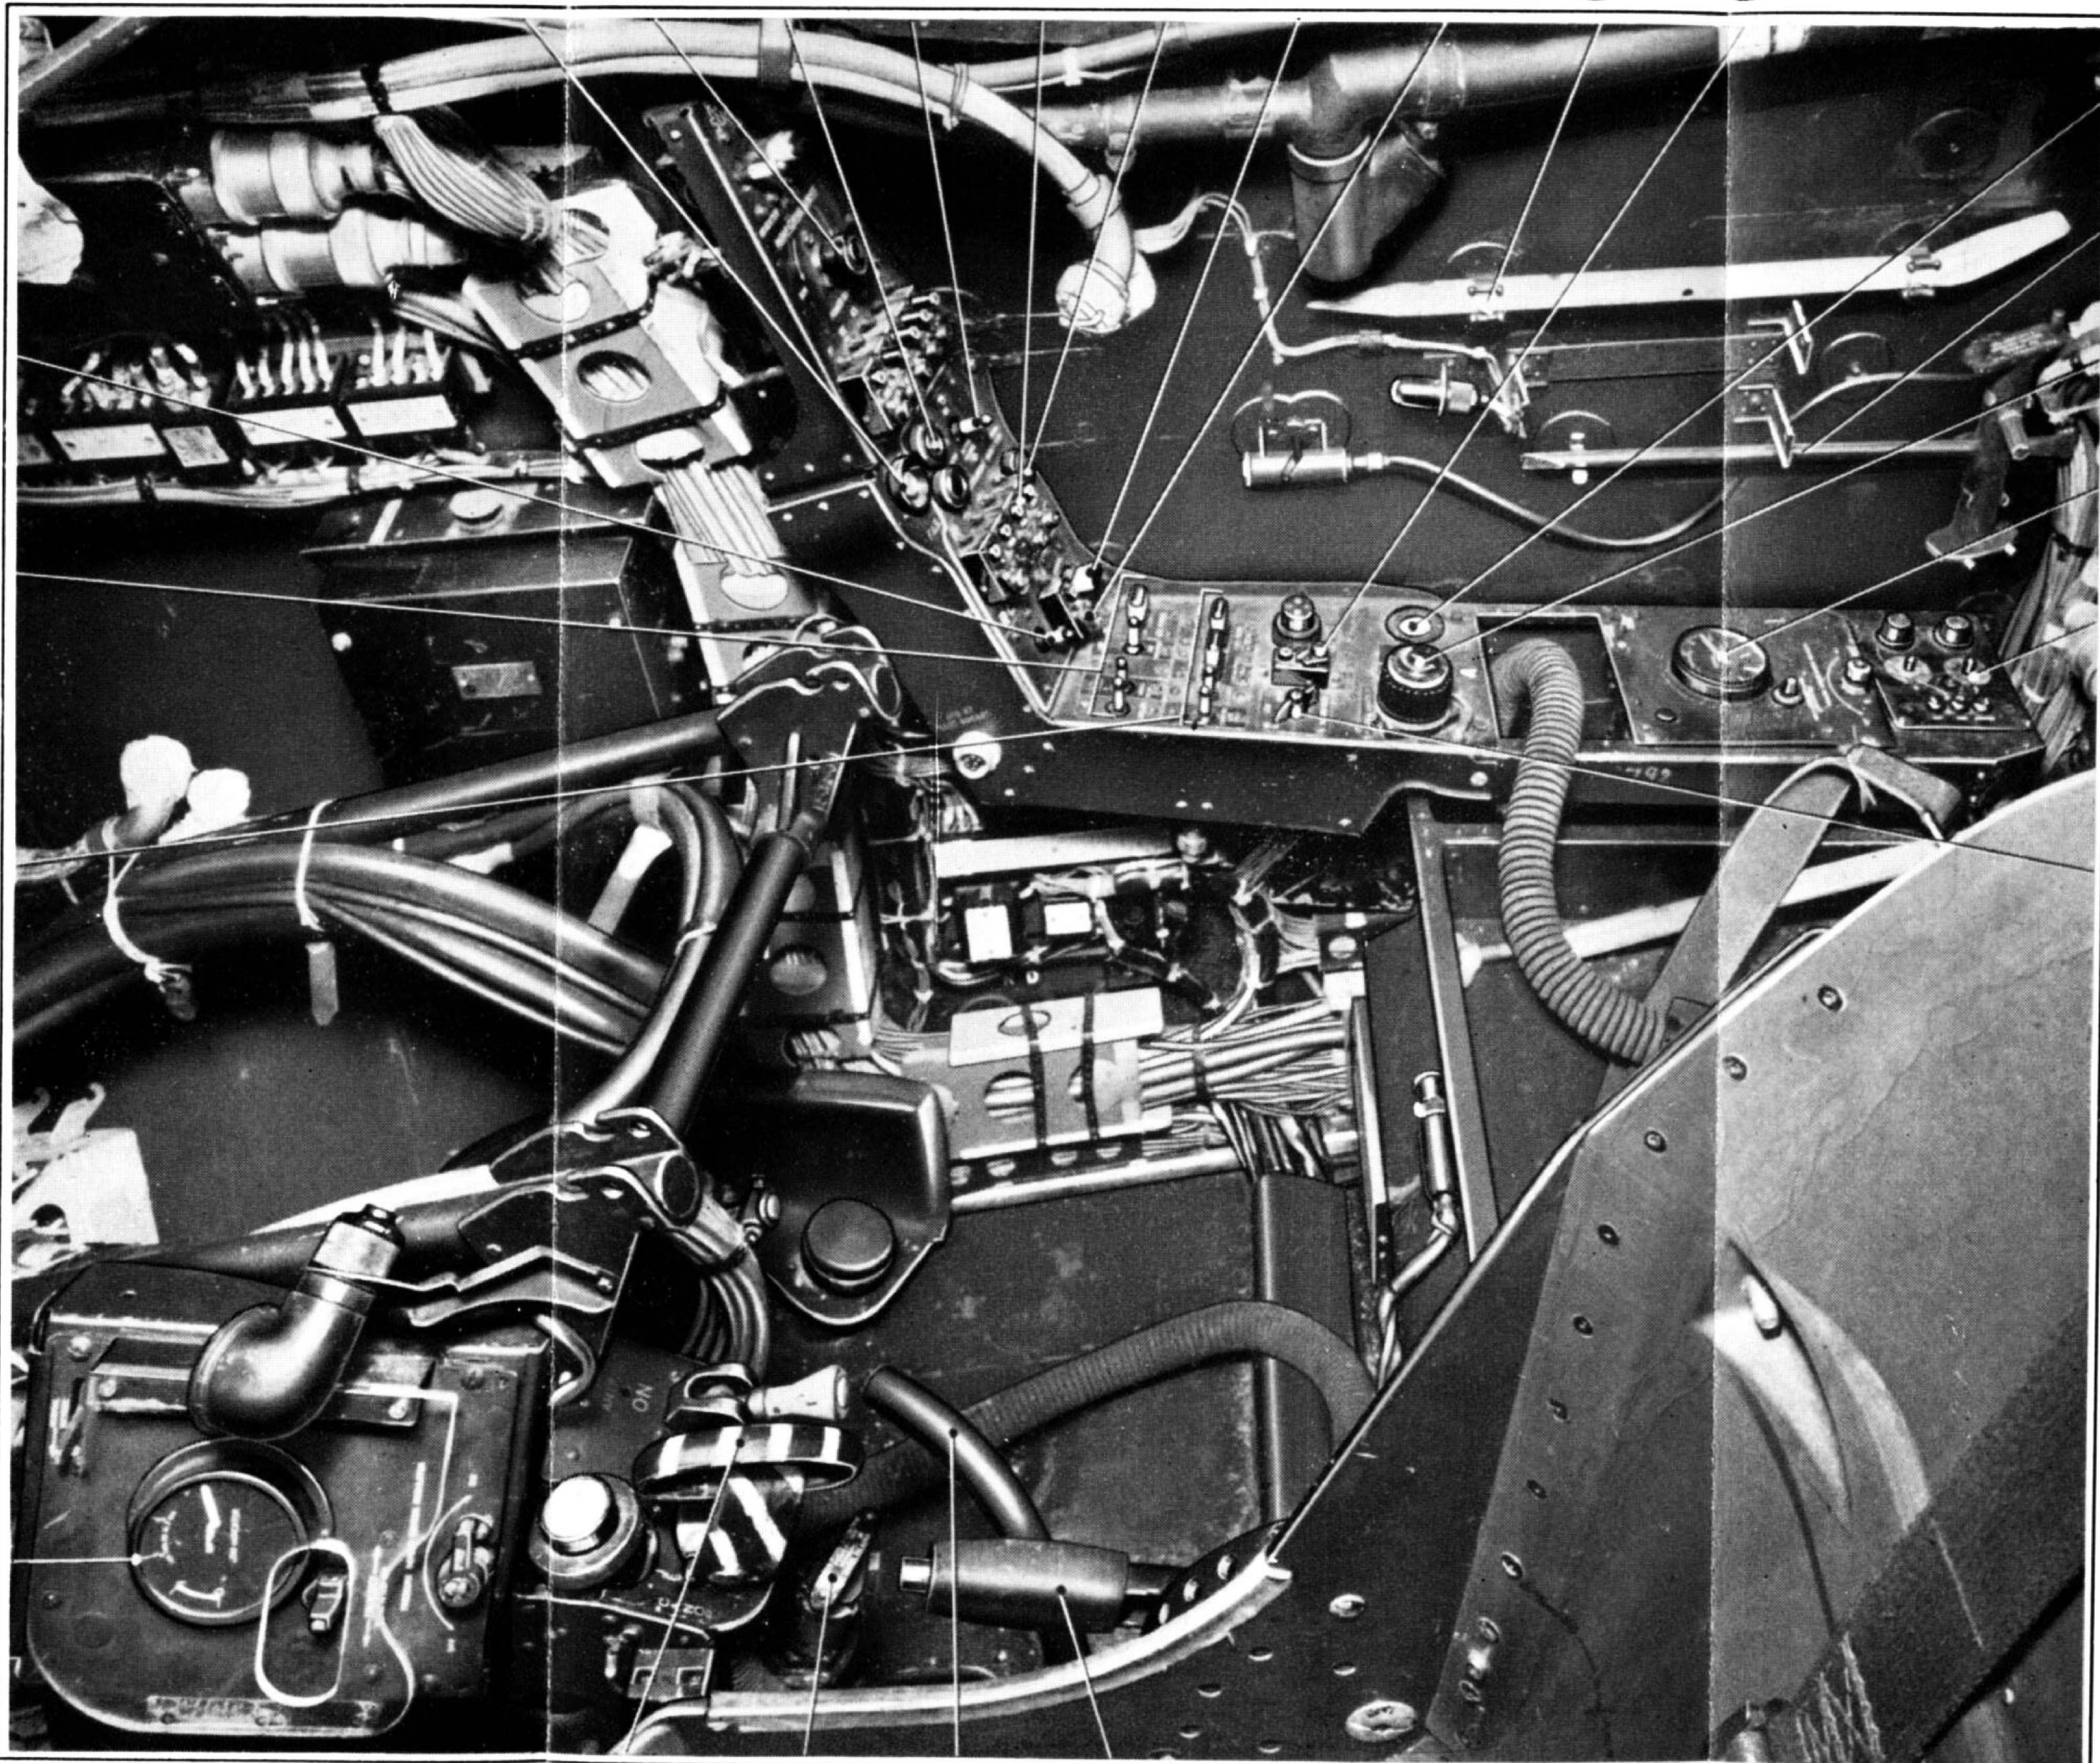

69 68 67 66

FIG

3

FIG

3

COCKPIT - STARBOARD SIDE

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

