

**PIPE SERVICES**  
**AIR PIPES AT TOTAL HEAD**  
**TO BAROMETRIC PRESSURE CONTROL UNIT**

| Ref. No.   | Part No.      | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|------------|---------------|---|---|---|---|---|---|---------|------|------------|-----------|
|            |               | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
|            | —             | <b>AIR PIPES AT TOTAL HEAD TO BAROMETRIC PRESSURE CONTROL UNIT</b><br>(12 S 453)  |   |   |   |   |   | 1       | —    |            | N.1       |
| 28D/12528  | R.001437ND    | <b>BLOCK</b> , clamp half for pipe at bulkhead No. 2 ...  |   |   |   |   |   | 1       | —    |            | N.1       |
|            | R.001439ND    | <b>BLOCK</b> , clamp, half, for pipe at bulkhead No. 2 ...  |   |   |   |   |   | 1       | —    |            | N.1       |
|            | A25/1B        | <b>BOLT</b> , 4 BA, for securing clip ...   |   |   |   |   |   | 1       | —    | C.         |           |
|            | DHS.28/4      | <b>CLIP</b> , "P" under front floor ...   |   |   |   |   |   | 1       | —    |            |           |
|            | DHS.30 Mk. 4  | <b>CLIP</b> , tubular, for air pipes ...  |   |   |   |   |   | 5       | —    |            |           |
|            | DHS.159/B/20  | <b>COUPLING</b> , $\frac{1}{8}$ " i/d $\times$ 2-0" long, DTD.625A Type 1<br>(Make from Ref. No. 32C/582)   |   |   |   |   |   | 9       | —    |            |           |
|            |               | Attaching parts for DHS.159/B/20, Coupling :—   |   |   |   |   |   |         |      |            |           |
| 28E/10154  | AGS.605/00    | Clip ...  |   |   |   |   |   | 2       | —    | C.         |           |
|            | DHS.159/E/20  | <b>COUPLING</b> , $\frac{1}{8}$ " i/d $\times$ 2-0" long, DTD.625A, Type 1<br>(Make from Ref. No. 32C/408)  |   |   |   |   |   | 1       | —    |            |           |
|            |               | Attaching parts for DHS.159/E/20, Coupling :—   |   |   |   |   |   |         |      |            |           |
| 28E/8183   | AGS.605/1     | Clip ...  |   |   |   |   |   | 2       | —    | C.         |           |
| 26FC/4116  | B.25698       | <b>FILTER</b> , air, Vokes ...  |   |   |   |   |   | 1       | —    | B.         | N.1       |
| 26FC/4915  | C.23027B      | <b>ELEMENT</b> , filter ...   |   |   |   |   |   | 1       | —    | C.         | N.1       |
|            |               | Attaching parts for B.25698, Filter :—  |   |   |   |   |   |         |      |            |           |
| 28E/8184   | AGS.605/2     | Clip ...  |   |   |   |   |   | 2       | —    | C.         |           |
| 28M/10287  | AGS.2001/B/1  | <b>NUT</b> , 4 BA, for bolt securing clip ...   |   |   |   |   |   | 1       | —    | C.         |           |
| 26FC/8344  | R.001461A/ND  | <b>PIPE</b> , from air filter to joint aft of fireproof bulkhead<br>Attaching parts for R.001461A/ND, Pipe :—                                     |   |   |   |   |   | 1       | —    | C.         | N.1       |
| 28D/12528  | A25/1B        | Bolt, 4 BA ...  |   |   |   |   |   | 2       | —    | C.         |           |
| 28M/10287  | AGS.2001/B/1  | Nut, 4 BA ...   |   |   |   |   |   | 2       | —    | C.         |           |
| 28VV/12306 | SP.15/B       | Washer ...  |   |   |   |   |   | 2       | —    | C.         |           |
|            | 12 S 1823ND   | <b>PIPE</b> , from drain plug to joint at cannon beam, $\frac{5}{16}$ " o/d.<br>$\times$ 20 SWG, L.54 or L.56                                     |   |   |   |   |   | 1       | —    |            | N.1       |
|            | R.001429ND    | <b>PIPE</b> , from joint aft of bulkhead No. 2 to air filter, $\frac{5}{16}$ " o/d<br>$\times$ 20 SWG, L.54 or L.56                               |   |   |   |   |   | 1       | —    |            | N.1       |
| 1026       | 12 S 595A/ND  | <b>PIPE</b> , from joint aft of fireproof bulkhead to barometric<br>pressure control unit on engine   |   |   |   |   |   | 1       | —    | C.         | N.1       |
|            | 12 S 1825ND   | <b>PIPE</b> , from joint at bottom of armour plate to drain pipe,<br>$\frac{5}{16}$ " o/d. $\times$ 20 SWG, L.54 or L.56                          |   |   |   |   |   | 1       | —    |            | N.1       |
| 26FC/8538  | R.001463A/ND  | <b>PIPE</b> , from joint at cannon beam to joint aft of bulkhead<br>No. 2   |   |   |   |   |   | 1       | —    | C.         | N.1       |
| 26FC/6989  | R.001339ND    | <b>PIPE</b> , from joint at fuselage nose air inlet to joint at<br>bottom of armour plate, $\frac{5}{16}$ " o/d. $\times$<br>20 SWG, L.54 or L.56 |   |   |   |   |   | 1       | —    | C.         | N.1       |
|            | 12 S 1827A/ND | <b>PIPE</b> , from joint under cockpit floor, to joint above<br>cockpit floor, bulkhead No. 1   |   |   |   |   |   | 1       | —    |            | N.1       |
| 6461       | 12 S 1509A    | <b>VALVE</b> , drain, barometric pressure control ...   |   |   |   |   |   | 1       | —    | C.         | N.1       |
| 28F/10525  | AGS.1107/C    | <b>CONE</b> , union, reducing ...   |   |   |   |   |   | 2       | —    | C.         | N.1       |
|            | 12 S 1515     | <b>DRAIN</b> , body ...   |   |   |   |   |   | 1       | —    |            | N.1       |
| 28R/1399   | AGS.216/D     | <b>PLUG</b> , flanged ...   |   |   |   |   |   | 1       | —    | C.         | N.1       |
| 28F/8215   | AGS.1138/B    | <b>WASHER</b> , jointing ...  |   |   |   |   |   | 2       | —    | C.         | N.1       |
| 28F/9651   | AGS.1138/D    | <b>WASHER</b> , jointing ...  |   |   |   |   |   | 1       | —    | C.         | N.1       |
|            |               | Attaching parts for 12 S 1509A, Valve :—  |   |   |   |   |   |         |      |            |           |
| 28D/12512  | A25/1C        | Bolt, 2 BA ...  |   |   |   |   |   | 4       | —    | C.         |           |
| 28W/3098   | AGS.162/C     | Washer ...  |   |   |   |   |   | 4       | —    | C.         |           |
| 28W/12305  | SP.13/B       | <b>WASHER</b> , for bolt securing clip ...  |   |   |   |   |   | 1       | —    | C.         |           |

INSTALLATION OF HYDRAULIC RESERVOIR

| Ref. No.  | Part No.      | Nomenclature   |   |   |   |   |   | No Off | M.R. | Cl. of St. | Plate No. |
|-----------|---------------|--|---|---|---|---|---|--------|------|------------|-----------|
|           |               | 1  | 2 | 3 | 4 | 5 | 6 |        |      |            |           |
|           |               | <b>INSTALLATION OF HYDRAULIC RESERVOIR</b><br>(12 S 1251A)   |   |   |   |   |   | -      | —    |            | NA.1      |
| 26FC/4181 | Q.002651      | <b>BLOCK</b> , clamp, for reservoir pipes, rear face bulkhead No. 2  |   |   |   |   |   | 2      | —    | C.         | NA.1      |
|           |               | Attaching parts for Q.002651, Blocks :—  |   |   |   |   |   |        |      |            |           |
| 28D/11890 | AS.1246/5C    | Bolt, 2 BA ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28L/11069 | AGS.2035/C    | Lockwasher ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 26FC/4182 | Q.002653      | <b>BLOCK</b> , clamp, for reservoir pipes, rear face of bulk-head No. 2  |   |   |   |   |   | 2      | —    | C.         |           |
|           |               | Attaching parts for Q.002653, Block :—   |   |   |   |   |   |        |      |            |           |
| 28D/11210 | AS.1246/3C    | Bolt, 2 BA ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28L/11069 | AGS.2035/C    | Lockwasher ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28F/10799 | AGS.1129/C    | <b>BODY</b> , banjo, pipe coupling ... ..  |   |   |   |   |   | 3      | —    | C.         |           |
| 28F/12396 | AGS.1135/CC   | <b>BOLT</b> , banjo, pipe coupling ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28F/9730  | AGS.1135/C    | <b>BOLT</b> , banjo, pipe coupling ... ..  |   |   |   |   |   | 2      | —    | C.         |           |
| 28U/14400 | AS.2426       | <b>BOLT</b> , securing trunnions to reservoir straps ...   |   |   |   |   |   | 1      | —    | C.         |           |
| 28E/10154 | AGS.605/00    | <b>CLIP</b> , for hose covering vent pipe, forward face, bulk-head No. 3   |   |   |   |   |   | 3      | —    | C.         |           |
| 28F/9705  | AGS.1102/C    | <b>CONE</b> , union-body, pipe coupling ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28F/10487 | AGS.1145/CC   | <b>CONE</b> , union-body, pipe coupling ... ..   |   |   |   |   |   | 1      | —    | C.         |           |
| 28F/10486 | AGS.1145/C    | <b>CONE</b> , union-body, pipe coupling ... ..   |   |   |   |   |   | 3      | —    | C.         |           |
| 28F/9736  | AGS.1145/D    | <b>CONE</b> , union-body, pipe coupling ... ..   |   |   |   |   |   | 1      | —    | C.         |           |
| 6502      | 12 S 1237     | <b>COVER</b> , for reservoir pipes, rear face bulkhead No. 2   |   |   |   |   |   | 1      | —    | C.         | NA.1      |
|           | DHS.159/C/3   | <b>HOSE</b> , covering vent pipe on forward face bulkhead No. 3, 3/8" i/d. x 3-0" long, P.R. (Make from 32C/399)   |   |   |   |   |   | 1      | —    |            |           |
| 5K/3373   | AS.3360/B5B   | <b>LEAD</b> , bonding, flexible bulkhead No. 3 ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
|           |               | Attaching parts for AS.3360/B5B, Lead :—   |   |   |   |   |   |        |      |            |           |
| 28E/14068 | AS.3181/6B    | Clip, " P " ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28M/13086 | A27/BP        | Nut, 4 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28S/13887 | A32/B10       | Screw ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28W/12305 | SP.13/B       | Washer ... ..  |   |   |   |   |   | 2      | —    | C.         |           |
| 28F/10108 | AGS.1148/C    | <b>NUT</b> , pipe coupling ... ..  |   |   |   |   |   | 3      | —    | C.         |           |
| 28F/9879  | AGS.1148/D    | <b>NUT</b> , pipe coupling ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28F/10489 | AGS.1148/CC   | <b>NUT</b> , thin, pipe coupling ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 6423      | 12 S 679ND    | <b>PIPE</b> , engine pump suction, from coupling and passing through floor to hose joint, 1/2" o/d. x 20 SWG, L.56 |   |   |   |   |   | 1      | MR   | C.         | NA.1      |
|           | 12 S 1241ND   | <b>PIPE</b> , engine pump, suction, from hydraulic reservoir to cone adaptor on decking                            |   |   |   |   |   | 1      | —    |            |           |
| 9041      | 12 S 1121A/ND | <b>PIPE</b> , engine pump, suction, from hydraulic reservoir to coupling   |   |   |   |   |   | 1      | MR   | C.         | NA.1      |
| 8147      | 12 S 683ND    | <b>PIPE</b> , hand pump, suction, from coupling and passing through floor to hose joint, 1/2" o/d x 20 SWG, L.56   |   |   |   |   |   | 1      | MR   | C.         | NA.1      |
|           | 12 S 1081ND   | <b>PIPE</b> , hand pump, suction, from joint under cannon floor, 3/8" o/d. x 20 SWG, L.56                          |   |   |   |   |   | 1      | —    |            | NA.1      |
|           | 12 S 1247ND   | <b>PIPE</b> , hand pump, suction, reservoir to coupling, 3/8" o/d. x 20 SWG, L.56                                  |   |   |   |   |   | 1      | —    |            | NA.1      |
| 8183      | 12 S 1675A/ND | <b>PIPE</b> , hand pump suction, tank to thermal relief valve (Mod. Ven. 553)                                      |   |   |   |   |   | 1      | —    | C.         |           |
|           |               | Attaching parts for 12 S 1675A/ND, Pipe :—   |   |   |   |   |   |        |      |            |           |
| 28D/11937 | AS.1246/1B    | Bolt, 4 BA ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28D/12511 | A25/2B        | Bolt, 4 BA ... ..  |   |   |   |   |   | 2      | —    | C.         |           |
| 28E/14065 | AS.3181/3B    | Clip, " P " ... ..   |   |   |   |   |   | 4      | —    | C.         |           |
| 28M/10287 | AGS.2001/B/1  | Nut, 4 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28W/12305 | SP.13/B       | Washer ... ..  |   |   |   |   |   | 5      | —    | C.         |           |
| 8149      | 12 S 687ND    | <b>PIPE</b> , return, from joint and passing through floor, 3/8" o/d x 20 SWG, L.56                                |   |   |   |   |   | 1      | MR   | C.         | NA.1      |

PIPE SERVICES

INSTALLATION OF HYDRAULIC RESERVOIR

| Ref. No.  | Part No.      | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|-----------|---------------|---|---|---|---|---|---|---------|------|------------|-----------|
|           |               | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
|           | 12 S 1083ND   | PIPE, return, from joint under cannon floor, $\frac{3}{8}$ " o/d. x 20 SWG, L.56                            |   |   |   |   |   | 1       | —    |            | NA.1      |
|           | 12 S 1245ND   | PIPE, return, from reservoir to joint $\frac{3}{8}$ " o/d x 20 SWG, L.56                                    |   |   |   |   |   | 1       | —    |            | NA.1      |
|           | 12 S 1249A/ND | PIPE, servodyne, return, from connection under decking, to joint under cannon floor, port side              |   |   |   |   |   | 1       | —    |            | NA.1      |
|           | 12 S 1239ND   | PIPE, servodyne, return from reservoir to cone adaptor on decking port side, bulkhead No. 2                 |   |   |   |   |   | 1       | —    |            | NA.1      |
| 8152      | 12 S 693ND    | PIPE, vent, from joint and passing through bulkhead No. 3 to hose joint, $\frac{3}{8}$ " o/d. x 20 SWG L.56 |   |   |   |   |   | 1       | MR   | C.         | NA.1      |
| 8151      | 12 S 691ND    | PIPE, vent, from reservoir, to joint under cannon floor, $\frac{3}{8}$ " o/d. x 20 SWG, L.56                |   |   |   |   |   | 1       | MR   | C.         | NA.1      |
| 10214     | 12 S 1243A    | RESERVOIR, hydraulic ... ..   |   |   |   |   |   | 1       | —    | B.         | NA.1      |
|           | 12 S 1235     | ADAPTOR ... ..  |   |   |   |   |   | 1       | —    |            | NA.1      |
| 28D/11937 | AS.1246/1B    | BOLT, 4 BA, for window ... ..   |   |   |   |   |   | 14      | —    | C.         | NA.1      |
| 28F/12078 | AGS.1159/C    | CAP, cone, in filler neck ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 26FC/3608 | Q.00923       | CAP, filler ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 28N/13738 | AGS.2030/25   | CIRCLIP, internal, for 1.5" dia. bore ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 26FC/2856 | Q.00647A      | FILTER, in filler neck... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 1616      | 12 S 673      | GASKET, window sealing ... ..   |   |   |   |   |   | 1       | —    | C.         | NA.1      |
|           | 12 S 1349     | NECK, filler ... ..   |   |   |   |   |   | 1       | —    |            | NA.1      |
| 1618      | 12 S 669      | RING, bolt for window ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 1615      | 12 S 675      | RING, nut, for window ... ..  |   |   |   |   |   | 1       | MR   | C.         | NA.1      |
| 28F/5605  | AGS.904/D     | SLEEVE, in filler cap ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
|           | Q.00874       | WASHER, under bolt heads 0.4" o/d. x $\frac{5}{32}$ " i/d. x $\frac{1}{16}$ " thick, BSS.216                |   |   |   |   |   | 14      | —    |            | NA.1      |
| 26FC/2858 | Q.00649       | WASHER, sealing, filler cap... ..   |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 1617      | 12 S 671      | WINDOW, $\frac{3}{32}$ " thick, DTD.339 ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 1663      | 12 F 681A     | STRAP, securing hydraulic reservoir ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 1662      | 12 F 689A     | STRAP, securing hydraulic reservoir ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
|           |               | Attaching parts for 12 F 681A and 12 F 689A, Straps :-  |   |   |   |   |   |         |      |            |           |
| 28P/12462 | SP.9/C8       | Pin, split ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
|           | 12 S 697      | Tube, securing, $\frac{3}{8}$ " o/d. x 20 SWG, 1.35" long, DTD.440  |   |   |   |   |   | 1       | —    |            | NA.1      |
| 28F/8225  | AGS.1138/A    | Washer ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28U/13999 | AS.2427       | TRUNNION, for strap connecting bolt ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 28U/14001 | AS.2429       | TRUNNION, for strap connecting bolt ... ..  |   |   |   |   |   | 1       | —    | C.         | NA.1      |
| 28F/10109 | AGS.1149/4    | WASHER, jointing, pipe coupling ... ..  |   |   |   |   |   | 6       | —    | C.         |           |
| 28F/11081 | AGS.1149/6    | WASHER, jointing, pipe coupling ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/11958 | AGS.1186/C    | WASHER, sealing, pipe coupling ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/11581 | AGS.1186/D    | WASHER, jointing, pipe coupling ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/12083 | AGS.1186/CC   | WASHER, jointing, pipe coupling ... ..  |   |   |   |   |   | 1       | —    | C.         |           |

PIPES FOR AIR SPEED INDICATOR IN PORT BOOM

| Ref. No.  | Part No.     | Nomenclature  |   |   |   |   |   | No Off | M.R. | Cl. of St. | Plate No. |
|-----------|--------------|---|---|---|---|---|---|--------|------|------------|-----------|
|           |              | 1   | 2 | 3 | 4 | 5 | 6 |        |      |            |           |
|           |              | <b>PIPES FOR AIR SPEED INDICATOR IN PORT BOOM (12-2S 303)</b>   |   |   |   |   |   | 1      | —    |            | NB.1      |
|           | Q.003743     | <b>BLOCK</b> , clamp, half, bottom of fin spar ... ..   |   |   |   |   |   | 2      | —    | —          | NB.1      |
| 28D/8306  | AS.1242/1C   | Attaching parts for Q.003743, Block :—<br>Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | —    | C.         | NB.1      |
|           | 12 W 3175    | <b>BLOCK</b> , clamp, half, stub boom diaphragm ... ..  |   |   |   |   |   | 2      | —    |            | NB.1      |
|           |              | Attaching parts for 12 W 3175, Block (pre pair) :—  |   |   |   |   |   |        |      |            |           |
| 28D/12515 | A25/10C      | Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28M/12929 | A27/CP       | Nut, 2 BA ... ..  |   |   |   |   |   | 2      | —    | C.         |           |
| 28W/12252 | SP.13/C      | Washer ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
|           | 12 S 1087    | <b>BLOCK</b> , clamp, half, top of fin spar ... ..  |   |   |   |   |   | 2      | —    |            | NB.1      |
|           |              | Attaching parts for 12 S 1087, Block :—   |   |   |   |   |   |        |      |            |           |
| 28D/12511 | A25/2B       | Bolt, 4 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 26BY/9309 | Q.98914A     | <b>BLOCK</b> , clamp, in stub boom, and on fin spar ... ..  |   |   |   |   |   | 3      | —    | C.         | NB.1      |
|           |              | Attaching parts for Q.98914A, Block :—  |   |   |   |   |   |        |      |            |           |
| 28D/12533 | A25/5C       | Bolt, 2 BA, in stub boom ... ..   |   |   |   |   |   | 1      | —    | C.         |           |
| 28D/12566 | A25/6C       | Bolt, 2 BA, on fin spar ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28W/12296 | SP.15/C      | Washer ... ..   |   |   |   |   |   | 1      | —    | C.         |           |
| 26FC/2646 | Q.00687      | <b>BLOCK</b> , clamp, half, in tail boom, rear end ... ..   |   |   |   |   |   | 1      | —    | C.         | NB.1      |
| 26FC/2647 | Q.00688      | <b>BLOCK</b> , clamp, half, in tail boom, rear end ... ..   |   |   |   |   |   | 1      | —    | C.         | NB.1      |
|           |              | Attaching parts for Q.00687 and Q.00688, Blocks, (per pair) :—  |   |   |   |   |   |        |      |            |           |
| 28D/12514 | A25/7C       | Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28D/8308  | AS.1242/3C   | Bolt, 2 BA ... ..   |   |   |   |   |   | 1      | —    | C.         |           |
| 28D/12528 | A25/1B       | <b>BOLT</b> , 4 BA, attaching drain pipes to bracket ... ..   |   |   |   |   |   | 8      | —    | C.         |           |
|           | 12 TB 137    | <b>CLIP</b> , for conduit along boom ... ..   |   |   |   |   |   | 4      | —    |            | NB.1      |
|           |              | Attaching parts for 12 TB 137, Clip :—  |   |   |   |   |   |        |      |            |           |
| 28D/11937 | AS.1246/1B   | Bolt, 4 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28M/10287 | AGS.2001/B/1 | Nut, 4 BA ... ..  |   |   |   |   |   | 2      | —    | C.         |           |
|           | Q.00604      | <b>CLIP</b> , for pipes and conduit along boom, 22 SWG, L.16 (Make from Ref. No. 30B/779)             |   |   |   |   |   | 7      | —    |            | NB.1      |
|           |              | Attaching parts for Q.00604, Clip :—  |   |   |   |   |   |        |      |            |           |
| 28S/2857  | A32/B12      | Screw, 4 BA ... ..  |   |   |   |   |   | 2      | —    | C.         |           |
| 8327      | 12 S 1631    | <b>CLIP</b> , special, for pitôt pipes on fin post, port boom   |   |   |   |   |   | 1      | —    |            | NB.1      |
|           |              | Attaching parts for 12 S 1631, Clip :—  |   |   |   |   |   |        |      |            |           |
| 8002      | 12 TF 171    | Bolt, special (Mod. Ven. 453) ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
| 28M/10288 | AGS.2001/C/1 | Nut, 2 BA ... ..  |   |   |   |   |   | 1      | —    | C.         |           |
|           | AS.2299/030  | Tube ... ..   |   |   |   |   |   | 1      | —    |            |           |
| 28W/12252 | SP.13/C      | Washer ... ..   |   |   |   |   |   | 2      | —    | C.         |           |
| 28F/5699  | AGS.902/BB   | <b>COLLAR</b> , pipe, for pressure and static pipes, top of fin                                       |   |   |   |   |   | 2      | —    | C.         |           |
|           | Q.002076ND   | <b>CONDUIT</b> , electrical cable, 1/2" o/d x 22 SWG x 9'-6-0" long, T.9 (Make from Ref. No. 30B/883) |   |   |   |   |   | 1      | —    |            | NB.1      |
|           | 12 PT 147ND  | <b>CONDUIT</b> , electrical cable, 3/8" o/d x 22 SWG x 8'-6-0" long, L.54                             |   |   |   |   |   | 1      | —    |            | NB.1      |
| 28F/8294  | AGS.1102/BB  | <b>COUPLING</b> , pipe... ..  |   |   |   |   |   | 8      | —    | C.         |           |
| 6A/3819   | †            | <b>HEAD</b> , pitôt, Mk. 8T ... ..  |   |   |   |   |   | 1      | —    | B.         |           |
|           |              | Attaching parts for A.M. Ref. No. 6A/3819, Head :—  |   |   |   |   |   |        |      |            |           |
| 28D/12514 | A25/7C       | Bolt, 2 BA ... ..   |   |   |   |   |   | 1      | —    | C.         |           |
| 28M/10288 | AGS.2001/C/1 | Nut, 2 BA ... ..  |   |   |   |   |   | 1      | —    | C.         |           |

PIPE SERVICES

PIPES FOR AIR SPEED INDICATOR IN PORT BOOM

| Ref. No.  | Part No.      | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No.    |
|-----------|---------------|---|---|---|---|---|---|---------|------|------------|--------------|
|           |               | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |              |
| 28L/13140 | A27/BT        | <b>LOCKNUT</b> , 4 BA, thin, for bolts attaching drain pipes to bracket                     |   |   |   |   |   | 8       | —    | C.         |              |
| 28L/11067 | AGS.2035/B    | <b>LOCKWASHER</b> , for bolts attaching drain pipes ...                                     |   |   |   |   |   | 8       | —    | C.         |              |
| 28V/5108  | AGS.838/4     | <b>NUT</b> , union, for pipes top of fin ...  |   |   |   |   |   | 4       | —    | C.         |              |
| 26FC/5877 | Q.00606A/1    | <b>PIPE</b> , drain, pressure and static, from joint in stub boom to joint in front of boom |   |   |   |   |   | 2       | —    | C.         | NB.1         |
| 26FC/5878 | Q.003655      | <b>PLUG</b> , drain ...   |   |   |   |   |   | 1       | —    | C.         | NB.1         |
| 26FC/2336 | Q.00111       | <b>WASHER</b> , jointing ...  |   |   |   |   |   | 1       | —    | C.         | NB.1<br>NC.4 |
|           | 12-2S 299A/ND | <b>PIPE</b> , pressure, 1st to 2nd joint, from pitôt head ...                               |   |   |   |   |   | 1       | —    |            | NB.1         |
|           | 12-2S 467A/ND | <b>PIPE</b> , pressure, from pitôt head ...   |   |   |   |   |   | 1       | —    |            | NB.1         |
|           | Q.001014A/ND  | <b>PIPE</b> , pressure, in fin ...  |   |   |   |   |   | 1       | —    |            | NB.1         |
| 6425      | 12 S 1036A/ND | <b>PIPE</b> , pressure, joint in front of boom to joint rear of boom                        |   |   |   |   |   | 1       | MR   | C.         | NB.1         |
|           | 12 S 201A/ND  | <b>PIPE</b> , pressure, wing to joint in stub boom ...                                      |   |   |   |   |   | 1       | —    |            | NB.1         |
|           | 12-2S 301A/ND | <b>PIPE</b> , static, 1st to 2nd joint, from pitôt head ...                                 |   |   |   |   |   | 1       | —    |            |              |
|           | 12-2S 469A/ND | <b>PIPE</b> , static, from pitôt head ...   |   |   |   |   |   | 1       | —    |            | NB.1         |
|           | Q.001016A/ND  | <b>PIPE</b> , static, in fin ...  |   |   |   |   |   | 1       | —    |            | NB.1         |
|           | 12 S 1035A/ND | <b>PIPE</b> , static, joint in front of boom to joint rear of boom                          |   |   |   |   |   | 1       | —    |            | NB.1         |
|           | 12 S 205A/ND  | <b>PIPE</b> , static, wing to joint, in stub boom ...                                       |   |   |   |   |   | 1       | —    |            | NB.1         |
| 28V/13603 | AGS.838/8     | <b>RING</b> , rubber, for pipes top of fin ...  |   |   |   |   |   | 4       | —    | C.         |              |
| 28F/5723  | AGS.904/BB    | <b>SLEEVE</b> , outer, for pipes top of fin ...   |   |   |   |   |   | 2       | —    | C.         |              |
| 28V/5104  | AGS.838/1     | <b>UNION</b> , straight, for pipes top of fin ...   |   |   |   |   |   | 2       | —    | C.         |              |

PIPES IN FUSELAGE

| Ref. No.   | Part No.     | Nomenclature  |     |     |     |     |   | No. Off | M.R. | Cl. of St. | Plate No. |
|------------|--------------|---|-----|-----|-----|-----|---|---------|------|------------|-----------|
|            |              | 1   | 2   | 3   | 4   | 5   | 6 |         |      |            |           |
|            | 12 S 1649    | <b>BLOCK</b> , clamp, for hydraulic pipes between bulkheads 3 and 4                                     |     |     |     |     |   | 1       | —    |            |           |
| 28D/12566  | A25/6C       | Attaching parts for 12 S 1649, Block :—   |     |     |     |     |   |         |      |            |           |
| 28L/11069  | AGS.2035/C   | Bolt, 2 BA  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
|            |              | Lockwasher  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
|            | 12 S 1647    | <b>BLOCK</b> , clamp, for hydraulic pipes under cannon floor  |     |     |     |     |   | 4       | —    | C.         |           |
|            |              | Attaching parts for 12 S 1647, Block :—   |     |     |     |     |   |         |      |            |           |
| 28D/8310   | AS.1242/6C   | Bolt, 2 BA  | ... | ... | ... | ... | 4 | —       | C.   |            |           |
| 28D/8309   | AS.1242/4C   | Bolt, 2 BA  | ... | ... | ... | ... | 4 | —       | C.   |            |           |
| 28L/11069  | AGS.2035/C   | Lockwasher  | ... | ... | ... | ... | 8 | —       | C.   |            |           |
|            | 12 S 1307    | <b>BLOCK</b> , clamp, for hydraulic pipes between bulkheads 3 and 4                                     |     |     |     |     |   | 1       | —    | C.         |           |
|            |              | Attaching parts for 12 S 1307, Block :—   |     |     |     |     |   |         |      |            |           |
| 28D/12534  | A25/9C       | Bolt, 2 BA  | ... | ... | ... | ... | 1 | —       | C.   |            |           |
| 28D/8311   | AS.1242/7C   | Bolt, 2 BA  | ... | ... | ... | ... | 1 | —       | C.   |            |           |
| 28L/11069  | AGS.2035/C   | Lockwasher  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
|            | 12 S 1453    | <b>BLOCK</b> , clamp, for hydraulic, pitôt and instrument pipes under cockpit floor                     |     |     |     |     |   | 2       | —    | C.         |           |
|            |              | Attaching parts for 12 S 1453, Block :—   |     |     |     |     |   |         |      |            |           |
| 28D/12629  | A25/8C       | Bolt, 2 BA  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 28L/11069  | AGS.2035/C   | Lockwasher  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 8144       | 12 S 537     | <b>BLOCK</b> , clamp, half, for hydraulic and brake pipes between fireproof bulkhead and bulkhead No. 3 |     |     |     |     |   | 2       | MR   | C.         |           |
| 26FC/2378  | Q.00280      | <b>BLOCK</b> , clamp, half, fuselage port side between fire-proof bulkhead and bulkhead No. 3           |     |     |     |     |   | 4       | —    | C.         |           |
|            |              | Attaching parts for Q.00280, Block (per pair) :—  |     |     |     |     |   |         |      |            |           |
| 28D/12629  | A25/8C       | Bolt, 2 BA  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 28L/11069  | AGS.2035/C   | Lockwasher  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 1631       | 12 S 869     | <b>BLOCK</b> , clamp, longitudinal, for pipes on cockpit floor  |     |     |     |     |   | 2       | —    | C.         |           |
|            |              | Attaching parts for 12 S 869, Block :—  |     |     |     |     |   |         |      |            |           |
| 28D/12534  | A25/9C       | Bolt, 2 BA  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 28L/11069  | AGS.2035/C   | Lockwasher  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
|            | A.002887     | <b>BLOCK</b> , clamp, nose wheel pipes at jack  |     |     |     |     |   | 1       | —    |            |           |
|            |              | Attaching parts for A.002887, Block :—  |     |     |     |     |   |         |      |            |           |
| 28D/12516  | A25/11C      | Bolt, 2 BA  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 28M/10288  | AGS.2001/C/1 | Nut, 2 BA   | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 28W/12252  | SP.13/C      | Washer  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 26FC/2382  | Q.00229A     | <b>BLOCK</b> , clamp, nosewheel pipes under cockpit floor, at bulkhead No. 2                            |     |     |     |     |   | 1       | —    | C.         | NC.6      |
|            |              | Attaching parts for Q.00229A, Block :—  |     |     |     |     |   |         |      |            |           |
| 28D/12533  | A25/5C       | Bolt, 2 BA  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 28W/12296  | SP.15/C      | Washer  | ... | ... | ... | ... | 2 | —       | C.   |            |           |
| 26FC/11770 | Q.00136A     | <b>BLOCK</b> , clamp, nosewheel pipes under floor   |     |     |     |     |   | 4       | —    | C.         | NC.6      |
|            |              | Attaching parts for Q.00136A, Block :—  |     |     |     |     |   |         |      |            |           |
| 28D/12533  | A25/5C       | Bolt, 2 BA  | ... | ... | ... | ... | 1 | —       | C.   |            |           |
| 28L/11069  | AGS.2035/C   | Lockwasher, for forward blocks  | ... | ... | ... | ... | 1 | —       | C.   |            |           |
| 28W/12296  | SP.15/C      | Washer, for rear blocks   | ... | ... | ... | ... | 1 | —       | C.   |            |           |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.   | Part No.       | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|------------|----------------|---|---|---|---|---|---|---------|------|------------|-----------|
|            |                | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
| 26FC/4946  | Q.00791A       | <b>BLOCK</b> , hydraulic accumulator charging ... ..  |   |   |   |   |   | 1       | —    | B.         | NC.3      |
| 26FC/6847  | Q.00792        | <b>BLOCK</b> ... ..   |   |   |   |   |   | 2       | —    | C.         | NC.3      |
|            | DHS.180 Mk. 7X | <b>TAB</b> , for locking wire... ..   |   |   |   |   |   | 1       | —    |            |           |
| 28Y/10145  | AGS.1200       | <b>VALVE</b> , charging ... ..  |   |   |   |   |   | 1       | —    | B.         |           |
| 28F/8215   | AGS.1138/B     | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
|            |                | Attaching parts for Q.00971A, Block :—  |   |   |   |   |   |         |      |            |           |
| 28D/12541  | A25/24C        | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28D/12887  | A25/34C        | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28M/10288  | AGS.2001/C/1   | Nut, 2 BA ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
|            | DHS.56 Mk. 2   | Washer, 2 BA (Make from Ref. No. 26BY/5871) ...   |   |   |   |   |   | 2       | —    |            |           |
| 26BY/5871  | DHS.34/C       | Washer, 2BA (Required to make Part No. DHS.56 Mk. 2)  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/9730   | AGS.1135/C     | <b>BOLT</b> , banjo, at fireproof bulkhead for hydraulic vent pipe  |   |   |   |   |   | 1       | —    | C.         |           |
| 8185       | 12-21S 2517    | <b>BOLT</b> , banjo, for pressure relief valve at hand pump   |   |   |   |   |   | 1       | —    | C.         | NC.7      |
| 28F/11078  | AGS.1136/C     | <b>BOLT</b> , banjo, for pipe connection on cannon floor  |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/9730   | AGS.1135/C     | <b>BOLT</b> , banjo, for servodyne, pressure and vent pipe connections  |   |   |   |   |   | 3       | —    | C.         |           |
| 28F/12396  | AGS.1135/CC    | <b>BOLT</b> , banjo, for servodyne return and vent pipe connections   |   |   |   |   |   | 3       | —    | C.         |           |
| 28D/12512  | A25/1C         | <b>BOLT</b> , 2 BA, for securing pipe clips ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
| 26FC/2367  | Q.00563        | <b>BRACKET</b> , angle, for clamp blocks under cannon floor   |   |   |   |   |   | 1       | —    | C.         | NC.6      |
|            | Q.00842        | <b>BRACKET</b> , angle, for clamp blocks under cannon floor, 16 SWG, L.72                                     |   |   |   |   |   | 1       | —    |            | NC.6      |
|            |                | Attaching parts for Q.00563 and Q.00842, Brackets (per pair) :—   |   |   |   |   |   |         |      |            |           |
|            | Q.003611ND     | Bolt, 2 BA (Make from Part No. A25/10C, Ref. No. 28D/12515)   |   |   |   |   |   | 2       | —    |            |           |
|            | Q.00476A       | <b>BRACKET</b> , mounting, for by-pass valve on rear face of bulkhead No. 2                                   |   |   |   |   |   | 1       | —    |            | NC.2      |
|            | 12 S 1583A     | <b>BRACKET</b> , mounting, for canopy seal three-way cock   |   |   |   |   |   | 1       | —    |            | NC.7      |
|            | 12 S 1585ND    | <b>BRACKET</b> ... ..   |   |   |   |   |   | 1       | —    |            | NC.7      |
| 28M/12929  | A27/CP         | <b>NUT</b> , 2 BA ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
|            | Q.00875        | <b>PIN</b> , stop ... ..  |   |   |   |   |   | 2       | —    |            | NC.7      |
|            |                | Attaching parts for 12 S 1583A, Bracket :—  |   |   |   |   |   |         |      |            |           |
| 28D/12528  | A25/1B         | Bolt, 4 BA ... ..   |   |   |   |   |   | 3       | —    | C.         |           |
| 28M/10287  | AGS.2001/B/1   | Nut, 4 BA ... ..  |   |   |   |   |   | 3       | —    | C.         |           |
| 28W/12305  | SP.13/B        | Washer ... ..   |   |   |   |   |   | QR      | —    | C.         |           |
| 10041      | 12-3 S 1939A   | <b>BRACKET</b> , supporting flow indicator ... ..   |   |   |   |   |   | 1       | MR   | C.         |           |
|            |                | Attaching parts for 12-3 S 1939A, Bracket :—  |   |   |   |   |   |         |      |            |           |
| 10042      | 12-3 S 1945A   | Clip, securing bracket ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28D/12535  | A25/12C        | Bolt, 2 BA ... ..   |   |   |   |   |   | 4       | —    | C.         |           |
| 28M/10288  | AGS.2001/C/1   | Nut, 2 BA ... ..  |   |   |   |   |   | 4       | —    | C.         |           |
| 28W/12252  | SP.13/C        | Washer ... ..   |   |   |   |   |   | 4       | —    | C.         |           |
| 28F/11177  | AGS.1159/A     | <b>CAP</b> , blanking, brake differential unit and oil pressure adaptor at bulkhead No. 2                     |   |   |   |   |   | 3       | —    | C.         |           |
| 26FC/6977  | R.002509A      | <b>CAP</b> , blanking, complete with chain and tag, for canopy seal pressure escape adaptor on bulkhead No. 1 |   |   |   |   |   | 1       | —    | C.         | NC.7      |
|            | R.00296ND      | <b>CHAIN</b> , 2-5' long, single iron jack, 18 SWG ...  |   |   |   |   |   | 1       | —    |            |           |
| 28F/10482  | AGS.1140/A     | <b>NIPPLE</b> ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/5721   | AGS.904/A      | <b>NUT</b> , coupling ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28P/12462  | SP.9/C8        | <b>PIN</b> , split ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 26BY/17540 | DHS.180 Mk. 3X | <b>TAG</b> ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
|            | R.00102        | <b>TAG</b> ... ..   |   |   |   |   |   | 1       | —    |            |           |

PIPES IN FUSELAGE

| Ref. No.  | Part No.      | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|-----------|---------------|---|---|---|---|---|---|---------|------|------------|-----------|
|           |               | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
| 28E/8182  | AGS.605/0     | CLIP, for hose at anti "G" valve and pressure reducing valve connections  |   |   |   |   |   | 3       | —    | C.         |           |
| 28E/14086 | AS.3181/16C   | CLIP, for hose quick release connection at bulkhead No. 2   |   |   |   |   |   | 1       | —    | C.         |           |
|           |               | Attachment parts for AS.3181/16C, Clip :—   |   |   |   |   |   |         |      |            |           |
| 28D/12514 | A25/7C        | Bolt, 2 BA ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 28W/11069 | AGS.2035/C    | Lockwasher ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 28M/13591 | A24/CP        | Nut, 2 BA ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28E/14044 | AS.3180/11B   | CLIP, for quick release connection at bulkhead No. 2  |   |   |   |   |   | 2       | —    | C.         |           |
| 28E/10154 | AGS.605/00    | CLIP ... ..   |   |   |   |   |   | 11      | —    | C.         |           |
|           | DUNLOP        | CLIP, for hydraulic vent pipe on front face of fireproof bulkhead   |   |   |   |   |   | 1       | —    |            |           |
|           | DAS.183/06    |   |   |   |   |   |   |         |      |            |           |
| 26FC/2364 | Q.00175A      | CLIP, hydraulic accumulator support, under cannon floor   |   |   |   |   |   | 2       | —    | C.         |           |
|           |               | Attaching parts for Q.00175A, Clip :—   |   |   |   |   |   |         |      |            |           |
| 28D/12934 | A25/28C       | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28L/11069 | AGS.2035/C    | Lockwasher ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28E/14055 | AS.3180/8C    | CLIP, "P," on pipe blocks on rear face of bulkhead No. 2  |   |   |   |   |   | 2       | —    | C.         |           |
| 28E/14200 | AS.3181/6C    | CLIP, "P," for vent pipe, mounted on clamp block between bulkheads No. 3 and 4                                  |   |   |   |   |   | 1       | —    | C.         |           |
|           |               | Attaching parts for AS.3181/6C, Clip :—   |   |   |   |   |   |         |      |            |           |
| 28D/8311  | AS.1246/7C    | Bolt, 2 BA ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 28E/14041 | AS.3180/8B    | CLIP, securing hose at side of pilot's seat ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
|           |               | Attaching parts for AS.3180/8B, Clip :—   |   |   |   |   |   |         |      |            |           |
| 28D/8337  | AS.1248/1B    | Bolt, 4 BA ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 28M/10287 | AGS.2001/B1   | Nut, 4 BA ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28W/12306 | SP15/B        | Washer ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
|           | DHS.30 Mk. 3  | CLIP, tubular, for canopy seal pipes hydraulic accumulator pipe under cannon floor and on bulkhead No. 2        |   |   |   |   |   | 7       | —    |            |           |
| 28E/14050 | AS.3180/3C    | CLIP, tubular, hydraulic accumulator pipe under cannon floor  |   |   |   |   |   | 2       | —    | C.         |           |
|           | Q.00919       | CLIP, tubular, lower, for canopy seal pipe on bulkhead No. 2, 22 SWG, L.72                                      |   |   |   |   |   | 1       | —    |            | NC.7      |
|           | Q.002100      | COCK, three-way, canopy seal, on Starboard side of cockpit<br>(Make from Ref. No. 27F/1960)                     |   |   |   |   |   | 1       | —    |            | NC.7      |
| 27F/1960  | VICKERS D.349 | COCK, three-way, canopy seal on Starboard side of cockpit<br>(Required to make Part No. Q.002100)               |   |   |   |   |   | 1       | —    | A.         | NC.7      |
| 28F/10610 | AGS.1118/B    | COUPLING, cone tee-piece between brake unit and pressure maintaining valve                                      |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/9704  | AGS.1102/B    | COUPLING, cone union between control valve and pressure maintaining valve                                       |   |   |   |   |   | 1       | —    | C.         |           |
| 27VA/4553 | DUNLOP        | COUPLING, quick release, complete with hose assembly, seamed to ejector seat                                    |   |   |   |   |   | 1       | —    | C.         |           |
|           | Q.003689ND    | COUPLING, rubber tubing at tee-pieces on pressure and static pipes to machmeter, DTD.251, 1/4" i/d x 18" long   |   |   |   |   |   | 2       | —    |            |           |
|           |               | Attaching parts for Q.003689ND, Coupling :—   |   |   |   |   |   |         |      |            |           |
| 28E/3321  | AGS.606/D     | Clip, hose, ring type, 1/2" i/d ... ..  |   |   |   |   |   | 4       | —    | C.         |           |
|           | Q.003691ND    | COUPLING, rubber tubing, at tee pieces on pressure and static pipes to machmeter, DTD.251, 1/4" i/d x 3.5" long |   |   |   |   |   | 2       | —    |            |           |
|           |               | Attaching parts for Q.003691ND, Coupling :—   |   |   |   |   |   |         |      |            |           |
| 28E/3321  | AGS.606/D     | Clip, hose, ring type, 1/2" i/d ... ..  |   |   |   |   |   | 4       | —    | C.         |           |

PIPE SERVICES  
PIPES IN FUSELAGE

| Ref. No.  | Part No.     | Nomenclature  |     |     |     |     |     | No. Off | M.R. | Cl. of St. | Plate No. |
|-----------|--------------|---|-----|-----|-----|-----|-----|---------|------|------------|-----------|
|           |              | 1   | 2   | 3   | 4   | 5   | 6   |         |      |            |           |
| 28V/5104  | AGS.838/1    | <b>COUPLING</b> , for air speed indicator drain pipes   |     |     |     |     |     | 4       | —    | C.         |           |
|           | DHS.159/E/30 | <b>COUPLING</b> , for engine pump suction and vacuum pipes at bulkhead No. 2, $\frac{1}{2}$ " i/d $\times$ 3-0" long, DTD.625A, Type 1 (Make from Ref. No. 32C/408) |     |     |     |     |     | 2       | —    |            |           |
|           | DHS.159/C/20 | <b>COUPLING</b> , for hydraulic vent pipe, $\frac{3}{8}$ " i/d $\times$ 2-0" long, DTD.625A, Type 1 (Make from Ref. No. 32C/399)                                    |     |     |     |     |     | 3       | —    |            |           |
| 28F/14731 | AGS.1104/CC  | <b>COUPLING</b> , for servodyne return pipe through decking bulkhead No. 2, at reservoir and on cockpit floor   |     |     |     |     |     | 4       | —    | C.         |           |
| 28F/9706  | AGS.1102/D   | <b>COUPLING</b> , for vacuum pipe behind instrument panel   |     |     |     |     |     | 1       | —    | C.         |           |
| 28F/10410 | AGS.1104/C   | <b>COUPLING</b> , pipe... ..  |     |     |     |     |     | 5       | —    | C.         |           |
| 28F/9708  | AGS.1104/B   | <b>COUPLING</b> , pipe, at R.H. end of hydraulic accumulator  |     |     |     |     |     | 1       | —    | C.         |           |
| 28F/9705  | AGS.1102/C   | <b>COUPLING</b> , pipe... ..  |     |     |     |     |     | 6       | —    | C.         |           |
| 28F/15087 | AGS.1118/CC  | <b>COUPLING</b> , pipe... ..  |     |     |     |     |     | 3       | —    | C.         |           |
| 28F/14869 | AGS.1114/CC  | <b>COUPLING</b> , pipe, on fireproof bulkhead, for servodyne  |     |     |     |     |     | 1       | —    | C.         |           |
| 28F/12076 | AGS.1114/C   | <b>COUPLING</b> , pipe, on fireproof bulkhead for servodyne, pressure pipes   |     |     |     |     |     | 1       | —    | C.         |           |
|           |              | Attaching parts for AGS.1114/CC and AGS/1114/C, Couplings :—  |     |     |     |     |     |         |      |            |           |
| 28D/12512 | A25/1C       | Bolt, 2 BA  | ... | ... | ... | ... | ... | 3       | —    | C.         |           |
| 28M/10288 | AGS.2001/C/1 | Nut, 2 BA   | ... | ... | ... | ... | ... | 3       | —    | C.         |           |
| 28W/12296 | SP.15/C      | Washer  | ... | ... | ... | ... | ... | 3       | —    | C.         |           |

PIPES IN FUSELAGE

| Ref. No.  | Part No.      | Nomenclature   |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|-----------|---------------|--|---|---|---|---|---|---------|------|------------|-----------|
|           |               | 1  | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
| 28F/8294  | AGS.1102/BB   | <b>COUPLING</b> , pipe, servodyne pressure connection at fuselage side   |   |   |   |   |   | 1       | —    | C.         |           |
| 6524      | 12 S 1281     | <b>COUPLING</b> , pipe, flanged, for hydraulic pipes, power boost aileron on cockpit floor, $\frac{3}{8}$ " B.S.P.                                       |   |   |   |   |   | 2       | —    | C.         | NC.3      |
| 6525      | 12 S 1283     | <b>COUPLING</b> , pipe, flanged, for hydraulic pipes power boost aileron on cockpit floor, $\frac{7}{16}$ " B.S.P.                                       |   |   |   |   |   | 1       | —    | C.         | NC.3      |
| 28F/9704  | AGS.1102/B    | <b>COUPLING</b> , pipe, for canopy seal pipe forward of instrument panels  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/10410 | AGS.1104/C    | <b>COUPLING</b> , pipe, for hydraulic vent pipe on front face of fireproof bulkhead, pressure pipe at hand pump and L.H. end of hydraulic accumulator    |   |   |   |   |   | 4       | —    | C.         |           |
| 28F/12791 | AGS.1106/BB   | <b>COUPLING</b> , pipe, for pitôt pipes at fireproof bulkhead  |   |   |   |   |   | 2       | —    | C.         |           |
| 9203      | 12-3S 811     | <b>COUPLING</b> , tee-piece, for servodyne pressure pipes at fireproof bulkhead  |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/13290 | AGS.1120/11   | <b>COUPLING</b> , tee-piece, for accumulator pressure pipes forward of bulkhead No. 2  |   |   |   |   |   | 1       | —    | C.         |           |
| 4890      | 12-20S 1631   | <b>COUPLING</b> , tee-piece, for power boost accumulator and selector pipes on rear face of bulkhead No. 2   |   |   |   |   |   | 1       | —    | C.         | MC.8      |
| 9204      | 12-3S 813     | <b>COUPLING</b> , tee-piece, for servodyne return pipes at fireproof bulkhead  |   |   |   |   |   | 1       | —    | C.         | NC.5      |
| 28F/10610 | AGS.1118/B    | <b>COUPLING</b> , tee-piece, for hydraulic pipes between cut-out valve and selector  |   |   |   |   |   | 1       | —    | C.         |           |
|           | Q.002081ND    | <b>COUPLING</b> , vacuum pump, at tee-piece behind instrument panel, $\frac{3}{8}$ " i/d. $\times$ 15-0" long, DTD.625, type 3 or BTR.1159 Non-Kink hose |   |   |   |   |   | 1       | —    |            |           |
| 28V/5107  | AGS.838/3     | <b>ELBOW</b> , for air speed indicator pipes at machmeter operated warning device  |   |   |   |   |   | 2       | —    | C.         |           |
| 26FC/2363 | Q.00161A      | <b>HANDLE</b> , hydraulic hand pump ... ..<br>Attaching parts for Q.00161A, Handle :—  |   |   |   |   |   | 1       | —    | C.         | NC.7      |
| 28D/12515 | A25/10C       | Bolt, 2 BA ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28M/10288 | AGS.2001/C/1  | Nut, 2 BA ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 5953      | 12 S 1181ND   | <b>HOSE</b> , flexible, $\frac{3}{8}$ " i/d Kinkproof, Dunlop, from anti "G" Valve to reducing valve (Mod. Ven. 273)                                     |   |   |   |   |   | 1       | —    | C.         | LA.1      |
| 5954      | 12 S 1183A/ND | <b>HOSE</b> , flexible, $\frac{3}{8}$ " i/d., Kinkproof, Dunlop, from anti "G" valve to reducing valve (Mod. Ven. 273)                                   |   |   |   |   |   | 1       | —    | C.         | LA.1      |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.   | Part No.       | Nomenclature  |   |   |   |   |   | No Off. | M.R. | Cl. of St. | Plate No. |
|------------|----------------|---|---|---|---|---|---|---------|------|------------|-----------|
|            |                | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
|            | 12-4S 39A/1    | <b>INDICATOR</b> , flow hydraulic pump failure warning, under cannon floor between bulkheads Nos. 2 and 3, Port |   |   |   |   |   | 1       | —    |            |           |
| 28F/423227 | AGS.1135/B     | <b>BOLT</b> , banjo ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/10798  | AGS.1129/B     | <b>BOLT</b> , cone ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 27M/702    | AIR.42840/4    | <b>INDICATOR</b> , flow ... ..  |   |   |   |   |   | 1       | —    | A.         |           |
| 28M/10328  | AGS.2002/C/1   | <b>NUT</b> , thin, adjusting knurled screw against micro switch   |   |   |   |   |   | 1       | —    | C.         |           |
| 5CW/4638   | †              | <b>SWITCH</b> , micro operating flow indicator ...  |   |   |   |   |   | 1       | —    | B.         |           |
|            |                | Attaching parts for 5CW/4638, Switch :—   |   |   |   |   |   |         |      |            |           |
| 28D/12625  | A25/9B         | Bolt ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28M/10287  | AGS.2001/B/1   | Nut ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
| 28W/12305  | SP.13/B        | Washer ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/12048  | AGS.1186/B     | <b>WASHER</b> , sealing for banjo bolt ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
|            |                | Attaching parts for 12-4S 39A/1, Indicator :—   |   |   |   |   |   |         |      |            |           |
| 28D/11255  | AS.1246/2C     | Bolt, 2 BA ... ..   |   |   |   |   |   | 4       | —    | C.         |           |
|            | DHS.109 Mk. 72 | <b>LABEL</b> , " Charging Point " ... ..  |   |   |   |   |   | 1       | —    |            |           |
|            | DHS.109 Mk. 71 | <b>LABEL</b> , " Test Point " ... ..  |   |   |   |   |   | 1       | —    |            |           |
| 5K/—       | AS.3360/C8C    | <b>LEAD</b> , bonding, bracket supporting flow indicator  |   |   |   |   |   | 1       | —    | C.         |           |
| 26FC/2362  | Q.0078         | <b>LEVER</b> , operating, for by-pass valve on rear face of bulkhead No. 2                                      |   |   |   |   |   | 1       | —    | C.         | NC.3      |
|            |                | Attaching parts for Q.0078, Lever :—  |   |   |   |   |   |         |      |            |           |
| 28D/12513  | A25/2C         | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 28M/10288  | AGS.2001/C/1   | Nut, 2 BA ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/10491  | AGS.1148/A     | <b>LOCKNUT</b> , for brake pressure pipe adaptor on bulkhead No. 1  |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/9584   | AGS.1148/B     | <b>LOCKNUT</b> , for canopy seal pipe adaptor on bulkhead No. 1   |   |   |   |   |   | 1       | —    | C.         |           |
| 6500       | 12 S 1275      | <b>MOUNTING</b> , securing hydraulic accumulators on cannon floor, port side                                    |   |   |   |   |   | 2       | —    | C.         |           |
|            |                | Attaching parts for 12 S 1275, Mounting :—  |   |   |   |   |   |         |      |            |           |
| 28D/12513  | A25/2C         | Bolt, 2 BA ... ..   |   |   |   |   |   | 6       | —    | C.         |           |
| 28L/11069  | AGS.2035/C     | Lockwasher ... ..   |   |   |   |   |   | 6       | —    | C.         |           |
| 28F/9501   | AGS.1142/B     | <b>NIPPLE</b> , at hydraulic accumulator charging block   |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/9501   | AGS.1142/B     | <b>NIPPLE</b> , at junction plate on bulkhead No. 2, for brake pressure pipe, and at canopy seal cock           |   |   |   |   |   | 6       | —    | C.         |           |

PIPES IN FUSELAGE

| Ref. No.  | Part No.        | Nomenclature   |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|-----------|-----------------|--|---|---|---|---|---|---------|------|------------|-----------|
|           |                 | 1  | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
| 28F/9501  | AGS.1142/B      | <b>NIPPLE</b> , for pipes at brake pressure gauge ... ..   |   |   |   |   |   | 3       | —    | C.         |           |
| 28M/10288 | AGS.2001/C/1    | <b>NUT</b> , 2 BA, for bolt securing pipe clip on front face of fireproof bulkhead                       |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/5721  | AGS.904/A       | <b>NUT</b> , coupling, for blanking cap on brake differential unit                                       |   |   |   |   |   | 1       | —    | C.         |           |
| 28V/5108  | AGS.838/4       | <b>NUT</b> , pipe, coupling for air speed indicator pipes and cabin pressure gauge tee-piece connections |   |   |   |   |   | 10      | —    | C.         |           |
|           | Q.00697A        | <b>PANEL</b> , complete with pneumatic accessories on bulkhead No. 2                                     |   |   |   |   |   | 1       | —    |            | NC.1      |
| 26FC/3621 | Q.00720         | <b>ADAPTOR</b> , aft end of cylinder ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 26FC/3622 | Q.00721         | <b>ADAPTOR</b> , charging point ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 28F/11167 | AGS.1132/A      | <b>BODY</b> , banjo, aft end of cylinder ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/8221  | AGS.1135/A      | <b>BOLT</b> , banjo, aft end of cylinder ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 28D/12512 | A25/C1          | <b>BOLT</b> , 2 BA, for air filter clip ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 26FC/6434 | Q.00713A        | <b>CLIP</b> , half, air filter ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.1      |
|           | Q.00716         | <b>CLIP</b> , half, air filter ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 26FC/6435 | Q.00709A        | <b>CLIP</b> , half, oil and water trap ... ..  |   |   |   |   |   | 2       | —    | C.         | NC.1      |
|           | Q.00710         | <b>CLIP</b> , half, oil and water trap ... ..  |   |   |   |   |   | 2       | —    | C.         | NC.1      |
| 26FC/6436 | Q.00717A        | <b>CLIP</b> , securing regulator to cylinder ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.1      |
|           | DHS.30 Mk. 3    | <b>CLIP</b> , tubular ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 6D/128    | †               | <b>CYLINDER</b> , compressed air ... ..  |   |   |   |   |   | 1       | —    | A.         | NC.1      |
| 27G/2091  | DUNLOP ACO.1268 | <b>FILTER</b> , air ... ..   |   |   |   |   |   | 1       | —    | A.         | NC.1      |
|           | DHS.109 Mk. 72  | <b>LABEL</b> , "Charging Point" ... ..   |   |   |   |   |   | 1       | —    |            |           |
| 28F/10490 | AGS.1148/F      | <b>LOCKNUT</b> , at regulator and aft end of cylinder  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/9584  | AGS.1148/B      | <b>LOCKNUT</b> , for charging valve ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
|           | Q.002655ND      | <b>NIPPLE</b> , (Make from Part No. AGS.1142/B Ref. No. 28F/9501)  |   |   |   |   |   | 7       | —    |            | NC.1      |
| 28F/9501  | AGS.1142/B      | <b>NIPPLE</b> ... ..   |   |   |   |   |   | 3       | —    | C.         |           |
| 28F/9735  | AGS.1142/A      | <b>NIPPLE</b> ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 26FC/4141 | Q.00872A        | <b>PANEL</b> , mounting ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 26FC/4822 | Q.00704A/ND     | <b>PIPE</b> , air filter to pressure valve ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 26FC/4833 | Q.00888A/ND     | <b>PIPE</b> , air regulator to joint at forward end of cylinder  |   |   |   |   |   | 1       | —    | C.         | NC.1      |
|           | Q.003633A/ND    | <b>PIPE</b> , charging valve to tee-piece ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 26FC/4821 | Q.00702A/ND     | <b>PIPE</b> , joint, at forward end of cylinder to air filter  |   |   |   |   |   | 1       | —    | C.         |           |
| 26FC/4818 | Q.00699A/ND     | <b>PIPE</b> , oil trap outlet to air regulator ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 26FC/4820 | Q.00700A/ND     | <b>PIPE</b> , tee-piece to oil trap inlet ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.1      |
| 27VB/3247 | HYMATIC A. 2657 | <b>REGULATOR</b> , air pressure (For Spares see AP.4515E, Vol. 3, Part 1)                                |   |   |   |   |   | 1       | —    | B.         | NC.1      |
| 28S/2862  | A32/C16         | <b>SCREW</b> , 2 BA, for oil and water trap and cylinder clips   |   |   |   |   |   | 4       | —    | C.         |           |
| 28F/10610 | AGS.1118/B      | <b>TEE-PIECE</b> , charging valve line ... ..  |   |   |   |   |   | 1       | —    | C.         |           |
| 27VB/3168 | HYMATIC B.2946  | <b>TRAP</b> , oil and water (For Spares see AP.4515E, Vol. 3, Part 1)                                    |   |   |   |   |   | 1       | —    | B.         | NC.1      |
| 28Y/10145 | AGS.1200        | <b>VALVE</b> , air cylinder charging ... ..  |   |   |   |   |   | 1       | —    | B.         |           |
| 27G/2022  | DUNLOP AHO.5712 | <b>VALVE</b> , pressure ... ..   |   |   |   |   |   | 1       | —    | A.         | NC.1      |
|           |                 | Attaching parts for AHO.5712 Valve :—  |   |   |   |   |   |         |      |            |           |
| 28D/12512 | A25/1C          | Bolt 2 BA ... ..   |   |   |   |   |   | 4       | —    | C.         |           |
| 28L/11069 | AGS.2035/C      | Lockwasher ... ..  |   |   |   |   |   | 4       | —    | C.         |           |
| 26BY/5871 | DHS.34/C        | Washer ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
| 28W/12252 | SP.13/C         | Washer ... ..  |   |   |   |   |   | 2       | —    | C.         |           |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.                            | Part No.  | Nomenclature  |   |   |   |   |   | No. Off. | M.R. | Cl. of St. | Plate No. |
|-------------------------------------|---|---|---|---|---|---|---|----------|------|------------|-----------|
|                                     |   | 1   | 2 | 3 | 4 | 5 | 6 |          |      |            |           |
| 28F/8225<br>28F/9653<br>28F/8215    | AGS.1138/A<br>AGS.1138/F<br>AGS.1138/B<br>Q.00904   | <b>WASHER</b> , jointing, aft end of cylinder ... ..  |   |   |   |   |   | 2        | —    | C.         | NC.1      |
|                                     |   | <b>WASHER</b> , jointing, aft end of cylinder ... ..  |   |   |   |   |   | 1        | —    | C.         |           |
|                                     |   | <b>WASHER</b> , jointing, charging valve ... ..   |   |   |   |   |   | 1        | —    | C.         |           |
|                                     |   | <b>WASHER</b> , pipe joint, at forward end of cylinder, 0-8" o/d. x 0-5" i/d. x 18 SWG, L.72            |   |   |   |   |   | 2        | —    | C.         |           |
| 28D/12537<br>28D/12541<br>28M/10288 | A25/14C<br>A26/24C<br>AGS.2001/C/1<br>DHS.367 Mk. 3 | Attaching parts for Q.00697A, Panel :—  |   |   |   |   |   |          |      |            |           |
|                                     |   | Bolt, 2 BA ... ..   |   |   |   |   |   | 6        | —    | C.         |           |
|                                     |   | Bolt, 2 BA ... ..   |   |   |   |   |   | 2        | —    | C.         |           |
|                                     |   | Nut, 3 BA ... ..  |   |   |   |   |   | 8        | —    | C.         |           |
|                                     |   | Washer, (Make from Part No. SP.19/C, Ref. No. 28W/12439)  |   |   |   |   |   | 8        | —    | C.         |           |
| 26BY/3165                           | DHS.33 Mk. 1  | Washer ... ..   |   |   |   |   |   | 16       | —    | C.         |           |
|                                     | 12 F 2033A/ND                                       | <b>PANEL</b> , oxygen regulator, attached to R.H. instrument panel (Mod. Ven. 273)                      |   |   |   |   |   | 1        | —    | C.         |           |
| 2355<br>6D/1587                     | 12 F 1115A<br>†                                     | <b>BRACKET</b> , mounting ... ..  |   |   |   |   |   | 1        | —    | C.         | JE.1      |
|                                     |   | <b>REGULATOR</b> , oxygen, Mk. 16A ... ..   |   |   |   |   |   | 1        | —    | A.         |           |
| 28D/11255                           | AS.1246/2C  | Attaching parts for 6D/1587 Regulator :—  |   |   |   |   |   |          |      |            |           |
|                                     |   | Bolt, 2 BA ... ..   |   |   |   |   |   | 4        | —    | C.         |           |
| 27VB/3440                           | HYMATIC<br>C.50502                                  | <b>VALVE</b> , control, SV.6, Mk. 2, " Off-ON " mounted on oxygen regulator bracket                     |   |   |   |   |   | 1        | —    | B.         |           |
| 28D/11255<br>28W/11069<br>28M/13324 | AS.1246/2C<br>AGS.2035/C<br>A29/CP                  | Attaching parts for 27VB/3440 Valve :—  |   |   |   |   |   |          |      |            |           |
|                                     |   | Bolt, 2 BA ... ..   |   |   |   |   |   | 4        | —    | C.         |           |
|                                     |   | Lockwasher ... ..   |   |   |   |   |   | 4        | —    | C.         |           |
|                                     |   | Nut, 2 BA ... ..  |   |   |   |   |   | 4        | —    | C.         |           |
| 28D/11564<br>28D/11210<br>28W/11069 | AS.1246/1C<br>AS.1246/3C<br>AGS.2035/C              | Attaching parts for 12 F 2033A/ND Panel :—  |   |   |   |   |   |          |      |            |           |
|                                     |   | Bolt, 2 BA ... ..   |   |   |   |   |   | 1        | —    | C.         |           |
|                                     |   | Bolt, 2 BA ... ..   |   |   |   |   |   | 3        | —    | C.         |           |
|                                     |   | Lockwasher ... ..   |   |   |   |   |   | 1        | —    | C.         |           |
| 28P/12587                           | SP.9/C4   | <b>PIN</b> , split, retaining blanking cap at brake differential unit                                   |   |   |   |   |   | 1        | —    | C.         |           |
|                                     | 12 S 1491A/ND                                       | <b>PIPE</b> , accumulator pressure from tee-piece under cockpit floor to joint forward of cannon beam   |   |   |   |   |   | 1        | —    | C.         |           |
| 1874                                | 12 S 1047A/ND                                       | <b>PIPE</b> , air speed indicator pressure, between tee-pieces rear of instrument panel                 |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | 12 S 1449A/ND                                       | <b>PIPE</b> , air speed indicator pressure, from drain pipe to tee-piece                                |   |   |   |   |   | 1        | —    | C.         | NC.4      |
| 1628                                | 12 S 757A/ND  | <b>PIPE</b> , air speed indicator pressure, from junction plate on bulkhead No. 2, to drain pipe        |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | 12 S 1639A/ND                                       | <b>PIPE</b> , air speed indicator pressure, from junction plate on bulkhead No. 2 to fireproof bulkhead |   |   |   |   |   | 1        | —    | C.         |           |
| 1870                                | 12 S 1039A/ND                                       | <b>PIPE</b> , air speed indicator pressure, from tee pieces to machmeter operated warning device        |   |   |   |   |   | 1        | —    | C.         | NC.4      |
| 1872                                | 12 S 1043A/ND                                       | <b>PIPE</b> , air speed indicator, static, between tee-pieces rear of instrument panel                  |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | 12 S 1447A/ND                                       | <b>PIPE</b> , air speed indicator, static, from drain to tee-piece                                      |   |   |   |   |   | 1        | —    | C.         | NC.4      |
| 1871                                | 12 S 1041A/ND                                       | <b>PIPE</b> , air speed indicator, static, from tee-piece to machmeter operated warning device          |   |   |   |   |   | 1        | —    | C.         | NC.4      |
| 1626                                | 12 S 755A/ND  | <b>PIPE</b> , air speed indicator, static, from junction plate on bulkhead No. 2, to drain pipe         |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | 12 S 1637A/ND                                       | <b>PIPE</b> , air speed indicator, static, from junction plate on bulkhead No. 2, to fireproof bulkhead |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | 12 S 1301A/ND                                       | <b>PIPE</b> , brake, accumulator to tee-piece ... ..  |   |   |   |   |   | 1        | —    | C.         | NC.8      |
| 7129                                | 12 S 559A/ND  | <b>PIPE</b> , brake, L.H. from bulkhead No. 2, to fireproof bulkhead                                    |   |   |   |   |   | 1        | MR   | C.         | NC.4      |
| 7130                                | 12 S 563A/ND  | <b>PIPE</b> , brake, R.H., from bulkhead No. 2, to fireproof bulkhead                                   |   |   |   |   |   | 1        | MR   | C.         | NC.4      |
|                                     | 12 S 305A/ND  | <b>PIPE</b> , brake pressure, charging valve tee-piece to fireproof bulkhead                            |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | 12 S 1439A/ND                                       | <b>PIPE</b> , brake pressure, from junction plate on bulkhead No. 2, to differential unit               |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | Q.00737A/ND   | <b>PIPE</b> , brake pressure, from junction plate to pressure valve, bulkhead No. 2                     |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | Q.00695A/ND   | <b>PIPE</b> , brake pressure gauge, junction plate to air cylinder, bulkhead No. 2                      |   |   |   |   |   | 1        | —    | C.         | NC.4      |
|                                     | 12 S 1437A/ND                                       | <b>PIPE</b> , brake pressure gauge, to junction plate on bulkhead No. 2                                 |   |   |   |   |   | 1        | —    | C.         | NC.4      |
| 8325                                | 12 S 309A/ND  | <b>PIPE</b> , canopy seal junction plate on bulkhead No. 2, to fireproof bulkhead                       |   |   |   |   |   | 1        | MR   | C.         | NC.7      |
| 26FC/5702                           | Q.003651A/ND  | <b>PIPE</b> , canopy seal, pressure escape, No. 1 bulkhead, complete with nipple and union nut          |   |   |   |   |   | 1        | —    | C.         |           |
| 26FC/5406<br>9042                   | Q.003621A/ND<br>12 S 1139A/ND<br>12-4 S 31A/ND      | <b>PIPE</b> , canopy seal pressure, cock to bulkhead No. 2  |   |   |   |   |   | 1        | —    | C.         |           |
|                                     |   | <b>PIPE</b> , canopy seal pressure, from cock to bulkhead No. 2   |   |   |   |   |   | 1        | MR   | C.         |           |
|                                     |   | <b>PIPE</b> , cut-out valve to tee-piece between bulkheads Nos, 2 and 3, port                           |   |   |   |   |   | 1        | —    | C.         |           |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.  | Part No.           | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No.  |
|-----------|--------------------|---|---|---|---|---|---|---------|------|------------|------------|
|           |                    | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |            |
| 9664      | 12 S 1627A/ND      | PIPE, dive brake off, from fireproof bulkhead to selector valve   |   |   |   |   |   | 1       | MR   | C.         | NC.8       |
| 9663      | 12 S 1625A/ND      | PIPE, dive brake on, from fireproof bulkhead to selector valve  |   |   |   |   |   | 1       | MR   | C.         | NC.8       |
|           | 12 S 1503A/ND      | PIPE, dive brake pressure, from cut-out valve to non-return valve   |   |   |   |   |   | 1       | —    |            |            |
|           | Q.00495A/ND        | PIPE, dive brake pressure, from non-return valve to selector valve  |   |   |   |   |   | 1       | —    |            | NC.8       |
|           | Q.00497A/ND        | PIPE, dive brake return, from selector valve to cut-out valve   |   |   |   |   |   | 1       | —    |            | NC.8       |
| 26FC/2353 | Q.0027A            | PIPE, drain, in air speed indicator pressure and static lines on cockpit floor                                  |   |   |   |   |   | 2       | —    | C.         | NC.4       |
| 26FC/5878 | Q.003655           | PLUG, drain ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.4       |
| 26FC/2336 | Q.00111            | WASHER, jointing ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.4       |
| 10047     | 12-4S 35A/ND       | PIPE, engine pump pressure to flow indicator, under cannon floor between bulkheads Nos. 2 and 3, Port           |   |   |   |   |   | 1       | —    |            |            |
| 1682      | 12 S 907A/ND       | PIPE, engine pump suction, from fireproof bulkhead to hose coupling under cannon floor                          |   |   |   |   |   | 1       | —    | C.         | NC.4       |
| 517       | 12 S 215A/ND       | PIPE, flap down, from fireproof bulkhead to selector valve  |   |   |   |   |   | 1       | —    | C.         | NC.8       |
| 518       | 12 S 219A/ND       | PIPE, flap up, from fireproof bulkhead to selector valve  |   |   |   |   |   | 1       | —    | C.         | NC.8       |
|           | Q.00825A/ND        | PIPE, flap selector valve to hydraulic accumulator release valve  |   |   |   |   |   | 1       | —    |            |            |
| 27M/7778  | LOCKHEED AIR.31822 | PIPE, flexible, nose wheel down, from pipe joint to jack  |   |   |   |   |   | 1       | —    | A.         | NC.6       |
| 27M/7781  | LOCKHEED AIR.34490 | PIPE, flexible, nose wheel up, from pipe joint to jack  |   |   |   |   |   | 1       | —    | A.         | NC.6       |
| 10048     | 12-4S 37A/ND       | PIPE, flow indicator to cut out valve under cannon floor, between bulkheads Nos. 2 and 3, Port                  |   |   |   |   |   | 1       | —    | C.         |            |
|           | 12-4S 63A/ND       | PIPE, flow indicator to non-return valve in seal relief line, between bulkheads Nos. 2 and 3, Port              |   |   |   |   |   | 1       | —    |            |            |
|           | 12 S 1327A/ND      | PIPE, from cone tee-piece under cockpit floor to thermal relief valve   |   |   |   |   |   | 1       | —    |            | NC.6       |
|           | 12 S 1173A/ND      | PIPE, from brake unit pressure to tee-piece $\frac{1}{2}$ " o/d, 22 SWG, L.56 (Mod. Ven. 273)                   |   |   |   |   |   | 1       | —    |            | LA.1       |
| 5952      | 12 S 1171A/ND      | PIPE, from control valve to reducing valve $\frac{1}{2}$ " o/d, 22 SWG, L.56 (Mod. Ven. 273)                    |   |   |   |   |   | 1       | —    | C.         | LA.1       |
| 5951      | 12 S 1169A/ND      | PIPE, from pipe coupling to control valve, $\frac{1}{2}$ " o/d, 22 SWG, L.56 (Mod. Ven. 273)                    |   |   |   |   |   | 1       | —    | C.         | LA.1       |
|           | 12-4S 77A/ND       | PIPE, from coupling tee-piece to bulkhead No. 2, $\frac{1}{2}$ " od, 22 SWG, L.56 (Mod. Ven. 273)               |   |   |   |   |   | 1       | —    |            |            |
| 5955      | 12 S 1319A/ND      | PIPE, from coupling tee-piece to pressure maintaining valve, $\frac{1}{2}$ " o/d, 22 SWG, L.56 (Mod. Ven. 273)  |   |   |   |   |   | 1       | —    | C.         | LA.1       |
| 5956      | 12 S 1321A/ND      | PIPE, from pressure maintaining valve to coupling cone union, $\frac{1}{2}$ " o/d, 22 WSG, L.56 (Mod. Ven. 273) |   |   |   |   |   | 1       | —    | C.         | LA.1       |
|           | 12 S 1303A/ND      | PIPE, from special banjo body under cockpit floor, servodyne to pressure switch                                 |   |   |   |   |   | 1       | —    |            | NC.6       |
| 6024      | 12 S 1419A/ND      | PIPE, from tee-piece at cut-out valve to adaptor forward of cut-out valve                                       |   |   |   |   |   | 1       | —    | C.         |            |
|           | 12-4S 29A/ND       | PIPE, from tee-piece to selector valves between bulkheads Nos. 2 and 3, Port                                    |   |   |   |   |   | 1       | —    |            |            |
|           | 12 S 1329A/ND      | PIPE, from thermal relief valve to restrictor valve under cockpit floor   |   |   |   |   |   | 1       | —    |            | NC.6       |
|           | Q.003757A/ND       | PIPE, hand pump pressure from pump to joint on bulkhead No. 2, to non-return valve UMC 703                      |   |   |   |   |   | 1       | —    |            | NC.7, NC.8 |
|           | Q.00823A/ND        | PIPE, hydraulic accumulator release valve to flap selector valve  |   |   |   |   |   | 1       | —    |            | NC.8       |
|           | 12 S 1607ND        | PIPE, hydraulic accumulator to charging point on bulkhead No. 2   |   |   |   |   |   | 1       | —    |            | NC.8       |
|           | 12 S 1323A/ND      | PIPE, hydraulic accumulator to charging point on bulkhead No. 2   |   |   |   |   |   | 1       | —    |            | NC.8       |
| 8184      | 12 S 1677A/ND      | PIPE, inlet, to pressure relief valve from hand pump at bulkhead No. 2  |   |   |   |   |   | 1       | —    | C.         | NC.7       |
|           | 12-4S 61A/ND       | PIPE, non-return valve to selector valves, under cannon floor between bulkheads Nos. 2 and 3, Port              |   |   |   |   |   | 1       | —    |            |            |
|           | Q.00442A/ND        | PIPE, nose wheel down, from selector valve to jack flexible pipe  |   |   |   |   |   | 1       | —    |            | NC.6, NC.8 |
|           | Q.00440A/ND        | PIPE, nose wheel up, from selector valve to jack flexible pipe  |   |   |   |   |   | 1       | —    |            | NC.6, NC.8 |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.          | Part No.      | Nomenclature  |               |            |             |            |              | No. Off      | M.R.        | Cl. of St. | Plate No. |           |           |                 |              |       |      |   |    |      |      |
|-------------------|---------------|---------------|---------------|------------|-------------|------------|--------------|--------------|-------------|------------|-----------|-----------|-----------|-----------------|--------------|-------|------|---|----|------|------|
|                   |               | 1             | 2             | 3          | 4           | 5          | 6            |              |             |            |           |           |           |                 |              |       |      |   |    |      |      |
| 1982<br>26FC/5405 | 12 S 1443A/ND | PIPE,         | Port          | brake,     | aft         | of         | differential | unit         | to          | bulkhead   | 1         | —         |           | NC.4            |              |       |      |   |    |      |      |
|                   | 12 S 1131A/ND | PIPE,         | Port          | brake      | forward     | of         | differential | unit         | to          | brake      | 1         | —         | C.        |                 |              |       |      |   |    |      |      |
|                   | Q.003619A/ND  | PIPE,         | pressure      | cock       | to          | adaptor    | on           | bulkhead     | No. 1       |            | 1         | —         | C.        | NC.6            |              |       |      |   |    |      |      |
|                   | Q.00501A/ND   | PIPE,         | pressure,     | from       | accumulator | to         | cut-out      | valve        |             |            | 1         | —         |           | NC.8            |              |       |      |   |    |      |      |
|                   | 12 S 1489A/ND | PIPE,         | pressure,     | from       | accumulator | to         | tee-piece    | under        | cockpit     | floor      | 1         | —         |           | NC.6<br>NC.8    |              |       |      |   |    |      |      |
|                   | Q.0035A/ND    | PIPE,         | pressure,     | from       | hand        | pump       | to           | tee-piece    | on          | bulkhead   | No. 2     | 1         | —         |                 | NC.8         |       |      |   |    |      |      |
|                   | Q.00503A/ND   | PIPE,         | pressure,     | from       | pressure    | release    | valve        | on           | bulkhead    | No. 2      | to        | selector  | valve     |                 | NC.8         |       |      |   |    |      |      |
|                   | Q.00505A/ND   | PIPE,         | pressure,     | from       | pressure    | release    | valve        | to           | tee-piece   | on         | bulkhead  | No. 2     |           |                 | NC.8         |       |      |   |    |      |      |
|                   | Q.00509A/ND   | PIPE,         | pressure,     | from       | tee-piece   | on         | bulkhead     | No. 2        | to          | selector   | valve     | 1         | —         |                 |              |       |      |   |    |      |      |
|                   | 12 S 1299A/ND | PIPE,         | pressure,     | non-return | valve       | to         | power        | boost        | accumulator |            | 1         | —         |           |                 | NC.8         |       |      |   |    |      |      |
| 6522              | 12 S 1313A/ND | PIPE,         | pressure,     | selector   | valve       | to         | first        | joint        | ...         | ...        | 1         | —         | C.        | NC.6            |              |       |      |   |    |      |      |
|                   | 12 S 1295A/ND | PIPE,         | servodyne     | pressure,  | from        | connection | on           | forward      | face        | of         | firewall  | to        | joint     | under           | cannon       | floor | 1    | — |    | NC.8 |      |
| 6521              | 12 S 1213A/ND | PIPE,         | servodyne     | pressure,  | from        | fireproof  | bulkhead     | connection   | to          | tee-piece  | coupling  |           |           |                 | NC.5<br>NC.8 |       |      |   |    |      |      |
|                   | 12 S 1311A/ND | PIPE,         | servodyne     | pressure,  | from        | power      | boost        | selector     | valve       | to         | first     | joint     |           |                 | C.           | NC.6  |      |   |    |      |      |
|                   | 12 S 1487A/ND | PIPE,         | servodyne     | pressure,  | from        | restrictor | valve        | to           | joint       | under      | cannon    | floor     |           |                 |              | NC.6  |      |   |    |      |      |
|                   | 12 S 1289A/ND | PIPE,         | servodyne     | pressure,  | from        | restrictor | valve        | under        | cannon      | floor,     | to        | joint     | forward   | of              | cannon       |       |      | 1 | —  |      | NC.6 |
| 6520              | 12 S 1217A/ND | PIPE,         | servodyne     | return,    | from        | fireproof  | bulkhead     | connection   | to          | tee-piece  | coupling, | Starboard |           |                 |              | NC.5  |      |   |    |      |      |
|                   | 12 S 1297A/ND | PIPE,         | servodyne     | return,    | from        | connection | on           | forward      | face        | of         | firewall  | to        | tee-piece | under           | cannon       | floor | 1    | — |    | NC.6 |      |
|                   | 12 S 1215A/ND | PIPE,         | servodyne     | return,    | from        | fireproof  | bulkhead     | connection   | to          | tee-piece  | coupling  |           |           |                 |              | NC.5  |      |   |    |      |      |
|                   | 12 S 1309A/ND | PIPE,         | servodyne     | return,    | from        | power      | boost        | selector     | valve       | to         | first     | joint     |           |                 |              | C.    | NC.6 |   |    |      |      |
|                   | 12 S 1219A/ND | PIPE,         | servodyne     | return,    | from        | tee-piece  | to           | connection   | at          | rib        | No. 1     | Starboard |           |                 |              |       | NC.5 |   |    |      |      |
|                   | 12 S 1287A/ND | PIPE,         | servodyne     | return,    | from        | tee-piece  | under        | cockpit      | floor       | to         | joint     | forward   | of        | cannon          | beam         |       |      | 1 | —  |      | NC.6 |
|                   | 12 S 1293A/ND | PIPE,         | servodyne     | return,    | from        | tee-piece  | under        | cockpit      | floor       | to         | tee-piece | under     | cannon    | floor           |              |       |      | 1 | —  |      | NC.6 |
|                   | 12 S 1325A/ND | PIPE,         | servodyne     | selector,  | from        | restrictor | valve,       | to           | tee-piece   | at         | bulkhead  | No. 2     |           |                 |              |       | 1    | — |    | NC.6 |      |
|                   | 12 S 1441A/ND | PIPE,         | Starboard     | brake      | aft         | of         | differential | unit         | to          | bulkhead   | No. 2     |           |           |                 |              |       | 1    | — |    | NC.4 |      |
|                   | 1983          | 12 S 1132A/ND | PIPE,         | Starboard  | brake       | forward    | of           | differential | unit        | to         | brake     | pressure  | gauge     | (Mod. Ven. 273) |              |       |      | 1 | —  | C.   |      |
| 524               | 12 S 551A/ND  | PIPE,         | undercarriage | down,      | from        | fireproof  | bulkhead     | to           | selector    | valve      |           |           |           |                 |              |       | 2    | — | C. | NC.8 |      |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.   | Part No.           | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No.  |
|--|--------------------|---|---|---|---|---|---|---------|------|------------|------------|
|  |                    | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |            |
| 523  | 12 S 547A/ND       | <b>PIPE</b> , undercarriage up, from fireproof bulkhead to selector valve   |   |   |   |   |   | 1       | —    | C.         | NC.8       |
| 1684   | 12 S 955ND         | <b>PIPE</b> , vent from joint forward of bulkhead No. 3, to joint aft of bulkhead No. 3, $\frac{3}{8}$ " o/d. $\times$ 20G. L.56              |   |   |   |   |   | 1       | —    | C.         | NC.7       |
|  | 12 S 617A/ND       | <b>PIPE</b> , vent, from bulkhead adaptor to vent on fireproof bulkhead   |   |   |   |   |   | 1       | —    |            | NC.7       |
|  | 12 S 331ND         | <b>PIPE</b> , vent, from joint aft of bulkhead No. 3, to joint on front face of fireproof bulkhead, $\frac{3}{8}$ " $\times$ o/d. 20 SWG L.56 |   |   |   |   |   | 1       | —    |            | NC.7       |
|  | 12 S 615A/ND       | <b>PIPE</b> , vent, from joint on front face of fireproof bulkhead to bulkhead adaptor  |   |   |   |   |   | 1       | —    |            | NC.7       |
|  | Q.003627A          | <b>PLATE</b> , junction on bulkhead No. 2 ... ..  |   |   |   |   |   | 1       | —    |            | NC.2, NC.4 |
| 26FC/2360  | Q.00330            | <b>ADAPTOR</b> , brake, Port and Starboard pressure and canopy seal pipes   |   |   |   |   |   | 3       | —    | C.         | NC.2       |
| 26FC/2359  | Q.00327            | <b>ADAPTOR</b> , oil pressure pipes ... ..  |   |   |   |   |   | 2       | —    | C.         | NC.2       |
| 26FC/2361  | Q.00331            | <b>ADAPTOR</b> , pitôt pipes ... ..   |   |   |   |   |   | 2       | —    | C.         | NC.2       |
| 28F/10491  | AGS.1148/A         | <b>LOCKNUT</b> ... ..   |   |   |   |   |   | 2       | —    | C.         |            |
| 28F/9584   | AGS.1148/B         | <b>LOCKNUT</b> ... ..   |   |   |   |   |   | 4       | —    | C.         |            |
| 28F/10513  | AGS.1148/BB        | <b>LOCKNUT</b> ... ..   |   |   |   |   |   | 2       | —    | C.         |            |
|  | Q.003629           | <b>MANIFOLD</b> ... ..  |   |   |   |   |   | 1       | —    |            | NC.2       |
| 28F/8225   | AGS.1138/A         | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 4       | —    | C.         |            |
| 28F/8215   | AGS.1138/B         | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 8       | —    | C.         |            |
| 28F/9648   | AGS.1138/BB        | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 4       | —    | C.         |            |
| Attaching parts for Q.003627A, Plate :—          |                    |   |   |   |   |   |   |         |      |            |            |
| 28D/13182  | A25/14B            | Bolt, 4 BA ... ..   |   |   |   |   |   | 6       | —    | C.         |            |
| 28D/12846  | A25/15B            | Bolt, 4 BA ... ..   |   |   |   |   |   | 1       | —    | C.         |            |
| 28D/12811  | A25/16B            | Bolt, 4 BA ... ..   |   |   |   |   |   | 1       | —    | C.         |            |
| 28M/10287  | AGS.2001/B/1       | Nut, 4 BA ... ..  |   |   |   |   |   | 8       | —    | C.         |            |
|  | DHS.59 Mk. 3       | Washer (Make from Ref. No. 26BY/5870) ... ..  |   |   |   |   |   | 8       | —    |            |            |
| 26BY/5870  | DHS.34/B           | Washer (Required to make Part No. DHS.59 Mk. 3)   |   |   |   |   |   | 8       | —    | C.         |            |
| 26BY/3165  | DHS.33 Mk. 1       | Washer ... ..   |   |   |   |   |   | 16      | —    | C.         |            |
| 28W/12731  | SP.16/B            | Washer, profile ... ..  |   |   |   |   |   | 1       | —    | C.         |            |
|  | Q.00448            | <b>PLATE</b> , packing, cut-out valve mounting under cannon floor, 0.2" thick, LFS.21   |   |   |   |   |   | 1       | —    |            | NC.2       |
| 27AV/3445  | DUNLOP ACO.6580    | <b>PLUG</b> , quick release for flexible hose "G" valve ...   |   |   |   |   |   | 1       | —    | C.         |            |
| 27W/1  | LOCKHEED UMC.501   | <b>PUMP</b> , auxiliary hand, type 2 (less handle) (For Spares See AP.4515F, Vol. 3, Part 1, Section 2, Chapter 11)                           |   |   |   |   |   | 1       | —    | A.         | NC.7       |
| Attaching parts for UMC.501, Pump :—             |                    |   |   |   |   |   |   |         |      |            |            |
| 28D/12550  | A25/22E            | Bolt, $\frac{3}{8}$ " BSF ... ..  |   |   |   |   |   | 3       | —    | C.         |            |
| 28M/10290  | AGS.2001/E/1       | Nut, $\frac{3}{8}$ " BSF ... ..   |   |   |   |   |   | 3       | —    | C.         |            |
|  | 12-3S 1101A/ND     | <b>RESTRICTOR</b> , flow surge, hydraulic under cockpit floor in gun bay  |   |   |   |   |   | 1       | —    |            | NC.6       |
| 28F/10410  | AGS.1104/C         | <b>ADAPTOR</b> ... ..   |   |   |   |   |   | 1       | —    | C.         |            |
| 5901   | 12-3S 835          | <b>BANJO</b> ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.6       |
| 5900   | 12-3S 833          | <b>BOLT</b> , banjo ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.6       |
| 28F/9730   | AGS.1135/C         | <b>BOLT</b> , banjo ... ..  |   |   |   |   |   | 1       | —    | C.         |            |
| 27KC/354   | LOCKHEED AIR.42500 | <b>RESTRICTOR</b> , (For Spares see AP.4515F, Vol. 3, Part 1, Section 2, Chapter 11)  |   |   |   |   |   | 1       | —    | A.         | NC.6       |
| 28F/11958  | AGS.1186/C         | <b>WASHER</b> , sealing ... ..  |   |   |   |   |   | 4       | —    | C.         |            |
| Attaching parts for 12 3S 1101A/ND Restrictor :— |                    |   |   |   |   |   |   |         |      |            |            |
| 28D/12535  | A25/12C            | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |            |
| 28L/11069  | AGS.2035/C         | Lockwasher ... ..   |   |   |   |   |   | 2       | —    | C.         |            |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.   | Part No.           | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No.            |
|------------|--------------------|---|---|---|---|---|---|---------|------|------------|----------------------|
|            |                    | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |                      |
| 28V/13603  | AGS.838/8          | <b>RING</b> , rubber union, for pipes at bulkhead No. 2 ...   |   |   |   |   |   | 10      | —    | C.         |                      |
| 28S/2863   | A32/B16            | <b>SCREW</b> , 4 BA, securing pipe clips on bulkhead No. 2  |   |   |   |   |   | 2       | —    | C.         |                      |
| 27F/5721   | AGS.904/A          | <b>SLEEVE</b> , outer, on blanking caps at oil pressure adaptor on bulkhead No. 2   |   |   |   |   |   | 2       | —    | C.         |                      |
| 6501       | 12 S 1273          | <b>STRAP</b> , supporting hydraulic accumulators, cannon floor, Port  |   |   |   |   |   | 2       | —    | C.         | NC.3                 |
|            |                    | Attaching parts for 12 S 1273, Strap :—   |   |   |   |   |   |         |      |            |                      |
| 28D/12515  | A25/10C            | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
| 28D/12532  | A25/4C             | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
| 28M/10288  | AGS.2001/C/1       | Nut, 2 BA ... ..  |   |   |   |   |   | 4       | —    | C.         |                      |
|            | 12 S 1317ND        | Washer, profile, 10 SWG × 0.5" × 0.75" wide ...   |   |   |   |   |   | 2       | —    |            | NC.3                 |
| 28W/12252  | SP.13/C            | Washer ... ..   |   |   |   |   |   | 6       | —    | C.         |                      |
| 28F/10020  | AGS.1120/1         | <b>TEE-PIECE</b> , for hydraulic pressure pipes on bulkhead No. 2   |   |   |   |   |   | 1       | —    | C.         |                      |
| 28V/5105   | AGS.838/2          | <b>TEE-PIECE</b> , on air speed indicator pipes behind instrument panel   |   |   |   |   |   | 4       | —    | C.         |                      |
| 28V/11696  | AGS.838/6          | <b>TRAP</b> , drain, for blanking off air speed indicator pipes when machmeter operated warning device is not fitted                                  |   |   |   |   |   | 2       | —    | C.         |                      |
|            | Q.00897ND          | <b>TUBE</b> , connecting at tee-pieces on pipes behind instrument panel, $\frac{5}{16}$ " o/d. × 22 SWG × 1.5" long, L.56                             |   |   |   |   |   | 10      | —    |            |                      |
| 27M/559    | LOCKHEED AIR.40504 | <b>VALVE</b> , by-pass, on rear face of bulkhead No. 2 ... (For Spares see AP.4515F, Vol.3, Part 1, Section 2, Chapter 11)                            |   |   |   |   |   | 1       | —    | A.         | NC.8                 |
| 27VB/3254  | HYMATIC B.30029    | <b>VALVE</b> , anti "G" type AG2, mounted on junction box No. 1 (Mod. Ven. 273)   |   |   |   |   |   | 1       | —    | A.         | LA.1                 |
|            |                    | Attaching parts for A.M. Ref. No. 27VB/3254 Valve:—   |   |   |   |   |   |         |      |            |                      |
| 28D/11937  | AS.1246/1B         | Bolt, 4 BA ... ..   |   |   |   |   |   | 6       | —    | C.         |                      |
| 8277       | 12 S 1191          | Bracket, mounting bottom ... ..   |   |   |   |   |   | 1       | MR   | C.         | LA.1                 |
| 8279       | 12 S 1633          | Bracket, mounting, top ... ..   |   |   |   |   |   | 1       | MR   | C.         | LA.1                 |
| 28L/11067  | AGS.2035/B         | Lockwasher ... ..   |   |   |   |   |   | 5       | —    | C.         |                      |
| 28M/12153  | AGS.2007/B/1       | Nut, 4 BA ... ..  |   |   |   |   |   | 4       | —    | C.         |                      |
| 28S/2863   | A32/B16            | Screw, 4 BA ... ..  |   |   |   |   |   | 1       | —    | C.         |                      |
|            | 12 S 1569A/1       | <b>VALVE</b> , hydraulic cut-out under cannon floor ...   |   |   |   |   |   | 1       | —    |            | NC.2                 |
| 28F/10799  | AGS.1129/C         | <b>BANJO</b> , single adaptor ... ..  |   |   |   |   |   | 2       | —    | C.         |                      |
| 28F/10796  | AGS.1131/C         | <b>BANJO</b> , single adaptor ... ..  |   |   |   |   |   | 2       | —    | C.         |                      |
| 26FC/2351  | Q.00221            | <b>BLOCK</b> , junction, four-way ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 26FC/2350  | Q.00220            | <b>BLOCK</b> , junction, five-way ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 28F/9730   | AGS.1135/C         | <b>BOLT</b> , banjo ... ..  |   |   |   |   |   | 1       | —    | C.         |                      |
| 28F/9838   | AGS.1104/A         | <b>COUPLING</b> , pipe ... ..   |   |   |   |   |   | 1       | —    | C.         |                      |
| 26FC/2346  | Q.00219            | <b>PILLAR</b> , adaptor headed banjo ... ..   |   |   |   |   |   | 2       | —    | C.         | NC.2                 |
| 26FC/2352  | Q.0058             | <b>PILLAR</b> , single adaptor banjo ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 26FC/11188 | Q.003759A/ND       | <b>PIPE</b> , cut-out valve to thermal relief valve ...   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 28R/6340   | AGS.566/A          | <b>PLUG</b> , blanking, in junction box five-way ...  |   |   |   |   |   | 1       | —    | C.         |                      |
| 27M/663    | LOCKHEED AIR.42268 | <b>VALVE</b> , cut-out (For Spares see AP.4515F, Vol. 3, Part 1, Section 2, Chapter 11)   |   |   |   |   |   | 1       | —    | A.         | NC.2<br>NC.8         |
| 27W/5      | LOCKHEED UMC.632   | <b>VALVE</b> , thermal relief (For Spares see AP.4515F, Vol. 3, Part 1, Section 2, Chapter 11)  |   |   |   |   |   | 1       | —    | A.         | NC.2<br>NC.6<br>NC.2 |
| 26FC/2344  | Q.00284            | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 6       | —    | C.         |                      |
| 28F/8225   | AGS.1138/A         | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
| 28F/9649   | AGS.1138/C         | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 4       | —    | C.         |                      |
|            |                    | Attaching parts for 12 S 1569A/1, Valve :—  |   |   |   |   |   |         |      |            |                      |
| 28D/13447  | A25/21C            | Bolt, 2 BA ... ..   |   |   |   |   |   | 3       | —    | C.         |                      |
| 28L/11069  | AGS.2035/C         | Lockwasher ... ..   |   |   |   |   |   | 3       | —    | C.         |                      |
|            | 12 S 1541          | Piece, distance ... ..  |   |   |   |   |   | 1       | —    |            | NC.2                 |
| 27W/10     | LOCKHEED UMC.706   | <b>VALVE</b> , non-return, on dive brake pressure line from cut-out to selector valve (For Spares see AP.4515F, Vol. 3, Part 1 Section 2, Chapter 11) |   |   |   |   |   | 1       | —    | A.         | NC.8                 |
| 27W/8      | LOCKHEED UMC.704   | <b>VALVE</b> , non-return, in seal relief line under cannon floor, between bulkheads Nos. 2 and 3, Port   |   |   |   |   |   | 1       | —    | A.         |                      |
| 27VB/3442  | HYMATIC C.50145    | <b>VALVE</b> , pressure maintaining type P.M.2 ... ..   |   |   |   |   |   | 1       | —    | A.         | LA.1                 |
|            |                    | Attaching parts for 27VB/3442 Valve :—  |   |   |   |   |   |         |      |            |                      |
| 28D/12715  | A25/31C            | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
| 28M/12929  | A27/CP             | Nut, 2 BA ... ..  |   |   |   |   |   | 2       | —    | C.         |                      |
| 28W/12296  | SP.15/C            | Washer ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
| 28W/14180  | AS.1903/C8         | Washer, saddle ... ..   |   |   |   |   |   | 4       | —    | C.         |                      |

PIPES IN FUSELAGE

| Ref. No.   | Part No.              | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No.            |
|------------|-----------------------|---|---|---|---|---|---|---------|------|------------|----------------------|
|            |                       | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |                      |
| 27M/692    | LOCKHEED<br>AIR.42704 | <b>VALVE</b> , pressure relief in hand pump line, bulkhead No. 2<br>(For Spares see AP.4515F Vol. 3, Part 1, Section 2, Chapter 11) |   |   |   |   |   | 1       | —    | A.         | NC.7                 |
|            | Q.002575A/ND          | <b>VALVE</b> , pressure release under cockpit floor ...   |   |   |   |   |   | 1       | —    |            | NC.3<br>NC.8<br>NC.3 |
| 26FC/2387  | Q.0043                | <b>ADAPTOR</b> , pipe ... ..  |   |   |   |   |   | 2       | —    | C.         |                      |
| 28D/12513  | A25/2C                | <b>BOLT</b> , 2 BA securing lever ... ..  |   |   |   |   |   | 2       | —    | C.         |                      |
| 28L/11069  | AGS.2035/C            | <b>LOCKWASHER</b> ... ..  |   |   |   |   |   | 1       | —    | C.         |                      |
| 26FC/2362  | Q.0078                | <b>LEVER</b> , operating ... ..   |   |   |   |   |   | 1       | —    | C.         |                      |
| 28M/12929  | A27/CP                | <b>NUT</b> , 2 BA ... ..  |   |   |   |   |   | 2       | —    | C.         |                      |
| 27M/434    | LOCKHEED<br>AIR.40018 | <b>VALVE</b> , pressure release (For Spares see AP.4515F Vol. 3, Part 1, Section 2 Chapter 11)                                      |   |   |   |   |   | 1       | —    | A.         | NC.3<br>NC.8         |
| 28F/8225   | AGS.1138/A            | <b>WASHER</b> , jointing, for pipe adaptor ... ..   |   |   |   |   |   | 1       | —    | C.         |                      |
|            |                       | Attaching parts for Q.002575A/ND, Valve :—  |   |   |   |   |   |         |      |            |                      |
| 28D/12629  | A25/8C                | Bolt, 2 BA ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
| 28L/11069  | AGS.2035/C            | Lockwasher ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
| 27VC/27    | PALMER C58            | <b>VALVE</b> , reducing air, fuselage side ... ..   |   |   |   |   |   | 1       | —    | A.         | LA.1                 |
|            |                       | Attaching parts for 27VC/27 Valve :—  |   |   |   |   |   |         |      |            |                      |
| 8276       | 12 S 1177             | Clip, saddle ... ..   |   |   |   |   |   | 1       | MR   | C.         | LA.1                 |
| 28L/11067  | AGS.2035/B            | Lockwasher ... ..   |   |   |   |   |   | 2       | —    | C.         |                      |
|            | 12 S 577A             | <b>VALVE</b> , selector unit, under cannon floor ... ..   |   |   |   |   |   | 1       | —    |            | NC.2                 |
| 26FC/2345  | Q.0070                | <b>ADAPTOR</b> , pipe, 1/2" B.S.P. to 3/8" B.S.P. ... ..  |   |   |   |   |   | 2       | —    | C.         | NC.2                 |
| 26FC/2347  | Q.00212               | <b>ADAPTOR</b> , pipe, 1/2" B.S.P. to 3/8" B.S.P. ... ..  |   |   |   |   |   | 4       | —    | C.         | NC.2                 |
| 26FC/2349  | Q.0072                | <b>BANJO</b> ... ..   |   |   |   |   |   | 2       | —    | C.         | NC.2                 |
| 26FC/2348  | Q.00227               | <b>BLOCK</b> , connecting ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 28D/13251  | A25/44E               | <b>BOLT</b> , 1/2" B.S.F. ... ..  |   |   |   |   |   | 1       | —    | C.         |                      |
| 541        | 12 UN 33A             | <b>BRACKET</b> , pulley ... ..  |   |   |   |   |   | 1       | MR   | C.         | NC.2                 |
|            |                       | Attaching parts for 12 UN 33A, Bracket :—   |   |   |   |   |   |         |      |            |                      |
| 28D/12812  | A25/12E               | Bolt, 3/4" BSF ... ..   |   |   |   |   |   | 1       | MR   | C.         |                      |
| 28M/10290  | AGS.2001/E/1          | Nut, 3/4" BSF ... ..  |   |   |   |   |   | 1       | MR   | C.         |                      |
| 28M/10330  | AGS.2002/E/1          | <b>NUT</b> , 1/2" BSF ... ..  |   |   |   |   |   | 1       | —    | C.         |                      |
| 26FC/2337  | Q.0069                | <b>PIECE</b> , distance, lower ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
|            | 12 S 581ND            | <b>PIECE</b> , distance, upper ... ..   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 26FC/2338  | Q.0097                | <b>PILLAR</b> , adaptor headed banjo, on connecting block, 1/2" B.S.P. to 1/8" B.S.P.   |   |   |   |   |   | 2       | —    | C.         | NC.2                 |
| 26FC/2339  | Q.00225               | <b>PILLAR</b> , adaptor headed banjo, on connecting block, 1/2" B.S.P. to 1/8" B.S.P.   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 26FC/2342  | Q.00332               | <b>PILLAR</b> , adaptor headed banjo, on connecting block, 1/2" B.S.P. to 1/8" B.S.P.   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 26FC/2340  | Q.00226               | <b>PILLAR</b> , adaptor headed banjo, on connecting block, 1/2" B.S.P. to 1/4" B.S.P.   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 26FC/2343  | Q.00333               | <b>PILLAR</b> , adaptor headed banjo, on non-return valve, 1/2" B.S.P. to 1/4" B.S.P.   |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 26FC/2341  | Q.00118               | <b>PLUG</b> , connecting block blanking ... ..  |   |   |   |   |   | 1       | —    | C.         | NC.2                 |
| 27M/462    | LOCKHEED<br>AIR.34126 | <b>VALVE</b> , non-return (For Spares see AP.4515F Vol. 3, Part 1, Section 2, Chapter 11)   |   |   |   |   |   | 1       | —    | A.         | NC.2                 |
| 27M/622    | LOCKHEED<br>AIR.40758 | <b>VALVE</b> , selector, alighting gear (For Spares see AP.4515F Vol. 3, Part 1, Section 2, Chapter 11)                             |   |   |   |   |   | 1       | —    | A.         | NC.2                 |
| 27M/453    | LOCKHEED<br>AIR.40272 | <b>VALVE</b> , selector flap and dive brake ... ..<br>(For Spares see AP.4515F, Vol. 3, Part 1, Section 2, Chapter 11)              |   |   |   |   |   | 2       | —    | A.         | NC.2                 |
| 28F/8215   | AGS.1138/B            | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 6       | —    | C.         |                      |
| 28F/9648   | AGS.1138/BB           | <b>WASHER</b> , jointing ... ..   |   |   |   |   |   | 6       | —    | C.         |                      |
| 26BY/16565 | Q.982437              | <b>WASHER</b> , jointing, 0.8" o/d x 0.5" i/d. ... ..   |   |   |   |   |   | 6       | —    | C.         | NC.2                 |
| 26FC/2336  | Q.00111               | <b>WASHER</b> , jointing, for plug in connecting block  |   |   |   |   |   | 1       | —    | C.         | NC.2<br>NC.4         |

PIPE SERVICES

PIPES IN FUSELAGE

| Ref. No.  | Part No.         | Nomenclature   |   |   |   |   |   | No Off. | M.R. | Cl. of Sc. | Plate No. |
|-----------|------------------|--|---|---|---|---|---|---------|------|------------|-----------|
|           |                  | 1  | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
| 27W/5     | LOCKHEED UMC.632 | <b>VALVE</b> , thermal relief, in accumulator pressure line, at restrictor valve<br>(For Spares see AP.4515F, Vol. 3, Part 1, Section 2, Chapter 11) |   |   |   |   |   | 1       | —    | A.         | NC.6      |
| 28L/11067 | AGS.2035/B       | <b>WASHER</b> , for bolt securing clips on bulkhead No. 2  |   |   |   |   |   | 5       | —    | C.         |           |
| 28L/11069 | AGS.2035/C       | <b>WASHER</b> , for bolt securing clip under cannon floor  |   |   |   |   |   | 6       | —    | C.         |           |
| 28F/11958 | AGS.1186/C       | <b>WASHER</b> , sealing, at servodyne pressure pipe connection on cockpit floor and fireproof bulkhead   |   |   |   |   |   | 8       | —    | C.         |           |
| 28F/12083 | AGS.1186/CC      | <b>WASHER</b> , sealing, at servodyne return pipe connection on cockpit floor to fireproof bulkhead  |   |   |   |   |   | 10      | —    | C.         |           |
| 28F/9649  | AGS.1138/C       | <b>WASHER</b> , jointing, at hand pump pressure pipe coupling and L.H. end of hydraulic accumulator  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/11958 | AGS.1186/C       | <b>WASHER</b> , jointing, at hydraulic vent pipe connections to fireproof bulkhead adaptor   |   |   |   |   |   | 3       | —    | C.         |           |
| 28F/8225  | AGS.1138/A       | <b>WASHER</b> , jointing, for adaptor, cabin pressure gauge pipe and brake pressure gauge at bulkhead No. 2  |   |   |   |   |   | 3       | —    | C.         |           |
| 28F/8215  | AGS.1138/B       | <b>WASHER</b> , jointing, for adaptors, canopy seal, hand pump suction pipes, and R.H. end of hydraulic accumulator                                  |   |   |   |   |   | 3       | —    | C.         |           |
| 28F/9649  | AGS.1138/C       | <b>WASHER</b> , jointing, for adaptor, pressure pipe hand pump at bulkhead No. 2   |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/8225  | AGS.1138/A       | <b>WASHER</b> , jointing, for flexible pipes at nosewheel jack   |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/9648  | AGS.1138/BB      | <b>WASHER</b> , jointing, for pitôt pipes at fireproof bulkhead  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/12048 | AGS.1186/B       | <b>WASHER</b> , jointing, at banjo adaptor, hydraulic hand pump (Mod. Ven. 553)  |   |   |   |   |   | 2       | —    | C.         |           |
| 28F/10603 | AGS.1115/6       | <b>WASHER</b> , plate, for aileron power boost pipes, cockpit floor  |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/11736 | AGS.1115/5       | <b>WASHER</b> , plate, for aileron power boost pipes, cockpit floor  |   |   |   |   |   | 2       | —    | C.         |           |
|           |                  | Attaching parts for AGS.1115/6 and AGS.1115/5, Washers :—  |   |   |   |   |   |         |      |            |           |
| 28D/13055 | A26/12C          | Bolt, 2 BA ... ..  |   |   |   |   |   | 6       | —    | C.         |           |
| 28M/10328 | AGS.2002/C/1     | Nut, 2 BA ... ..   |   |   |   |   |   | 6       | —    | C.         |           |
| 28W/12296 | SP.15/C          | Washer ... ..  |   |   |   |   |   | 6       | —    | C.         |           |
| 28V/13604 | AGS.838/9        | <b>WASHER</b> , rubber, for pipe coupling nuts on air speed indicator pipes  |   |   |   |   |   | 2       | —    | C.         |           |

PIPE SERVICES

PIPES IN WING

| Ref. No.   | Part No.     | Nomenclature  |   |   |   |   |   | No Off | M.R. | Cl. of St. | Plate No.    |
|------------|--------------|---|---|---|---|---|---|--------|------|------------|--------------|
|            |              | 1   | 2 | 3 | 4 | 5 | 6 |        |      |            |              |
|            | —            | <b>PIPES IN WING, PORT</b> ... ..   |   |   |   |   |   | 1      | —    |            |              |
|            | —            | <b>PIPES IN WING, STARBOARD</b> ... ..  |   |   |   |   |   | 1      | —    |            |              |
| 26FC/2618  | Q.0049       | <b>BANJO</b> , union, at flexible pipes ... ..                                    |   |   |   |   |   | 5      | —    | C.         | ND.1         |
| 26FC/11770 | Q.00136A     | <b>BLOCK</b> , clamp, flap pipes on rib No. 2 ... ..                              |   |   |   |   |   | 1      | —    | C.         | NC.6         |
|            |              | Attaching parts for Q.00136A Block :—   |   |   |   |   |   |        |      |            |              |
| 28D/12629  | A25/8C       | Bolt, 2 BA ... ..   |   |   |   |   |   | 1      | —    | C.         |              |
| 26FC/11770 | Q.00136A     | <b>BLOCK</b> , clamp, for pipes between ribs Nos. 2 and 3 in starboard wing       |   |   |   |   |   | 4      | —    | C.         | NC.6<br>ND.1 |
|            |              | Attaching parts for Q.00136A Block :—   |   |   |   |   |   |        |      |            |              |
| 28D/12533  | A25/5C       | Bolt, 2 BA ... ..   |   |   |   |   |   | 1      | —    | C.         |              |
| 28M/10328  | AGS.2002/C/1 | Nut, 2 BA ... ..  |   |   |   |   |   | 1      | —    | C.         |              |
| 26FC/2382  | Q.00229A     | <b>BLOCK</b> , clamp, for dive brake pipes between ribs Nos. 2 and 3 in port wing |   |   |   |   |   | 2      | —    | C.         | NC.6         |
|            |              | Attaching parts for Q.00229A Block :—   |   |   |   |   |   |        |      |            |              |
| 28D/12533  | A25/5C       | Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |              |
| 28M/10328  | AGS.2002/C/1 | Nut, 2 BA ... ..  |   |   |   |   |   | 2      | —    | C.         |              |
|            | Q.00232ND    | Strip, capping (Make from Ref. No. 26BY/15708, Part No. X.31)                     |   |   |   |   |   | 1      | —    |            | ND.1         |
| 26FC/2619  | Q.00159A     | <b>BLOCK</b> , clamp, for dive brake, flap and undercarriage jack flexible pipes  |   |   |   |   |   | 3      | —    | C.         | ND.1         |
|            |              | Attaching parts for Q.00159A Block :—   |   |   |   |   |   |        |      |            |              |
| 28D/12515  | A25/10C      | Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |              |
| 28M/10288  | AGS.2001/C/1 | Nut, 2 BA ... ..  |   |   |   |   |   | 2      | —    | C.         |              |
| 28W/12296  | SP.15/C      | Washer ... ..   |   |   |   |   |   | 2      | —    | C.         |              |
|            | 12 3S 1221   | <b>BLOCK</b> , clamp, half lower, for servodyne pipes on rib No. 1, port          |   |   |   |   |   | 2      | —    |            | ND.1         |
|            | 12 3S 1219   | <b>BLOCK</b> , clamp half, upper, for servodyne pipes on rib No. 1, port          |   |   |   |   |   | 2      | —    |            | ND.1         |
|            |              | Attaching parts for 12 3S 1221 and 12 3S 1219 Blocks (per pair) :—                |   |   |   |   |   |        |      |            |              |
| 28D/8507   | AS.1242/5C   | Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |              |
| 6583       | 12 S 1409    | <b>BLOCK</b> , clamp, for servodyne pipes in inner flap shroud, port              |   |   |   |   |   | 2      | —    | C.         |              |
|            |              | Attaching parts for 12 S 1409 Block (per pair) :—                                 |   |   |   |   |   |        |      |            |              |
| 28D/11540  | AS.1246/2B   | Bolt, 4 BA ... ..   |   |   |   |   |   | 4      | —    | C.         |              |
| 28M/10287  | AGS.2001/B/1 | Nut, 4 BA ... ..  |   |   |   |   |   | 4      | —    | C.         |              |
| 28W/12306  | SP.15/B      | Washer ... ..   |   |   |   |   |   | 8      | —    | C.         |              |
| 672        | 12 S 163     | <b>BLOCK</b> , junction, undercarriage jack pipes ... ..                          |   |   |   |   |   | 1      | MR   | C.         | ND.1         |
|            |              | Attaching parts for 12 S 163 Block :—   |   |   |   |   |   |        |      |            |              |
| 28D/8316   | AS.1242/13C  | Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | MR   | C.         |              |
| 28M/10288  | AGS.2001/C/1 | Nut, 2 BA ... ..  |   |   |   |   |   | 2      | MR   | C.         |              |
|            | 12 S 739ND   | Packing, port, 1-3" wide × 0-3" thick × 2-5" long, LFS.23                         |   |   |   |   |   | 1      | MR   |            | ND.1         |
|            | 12 S 1009ND  | Packing, starboard, 1-3" wide × 0-3" thick × 2-5" long, LFS.23                    |   |   |   |   |   | 1      | MR   |            | ND.1         |
| 6582       | 12 3S 933    | <b>BRACKET</b> , mounting, for pipe clips in inner flap shroud, port              |   |   |   |   |   | 1      | —    | C.         | ND.1         |
| 5902       | 12 3S 873    | <b>CLAMP</b> , for servodyne pipes on rib No. 1, port ...                         |   |   |   |   |   | 2      | —    | C.         | ND.1         |
|            |              | Attaching parts for 12 3S 873 Clamp (per pair) :—                                 |   |   |   |   |   |        |      |            |              |
| 28D/13208  | A28/6C       | Bolt, 2 BA ... ..   |   |   |   |   |   | 2      | —    | C.         |              |



PIPE SERVICES  
PIPES IN WING

| Ref No.  | Part No.                | Nomenclature   |   |   |   |   |   | No. Off | M.R. | Cl. of Sc. | Plate No. |
|----------|-------------------------|--|---|---|---|---|---|---------|------|------------|-----------|
|          |                         | 1  | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
|          | 12 S 71A/ND             | PIPE, brake, from joint on rib No. 1, to flexible pipe coupling at top of compression leg, port      |   |   |   |   |   | 1       | —    |            | ND.1      |
|          | 12 S 72A/ND             | PIPE, brake, from joint on rib No. 1, to flexible pipe coupling at top of compression leg, starboard |   |   |   |   |   | 1       | —    |            | ND.1      |
| 675      | 12 S 351A/ND            | PIPE, dive brake off, from joint at rib No. 1, to jack flexible pipe, port                           |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 676      | 12 S 352A/ND            | PIPE, dive brake off, from joint at rib No. 1, to jack flexible pipe, starboard                      |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 673      | 12 S 349A/ND            | PIPE, dive brake on, from joint at rib No. 1, to jack flexible pipe, port                            |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 674      | 12 S 350A/ND            | PIPE, dive brake on, from joint, at rib No. 1 to jack flexible pipe, starboard                       |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 677      | 12 S 353A/ND            | PIPE, flap, down from joint on rib No. 1, to jack flexible pipe, port                                |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 678      | 12 S 354A/ND            | PIPE, flap down, from joint on rib No. 1, to jack flexible pipe, starboard                           |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 679      | 12 S 355A/ND            | PIPE, flap, up from joint on rib No. 1 to jack flexible pipe, port                                   |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 680      | 12 S 356A/ND            | PIPE, flap up, from joint on rib No. 1 to jack flexible pipe, starboard                              |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 27M/9181 | LOCKHEED AIR.56316/17-5 | PIPE, flexible, dive brake off ... ..  |   |   |   |   |   | 1       | —    | A.         |           |
| 27M/9182 | LOCKHEED AIR.56286/16-5 | PIPE, flexible, dive brake on ... ..   |   |   |   |   |   | 1       | —    | A.         |           |
| 27M/7778 | LOCKHEED AIR.31832      | PIPE, flexible, flap down ... ..   |   |   |   |   |   | 1       | —    | A.         |           |
| 27M/7780 | LOCKHEED AIR.31836      | PIPE, flexible, flap up ... ..   |   |   |   |   |   | 1       | —    | A.         | NC.6      |
| 27M/9180 | LOCKHEED AIR.56286/12   | PIPE, flexible, undercarriage door, down ... ..  |   |   |   |   |   | 1       | —    | A.         |           |
| 27M/9051 | LOCKHEED AIR.55676      | PIPE, flexible, undercarriage door, up ... ..  |   |   |   |   |   | 1       | —    | A.         |           |
| 27M/9746 | LOCKHEED AVA.323/B25-5  | PIPE, flexible, servodyne pressure, from servodyne to inboard connection on false spar               |   |   |   |   |   | 1       | —    | C.         |           |
| 27M/9747 | LOCKHEED AVA.374/C20.8  | PIPE, flexible, servodyne return, from servodyne to outboard connection on false spar                |   |   |   |   |   | 1       | —    | C.         |           |
|          | 12 S 1589ND             | PIPE, servodyne pressure, along rib No. 1, port ...  |   |   |   |   |   | 1       | —    |            | ND.1      |
|          | 12 S 1593ND             | PIPE, servodyne pressure, along rib No. 1, starboard   |   |   |   |   |   | 1       | —    |            | ND.1      |
| 4718     | 12 S 1357A/ND           | PIPE, servodyne pressure, from false spar, to connection at trailing edge rib No. 7 port             |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 4719     | 12 S 1358A/ND           | PIPE, servodyne pressure, from false spar, to connection at trailing edge rib No. 7, starboard       |   |   |   |   |   | 1       | —    | C.         | ND.1      |
|          | 12 S 1207A/ND           | PIPE, servodyne pressure, from joint in dive brake shroud, to joint in outer flap shroud, port       |   |   |   |   |   | 1       | —    |            | ND.1      |
|          | 12 S 1208A/ND           | PIPE, servodyne pressure, from joint in dive brake shroud, to joint in outer flap shroud starboard   |   |   |   |   |   | 1       | —    |            | ND.1      |
|          | 12 S 1209A/ND           | PIPE, servodyne pressure, from joint in outer flap shroud, to joint in stub boom, port               |   |   |   |   |   | 1       | —    |            | ND.1      |
|          | 12 S 1210A/ND           | PIPE, servodyne pressure, from joint in outer flap shroud, to joint in stub boom, starboard          |   |   |   |   |   | 1       | —    |            | ND.1      |

PIPE SERVICES

PIPES IN WING

| Ref. No.  | Part No.           | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|-----------|--------------------|---|---|---|---|---|---|---------|------|------------|-----------|
|           |                    | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
|           | 12 S 1347A/ND      | PIPE, servodyne pressure, from joint in stub boom, to joint in inner flap shroud, port  |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1348A/ND      | PIPE, servodyne pressure, from joint in stub boom, to joint in inner flap shroud, starboard   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1353A/ND      | PIPE, servodyne, pressure, outer flap shroud to connection on rib No. 7, L.H.   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1354A/ND      | PIPE, servodyne, pressure, outer flap shroud to connection on rib No. 7, R.H.   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1355A/ND      | PIPE, servodyne, return, outer flap shroud to connection on rib No. 7, L.H.   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1356          | PIPE, servodyne, return, outer flap shroud to connection on rib No. 7, R.H.   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1591ND        | PIPE, servodyne return, along rib No. 1, port ...   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1595ND        | PIPE, servodyne return, along rib No. 1, starboard...   |   |   |   |   |   | 1       | —    |            | ND.1      |
| 4720      | 12 S 1359A/ND      | PIPE, servodyne return, from false spar, to connection at trailing edge rib No. 7, port   |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 4721      | 12 S 1360A/ND      | PIPE, servodyne return, from false spar, to connection at trailing edge rib No. 7, starboard  |   |   |   |   |   | 1       | —    | C.         | ND.1      |
|           | 12 S 1205A/ND      | PIPE, servodyne return, from joint in dive brake shroud, to joint in outer flap shroud, port  |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1206A/ND      | PIPE, servodyne return, from first joint in dive brake shroud, to joint in outer flap shroud, starboard   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1211A/ND      | PIPE, servodyne return, from joint in outer flap shroud, to joint in stub boom, port  |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1212A/ND      | PIPE, servodyne return, from joint in outer flap shroud, to joint in stub boom, starboard   |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1345A/ND      | PIPE, servodyne return, from joint in stub boom, to joint in inner flap shroud, port  |   |   |   |   |   | 1       | —    |            | ND.1      |
|           | 12 S 1346A/ND      | PIPE, servodyne return, from joint in stub boom, to joint in inner flap shroud, starboard   |   |   |   |   |   | 1       | —    |            | ND.1      |
| 685       | 12 S 361A/ND       | PIPE, sequence valve supply, port ... ..  |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 686       | 12 S 362A/ND       | PIPE, sequence valve supply, starboard ... ..   |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 683       | 12 S 359A/ND       | PIPE, undercarriage door down, from sequence valve to jack flexible pipe, port  |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 684       | 12 S 360A/ND       | PIPE, undercarriage door down, from sequence valve to jack flexible pipe, starboard   |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 681       | 12 S 357A/ND       | PIPE, undercarriage door up, from sequence valve to jack flexible pipe, port  |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 682       | 12 S 358A/ND       | PIPE, undercarriage door up, from sequence valve to jack flexible pipe, starboard   |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 667       | 12 S 63A/ND        | PIPE, undercarriage down, from joint on rib No. 1, to junction block, port  |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 668       | 12 S 64A/ND        | PIPE, undercarriage down, from joint on rib No. 1, to junction block, starboard   |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 669       | 12 S 67A/ND        | PIPE, undercarriage up, from joint on rib No. 1, to junction block, port  |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 670       | 12 S 68A/ND        | PIPE, undercarriage up, from joint on rib No. 1, to junction block, starboard   |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 27KC/319  | LOCKHEED AIR.42514 | SERVODYNE, port ... ..<br>(For Spares see AP.4515F, Vol. 3, Part 1, Section 2, Chapter II)  |   |   |   |   |   | 1       | —    | A.         |           |
| 27KC/352  | LOCKHEED AIR.42515 | SERVODYNE, starboard (For Spares, see AP.4515F, Vol. 3, Part 1, Section 2, Chapter II)<br>Attaching parts for AIR.42514 and AIR.42515,<br>Servodynes :— |   |   |   |   |   | 1       | —    | A.         |           |
| 9615      | 12 4 WA 27         | Bolt, special ... ..  |   |   |   |   |   | 1       | —    | C.         | ND.1      |
| 28D/14856 | A57/9G             | Bolt, 1/8" BSF ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 28M/13123 | A27/JS             | Nut, 3/16" BSF ... ..   |   |   |   |   |   | 1       | —    | C.         |           |
| 28M/14537 | A58/GS             | Nut, 1/8" BSF ... ..  |   |   |   |   |   | 2       | —    | C.         |           |
| 28P/12462 | SP.9/C8            | Pin, split ... ..   |   |   |   |   |   | 3       | —    | C.         |           |
| 28W/12254 | SP.13/G            | Washer ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 4728      | 12 CF 929          | Washer, special ... ..  |   |   |   |   |   | 2       | —    | C.         | MD.1      |

PIPE SERVICES  
PIPES IN WING

| Ref. No.   | Part No.           | Nomenclature  |   |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |
|--|--------------------|---|---|---|---|---|---|---------|------|------------|-----------|
|  |                    | 1   | 2 | 3 | 4 | 5 | 6 |         |      |            |           |
| 687  | 12 S 545           | <b>UNION</b> , at sequence valve ... ..   |   |   |   |   |   | 2       | —    | C.         |           |
| 7184   | 12 3S 889          | <b>UNION</b> , pipe, special, for servodyne pressure pipe at trailing edge rib No. 7      |   |   |   |   |   | 1       | —    | C.         |           |
| 27M/499  | LOCKHEED AIR.40068 | <b>VALVE</b> , sequence (For Spares, see AP.4515F, Vol. 3, Part 1, Section 2, Chapter II) |   |   |   |   |   | 1       | —    | A.         |           |
|  |                    | Attaching parts for AIR.40068 Valve :—  |   |   |   |   |   |         |      |            |           |
| 28D/12535  | A25/12C            | Bolt, 2 BA ... ..   |   |   |   |   |   | 3       | —    | C.         |           |
| 28F/11339  | AGS.1139/A         | <b>WASHER</b> , jointing, at undercarriage junction block                                 |   |   |   |   |   | 4       | —    | C.         |           |
| 28F/12047  | AGS.1186/A         | <b>WASHER</b> , jointing, for flexible pipe connections at jacks                          |   |   |   |   |   | 15      | —    | C.         |           |
|  | DHS.204/L          | <b>WASHER</b> , jointing, for union at sequence valve ...                                 |   |   |   |   |   | 2       | —    |            |           |
| 28F/11956  | AGS.1149/3         | <b>WASHER</b> , plate, for servodyne pressure connection at trailing edge rib No. 7       |   |   |   |   |   | 1       | —    | C.         |           |
| 28F/10109  | AGS.1149/4         | <b>WASHER</b> , plate, for servodyne return connection at trailing edge rib No. 7         |   |   |   |   |   | 1       | —    | C.         |           |
| <p><b>NOTE.</b>—For Pipes between Wing and Fuselage, see Aerofoils, Wing Arrangement</p> |                    |   |   |   |   |   |   |         |      |            |           |


PIPE SERVICES

PIPES ON FIREPROOF BULKHEAD

| Ref. No.  | Part No.     | Nomenclature  |   |   |   |   |   | No Off   | M.R. | Cl. of St. | Plate No. |
|-----------|--------------|---|---|---|---|---|---|----------|------|------------|-----------|
|           |              | 1   | 2 | 3 | 4 | 5 | 6 |          |      |            |           |
|           |              | <b>PIPES ON FIREPROOF BULKHEAD (12 S 1613) ...</b>                                |   |   |   |   |   | <b>1</b> | —    |            |           |
| 28F/11079 | AGS.1129/BB  | <b>BANJO</b> , for pitôt pipes ... ..   |   |   |   |   |   | <b>2</b> | —    | C.         |           |
| 26FC/2381 | Q.00214A     | <b>BLOCK</b> , clamp, for pipe run on forward face of bulkhead                    |   |   |   |   |   | <b>4</b> | —    | C.         | NE.1      |
|           |              | Attaching parts for Q.00214A Block :—   |   |   |   |   |   |          |      |            |           |
| 28D/8507  | AS.1242/5C   | Bolt, 2 BA ... ..   |   |   |   |   |   | <b>2</b> | —    | C.         |           |
| 8145      | 12 S 583     | <b>BLOCK</b> , clamp, half, for pitôt pipe run on forward face of bulkhead, lower |   |   |   |   |   | <b>2</b> | MR   | C.         |           |
|           |              | Attaching parts for 12 S 583 Block (per pair) :—                                  |   |   |   |   |   |          |      |            |           |
| 28D/12139 | AS.1246/6C   | Bolt, 2 BA ... ..   |   |   |   |   |   | <b>1</b> | —    | C.         |           |
| 28M/10288 | AGS.2001/C/1 | Nut, 2 BA ... ..  |   |   |   |   |   | <b>1</b> | —    | C.         |           |
| 28W/12252 | SP.13/C      | Washer ... ..   |   |   |   |   |   | <b>1</b> | —    | C.         |           |
| 8145      | 12 S 583     | <b>BLOCK</b> , clamp, half, for pitôt pipe run on forward face of bulkhead, upper |   |   |   |   |   | <b>1</b> | MR   | C.         | NE.1      |
| 8146      | 12 S 585     | <b>BLOCK</b> , clamp, half, for pitôt pipe run on forward face of bulkhead, upper |   |   |   |   |   | <b>1</b> | MR   | C.         | NE.1      |
|           |              | Attaching parts for 12 S 583 and 12 S 585, Blocks (per pair) :—                   |   |   |   |   |   |          |      |            |           |
| 28D/12708 | AS.1246/9C   | Bolt, 2 BA ... ..   |   |   |   |   |   | <b>1</b> | —    | C.         |           |
| 28W/12252 | SP.13/C      | Washer ... ..   |   |   |   |   |   | <b>1</b> | —    | C.         |           |
| 28F/10485 | AGS.1135/BB  | <b>BOLT</b> , banjo, for pitôt pipes ... ..                                       |   |   |   |   |   | <b>2</b> | —    | C.         |           |
|           | 12 S 521A/ND | <b>PIPE</b> , air speed indicator, static ... ..                                  |   |   |   |   |   | <b>1</b> | —    |            | NE.1      |
|           | 12 S 525A/ND | <b>PIPE</b> , air speed indicator, pressure ... ..                                |   |   |   |   |   | <b>1</b> | —    |            | NE.1      |
|           | 12 S 821A/ND | <b>PIPE</b> , brake, on front face of bulkhead ... ..                             |   |   |   |   |   | <b>1</b> | —    |            | NE.1      |
| 1027      | 12 S 805A/ND | <b>PIPE</b> , dive brake off, on front face of bulkhead ... ..                    |   |   |   |   |   | <b>1</b> | —    | C.         | NE.1      |
| 1028      | 12 S 809A/ND | <b>PIPE</b> , dive brake on, on front face of bulkhead ... ..                     |   |   |   |   |   | <b>1</b> | —    | C.         | NE.1      |
| 1029      | 12 S 817A/ND | <b>PIPE</b> , flap down, on front face of bulkhead ... ..                         |   |   |   |   |   | <b>1</b> | —    | C.         | NE.1      |
| 1030      | 12 S 813A/ND | <b>PIPE</b> , flap, up on front face of bulkhead ... ..                           |   |   |   |   |   | <b>1</b> | —    | C.         | NE.1      |
| 1031      | 12 S 829A/ND | <b>PIPE</b> , undercarriage down, on front face of bulkhead ... ..                |   |   |   |   |   | <b>1</b> | —    | C.         | NE.1      |
| 1032      | 12 S 825A/ND | <b>PIPE</b> , undercarriage up, on front face of bulkhead ... ..                  |   |   |   |   |   | <b>1</b> | —    | C.         | NE.1      |
| 28F/9648  | AGS.1138/BB  | <b>WASHER</b> , jointing, for banjo bolt ... ..                                   |   |   |   |   |   | <b>4</b> | —    | C.         |           |

PIPES ON MAIN UNDERCARRIAGE FOR WHEEL BRAKES


| Ref. No.   | Part No.          | Nomenclature   |  |   |   |   |   | No. Off | M.R. | Cl. of St. | Plate No. |      |
|------------|-------------------|--|--|---|---|---|---|---------|------|------------|-----------|------|
|            |                   | 1  | 2  | 3 | 4 | 5 | 6 |         |      |            |           |      |
|            | —                 | <b>PIPES ON MAIN UNDERCARRIAGE FOR WHEEL BRAKES, PORT (12 S 277)</b>                     |  |   |   |   |   | 1       | —    |            |           |      |
|            | —                 | <b>PIPES ON MAIN UNDERCARRIAGE FOR WHEEL BRAKES, STARBOARD (12 S 278)</b>                |  |   |   |   |   | 1       | —    |            |           |      |
| 28F/9708   | AGS.1104/B        | <b>ADAPTOR</b> , pipe, at elbow, at top of compression leg                               |  |   |   |   |   | 1       | —    | C.         |           |      |
| 123        | 12 S 283          | <b>BRACKET</b> , for connector at bottom of compression leg, port                        |  |   |   |   |   | 1       | —    | C.         | NF.1      |      |
|            | 124               | 12 S 284   | <b>BRACKET</b> , for connector at bottom of compression leg, starboard |   |   |   |   |         | 1    | —          | C.        | NF.1 |
| 26FC/580   | Q.00169           | <b>BRACKET</b> , mounting, for elbow at top of compression leg, port                     |  |   |   |   |   | 1       | —    | C.         | NF.1      |      |
| 26FC/581   | Q.00170           | <b>BRACKET</b> , mounting, for elbow at top of compression leg, starboard                |  |   |   |   |   | 1       | —    | C.         | NF.1      |      |
| 28D/12773  | A25/1G            | Attaching parts for Q.00169 and Q.00170 Brackets :—<br>Bolt, $\frac{5}{16}$ " BSF ... .. |  |   |   |   |   | 2       | —    | C.         |           |      |
| 28F/10431  | AGS.1147/B        | <b>CONNECTOR</b> , hose ... ..   |  |   |   |   |   | 2       | —    | C.         |           |      |
| 26FC/582   | Q.00168           | <b>ELBOW</b> , for hose, at top of compression leg ...                                   |  |   |   |   |   | 1       | —    | C.         | NF.1      |      |
| 28F/9584   | AGS.1148/B        | Attaching parts for Q.00168 Elbow :—<br>Locknut ... ..                                   |  |   |   |   |   | 1       | —    | C.         |           |      |
| 26FC/583   | Q.00201A          | <b>ELBOW</b> , for hose, at wheel brake ... ..   |  |   |   |   |   | 1       | —    | C.         | NF.1      |      |
| 26FC/10323 | DUNLOP AHO.16203  | <b>HOSE</b> , connector, at bottom of compression leg to elbow at wheel brake            |  |   |   |   |   | 1       | —    | B.         |           |      |
| 27VA/3724  | DUNLOP DN.301B/14 | <b>HOSE</b> , connector in wing to elbow at top of compression leg                       |  |   |   |   |   | 1       | —    | B.         |           |      |
| 28F/9584   | AGS.1148/B        | <b>LOCKNUT</b> , for hose connector ... ..   |  |   |   |   |   | 2       | —    | C.         |           |      |
| 121        | 12 S 279A/ND      | <b>PIPE</b> , elbow at top to connector at bottom of compression leg, port               |  |   |   |   |   | 1       | —    | C.         | NF.1      |      |
| 122        | 12 S 280A/ND      | <b>PIPE</b> , elbow at top to connector at bottom of compression leg, starboard          |  |   |   |   |   | 1       | —    | C.         | NF.1      |      |
| 26FC/575   | Q.00191           | Attaching parts for 12 S 279A/ND and 12 S 280A/ND Pipes :—<br>Block, packing ... ..      |  |   |   |   |   | 2       | —    | C.         | NF.1      |      |
| 28E/8186   | AGS.605/4         | Clip ... ..  |  |   |   |   |   | 2       | —    | C.         |           |      |
|            | 12 S 275          | <b>PLATE</b> , locking, for elbow at wheel brake, 16 SWG, L.72                           |  |   |   |   |   | 1       | —    |            | NF.1      |      |
| 28F/8215   | AGS.1138/B        | <b>WASHER</b> , jointing, for pipe adaptor at elbow at top of compression leg            |  |   |   |   |   | 1       | —    | C.         |           |      |

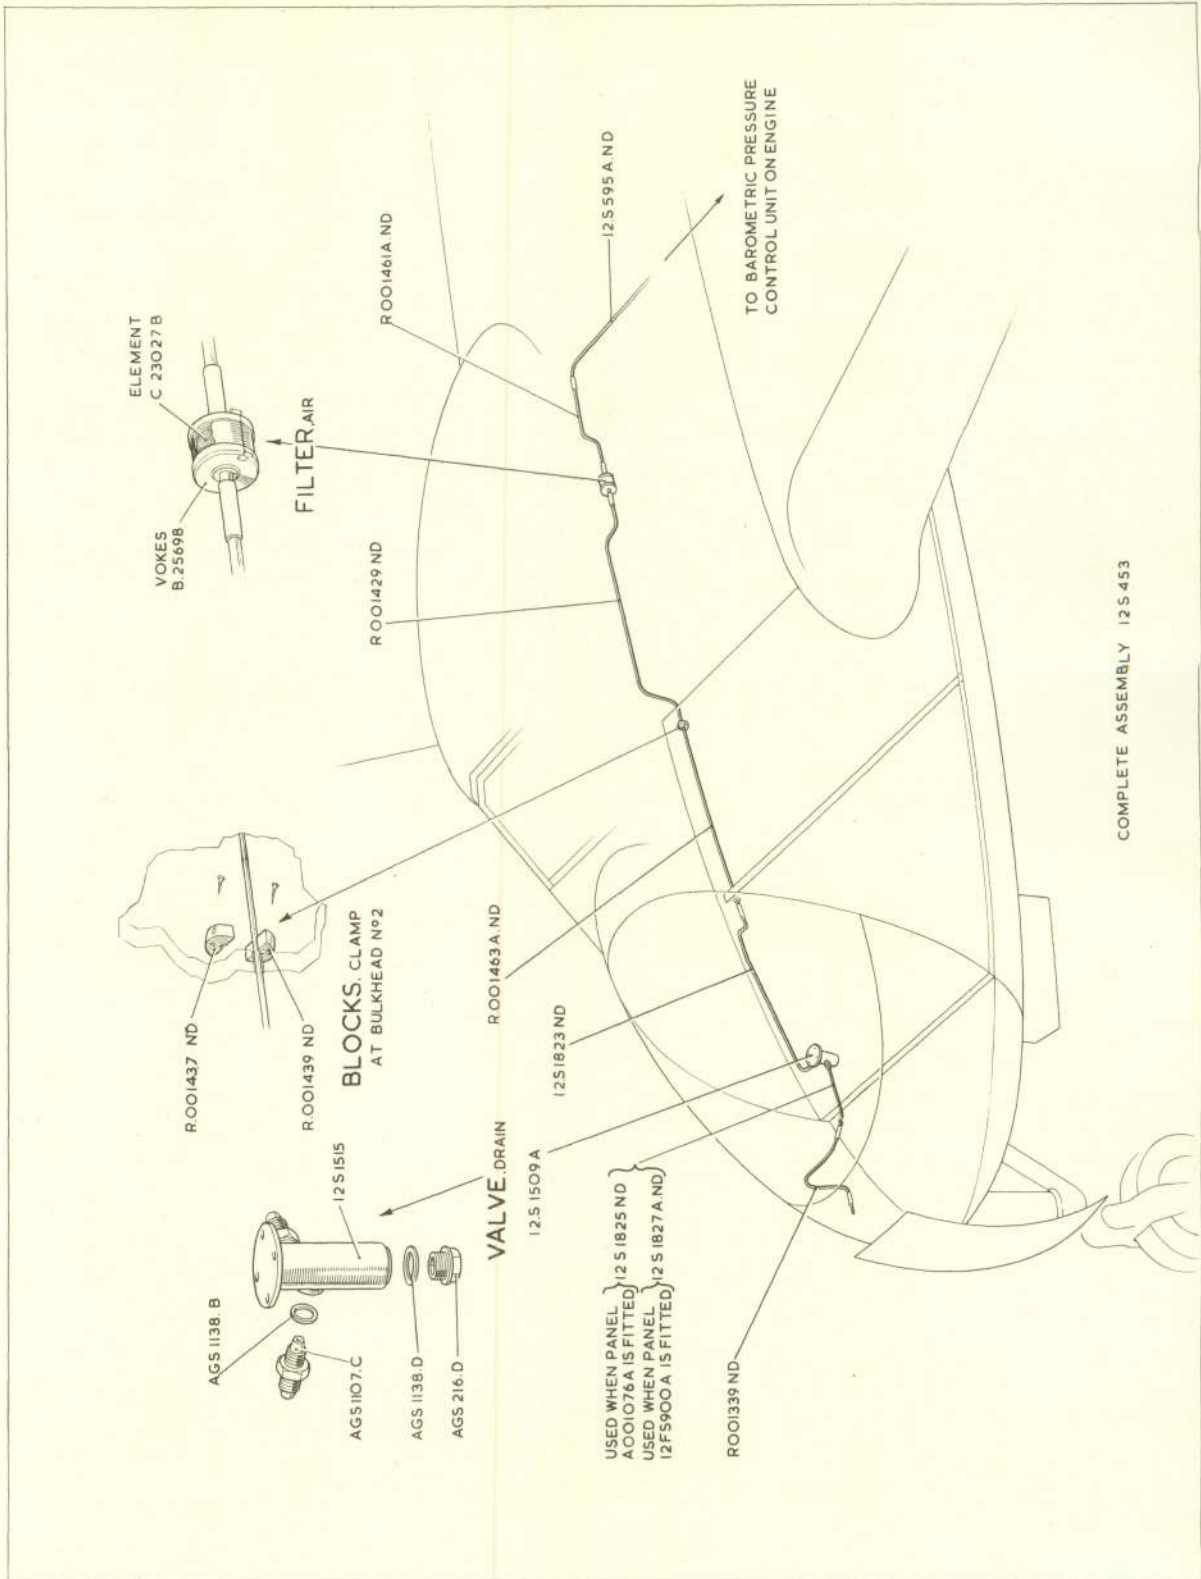

N.I.

**PIPE SERVICES**  
**AIR PIPES AT TOTAL HEAD TO BAROMETRIC**  
**PRESSURE CONTROL UNIT**

N.I.

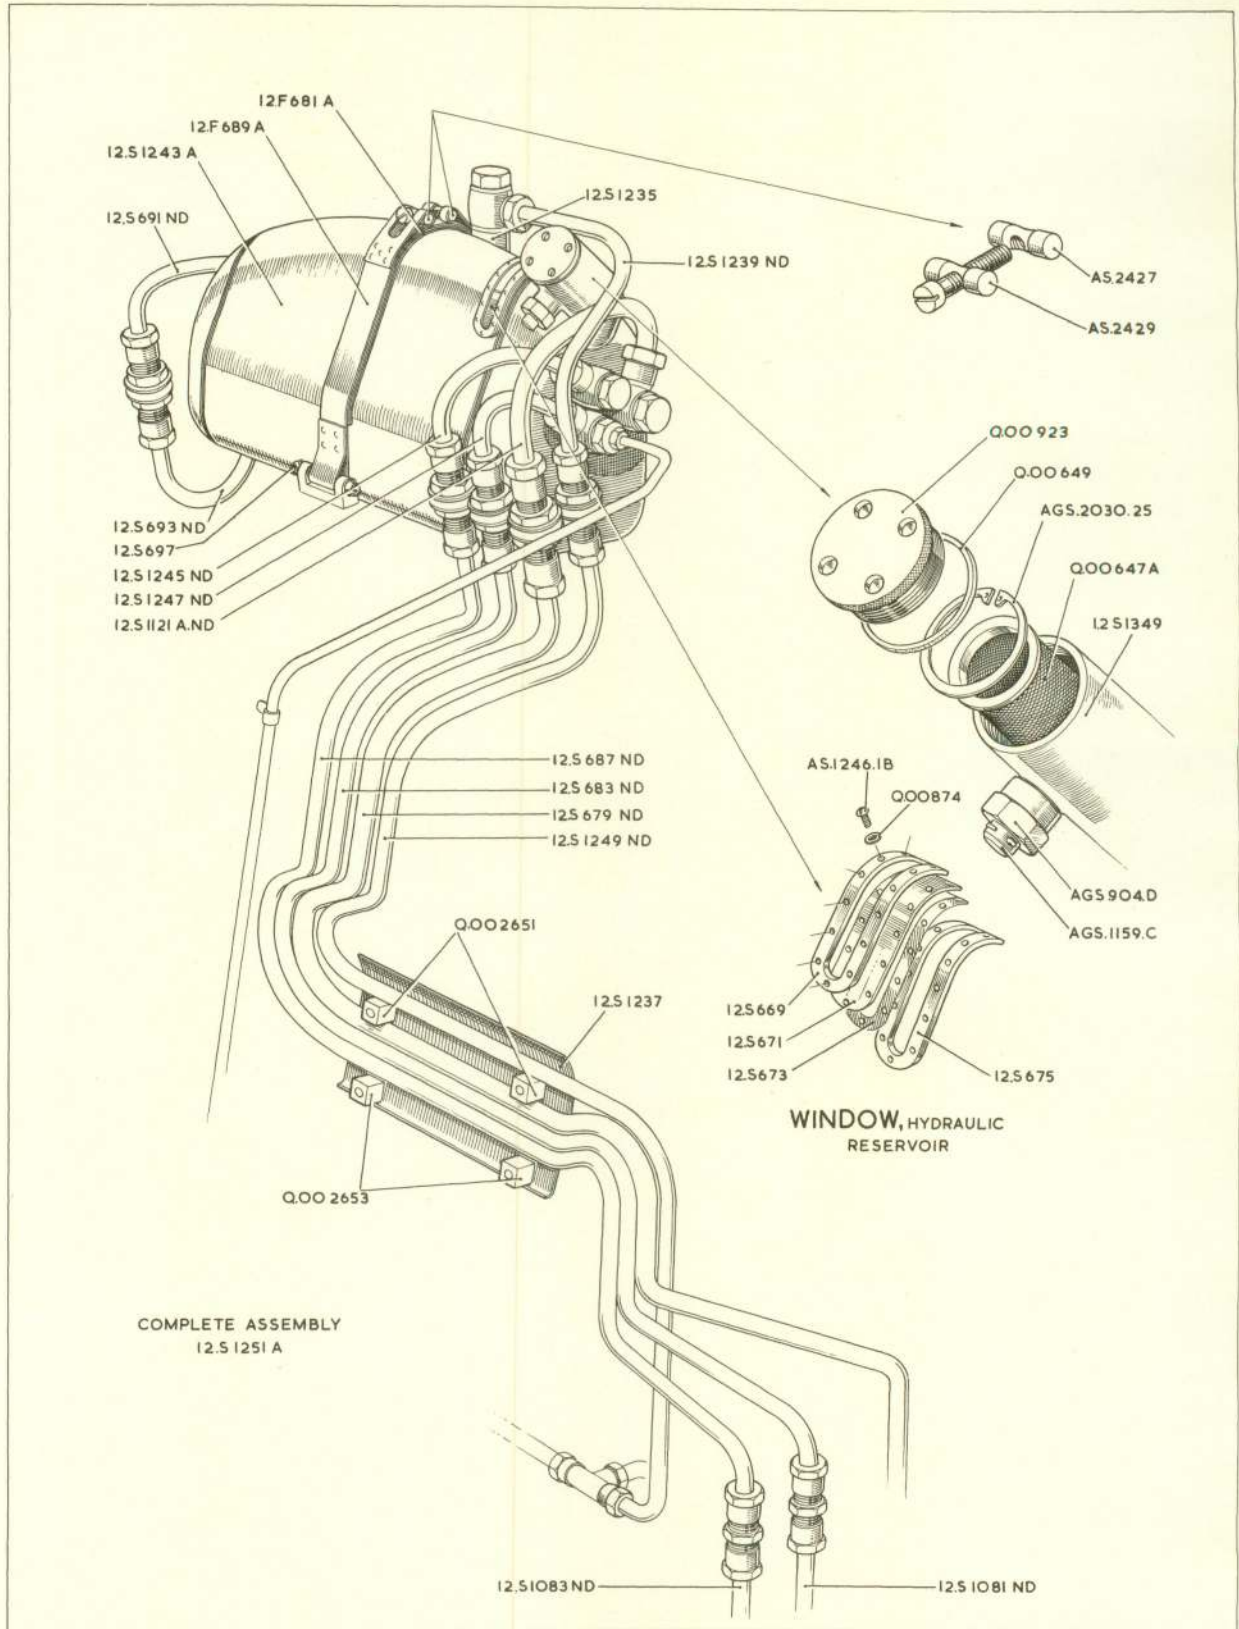


NA.1.

# PIPE SERVICES

NA.1.

## INSTALLATION OF HYDRAULIC RESERVOIR



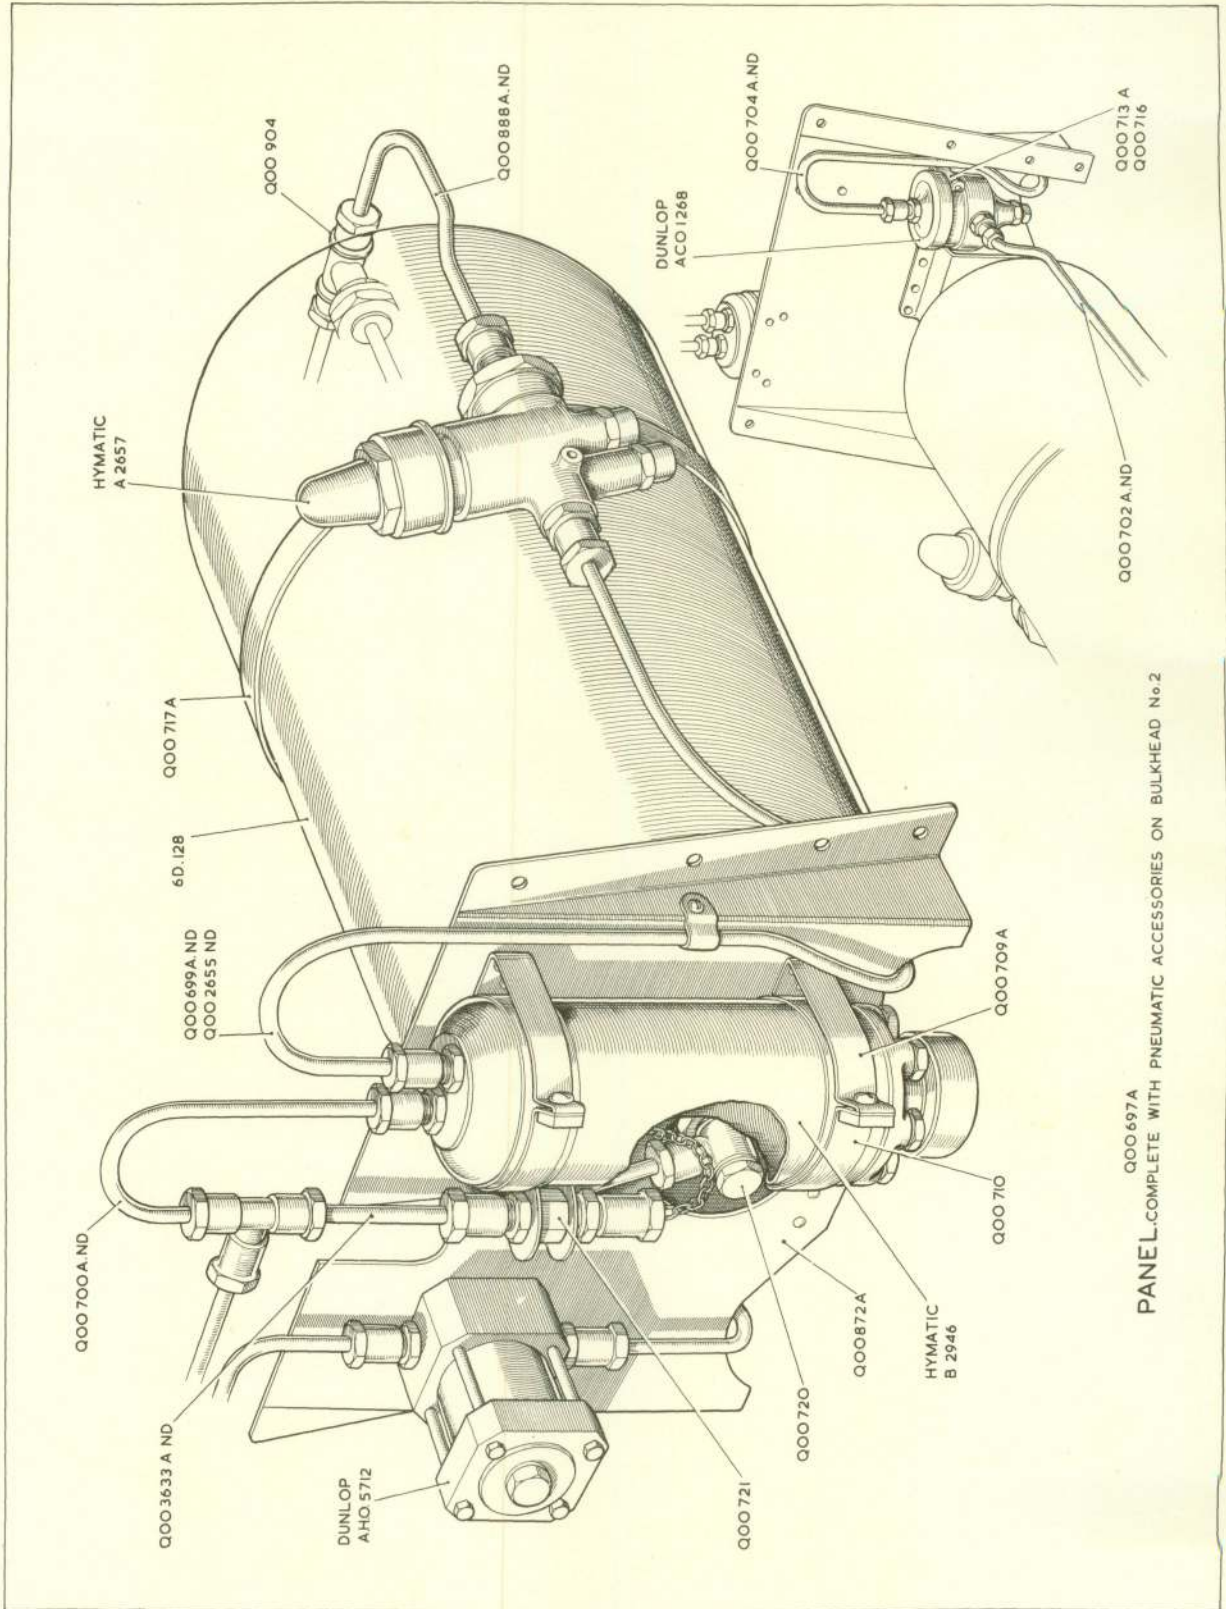


QOO697A  
PANEL COMPLETE WITH PNEUMATIC ACCESSORIES ON BULKHEAD No.2

NC.I.

# PIPE SERVICES

NC.I.

## PIPES IN FUSELAGE

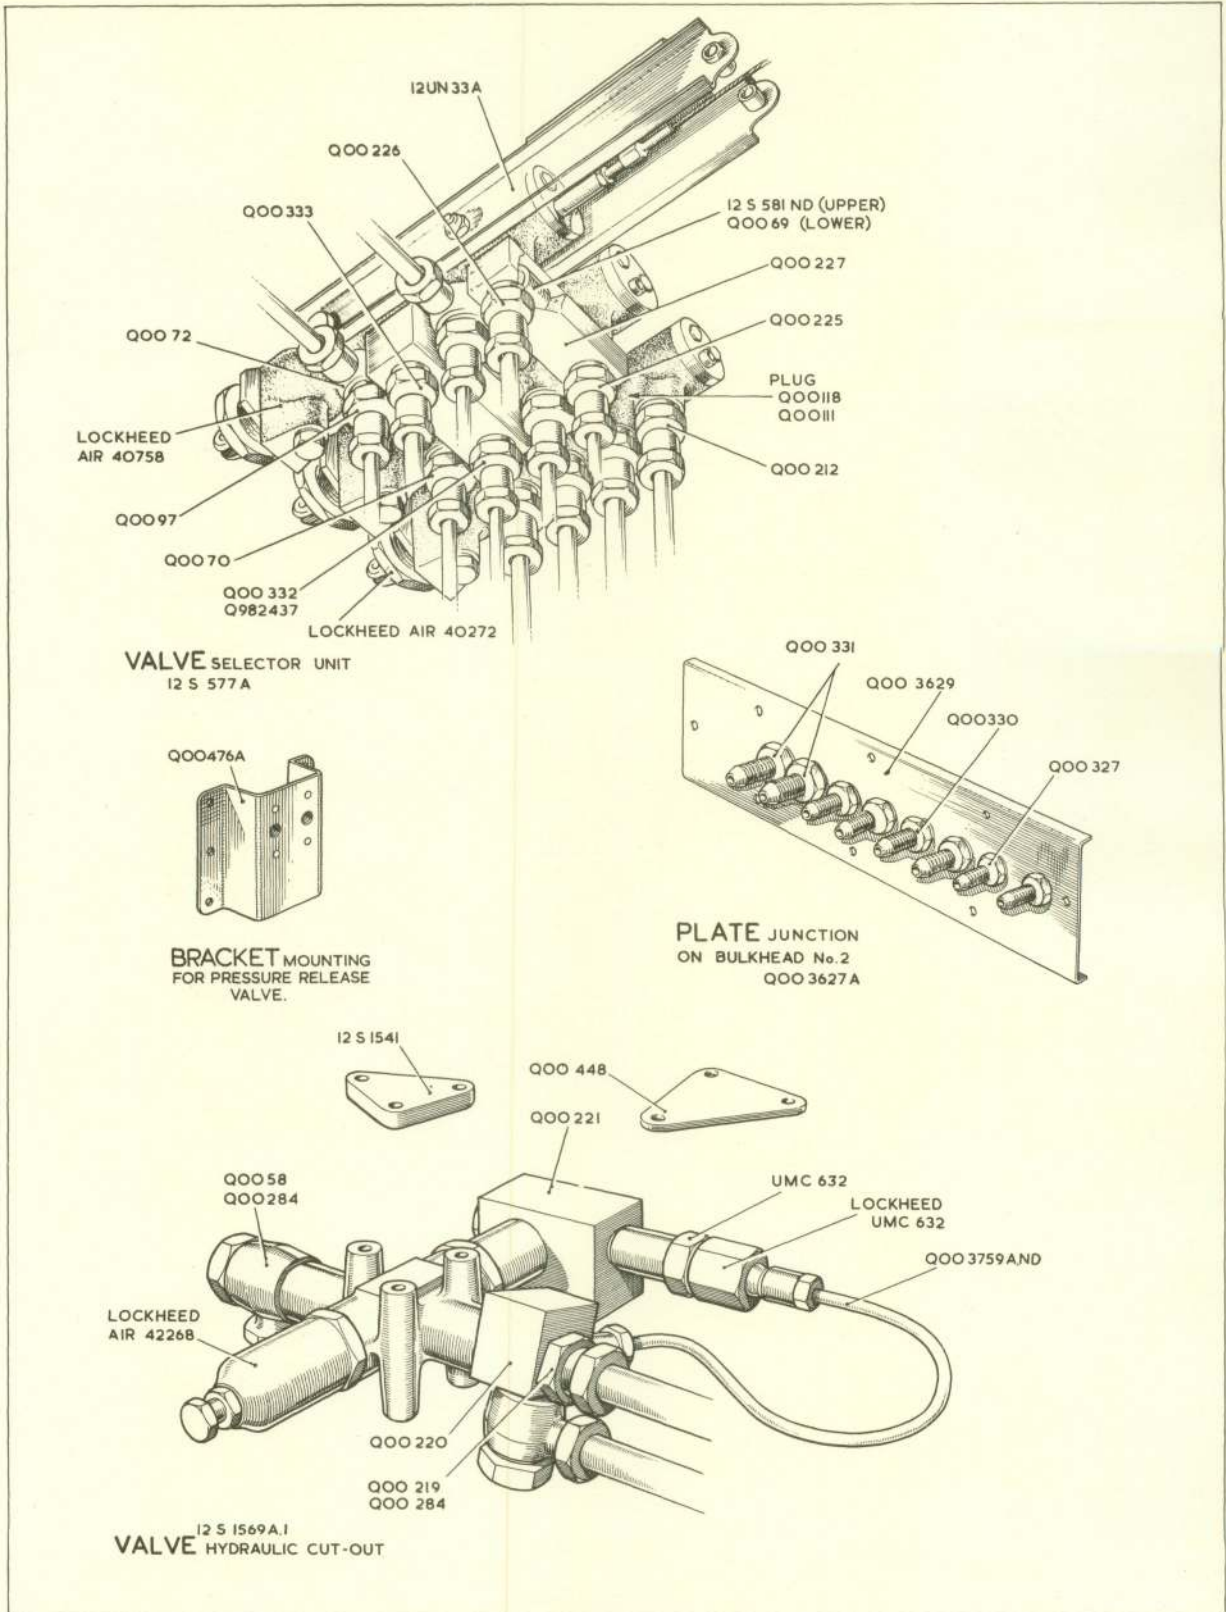



NC.2.

# PIPE SERVICES

NC.2.

## PIPES IN FUSELAGE

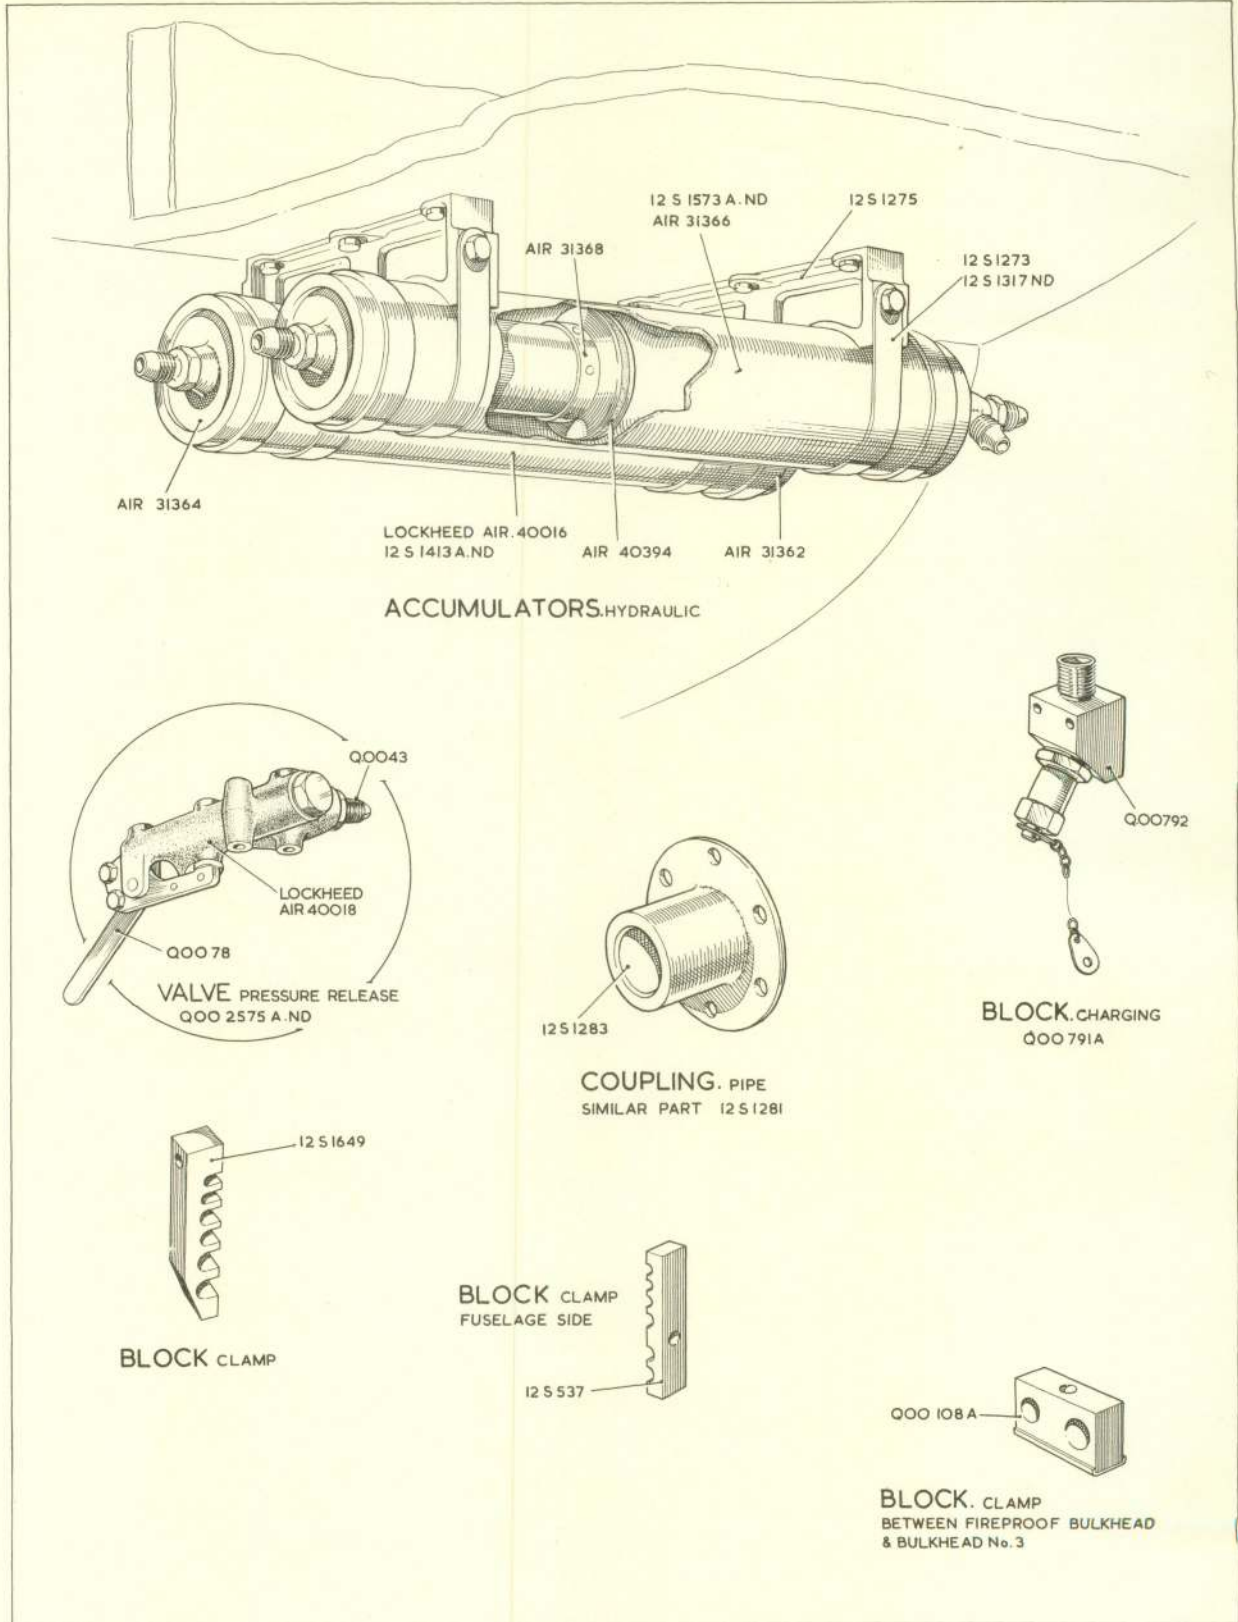

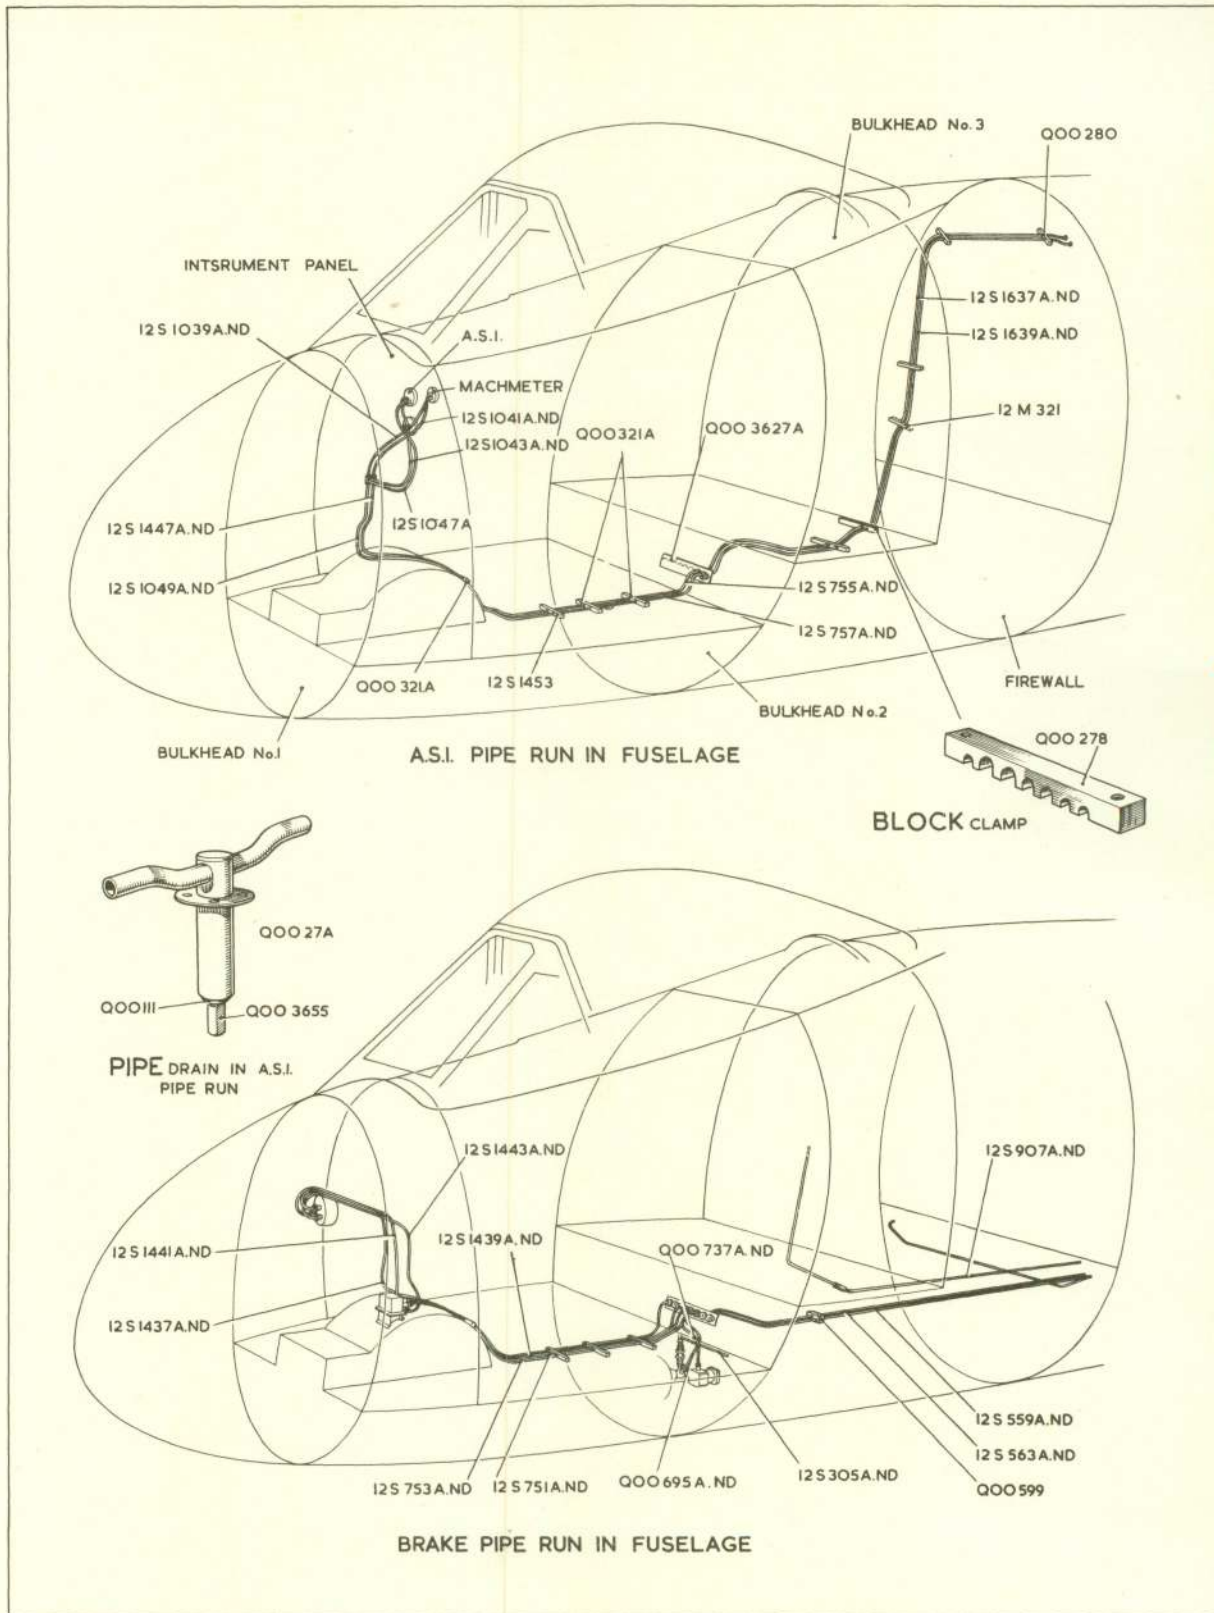


NC.4

# PIPE SERVICES

NC.4

## PIPES IN FUSELAGE

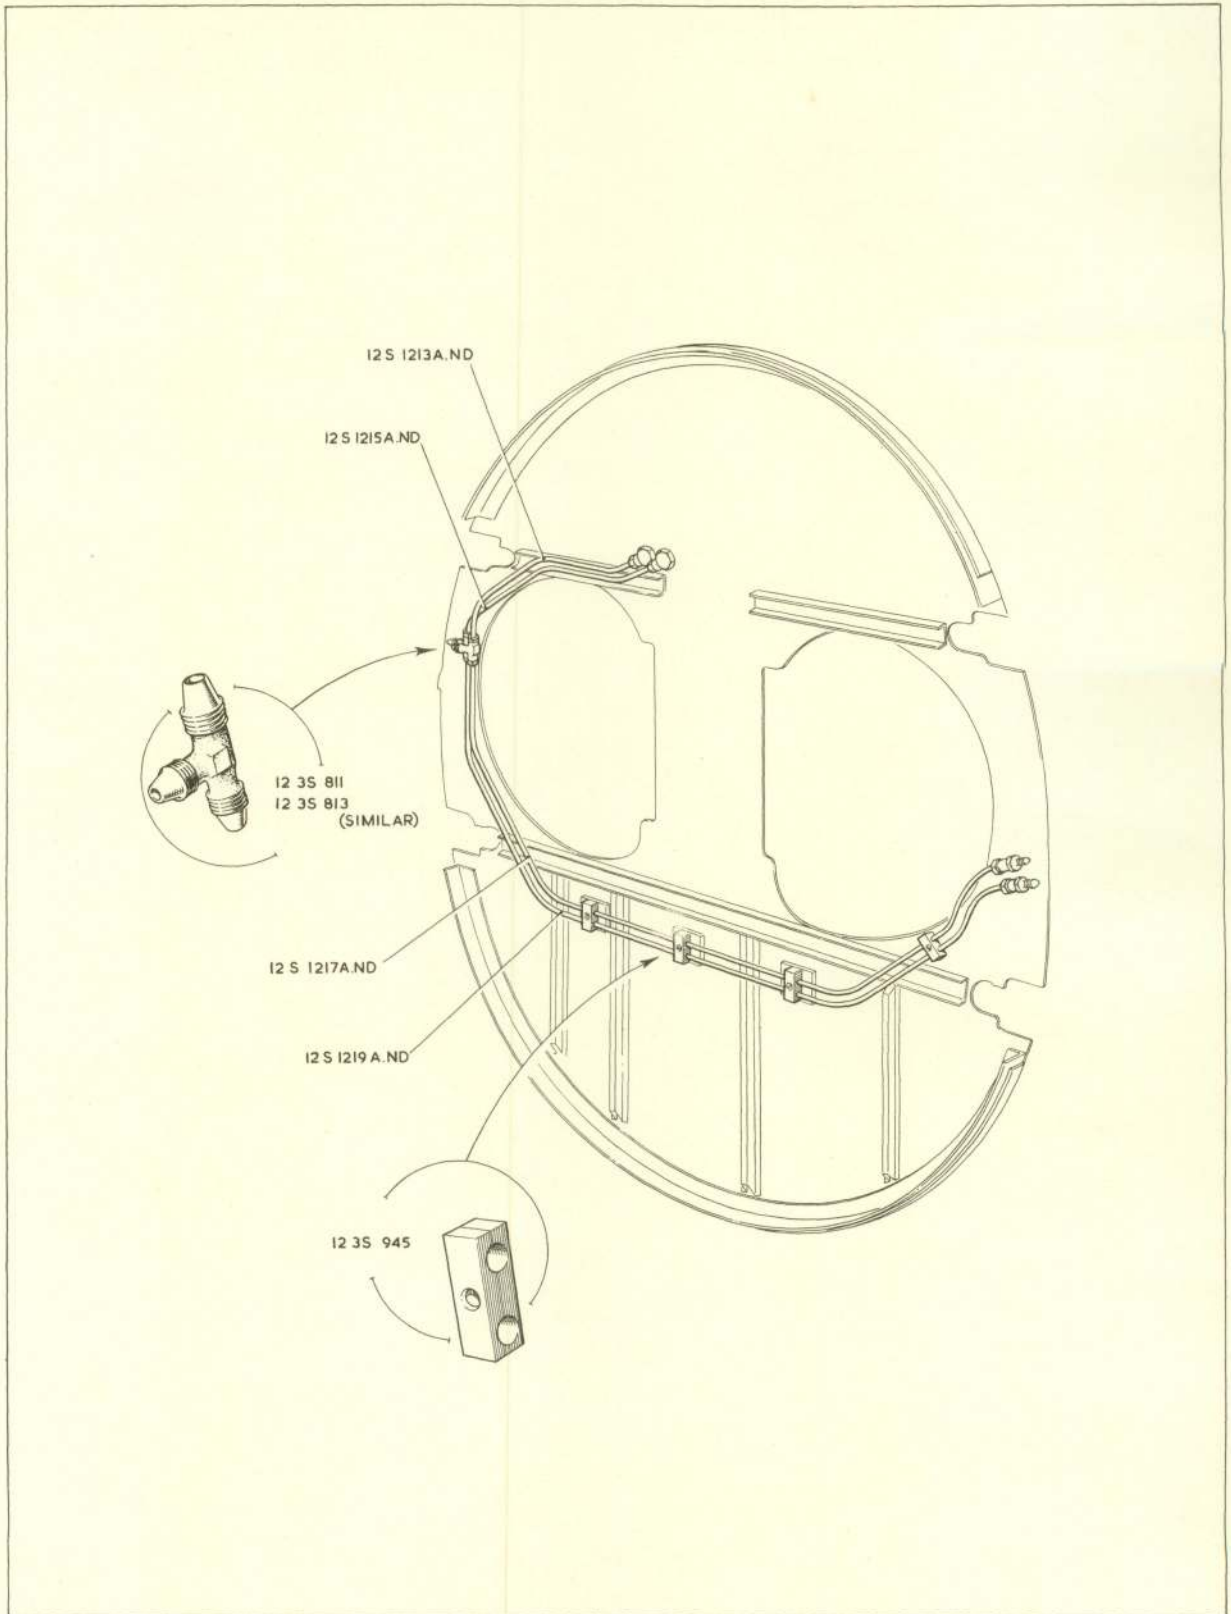


NC.5

# PIPE SERVICES

NC.5

## PIPES IN FUSELAGE



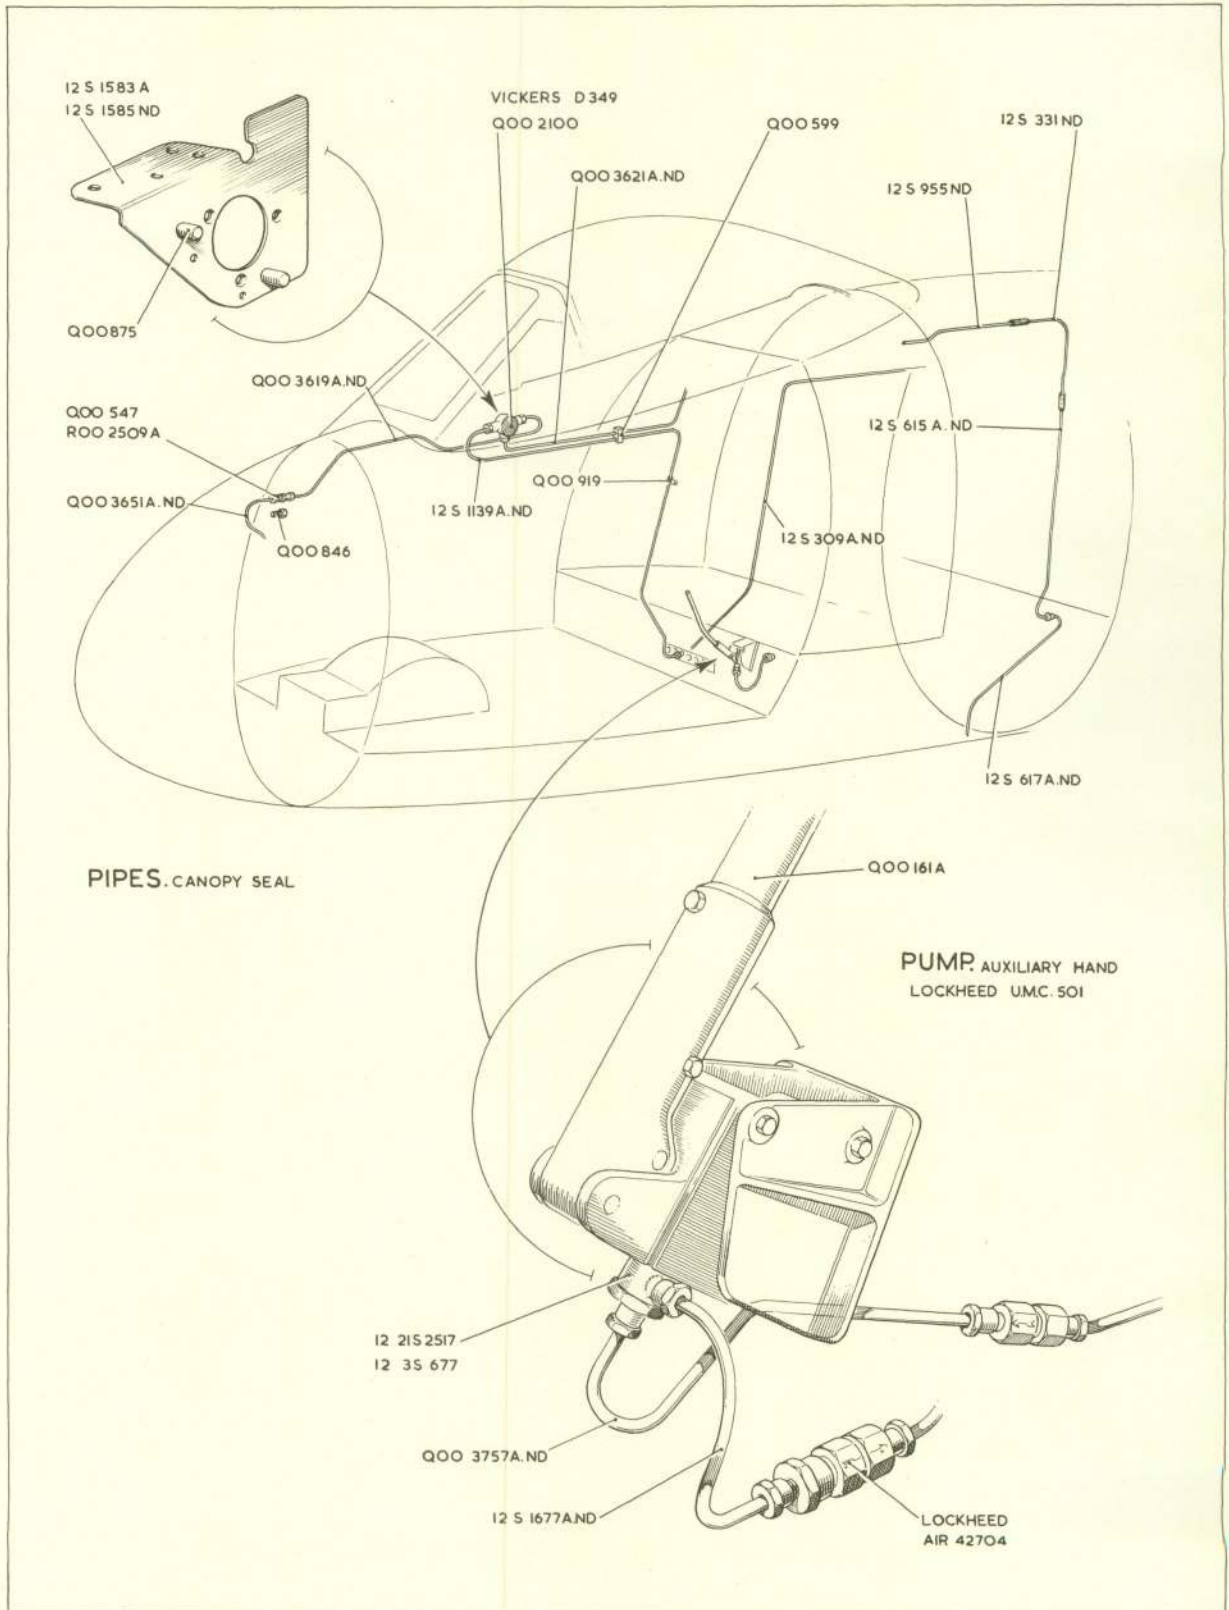


NC.7

# PIPE SERVICES

NC.7

## PIPES IN FUSELAGE

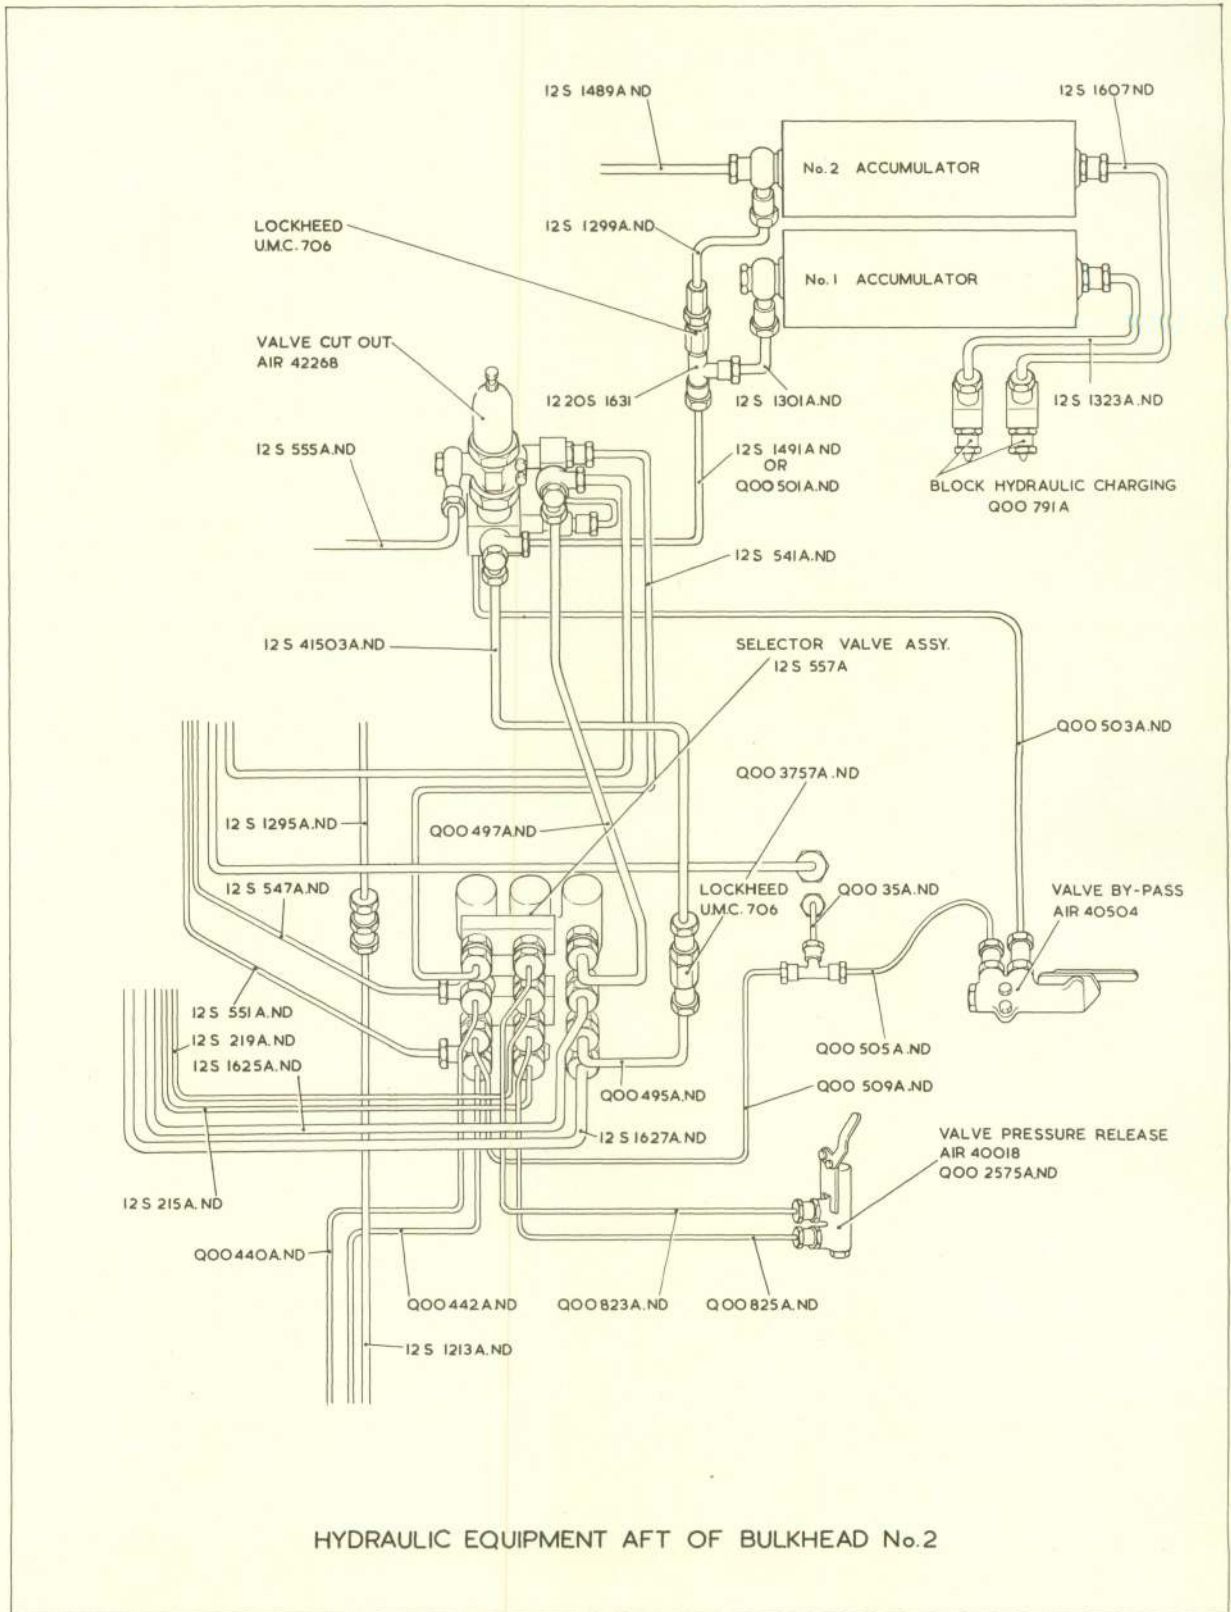


NC.8

# PIPE SERVICES

NC.8

## PIPES IN FUSELAGE







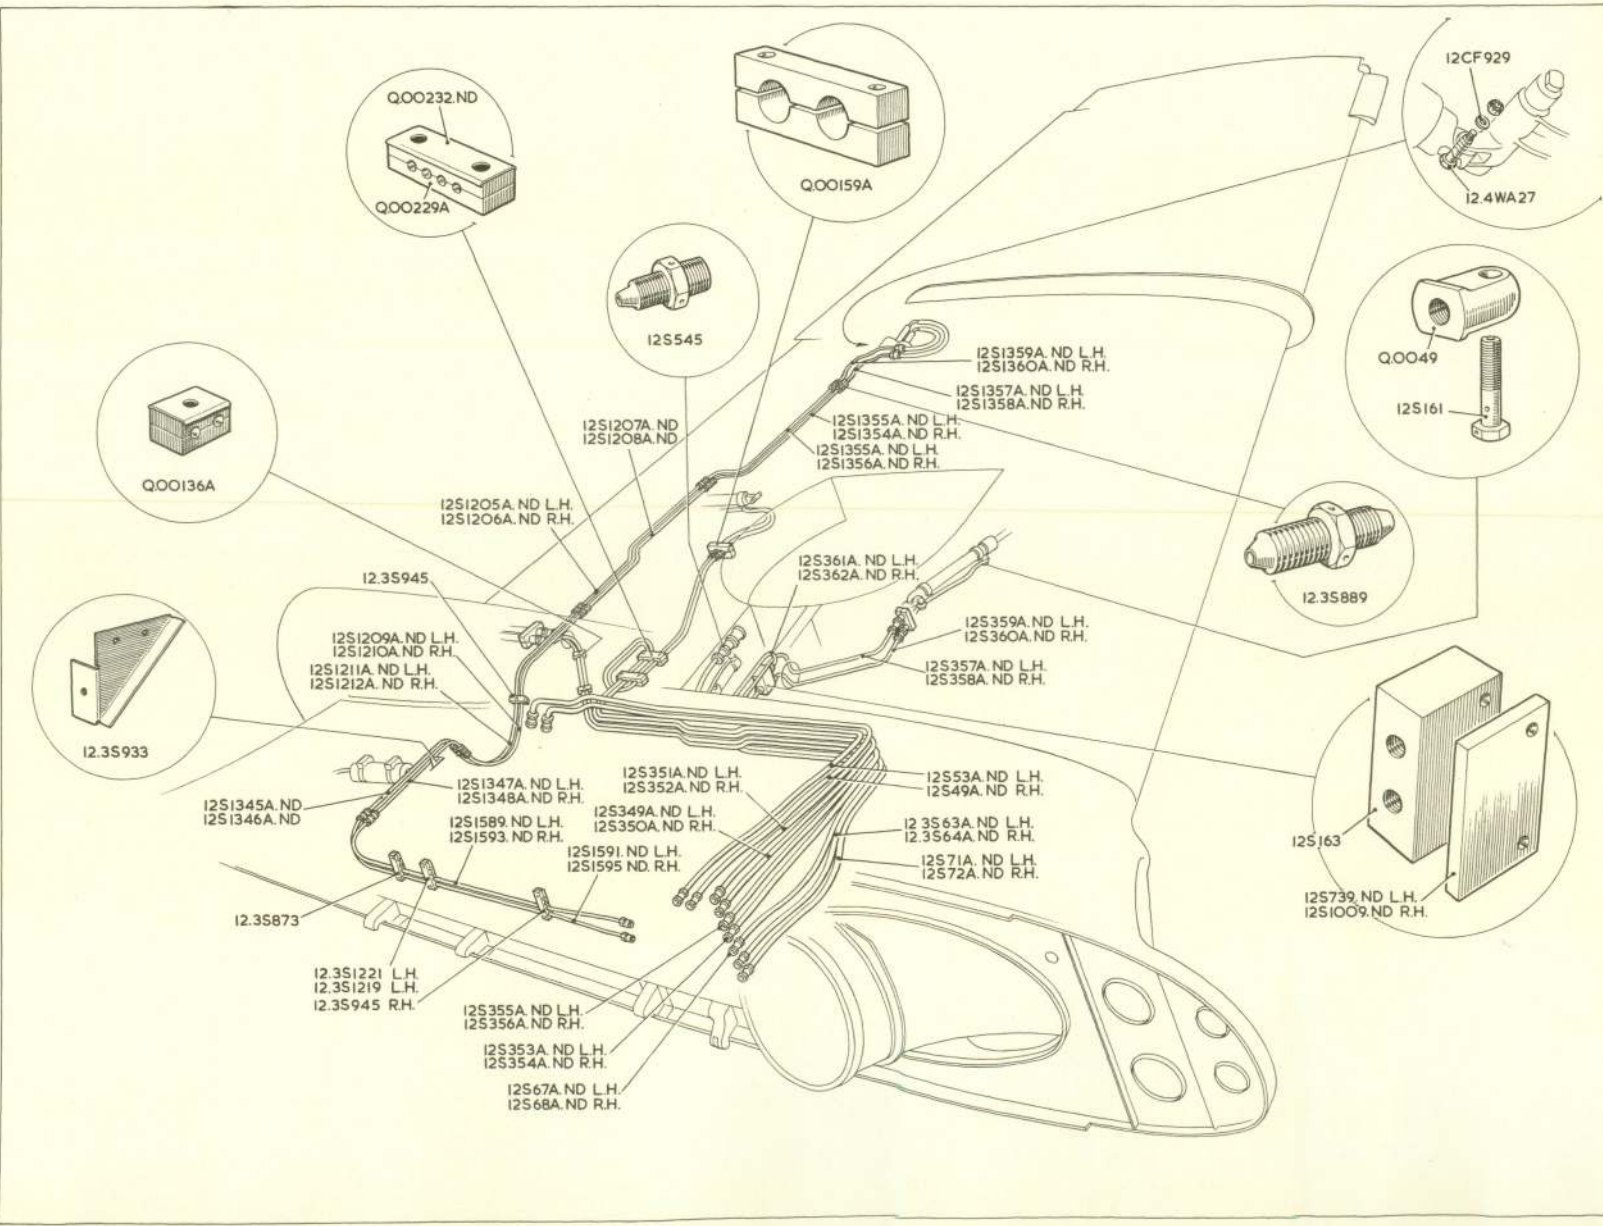


ND.I.

# PIPE SERVICES PIPES IN WING

RESTRICTED

ND.I.

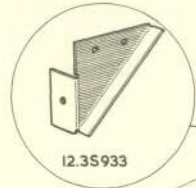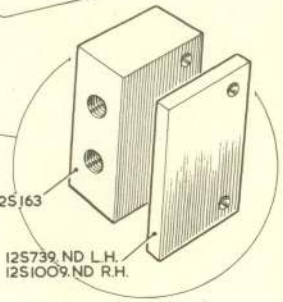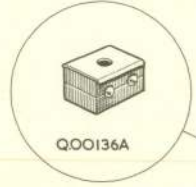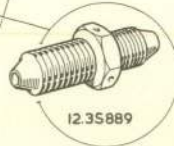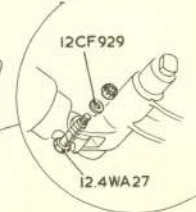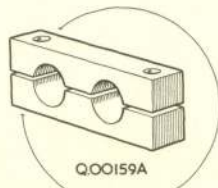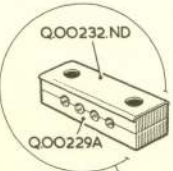

I2S1345A, ND  
I2S1346A, ND

I2.3S1221 L.H.  
I2.3S1219 L.H.  
I2.3S945 R.H.

I2S355A, ND L.H.  
I2S356A, ND R.H.

I2S353A, ND L.H.  
I2S354A, ND R.H.

I2S67A, ND L.H.  
I2S68A, ND R.H.

I2S1209A, ND L.H.  
I2S1210A, ND R.H.  
I2S1211A, ND L.H.  
I2S1212A, ND R.H.

I2S1205A, ND L.H.  
I2S1206A, ND R.H.

I2S1207A, ND  
I2S1208A, ND

I2S361A, ND L.H.  
I2S362A, ND R.H.

I2S1359A, ND L.H.  
I2S1360A, ND R.H.

I2S1355A, ND L.H.  
I2S1354A, ND R.H.  
I2S1355A, ND L.H.  
I2S1356A, ND R.H.

I2S359A, ND L.H.  
I2S360A, ND R.H.

I2S357A, ND L.H.  
I2S358A, ND R.H.

I2S351A, ND L.H.  
I2S352A, ND R.H.

I2S53A, ND L.H.  
I2S49A, ND R.H.

I2.3S63A, ND L.H.  
I2.3S64A, ND R.H.


I2S71A, ND L.H.  
I2S72A, ND R.H.

I2S1347A, ND L.H.  
I2S1348A, ND R.H.

I2S349A, ND L.H.  
I2S350A, ND R.H.

I2S1591, ND L.H.  
I2S1595, ND R.H.

I2.3S873

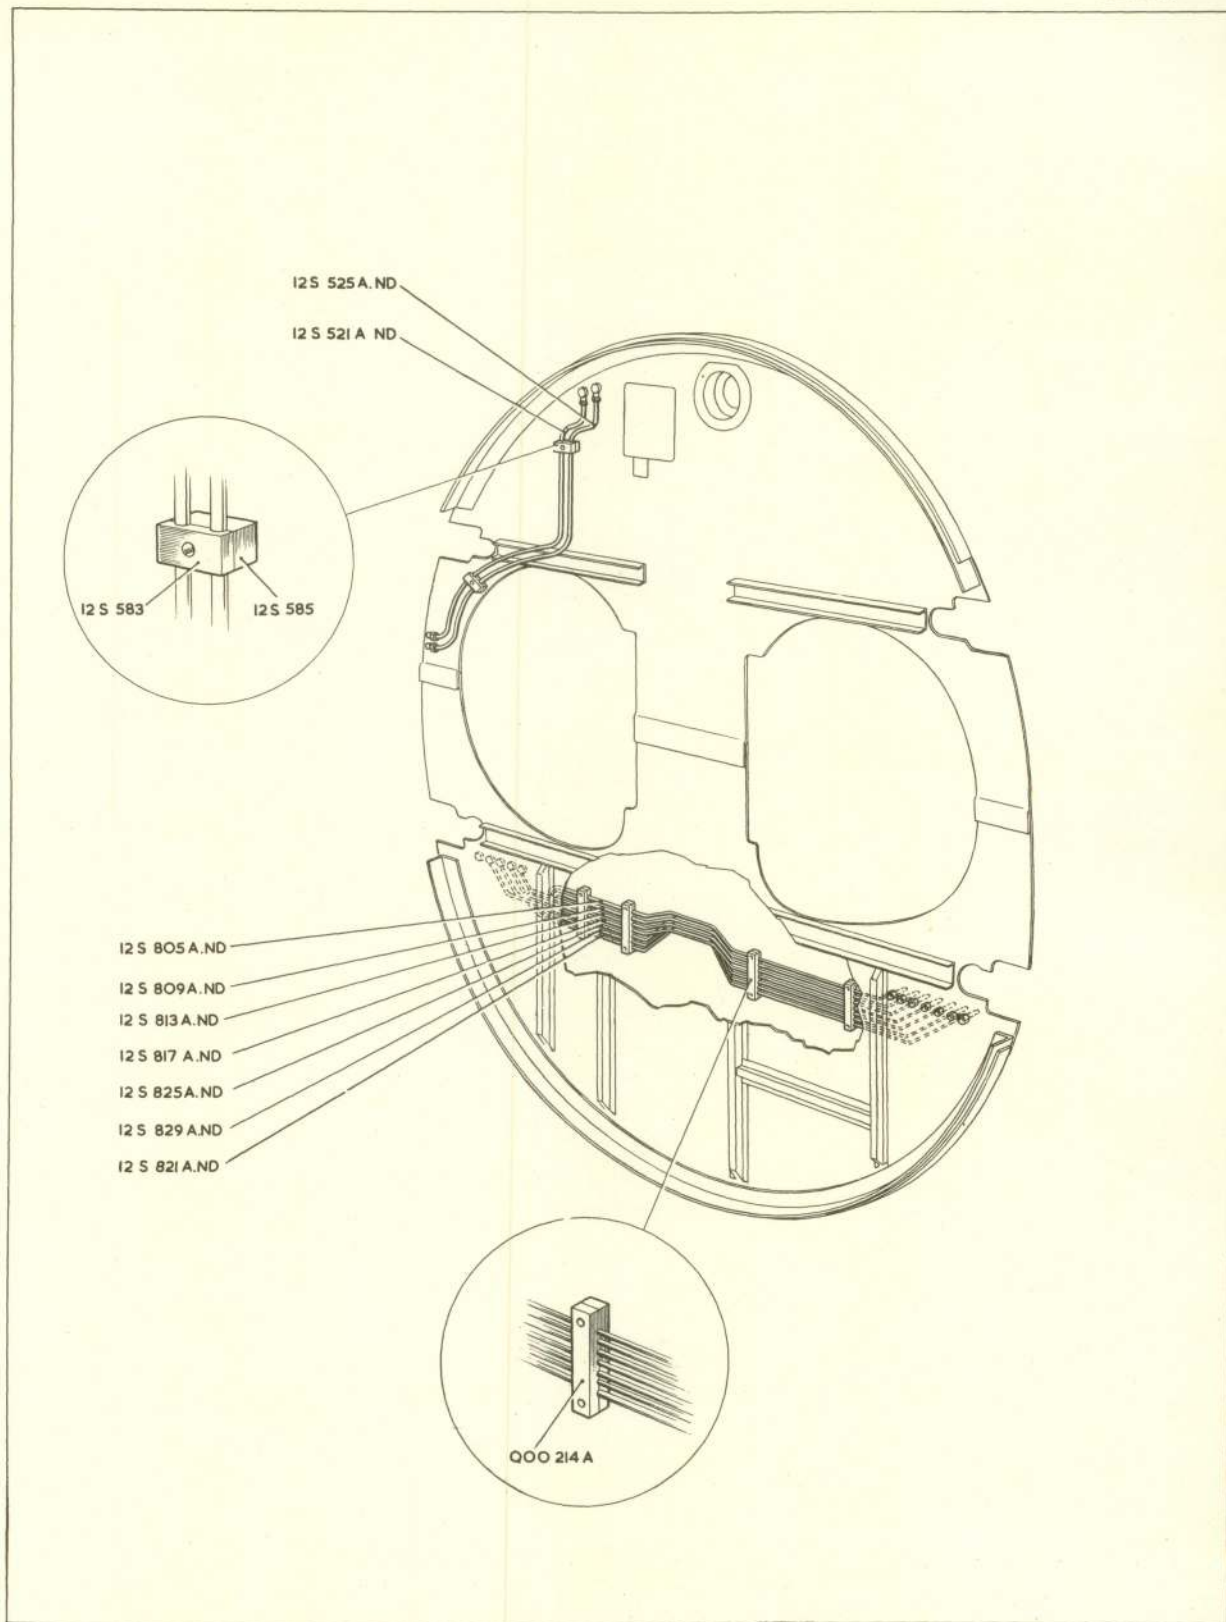


NE.I.

# PIPE SERVICES

NE.I.

## PIPES ON FIREPROOF BULKHEAD

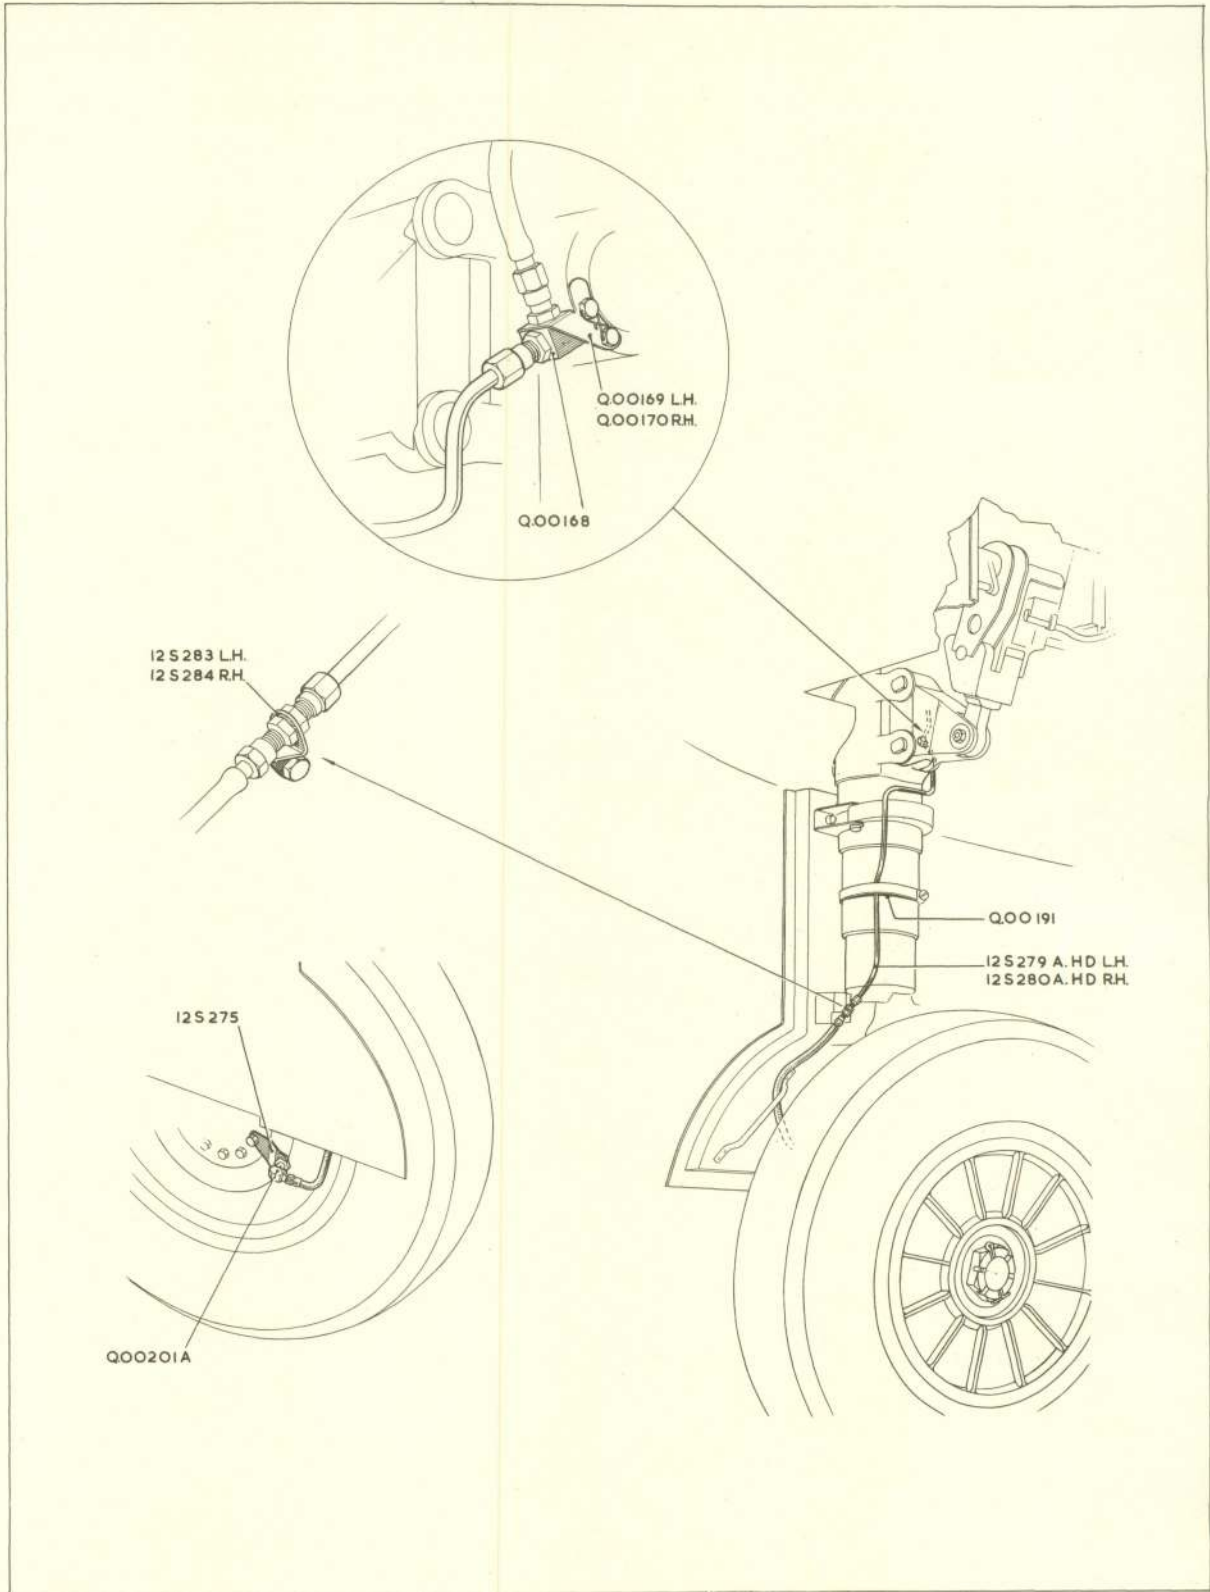

NF.1.

# PIPE SERVICES

## PIPES ON MAIN UNDERCARRIAGE FOR WHEEL BRAKES

NF.1.

## PART 1

## HAND INK ALTERATIONS

Insert in the "Plate No." Column the following plate numbers against the undermentioned Part Numbers :—

## PAGE N.1

| Ref. No.  | Part No.     | Plate No. | Ref. No.  | Part No.      | Plate No. |
|-----------|--------------|-----------|-----------|---------------|-----------|
|           | 12 S 453     | N.1       | 28F/9651  | AGS.1138/D    | N.1       |
|           | R.001437ND   | N.1       |           | 12 S 1825ND   | N.1       |
|           | R.001439ND   | N.1       | 26FC/8538 | R.001463A/ND  | N.1       |
| 26FC/4116 | B.25698      | N.1       | 26FC/6989 | R.001339ND    | N.1       |
| 26FC/4915 | C.23027B     | N.1       |           | 12 S 1827A/ND | N.1       |
| 26FC/8344 | R.001461A/ND | N.1       | 6461      | 12 S 1509A    | N.1       |
|           | 12 S 1823ND  | N.1       | 28F/10525 | AGS.1107/C    | N.1       |
|           | R.001429ND   | N.1       |           | 12 S 1515     | N.1       |
| 1026      | 12 S 595A/ND | N.1       | 28R/1399  | AGS.216/D     | N.1       |
|           |              |           | 28F/8215  | AGS.1138/B    | N.1       |

## PAGE NA.1

| Ref. No.  | Part No.   | Plate No. | Ref. No. | Part No.      | Plate No. |
|-----------|------------|-----------|----------|---------------|-----------|
|           | 12 S 1251A | NA.1      | 6423     | 12 S 679ND    | NA.1      |
| 26FC/4181 | Q.002651   | NA.1      | 9041     | 12 S 1121A/ND | NA.1      |
| 26FC/4182 | Q.002653   | NA.1      | 8147     | 12 S 683ND    | NA.1      |
| 6502      | 12 S 1237  | NA.1      |          | 12 S 1081ND   | NA.1      |
|           |            |           | 8149     | 12 S 687ND    | NA.1      |

## PAGE NA.2

| Ref. No.  | Part No.      | Plate No. | Ref. No.  | Part No.  | Plate No. |
|-----------|---------------|-----------|-----------|-----------|-----------|
|           | 12 S 1083ND   | NA.1      | 1616      | 12 S 673  | NA.1      |
|           | 12 S 1245ND   | NA.1      |           | 12 S 1349 | NA.1      |
|           | 12 S 1249A/ND | NA.1      | 1618      | 12 S 669  | NA.1      |
|           | 12 S 1239ND   | NA.1      | 28F/5605  | AGS.904/D | NA.1      |
| 8152      | 12 S 693ND    | NA.1      |           | Q.00874   | NA.1      |
| 8151      | 12 S 691ND    | NA.1      | 26FC/2858 | Q.00649   | NA.1      |
| 10214     | 12 S 1243A    | NA.1      | 1617      | 12 S 671  | NA.1      |
|           | 12 S 1235     | NA.1      | 1663      | 12 F 681A | NA.1      |
| 28D/11937 | AS.1246/1B    | NA.1      | 1662      | 12 F 689A | NA.1      |
| 28F/12078 | AGS.1159/C    | NA.1      |           | 12 S 697  | NA.1      |
| 26FC/3608 | Q.00923       | NA.1      | 28U/13999 | AS.2427   | NA.1      |
| 28N/13738 | AGS.2030/25   | NA.1      | 28U/14001 | AS.2429   | NA.1      |
| 26FC/2856 | Q.00647/A     | NA.1      | 1615      | 12 S 675  | NA.1      |

## PAGE NB.1

| Ref. No.  | Part No.  | Plate No. | Ref. No.  | Part No.    | Plate No. |
|-----------|-----------|-----------|-----------|-------------|-----------|
|           | 12-2S 303 | NB.1      | 26FC/2647 | Q.00688     | NB.1      |
|           | Q.003743  | NB.1      |           | 12 TB 137   | NB.1      |
|           | 12 W 3175 | NB.1      |           | Q.00604     | NB.1      |
|           | 12 S 1087 | NB.1      | 8327      | 12 S 1631   | NB.1      |
| 26BY/9309 | Q.98914A  | NB.1      |           | Q.002076ND  | NB.1      |
| 26FC/2646 | Q.00687   | NB.1      |           | 12 TB 147ND | NB.1      |

RESTRICTED

Issued with AL/2

PART 1

Venom FB Mk. 4

HAND INK ALTERATIONS

Insert in the "Plate No." Column the following Plate numbers against the undermentioned Part Numbers :-

PAGE NB.2

| Ref. No.  | Part No.       | Plate No. | Ref. No. | Part No.      | Plate No. |
|-----------|----------------|-----------|----------|---------------|-----------|
| 26FC/5877 | Q.00606A/1     | NB.1      | 6425     | 12 S 1036A/ND | NB.1      |
| 26FC/5878 | Q.003655       | NB.1      |          | 12 S 201A/ND  | NB.1      |
| 26FC/2336 | Q.00111        | NB.1      |          | 12-2S 301A/ND | NB.1      |
|           | 12-2 S 299A/ND | NB.1      |          | Q.001016A/ND  | NB.1      |
|           | 12-2 S 467A/ND | NB.1      |          | 12 S 1035A/ND | NB.1      |
|           | Q.001014A/ND   | NB.1      |          | 12 S 205A/ND  | NB.1      |

PAGE NC.1

| Ref. No. | Part No.           | Plate No. | Ref. No.  | Part No.      | Plate No. |
|----------|--------------------|-----------|-----------|---------------|-----------|
| 8847     | 12 S 1413A/ND      | NC.3      |           | 12 S 1573A/ND | NC.3      |
| 27M/461  | LOCKHEED AIR.40016 | NC.3      | 26FC/2704 | Q.00846       | NC.7      |
| 27M/7886 | AIR.31364          | NC.3      | 26FC/3550 | A.004160      | NC.6      |
| 27M/7885 | AIR.31362          | NC.3      |           | Q.00217A      | NC.6      |
| 27M/7887 | AIR.31368          | NC.3      |           | Q.00230A      | NC.6      |
| 27M/7856 | AIR.40394          | NC.3      | 6519      | 12 S 1285     | NC.6      |
| 27M/7888 | AIR.31366          | NC.3      | 2665      | 12-3S 677     | NC.7      |
|          |                    |           | 26FC/2372 | Q.00321A      | NC.4      |

PAGE NC.2

| Ref. No.  | Part No. | Plate No. | Ref. No.  | Part No.  | Plate No. |
|-----------|----------|-----------|-----------|-----------|-----------|
| 26FC/2370 | Q.00599  | NC.4      | 26FC/2371 | Q.00839A  | NC.6      |
| 26FC/2385 | Q.00240  | NC.6      | 26FC/2377 | Q.00278   | NC.4      |
| 26FC/2380 | Q.00108A | NC.3      |           | 12 M 321  | NC.4      |
|           |          |           | 5903      | 12-3S 945 | NC.5      |

PAGE NC.3

| Ref. No. | Part No.  | Plate No. | Ref. No.   | Part No. | Plate No. |
|----------|-----------|-----------|------------|----------|-----------|
|          | 12 S 1649 | NC.3      | 26FC/2378  | Q.00280  | NC.4      |
|          | 12 S 1647 | NC.6      | 1631       | 12 S 869 | NC.6      |
|          | 12 S 1307 | NC.6      |            | A.002887 | NC.6      |
|          | 12 S 1453 | NC.4      | 26FC/2382  | Q.00229A | NC.6      |
| 8144     | 12 S 537  | NC.3      | 26FC/11770 | Q.00136A | NC.6      |

PAGE NC.4

| Ref. No.  | Part No.   | Plate No. | Ref. No.  | Part No.    | Plate No. |
|-----------|------------|-----------|-----------|-------------|-----------|
| 26FC/4946 | Q.00791A   | NC.3      |           | Q.00476A    | NC.2      |
| 26FC/6847 | Q.00792    | NC.3      |           | 12 S 1583A  | NC.7      |
| 8185      | 12-2S 2517 | NC.7      |           | 12 S 1585ND | NC.7      |
| 26FC/2367 | Q.00563    | NC.6      |           | Q.00875     | NC.7      |
|           | Q.00842    | NC.6      | 26FC/6977 | R.002509A   | NC.7      |

PAGE NC.5

| Ref. No. | Part No. | Plate No. | Ref. No. | Part No.      | Plate No. |
|----------|----------|-----------|----------|---------------|-----------|
|          | Q.00919  | NC.7      |          |               |           |
|          | Q.002100 | NC.7      | 27F/1960 | VICKERS D.349 | NC.7      |

## HAND INK ALTERATIONS

Insert in the "Plate No." Column the following plate numbers against the undermentioned Part Numbers :—

## PAGE NC.6

| Ref. No. | Part No.  | Plate No. | Ref. No.  | Part No.    | Plate No. |
|----------|-----------|-----------|-----------|-------------|-----------|
| 6524     | 12 S 1281 | NC.3      | 4890      | 12-20S 1631 | NC.8      |
| 6525     | 12 S 1283 | NC.3      | 9204      | 12-SS 813   | NC.5      |
| 9203     | 12-3S 811 | NC.5      | 26FC/2363 | Q.00161A    | NC.7      |
|          |           |           | 26FC/2362 | Q.0078      | NC.3      |

## PAGE NC.7

| Ref. No.  | Part No.        | Plate No. | Ref. No.  | Part No.        | Plate No. |
|-----------|-----------------|-----------|-----------|-----------------|-----------|
|           | Q.00697A        | NC.1      |           | Q.002655ND      | NC.1      |
| 26FC/3621 | Q.00720         | NC.1      | 26FC/4141 | Q.00872A        | NC.1      |
| 26FC/3622 | Q.00721         | NC.1      | 26FC/4822 | Q.00704A/ND     | NC.1      |
| 26FC/6434 | Q.00713A        | NC.1      | 26FC/4833 | Q.00888A/ND     | NC.1      |
|           | Q.00716         | NC.1      |           | Q.003633A/ND    | NC.1      |
| 26FC/6435 | Q.00709A        | NC.1      | 26FC/4818 | Q.00699A/ND     | NC.1      |
|           | Q.00710         | NC.1      | 26FC/4820 | Q.00700A/ND     | NC.1      |
| 26FC/6436 | Q.00717A        | NC.1      | 27VB/3247 | HYMATIC A.2657  | NC.1      |
| 6D/128    | †               | NC.1      | 27VB/3168 | HYMATIC B.2946  | NC.1      |
| 27G/2091  | DUNLOP ACO.1268 | NC.1      | 27G/2022  | DUNLOP AHO.5712 | NC.1      |

## PAGE NC.8

| Ref. No. | Part No.      | Plate No. | Ref. No. | Part No.      | Plate No. |
|----------|---------------|-----------|----------|---------------|-----------|
|          | Q.00904       | NC.1      |          | 12 S 1637A/ND | NC.4      |
| 1874     | 12 S 1047A/ND | NC.4      |          | 12 S 1301A/ND | NC.8      |
| 1875     | 12 S 1049A/ND | NC.4      | 7129     | 12 S 599A/ND  | NC.4      |
| 1628     | 12 S 757A/ND  | NC.4      | 7130     | 12 S 563A/ND  | NC.4      |
|          | 12 S 1639A/ND | NC.4      |          | 12 S 305A/ND  | NC.4      |
| 1870     | 12 S 1039A/ND | NC.4      |          | 12 S 1439A/ND | NC.4      |
| 1872     | 12 S 1043A/ND | NC.4      |          | Q.00737A/ND   | NC.4      |
|          | 12 S 1447A/ND | NC.4      |          | Q.00695A/ND   | NC.4      |
| 1871     | 12 S 1041A/ND | NC.4      |          | 12 S 1437A/ND | NC.4      |
| 1626     | 12 S 755A/ND  | NC.4      | 8325     | 12 S 309A/ND  | NC.7      |

## PAGE NC.9

| Ref. No.  | Part No.      | Plate No. | Ref. No. | Part No.           | Plate No. |
|-----------|---------------|-----------|----------|--------------------|-----------|
| 9664      | 12 S 1627A/ND | NC.8      | 28M/7778 | LOCKHEED AIR.31832 | NC.6      |
| 9663      | 12 S 1625A/ND | NC.8      | 27M/7781 | LOCKHEED AIR.34490 | NC.6      |
|           | Q.00495A/ND   | NC.8      |          | 12 S 1327A/ND      | NC.6      |
|           | Q.00497A/ND   | NC.8      |          | 12 S 1303A/ND      | NC.6      |
| 26FC/2353 | Q.0027A       | NC.4      |          | 12 S 1329A/ND      | NC.6      |
| 26FC/5878 | Q.003655      | NC.4      |          | Q.003757A/ND       | NC.7      |
| 26FC/2336 | Q.00111       | NC.4      |          | Q.00823A/ND        | NC.8      |
| 1682      | 12 S 907A/ND  | NC.4      |          | 12 S 1607A/ND      | NC.8      |
| 517       | 12 S 215A/ND  | NC.8      |          | 12 S 1323A/ND      | NC.8      |
| 518       | 12 S 219A/ND  | NC.8      | 8184     | 12 S 1677A/ND      | NC.7      |
|           | Q.00825A/ND   | NC.8      |          | Q.00442A/ND        | NC.6      |
|           |               |           |          | Q.00440A/ND        | NC.6      |

RESTRICTED

Issued with AL/2

PART 1

Venom FB Mk. 4

HAND INK ALTERATIONS

Insert in the "Plate No." Column the following Plate numbers against the undermentioned Part Numbers :—

PAGE NC.10

| Ref. No.  | Part No.      | Plate No. | Ref. No. | Part No.      | Plate No. |
|-----------|---------------|-----------|----------|---------------|-----------|
|           | 12 S 1443A/ND | NC.4      |          | 12 S 1487A/ND | NC.6      |
| 1625      | 12 S 753A/ND  | NC.4      |          | 12 S 1289A/ND | NC.6      |
| 26FC/5405 | Q.003619A/ND  | NC.6      |          | 12 S 1217A/ND | NC.5      |
|           | Q.00501A/ND   | NC.8      |          | 12 S 1297A/ND | NC.6      |
|           | 12 S 1489A/ND | NC.8      |          | 12 S 1215A/ND | NC.5      |
|           | Q.0035A/ND    | NC.8      | 6520     | 12 S 1309A/ND | NC.6      |
|           | Q.00503A/ND   | NC.8      |          | 12 S 1219A/ND | NC.5      |
|           | Q.00505A/ND   | NC.8      |          | 12 S 1287A/ND | NC.6      |
|           | 12 S 1299A/ND | NC.8      |          | 12 S 1293A/ND | NC.6      |
| 6522      | 12 S 1313A/ND | NC.6      |          | 12 S 1325A/ND | NC.6      |
|           | 12 S 1295A/ND | NC.8      |          | 12 S 1441A/ND | NC.4      |
|           | 12 S 1213A/ND | NC.8      | 1624     | 12 S 751A/ND  | NC.4      |
| 6521      | 12 S 1311A/ND | NC.6      | 524      | 12 S 551A/ND  | NC.8      |

PAGE NC.11

| Ref. No.  | Part No.     | Plate No. | Ref. No.  | Part No.           | Plate No. |
|-----------|--------------|-----------|-----------|--------------------|-----------|
| 523       | 12 S 547A/ND | NC.8      | 26FC/2361 | Q.00331            | NC.2      |
| 1684      | 12 S 955ND   | NC.7      |           | Q.003629           | NC.2      |
|           | 12 S 617A/ND | NC.7      |           | Q.00448            | NC.2      |
|           | 12 S 331ND   | NC.7      | 27W/1     | Lockheed UMC.501   | NC.7      |
|           | 12 S 615A/ND | NC.7      |           | 12-3S 1101A/ND     | NC.6      |
|           | Q.003627A    | NC.2      | 5901      | 12-3S 835          | NC.6      |
| 26FC/2360 | Q.00330      | NC.2      | 5900      | 12-3S 833          | NC.6      |
| 26FC/2359 | Q.00327      | NC.2      | 27KC/354  | Lockheed AIR.42500 | NC.6      |

PAGE NC.12

| Ref. No.  | Part No.           | Plate No. | Ref. No.   | Part No.           | Plate No. |
|-----------|--------------------|-----------|------------|--------------------|-----------|
| 6501      | 12 S 1273          | NC.3      | 26FC/2352  | Q.0058             | NC.2      |
|           | 12 S 1317ND        | NC.3      | 26FC/11188 | Q.003759A/ND       | NC.2      |
| 27M/559   | Lockheed AIR.40504 | NC.8      | 27M/663    | Lockheed AIR.42268 | NC.2      |
|           | 12 S 1569A         | NC.2      | 27W/5      | Lockheed UMC.632   | NC.2      |
| 26FC/2351 | Q.00221            | NC.2      | 26FC/2344  | Q.00284            | NC.2      |
| 26FC/2350 | Q.00220            | NC.2      |            | 12 S 1541          | NC.2      |
| 26FC/2346 | Q.00219            | NC.2      | 27W/10     | Lockheed UMC.706   | NC.8      |

PAGE NC.13

| Ref. No.  | Part No.           | Plate No. | Ref. No.   | Part No.           | Plate No. |
|-----------|--------------------|-----------|------------|--------------------|-----------|
| 27M/692   | Lockheed AIR.42704 | NC.7      |            | 12 S 581ND         | NC.2      |
|           | Q.002575A/ND       | NC.3      | 26FC/2338  | Q.0097             | NC.2      |
| 26FC/2387 | Q.0043             | NC.3      | 26FC/2339  | Q.00225            | NC.2      |
| 27M/434   | Lockheed AIR.40018 | NC.3      | 26FC/2342  | Q.00332            | NC.2      |
|           | 12 S 577A          | NC.2      | 26FC/2340  | Q.00226            | NC.2      |
| 26FC/2345 | Q.0070             | NC.2      | 26FC/2343  | Q.00336            | NC.2      |
| 26FC/2347 | Q.00212            | NC.2      | 26FC/2341  | Q.00118            | NC.2      |
| 26FC/2349 | Q.0072             | NC.2      | 27M/622    | Lockheed AIR.40758 | NC.2      |
| 26FC/2348 | Q.00227            | NC.2      | 27M/453    | Lockheed AIR.40272 | NC.2      |
| 541       | 12 UN 33A          | NC.2      | 26BY/16565 | Q.982437           | NC.2      |
| 26FC/2337 | Q.0069             | NC.2      | 26FC/2336  | Q.00111            | NC.2      |

## HAND INK ALTERATIONS

Insert in the "Plate No." Column the following plate numbers against the undermentioned Part Numbers :-

## PAGE NC.14

| Ref. No. | Part No.         | Plate No. |
|----------|------------------|-----------|
| 27W/5    | Lockheed UMC.632 | NC.6      |

## PAGE ND.1

| Ref. No.   | Part No.  | Plate No. | Ref. No. | Part No.    | Plate No. |
|------------|-----------|-----------|----------|-------------|-----------|
| 26FC/2618  | Q.0049    | ND.1      |          | 12-3S 1221  | ND.1      |
| 26FC/11770 | Q.00136A  | NC.6      |          | 12-3S 1219  | ND.1      |
| 26FC/11770 | Q.00136A  | ND.1      | 672      | 12 S 163    | ND.1      |
| 26FC/2382  | Q.00229A  | NC.6      |          | 12 S 739ND  | ND.1      |
|            | Q.00232ND | ND.1      |          | 12 S 1009ND | ND.1      |
| 26FC/2619  | Q.00159A  | ND.1      | 6582     | 12-3S 933   | ND.1      |
|            |           |           | 5902     | 12-3S 873   | ND.1      |

## PAGE ND.2

| Ref. No. | Part No.   | Plate No. | Ref. No. | Part No.    | Plate No. |
|----------|------------|-----------|----------|-------------|-----------|
| 5903     | 12-3 S 945 | ND.1      |          | 12 S 53A/ND | ND.1      |
| 671      | 12 S 161   | ND.1      |          | 12 S 49A/ND | ND.1      |

## PAGE ND.3

| Ref. No. | Part No.     | Plate No. | Ref. No. | Part No.           | Plate No. |
|----------|--------------|-----------|----------|--------------------|-----------|
|          | 12 S 71A/ND  | ND.1      | 680      | 12 S 356A/ND       | ND.1      |
|          | 12 S 72A/ND  | ND.1      | 27M/7780 | Lockheed AIR.31836 | NC.6      |
| 675      | 12 S 351A/ND | ND.1      |          | 12 S 1589ND        | ND.1      |
| 676      | 12 S 352A/ND | ND.1      |          | 12 S 1593ND        | ND.1      |
| 673      | 12 S 349A/ND | ND.1      | 4718     | 12 S 1357A/ND      | ND.1      |
| 674      | 12 S 350A/ND | ND.1      | 4719     | 12 S 1358A/ND      | ND.1      |
| 677      | 12 S 353A/ND | ND.1      |          | 12 S 1207A/ND      | ND.1      |
| 678      | 12 S 354A/ND | ND.1      |          | 12 S 1208A/ND      | ND.1      |
| 679      | 12 S 355A/ND | ND.1      |          | 12 S 1209A/ND      | ND.1      |
|          |              |           |          | 12 S 1210A/ND      | ND.1      |

## PAGE ND.4

| Ref. No. | Part No.      | Plate No. | Ref. No. | Part No.      | Plate No. |
|----------|---------------|-----------|----------|---------------|-----------|
|          | 12 S 1347A/ND | ND.1      |          | 12 S 1346A/ND | ND.1      |
|          | 12 S 1348A/ND | ND.1      | 685      | 12 S 361A/ND  | ND.1      |
|          | 12 S 1591A/ND | ND.1      | 686      | 12 S 362A/ND  | ND.1      |
|          | 12 S 1595ND   | ND.1      | 683      | 12 S 359A/ND  | ND.1      |
| 4720     | 12 S 1359A/ND | ND.1      | 684      | 12 S 360A/ND  | ND.1      |
| 4721     | 12 S 1360A/ND | ND.1      | 681      | 12 S 357A/ND  | ND.1      |
|          | 12 S 1205A/ND | ND.1      | 682      | 12 S 358A/ND  | ND.1      |
|          | 12 S 1206A/ND | ND.1      | 669      | 12 S 67A/ND   | ND.1      |
|          | 12 S 1211A/ND | ND.1      | 670      | 12 S 68A/ND   | ND.1      |
|          | 12 S 1212A/ND | ND.1      | 9615     | 12-4WA 27     | ND.1      |
|          | 12 S 1345A/ND | ND.1      | 4728     | 12 CF 929     | ND.1      |

## PAGE ND.5

| Ref. No. | Part No. | Plate No. |
|----------|----------|-----------|
| 687      | 12 S 545 | ND.1      |

RESTRICTED

Issued with AL/2

PART 1

Venom FB Mk. 4

HAND INK ALTERATIONS

Insert in the "Plate No." Column the following plate numbers against the undermentioned Part Numbers :—

PAGE NE.1

| Ref. No.  | Part No.     | Plate No. | Ref. No. | Part No.     | Plate No. |
|-----------|--------------|-----------|----------|--------------|-----------|
| 26FC/2381 | Q.00214A     | NE.1      |          | 12 S 821A/ND | NE.1      |
| 8145      | 12 S 583     | NE.1      | 1027     | 12 S 805A/ND | NE.1      |
| 8146      | 12 S 585     | NE.1      | 1028     | 12 S 809A/ND | NE.1      |
|           | 12 S 521A/ND | NE.1      | 1029     | 12 S 817A/ND | NE.1      |
|           | 12 S 525A/ND | NE.1      | 1030     | 12 S 813A/ND | NE.1      |
| 1032      | 12 S 825A/ND | NE.1      | 1031     | 12 S 829A/ND | NE.1      |

PAGE NF.1

| Ref. No. | Part No. | Plate No. | Ref. No. | Part No.     | Plate No. |
|----------|----------|-----------|----------|--------------|-----------|
| 123      | 12 S 283 | NF.1      | 26FC/583 | Q.00201A     | NF.1      |
| 124      | 12 S 284 | NF.1      | 121      | 12 S 279A/ND | NF.1      |
| 26FC/580 | Q.00169  | NF.1      | 122      | 12 S 280A/ND | NF.1      |
| 26FC/581 | Q.00170  | NF.1      | 26FC/575 | Q.00191      | NF.1      |
| 26FC/582 | Q.00168  | NF.1      |          | 12 S 275     | NF.1      |



This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

ENGINE  
INHIBITED  
DO NOT  
TURN  
PROP