A.P.4343C, Vol. 1, Book 3, Sect. 11, Chap. 9 A.L.36, May 62

Chapter 9

PROTECTION UNIT, ROTAX, TYPE F 5402

LIST OF CONTENTS

			/	Po	īra.		Pa	ara.
Introduction	***	• • •	/	•••	1	M.V. rectifier protection circuit		8
Description	• • •	•••	<i>./.</i> .		2	A.C. line to line protection	***	9
Operation		• • •	/		4	Servicing	•••	11
L.V. rectifier	protec	tion c	circuit	•••	5	Insulation resistance test	•••	12

LIST OF ILLUSTRATIONS

Type F5402 protection unit ... 1
Diagram of internal connections ... 2

Introduction

1. The F5402 protection unit provides protection for the U3102 transformer rectifier unit against consequential damage of essential components resulting from a short or open circuit occurring due to breakdown of any one rectifier arm. The unit is contained in the U3102 T.R.U., which is used with a Type 154 generator (Rotax N0603) in an aircraft a.c. generating system.

DESCRIPTION

The unit comprises a rectangular chassis mounting base, to which are fitted three midget relays (RL6, RL7 and RL8), one relay N.106996/1 (RL5), one resistance unit


ZA6203 and one transformer P3602 (TR6); two sub mounting panels fitted to the chassis base support a time delay relay F.7002, and three potentiometers N.105775 (RV2, RV6 and RV13). A mounting bracket at one end of the unit also supports three metal rectifiers (MR5, MR6 and MR7), and in addition, a glass board panel; fitted to this panel are two capacitors (C10, C11) and three resistors (R6, R8 and R10).

3. The component parts are positioned as shown in fig. 1; the circuit diagram is given in fig. 2.

Operation

4. The rotor of the generator N0603 is

RESTRICTED

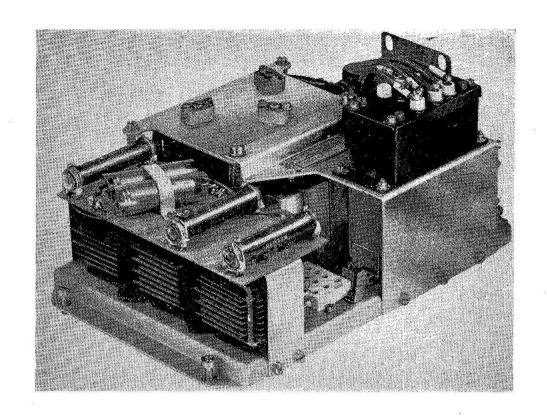

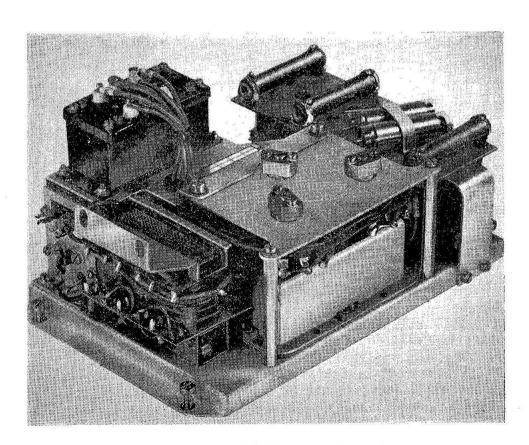


Fig. 1. Type F5402 protection unit