

SECTION 14

**FIRE WARNING AND EXTINGUISHING
EQUIPMENT 12/28-VOLT**

RESTRICTED

SECTION 14

FIRE WARNING AND EXTINGUISHING EQUIPMENT,
12/28 VOLT

LIST OF CHAPTERS

Note.- A list of contents appears at the beginning of each chapter

- ◀1 Graviner resetting fire detectors - (Cancelled: now A.P.107E-0105-1)▶
- ◀2 Firewire, sensing elements and accessories -
(Cancelled: now A.P.107E-0102-1)▶
- 3 Continuous type fire detector
- 4 Non-resetting fire detector
- ◀5 Graviner indicator fuses - (Cancelled: now A.P.107E-0301-1)▶
- 6 Control unit, Firetec 4-zone
- 7 Control units, Firetec 2-zone
- 8 Detector heads, Firetec
- 9 Smoke detector, Type PSDA1-G4
- ◀10 Triple fire detection d.c. control unit, Graviner Type 165D(2) -
(Cancelled: now A.P.107E-0103-1)▶
- 11 Triple fire detection relay unit, Graviner, Type 162D
- 12 Triple fire detection a.c. control unit, Graviner, Type 164D(2)
- 13 Fire detection relay box, Type D2790
- 14 Fire detection relay box, Type D879
- 15 Fire detection relay box, Type D1200
- 16 Fire detection relay box, Type D2750
- 17 Fire detection relay box, Type D1250
- 18 Fire detection relay box, Type D1040
- 19 Fire detection, d.c. control units, Firewire
- 20 Crash trip relay boxes with crash trip elements
- 21 Mounting bases, Graviner, Type D2240 and D2497
- 22 Fire detection relay unit, Type D1740
- 23 Control units, Firetec single zone
- 24 Visual smoke indicator, Type AIS4
- 25 Fire detector system, Walter Kidde, Type WK892561

R E S T R I C T E D

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

