Chapter 3

AMPLIFIER UNITS, ULTRA, TYPES A450 and A451

LIST OF	CONTENTS	
\ Para./	Par	ra.
Introduction \cdots \sim \sim \sim	Timing check	40
Description DV.	Thermocouple harness resistance	41
Principles of operation	Disconnecting supplies	42
Circuit description \(\frac{1}{2} \)	Aircraft tests—static conditions	43
Feedback circuits . A		46
Bias circuits V 23	/	48
Smoothing 25	,	49
Datum trim 26/	Datum temperature test	50
Safety resistor W 2/	Aircraft jet-pipe temperature indicator	
Testing	test	51
Bench tests 28	a to the second of the second	52
Precautions	Timing check	53
Test set batteries / 31	Muting switch test	54
Test rig connections / 32	Disconnecting supplies	55
Voltage, frequency and phasing tests 35	3 8	56
Removal of test cable QY2216 / 36	Disconnecting supplies	61
Datum temperature test 37	Fault finding	62
Deadband and gain tests \(\int \dots \) 39	Insulation resistance	64
/ LICT OF	T MARY BO	
/	TABLES Table	
Veltages and resistance	Tubic	
Voltages and resistance	es 1	
Veltages and resistance LIST OF ILI	es 1 LUSTRATIONS	lig.
Veltages and resistance LIST OF ILI Fig.	es 1 LUSTRATIONS	ig. 5
Voltages and resistance LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1	es 1 USTRATIONS Fig.	
Voltages and resistance LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2	es 1 LUSTRATIONS F. Response diagram Aircraft test circuit Layout of amplifier, showing seal numbers	5
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3	ES 1 LUSTRATIONS F. Response diagram Aircraft test circuit Layout of amplifier, showing seal numbers Circuit diagram of amplifiers, Types A450	5 6 7
Voltages and resistance LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2	es 1 LUSTRATIONS F. Response diagram Aircraft test circuit Layout of amplifier, showing seal numbers	5 6
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4	es 1 LUSTRATIONS F. Response diagram Aircraft test circuit Layout of amplifier, showing seal numbers Circuit diagram of amplifiers, Types A450 and A451	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P	es 1 LUSTRATIONS F. Response diagram Aircraft test circuit Layout of amplifier, showing seal numbers Circuit diagram of amplifiers, Types A450 and A451 ARTICULARS	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type	Es 1 LUSTRATIONS F. Response diagram Aircraft test circuit Layout of amplifier, showing seal numbers Circuit diagram of amplifiers, Types A450 and A451 ARTICULARS A450 Ref. No. 5CZ/5624 A451 Ref. No. 5CZ/5625	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type	F.	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Datum temperature	F.	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Datum temperature Maximum amplifier output (to a.c. a Input to amplifier	### Autom F.	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Datum temperature Maximum amplifier output (to a.c. a Input to amplifier Deadband	### Austractions #### Austractions ###################################	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Datum temperature Maximum amplifier output (to a.c. a Input to amplifier Deadband Detum temperature variation,	## Austractions ## Austractions ## Response diagram	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Datum temperature Maximum amplifier output (to a.c. a Input to amplifier Deadband Datum temperature variation, using the datum trim potentiome Length	## Austractions ## Austractions ## Response diagram	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Datum temperature Maximum amplifier output (to a.c. a Input to amplifier Deadband Datum temperature variation, using the datum trim potentiome Length	## Austrations Final Content	5 6 7
LIST OF ILI Fig. Magnetic amplifier unit, Ultra, Type A451 1 Amplifier unit with top cover removed 2 Block schematic diagram of amplifier 3 Bench test circuit 4 LEADING P Magnetic amplifier unit, Ultra, Type Magnetic amplifier unit, Ultra, Type Datum temperature Maximum amplifier output (to a.c. a Input to amplifier Deadband Datum temperature variation, using the datum trim potentiome Length	Autor	5 6 7

Introduction

- 1. The magnetic amplifier units, Ultra, Types A450 and A451 (fig. 1), are designed to limit and control the jet-pipe temperature of an aircraft engine to a datum specified by the engine manufacturer. The magnetic amplifier units are identical in construction but differ in their datum temperatures, i.e. 662°C. (Type A450) and 652°C. (Type A451).
- 2. Temperature is sensed by a thermocouple cluster attached to the engine jet-pipe. The
- thermocouple signal is applied to the magnetic amplifier unit, the output of which supplies the control phase of a two-phase a.c. squirrel-cage actuator motor. A valve in the fuel system is operated by the actuator and regulates the supply of fuel to the engine, thus preventing the engine from overheating.
- 3. The principles and applications of magnetic amplifiers are outlined in A.P.4343, Vol. 1, Sect. 1, Chap. 3.

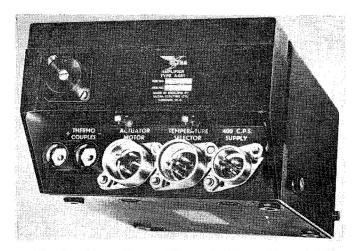


Fig. 1. Magnetic amplifier unit, Ultra, Type A451

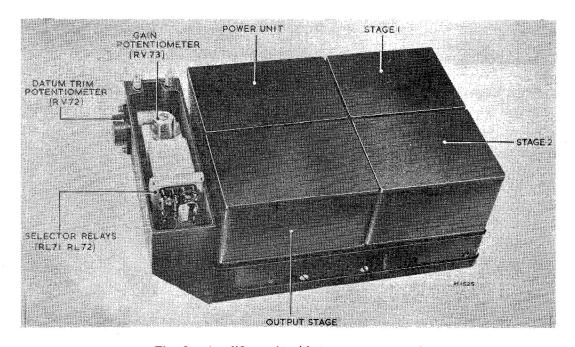


Fig. 2. Amplifier unit with top cover removed

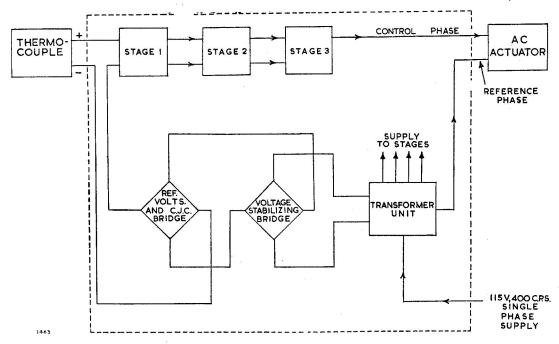


Fig. 3. Block schematic diagram of amplifiers

DESCRIPTION

- 4. The specific datum temperature setting of the relevant amplifier unit is obtained by the suitable choice of a resistor (R66) located in the cold junction compensator (C.J.C.) resistance bridge. The value of this resistor (R66) constitutes the only difference between the A450 and A451 magnetic amplifier units. The following description is therefore applicable to both units.
- 5. The components of the magnetic amplifier unit are mounted on two castings which are assembled to form a single housing. Removal of the top covers (fig. 2) of the respective castings reveal the amplifying stages and transformer unit, together with the gain and datum trim potentiometers. The amplifying stages, transformer unit and C.J.C. unit, are housed in individual sealed cans and access to their electrical connections is gained by removing the baseplate from the underside of the unit. A layout diagram (fig. 6) shows the location of components, which are revealed when the baseplate is removed, and identifies the seal numbers and terminal markings of these components.

- 6. The end casting houses the datum trim and gain control potentiometers in addition to the following electrical connections:—
 - (1) Four-pole plug for the 115V, 400 c.p.s. single phase supply.
 - (2) Five-pole plug, can be used for connection to a temperature selector unit (not used in current applications of the A450 and A451 units).
 - (3) Four-pole plug for the a.c. actuator motor.
 - (4) Twin terminal sockets which accept the compensating leads from the thermocouples.

PRINCIPLES OF OPERATION

7. A block schematic diagram (fig. 3) illustrates the basic principle of the jet-pipe temperature control system using the A450 or A451, magnetic amplifier units. A single phase input is applied to the transformer unit which provides the power supplies for the amplifying stages, the stabilizing bridge and bias circuits, and the reference (quadrature) phase of the two-phase squirrel cage actuator motor.

- 8. A stabilized voltage output, from the stabilizing bridge, is applied to the cold junction compensator (C.J.C.) resistance bridge. A reference voltage is derived from the C.J.C. bridge and is compared with the thermocouple voltage. Any difference between these voltages results in a current (error signal) which is fed to the stage 1 control winding and amplified via the three stages of the magnetic amplifier unit. The magnitude of the error signal is proportional to the difference between the jet-pipe temperature and the specified datum. The polarity of the error signal is related to a jet-pipe temperature in excess of, or below, the specified datum.
- 9. The output of stage 3 (output stage) is applied to the control phase of the a.c. actuator motor, which rotates in a direction determined by the polarity of the error signal. Operation of the a.c. actuator motor causes a fuel-valve to regulate the supply of fuel to the aircraft engine, thus preventing it from overheating.

CIRCUIT DESCRIPTION

- 10. The circuit diagram (fig. 8), which shows the connections between individual components together with their respective seal numbers and terminal identification, is applicable to both A450 and A451 magnetic amplifier units. The difference between these units, i.e. the value of resistor R66, is shown in the table included in Fig. 8.
- 11. The transformer unit houses a 115V. 400 c.p.s. single phase transformer which provides the following supplies:—
 - (1) Power supplies for the transductors of the amplifying stages.
 - (2) An 8mA supply via half-wave rectifiers WS53 and WS54, for the bias circuits (*Para*. 23) of the amplifying stages and for the voltage stabilizing bridge.
 - (3) A supply, via capacitors (C31 and C32), for the reference (quadrature) phase of the two phase squirrel cage actuator motor.
- 12. A smoothed d.c. supply of 8mA is fed from a 70V transformer secondary winding to the voltage stabilizing bridge, located in the transformer unit. The output (terminals 15 and 16) is stabilized against fluctuation of the single phase supply voltage by the Zener reverse voltage characteristic of the

- Silicon diode WS52. Adjustment of the stabilized output is effected using potentiometers RV64 (REF. VOLTS BALANCE) and RV66 (REF. VOLTS LOAD). Each potentiometer is preset and locked during the initial setting-up of the amplifier unit, to ensure that a stabilized d.c. supply of 2mA is fed to the cold junction compensator (C.J.C.) bridge. This stabilized d.c. supply enables a reference voltage to be developed at the C.J.C. bridge resistor network R64, R65, R66, etc.
- 13. The reference voltage opposes the thermocouple voltage which is applied to the C.J.C. bridge. A voltage difference, proportional to the change in jet-pipe temperature above or below the specified datum, results in a current (error signal) in the stage 1 control winding which is connected in series with the thermocouples and datum trim potentiometer RV72. Adjustment of the thermocouple voltage, using potentiometer RV72 (terminals 5 and 6), provides for the error signal to be approximately zero at the respective datum temperatures specified for the amplifiers A450 and A451. The value of resistor R66, chosen to obtain the respective reference voltages at the specified datum temperatures, constitutes the only difference between these amplifiers.
- 14. To limit jet-pipe temperature to the specified datum it is necessary to compensate for changes in thermocouple voltage which are due to changes in cold junction ambient temperature. Compensation is effected by the inclusion of a copper resistance coil, located adjacent to the thermocouple input terminals, in one arm of the C.J.C. bridge. Resistance of the copper coil varies as the ambient temperature varies, and therefore modifies the reference voltage level of the C.J.C. bridge. The subsequent change in C.J.C. bridge reference voltage is equal and opposite to the voltage change, due to a change in cold junction ambient temperature, at the thermocouple input terminals. The amplifier control circuit is therefore referred to the thermocouple voltage which is proportional to the hot junction temperature.
- 15. The error signal is amplified by stage 1 which has two amplifying sections, 1A and 1B. Each section consists of a pair of autoself-excited transductors, arranged in pushpull, with series mixing and separate bias balance control (RV62 and RV67) for each section.

Note . . .

Terminal markings S1A, F1A, S1B and F1B identify the "starts" and "finishes" of transductor core windings, and are not related to the amplifying sections 1A or 1B.

Since the transductors are arranged in pushpull, stage 1 responds to the above datum (positive) or below datum (negative) temperature signals.

- 16. The stage 1 output (terminals 1 and 5) is applied to the control winding (terminals 1 and 2) of stage 2 which comprises a pushpull pair of transductors with series mixing. The stage does not incorporate bias balance control as the stage is adequately balanced by negative feedback. The stage 2 output (terminals 3 and 4) is sensed, as considered for stage 1, and therefore responds to error signals of either polarity.
- 17. The stage 2 output, via negative feedback winding 6 to terminals 3 and 4, is applied to the control windings of the output stage at terminals 1 and 11. The output stage comprises two auto-self-excited a.c. transductors, the control windings of which are connected in series. Bias windings of the respective transductors are also connected in series and the bias current is adjusted using potentiometer RV63. The respective outputs of the transductors are linked to form a common output (terminal 10). One of the transductors, depending on the polarity of the signal applied to the output stage (terminals 1 and 11), provides a supply for the control phase of the a.c. squirrel cage actuator motor.
- 18. The reference phase of the a.c. actuator motor is supplied from a 15 volt transformer secondary winding via capacitors C31 and C32 which are housed in the output stage (terminals 7 and 8). After boosting by the capacitors the reference phase voltage is approximately 20 volts a.c. measured across terminals 1 and 2 of the output (A.C. ACTUATOR) plug. The function of the capacitors is to provide a 90° phase shift between the control and reference (quadrature) phases, to operate the two-phase a.c. actuator motor. Polarity of the temperature signal, i.e. an above or below datum signal applied to the amplifier thermocouple terminals, determines

whether the control phase leads or lags by 90° and so determines the direction of rotation of the a.c. actuator motor.

◄19. Maximum output of the amplifier measured across the control phase (terminals A and B of the output plug) is \pm 11 volts a.c. The temperature deadband, i.e. the range of jet-pipe temperature over which the temperature control system exercises no control, is $7.5^{\circ}\text{C} \pm 1.5^{\circ}\text{C}$. The amplifier output corresponding to the temperature deadband is ± 1 volt a.c. ▶

Feedback circuits

- 20. Several feedback loops are incorporated in the amplifying stages to provide control and stability. A stage 1 negative feedback loop consists of the stage 1 output voltage fed back into winding 5 (section 1A, terminal 6), via a series resistor R19. This feedback loop stabilizes the first stage during operation of the amplifier unit.
- 21. A stage 2 negative feedback loop consists of the stage 2 output voltage fed back into part of windings 3 (at terminal 16) and 2 (at terminal 15) of the same stage, via potentiometer RV73. Control of the amplifier gain is effected by controlling the voltage feedback over stage 2, with RV73 as the gain control potentiometer.
- 22. An additional negative feedback loop is incorporated in stage 2. The 'X' transductor output is fed via winding 6 of the 'Y' transductor to terminal 4, and the 'Y' transductor output is fed via winding 6 of the 'X' transductor to terminal 3. The negative feedback has a stabilizing and balancing effect in this stage.

Bias circuits

23. The rectified current, obtained from the 70 volt secondary winding of the single phase transformer, provides the bias for the amplifying stages. The magnitude of the bias current (8mA) is preset using the bias control potentiometer RV63. Stage 1 uses the bias distribution method, i.e. an arrangement of the respective bias circuits to facilitate equal biasing of the push-pull pair of transductors used in each amplifying section 1A and 1B. Bias balance potentiometers (RV62 and RV67) are incorporated in the bias circuits.

RESTRICTED

24. A bias winding, in series with resistor R24, forms the bias circuit for stage 2. A shunt resistor R23 limits the current in this bias circuit to the appropriate value. The output stage bias circuit, which is similar to that of stage 2, consists of a bias winding shunted by resistor R31 to limit the bias current.

Smoothing

25. A capacitor C52, located in the trans-

former unit, provides smoothing for the bias and voltage stabilizing circuits.

Datum trim

26. Trimming of the datum temperature, when the magnetic amplifier unit is installed in the aircraft, is effected by adjusting the potentiometer RV72. This is a "click" potentiometer which has a range of adjustment of approximately 35° C in fifteen steps of approximately $2\frac{1}{2}^{\circ}$ C per step.

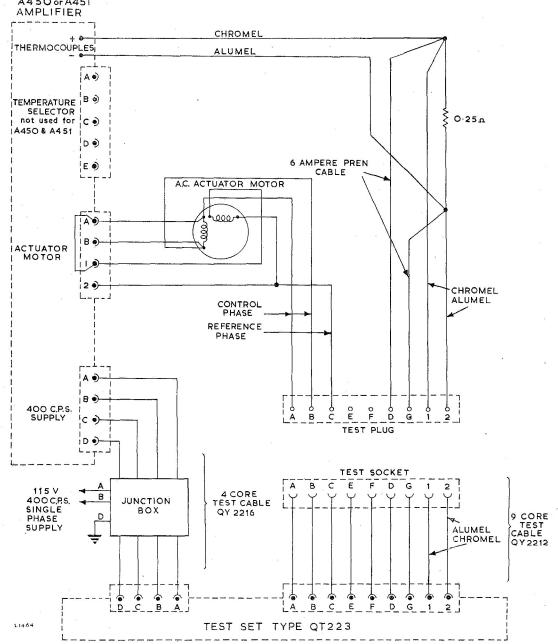


Fig. 4. Bench test circuit. RESTRICTED

Safety resistor

27. A 4.7 K Ω resistor, connected across the thermocouple terminals, ensures that a negative signal is passed to the amplifier in the event of an open-circuit fault on the thermocouples.

TESTING

Bench tests

28. Bench tests using Test Equipment Type QE2230, are applied to the control system amplifier to determine its serviceability prior to being installed in the aircraft.

Note . . .

The tests specified in the following paragraphs are applicable to both A450 and A451 magnetic amplifier units, which differ only in their respective datum temperatures.

Equipment required for the bench test is detailed below:—

(1) Test set, Ultra, Type QT223.

- (2) Nine-core test cable Type QY2212.(3) Four-core test cable Type QY2216
- for monitoring the 115V, 400 c.p.s. supply.

(4) Bench test rig (fig. 4).

- (5) Single-phase 115V, 400 c.p.s. supply.
- (6) Two-phase squirrel cage motor actuator, as used in the aircraft jet-pipe temperature control system.

(7) Stop watch.

The bench test, applied to the control system amplifier, includes datum temperature, deadband and gain tests and a timing check. A response diagram (fig. 5) shows the various temperature readings (A, B, C, D and E) obtained during the bench tests. The readings are interpreted, on completion of the relevant tests, into the deadband, gain and datum temperature of the jet-pipe temperature control system.

29. Prior to commencing bench tests, certain precautions must be observed and preliminary tests undertaken, as described in paras. 30 and 31.

Precautions

- **30.** To obviate possible damage to the test set, QT223, the following precautions must be observed.
 - (1) Before switching on the supply to the test set, and unless the testing instructions state otherwise, the REHEAT/SPEED DATUM switch must be in the OFF (centre) position.

(2) When adjusting the DATUM TEM-PERATURE scale, during temperature signal measurements, avoid running the associated potentiometer hard on to its limit stops.

Test set batteries

- 31. The following test should be applied to the test set QT223 to ensure that the batteries are serviceable.
 - (1) Reference source battery (Mallory SKB544)
 - (a) Set the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position.
 - (b) Turn the TEST SELECTOR switch to the BATTERY position.
 - (c) Note the reading of METER II which should be in the green zone.
 - (2) Temperature signal source battery (Mallory SKB536)
 - (a) Set the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position.
 - (b) Turn the TEST SELECTOR switch to T/C RES.
 - (c) Turn the T/C HARNESS SELECTOR switch to position H.
 - (d) Depress the T/C RESIST. TEST key switch to the T/C RESIST. TEST position.
 - (e) Rotate the TEMP. SIGNAL, COARSE control slowly clockwise.
 - (f) With the COARSE control turned through approximately $\frac{3}{4}$ full travel, METER II should indicate full scale deflection. If the readings of METER II differ from those given, the respective battery must be considered unserviceable and should be renewed. Instructions for changing the batteries are given in Sect. 10, Chap. 1 of this publication.

Test rig connections (fig. 4)

32. The thermocouple commoning leads are connected to the amplifying input (THERMOCOUPLES, terminals + and —) and to the test plug (terminals 1 and 2) by special compensating leads. Therefore it is essential that the connecting cables used in the bench test shall include Chromel/Alumel leads, as indicated in the bench test circuit (fig. 4).

- 33. In the test rig, the resistance of the thermocouple cluster is simulated by a 0.25 ohm resistor. It is important to ensure that the connecting leads to this resistor make good electrical contact since additional resistance in this circuit will adversely affect the test results.
- **34.** Connect the amplifier, A450 or A451, into the bench test circuit prepared as in fig. 4. Switch on the 115V, 400 c.p.s. single phase supply.

Note . . .

During the bench tests the thermocouple e.m.f. is simulated by a variable voltage derived from the test set QT223. The test set voltage is obtained by turning the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position, as specified in the relevant tests.

Voltage, frequency and phasing tests

35. These tests provide an indication that the power supply to the control system amplifier is correct. They are not intended to provide an absolute measurement. Allow five minutes to elapse, after switching on supply, before proceeding with the tests.

(1) Turn the TEST SELECTOR switch to

C.P.S.

- (2) The frequency is indicated on METER I. The scale range is 380–420 c.p.s. in steps of 10 c.p.s. Centre-scale reading represents 400 c.p.s.
- (3) Observe the PHASING indicator. The lamp should illuminate.
- (4) Turn the TEST SELECTOR switch to VOLTS.
- (5) Note the reading of METER II. If the voltage is within the specified limits the meter reading should be within the blue zone.
- (6) Observe the PHASING indicator. The lamp should be extinguished.

Removal of test cable QY2216

36. Disconnect, and remove, the test cable QY2216 from the test circuit. Connect the aircraft supply lead to the supply plug (400 c.p.s. supply) of the temperature control system amplifier.

Datum temperature tests

37. If a jet-pipe temperature indicator of the current drawing type is incorporated in the aircraft installation, it is important that, during bench testing, the test set T/C HARNESS SELECTOR switch is set to the position appro-

priate to this installation. If allowance is not made for the presence of the current drawing type of indicator, it will be necessary to trim the amplifier to obtain the correct datum temperature setting, when the amplifier is installed in the aircraft.

38. To establish the datum temperature setting of the amplifier in the temperature control system, proceed as follows:—

(1) Prepare for recording simulated temperatures (DATUM TEMPERATURE scale) at which METER I indicates a change in response during the following operations.

(2) Rotate the TEST SELECTOR switch to

the CONT. PH. position.

(3) Turn the TEMP. SIGNAL, COARSE control fully anti-clockwise and the FINE control to its mid-travel position (five complete turns from either limit stop).

(4) If the aircraft has a current drawing temperature indicator, the T/C HARNESS SELECTOR switch must be in the position appropriate to the resistance of the thermocouple harness, employed in the system under test. If a non-current drawing type of indicator is used, the SERVO. POT. position must be selected.

(5) Set the METER II switch to the 25V

a.c. position.

(6) Set the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position. METER I should show a deflection into the red, or INCREASE TEMPERATURE, zone, indicating that the actuator is at its limit stop in the open direction.

(7) Set the DATUM TEMPERATURE scale reading to the approximate datum temperature of the system and set the galvanometer clamp to the FREE position. Set the pointer to zero if necessary.

(8) Turn the TEMP. SIGNAL COARSE control clockwise, very slowly, until the pointer of METER I is approximately zero or just into the green zone. Set METER II range to \div 5 a.c., and adjust the FINE control until METER II indicates a minimum. Ensure that METER I is still at zero or in the green zone.

(9) Momentarily depress the GALVO IN/ SET UP key switch to the SET UP position and observe the deflection of the galvanometer pointer. Adjust the DATUM TEM-PERATURE scale to reduce the galvanometer deflection, depressing the key switch at frequent intervals to observe the effect on the galvanometer. When the galvanometer reading is within the eight divisions on either side of zero, the galvanometer key switch can be placed in the GALVO IN position. If the reading of METER II has strayed from the above reading, the TEMP. SIGNAL, FINE control must be re-adjusted to correct the reading. The galvanometer reading may now be brought to zero by adjustment of the DATUM TEMPERATURE scale.

(10) Record the simulated temperature reading as indicated on the DATUM TEMPERATURE scale. This reading is the datum temperature (E in fig. 5) of the temperature control system and should be:—

 662 ± 2.5 °C (A450) 652 ± 2.5 °C(A451)

Deadband and gain tests

39. With the datum temperature of the control system established, the deadband and gain of the control system may be tested as follows:—

- (1) Set the METER II RANGE switch to the $\div 5$ position.
- (2) Rotate the TEMP SIGNAL, FINE control slowly clockwise until METER II indicates an UPPER THRESHOLD VOLTAGE of 1 volt (5 volts scale reading) with the pointer of METER I in the green, i.e. DECREASE TEMPERATURE, ZONE.
- (3) Measure the simulated temperature signal in the manner described in para. 38 sub para. (9) adjusting the fine control, as necessary, to compensate for the load imposed by the galvanometer. Record this measurement and call it A.
- (4) Return the galvanometer key to the centre (OFF) position.
- (5) Rotate the FINE control slowly clockwise until METER II indicates a GAIN VOLTAGE of 3 volts (15 volts scale reading) with the pointer of METER I in the DECREASE TEMPERATURE ZONE.

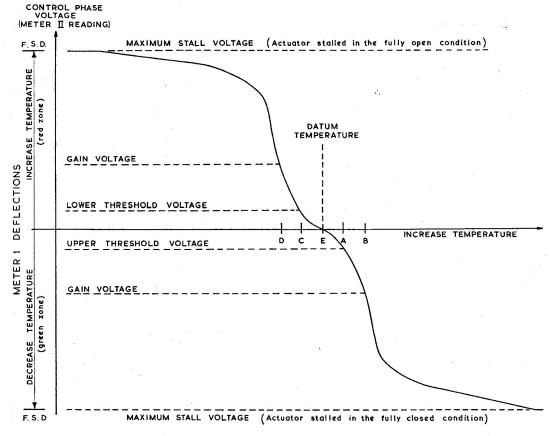


Fig. 5. Response diagram
RESTRICTED

RESTRICTED

- (6) Measure the simulated temperature in the manner described in para. 38 subpara. (9), adjusting the FINE control, as necessary to compensate for the load imposed by the galvanometer. Record this measurement and call it B.
- (7) Return the galvanometer key switch to the centre (OFF) position.
- (8) Rotate the FINE control, slowly anti-clockwise, until METER II indicates a LOWER THRESHOLD VOLTAGE of 1 volt (5 volt scale reading) with the pointer of METER I in the red, i.e. INCREASE TEMPERATURE, ZONE.
- (9) Measure the new temperature, in the manner described in para. 38 subpara. (9), adjusting the FINE control, as necessary, to compensate for the load imposed by the galvanometer. Record this measurement and call it C.
- (10) Rotate the FINE control slowly anti-clockwise, until METER II indicates a GAIN VOLTAGE of 3 volts (15 volts scale reading) with the pointer of METER I in the INCREASE TEMPERATURE zone.
- (11) Measure the simulated temperature in the manner described in para, 38 sub-para, (9), adjusting the FINE control, as necessary, to compensate for the load imposed by the galvanometer. Record this measurement and call it D.
- ◄(12) From the recorded temperatures at points A, B, C and D, as illustrated in the response diagram (fig. 5), the results of the tests are determined as follows:—

DEADBAND=A—C 7.5°C ± 1.5°C

DATUM TEMPERATURE=E=

A+C(approx.)=662 ± 2.5°C (A450)

2 652 ± 2.5°C(A451)

GAIN (in the increase temperature

zone)= E—D =9.5°C to 12°C.

GAIN (in the decrease temperature

,zone) = B—E = 9.5°C to 12°C.

Timing check

40. In order to undertake this test a stopwatch must be available to time the running of the actuator in each direction. The test set switches should be in the positions selected in para. 38 sub-para. (3) to (6)—it is important that the METER II range switch is set to the 25V a.c. position—and the TEST SELECTOR switch should be turned to the REF. PH, position. After ensuring that these switches are set in the correct position, proceed as follows:—

- (1) Rotate the TEMP. SIGNAL, COARSE control, clockwise until METER I shows full scale deflection in the green, or DECREASE TEMPERATURE, zone done.
- (2) Wait at least 20 seconds. This enables the actuator to travel over its whole range to the closed limit position.


 METER II should now indicate the reference phase MAXIMUM STALL VOLTAGE i.e. approximately 20 volts.
- (3) Return the TEMP. DATUM/OFF TEMPERATURE DATUM AND SIGNAL switch to the OFF position, simultaneously starting the stop-watch.
- (4) Observe METER II. The actuator will now be running in the close throttle direction and the meter pointer will be showing approximately full scale deflection. When reaching its lower limit stop, METER II will indicate the stalling of the motor by a sudden dipping of the pointer. The stop-watch should be stopped immediately this dip is observed.
- (5) The time recorded on the stopwatch is the time taken for the actuator to travel over its whole range from the actuator closed limit to the actuator open limit and should not be less than 8 seconds and not greater than 25 seconds.
- (6) Return the stop-watch hand to zero.
- (7) Set the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position simultaneously starting the stopwatch.
- (8) Observe METER II. The actuator will now be running in the open throttle direction and will indicate the reaching of the upper limit stop by a sudden dip in the reading of METER II. The stopwatch must be stopped immediately the dip is observed.
- (9) The time recorded on the stopwatch is the time taken for the actuator to travel over its whole range from the actuator open limit to the actuator closed limit, and should not be less than 8 seconds and not greater than 25 seconds.

Thermocouple harness resistance

41. If a new thermocouple harness is to be fitted to the aircraft installation, bench tests can be applied to the harness in the manner described in para. 49.

Disconnecting supplies

- **42.** On completion of the tests, the following procedure should be adopted:—
 - (1) Rotate the TEMP. SIGNAL, COARSE and FINE controls fully anti-clockwise.
 - (2) Lock the galvanometer in the CLAMP position.
- (3) Return the relevant switches, of the QT223 test set, to their OFF positions.
- (4) Switch off the 115V, 400 c.p.s. single phase supply.
- (5) Disconnect the test cables and place them behind the hinged flap in the test set lid.

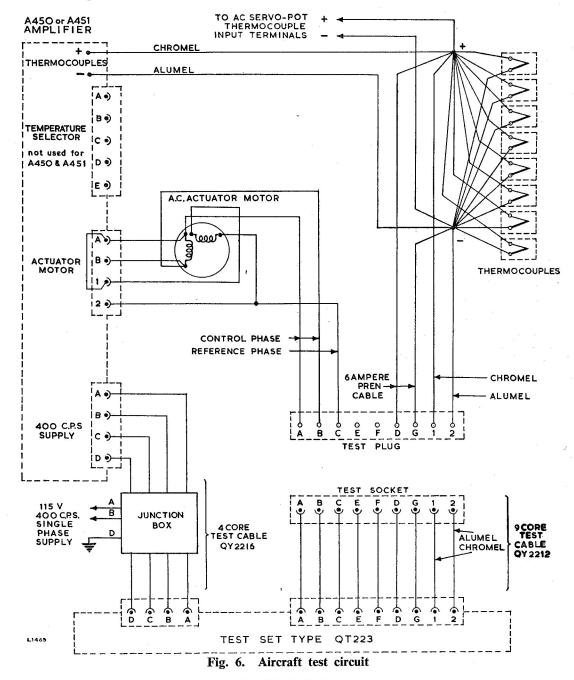

RESTRICTED

Aircraft tests-static conditions

43. The aircraft tests, to determine the response of the a.c. actuator control system, include thermocouple harness resistance, datum temperature, aircraft jet-pipe temperature indicator, deadband, gain and muting switch tests and a timing check. The thermocouple e.m.f. normally dependent on the jet-pipe temperature, is simulated by the injection of a variable voltage, derived from the test set QT223, at the thermocouple commoning points. This enables a jet-pipe temperature control system to be tested with the aircraft engines stationary, i.e. under static conditions.

Note . . .

The tests specified in the following paragraphs are applicable to both A450 and A451 magnetic amplifier units, which differ only in their respective datum temperatures.

- **44.** The equipment required for the aircraft tests, using the Test Equipment Type QE2230, is detailed below:—
 - (1) Test set Type QT223.
 - (2) Nine-core test cable Type QY2212.
 - (3) Nine-core test cable Type QY2213 for use on aircraft not fitted with the 9 pin test plug.
 - (4) Four-core test cable Type QY2216 for monitoring the 115V, 400 c.p.s. aircraft supply.
 - (5) Stop-watch.
- **45.** Prior to commencing tests on the jetpipe temperature control system, certain precautions must be observed and preliminary tests undertaken as previously described in paras. 30 and 31.

Test connections at aircraft (fig. 6)

46. (1) Remove the blanking cap from the 9-pole aircraft test plug and connect the Test Set QT223 (A/C TEST plug) to the aircraft test plug using test cable QY2212. In aircraft not fitted with a 9-pole test plug, the commoning terminal of the thermo-couple cluster must be located and leads 1 and D of the test cable QY2213 connected to the common positive. Similarly connect leads 2 and G to the common negative of the thermocouples.

- (2) Remove the socket from the a.c. supply plug (400 C.P.S. SUPPLY) of the amplifier and substitute the socket, located on one of the two short leads from the junction box of test cable QY2216. Mate the remaining short lead, from the junction box with the socket previously connected to the amplifier a.c. supply plug. Connect the remaining socket of the test cable QY2216 to the 4-pole plug (PHASING) of the test set.
- (3) Connect a battery truck to the aircraft ground supply point and switch on the inverters.

Voltage, frequency and phasing tests

47. Undertake the test procedure previously described in para. 35.

Removal of test cable QY2216

48. Disconnect, and remove, the test cable QY2216 from the test circuit. Connect the aircraft supply lead to the supply plug (400 c.p.s. supply) of the temperature control system amplifier.

Thermocouple harness resistance

- 49. The tests are effected by comparing the resistance of an aircraft thermocouple harness with that of a standard resistor in the test set. It is important therefore that the value of standard resistor, selected via the T/S HARNESS SELECTOR switch, coincides with the value of thermocouple harness resistance quoted in the relevant Aircraft or Engine Handbook.
 - (1) Set the TEMP. SIGNAL, COARSE and FINE controls fully anti-clockwise.
 - (2) Rotate the T/C HARNESS SELECTOR switch to the position appropriate to the installation under test. The values of standard resistor selected under positions A–J are as follows:—

Selector switch	
position	standard resistor (ohms)
A	1.5
В	1.0
\mathbf{C}	0.8
D	0.5
\mathbf{E}	0.34
\mathbf{F}	0.3
G	0.25
\mathbf{H}	0.2
J	Plug-in resistors.
SERVO POT	Selected when the air-
	craft temperature indi-
	cator is of the non-
	current drawing type.

- (3) Rotate the TEST SELECTOR switch to T/C RES.
- (4) Set the TEMP. DATUM/OFF/TEMPERA-TURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position. Ensure that the REHEAT/SPEED DATUM switch is in the CENTRE position.

(5) Turn the TEMP. SIGNAL, COARSE control until the pointer of METER II coincides with the RED LINE.

(6) Depress the T/C RESIST TEST switch to the T/C RESIST TEST position.

(7) If the thermocouple harness resistance is correct, the position of the METER II pointer should still coincide with the RED line. The permitted tolerance, related to the number of divisions on either side of the RED line, is dependent on the specific thermocouple installation. Each division represents a deviation of 0.0005 ohms from the correct thermocouple harness resistance, and a fault, e.g. and open circuit thermocouple, can be determined as follows:-

Assume an eight thermocouple installation, the resistance of each thermocouple being 2 ohms.

Total resistance of installation=0.25

With one open-circuit thermocouple, total resistance of installation=0.2857 ohm. This fault is therefore indicated by an increase in resistance of 0.0357 ohm which will result in a deviation of approximately 7.5 divisions from the RED line. Therefore readings of METER II in this region would indicate an unserviceable thermocouple which should be tested in accordance with the instructions contained in the relevant Aircraft or engine Handbook.

(8) A meter reading in excess of this tolerance indicates a possible fault on the thermocouple cluster. It should be noted that as the meter readings indicate a voltage drop, firstly across the thermocouple harness and secondly across the standard resistor a high reading of METER II indicates a probable short-circuited thermocouple. Conversely, a low reading indicates a probable open-circuited thermocouple.

Datum temperature tests

50. To establish the datum temperature of the temperature control system, proceed as follows:-

(1) Prepare for recording simulated temperatures (DATUM TEMPERATURE scale) at which METER I indicates a change in response during the following operations.

(2) Rotate the TEST SELECTOR switch to the CONT. PH. position.

(3) Turn the TEMP. SIGNAL, COARSE control fully anti-clockwise and the FINE control to its mid-travel position (five complete turns from either limit stop). (4) If the aircraft has a current drawing temperature indicator, the T/C HAR-

NESS SELECTOR switch must be in the position appropriate to the resistance of the thermocouple harness employed in the system under test. If a non-current drawing type of indicator is used the SERVO POT. position must be selected (5) Set the METER II switch to the 25V

a.c. position.

(6) Set the TEMP. DATUM/OFF/TEMPER-ATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position. METER I should show a deflection into the red, or INCREASE TEMPERA-TURE, zone, indicating that the actuator is at its limit stop in the open direction.

(7) Set the DATUM TEMPERATURE scale reading to the approximate datum temperature of the system and set the galvanometer clamp to the FREE position. Set the pointer to zero if necessary.

(8) Turn the TEMP, SIGNAL COARSE control clockwise, very slowly, until the pointer of METER I is approximately zero or just into the green zone. Set METER II range to ÷ 5 a.c., and adjust the FINE control until METER II indicates a minimum. Ensure that METER I is still

at zero or in the green zone.

(9) Momentarily depress the GALVO IN/SET UP key switch to the SET UP position and observe the deflection of the galvanometer pointer. Adjust the DATUM TEMPERATURE scale to reduce the galvanometer deflection, depressing the key switch at frequent intervals to observe the effect on galvanometer. When the galvanometer reading is within the eight divisions on either side of zero, the galvanometer key switch can be placed in the GALVO IN position. If the reading of METER II has strayed from the above reading, the TEMP. SIGNAL, FINE control must be readjusted to correct the reading. The galvanometer reading may

RESTRICTED

now be brought to zero by adjustment of the DATUM TEMPERATURE scale.

(10) Record the simulated temperature reading as indicated on the DATUM TEMPERATURE scale. This reading is the datum temperature (E in fig. 5) of the temperature control system and should be:—

662 ± 2·5°C(A450). 652 ± 2·5°C(A451).

(11) Without altering the test set controls, proceed to the aircraft jet-pipe temperature indicator test.

Aircraft jet-pipe temperature indicator test

51. With the datum temperature of the control system established, ensure that the test set reading compares with that of the aircraft jet-pipe temperature indicator within the limits specified for the temperature control system. Without altering the test set controls, proceed to the deadband and gain tests.

Deadband and gain tests

- **52.** With the datum temperature of the control system established, the deadband and gain of the control system may be tested as follows:—
 - (1) Set the METER II range switch to the ÷ 5 position.
 - (2) Rotate the TEMP. SIGNAL, FINE control slowly clockwise until METER II indicates an UPPER THRESHOLD VOLTAGE of 1 volt (5 volts scale reading) with the pointer of METER 1 in the green, i.e. DECREASE TEMPERATURE, zone.
 - (3) Measure the simulated temperature in the manner described in para. 50 subpara (9), adjusting the FINE control, as necessary, to compensate for the load imposed by the galvanometer. Record this measurement and call it A.
 - (4) Return the galvanometer key to the centre (OFF) position.
 - (5) Rotate the FINE control slowly, clockwise, until METER II indicates a GAIN VOLTAGE of 3 volts (15 volts scale reading) with the pointer of METER I in the DECREASE TEMPERATURE zone.
 - (6) Measure the simulated temperature in the manner described in para. 50 sub-para. (9), adjusting the FINE control, as necessary, to compensate for the load imposed by the galvanometer. Record this measurement and call it B.

- (7) Return the galvanometer key switch to the centre (OFF) position.
- (8) Rotate the FINE control, slowly anti-clockwise, until METER II indicates a LOWER THRESHOLD VOLTAGE of 1 volt (5 volts scale reading) with the pointer of METER I in the red, i.e. INCREASE TEMPERATURE, zone.
- (9) Measure the new temperature, in the manner described in para. 50 subpara. (9), adjusting the FINE control as necessary, to compensate for the load imposed by the galvanometer. Record this measurement and call it C.
- (10) Rotate he FINE control slowly, anti-clockwise, until METER II indicates a GAIN VOLTAGE of 3 volts (15 volts scale reading) with the pointer of METER I in the INCREASE TEMPERATURE zone.
- (11) Measure the simulated temperature in the manner described in para. 50 sub-para. (9), adjusting the FINE control, as necessary, to compensate for the load imposed by the galvanometer. Record this measurement and call it D.
- (12) From the recorded temperatures at points A, B, C and D as illustrated in the response diagram (fig. 5), the results of the tests are determined as follows:—

◆DEADBAND=A—C=7·5°C ± 1·5°C

DATUM TEMPERATURE =E=

A+C (approx.)=662±2·5°C (A450)

2 652±2·5°C (A451)

GAIN (in the increase temperature

zone) = E—D=9·5°C to 12°C

GAIN (in the decrease temperature

zone) = B—E = 9·5°C to 12°C

■

Timing check

- 53. In order to undertake this test a stopwatch must be available to time the running of the actuator in each direction. The test set switches should be in the positions selected in para. 50, sub-para. (3) to (6)—it is important that the METER II range switch is set to the 25Va.c. position—and the TEST SELECTOR switch should be turned to the REF. PH. position. After ensuring that these switches are in the correct position, proceed as follows:—
 - (1) Rotate the TEMP. SIGNAL, COARSE control, clockwise until METER I shows full scale deflection in the green, or DECREASE TEMPERATURE, zone.

- (2) Wait at least 20 seconds. This enables the actuator to travel over its whole range to the closed limit position. METER II should now indicate the reference phase MAXIMUM STALL VOLTAGE, i.e. approximately 20 volts.
- (3) Return the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the OFF position, simultaneously starting the stopwatch.
- (4) Observe METER II. The actuator will now be running in the close throttle direction and the meter pointer will be showing approximately full scale deflection. When reaching its lower limit stop, METER II will indicate the stalling of the motor by a sudden dipping of the pointer. The stop-watch should be stopped immediately this dip is observed.
- (5) The time recorded on the stopwatch is the time taken for the actuator to travel over its whole range from the actuator closed limit to the actuator open limit and should not be less than 8 seconds and not greater than 25 seconds.
- (6) Return the stop-watch hand to zero
- (7) Set the TEMP. DATUM/OFF TEMPERATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position simultaneously starting the stopwatch.
- (8) Observe METER II. The actuator will now be running in the open throttle direction and will indicate the reaching of the upper limit stop by a sudden dip in the reading of METER II. The stop-watch must be stopped immediately the dip is observed.
- (9) The time recorded on the stopwatch is the time taken for the actuator to travel over its whole range from the actuator open limit to the actuator closed limit and should not be less than 8 seconds and not greater than 25 seconds.
- (10) Without altering the test set controls, proceed to the muting switch test.

Muting switch test

- **54.** The operation of the aircraft muting switch can be tested in the following manner:—
 - (1) Set the aircraft muting switch to the

- override position, i.e. actuator disconnected from amplifier output.
- (2) Note reading METER I. If the switch is operating satisfactorily the pointer should have returned to its centre zero position.

Disconnecting supplies

- 55. On completion of the tests, the following procedure should be adopted:—
 - (1) Rotate the TEMP. SIGNAL, COARSE and FINE controls fully anti-clockwise.
 - (2) Lock the galvanometer in the CLAMP position.
 - (3) Return the relevant switches of the QT223 test set to their OFF positions.
 - (4) Switch off the inverters and disconnect the battery truck.
 - (5) Disconnect the test cables and place them behind the hinged flap in the test set lid.
 - (6) Replace the blanking cap on the aircraft test plug.

Aircraft test-ground running conditions

- 56. The temperature control system can be tested with the aircraft on the ground and its engine run at a specified speed. The thermocouple signal is derived from the jet-pipe thermocouples and is supplemented by the test set voltage, thereby simulating a high temperature output. The TEMP. SIGNAL, COARSE and FINE controls will, therefore, be more sensitive in operation and will produce rapid changes in the control temperature.
- 57. Interlock or muting switches, which normally render the temperature control system inoperative whilst the aircraft is on the ground, should be made ineffective before proceeding with the test.
- 58. With the temperature control system connected as described in para. 46, (Test connections at aircraft), the engine is run up to the normal ground running conditions as indicated on the aircraft jet-pipe temperature indicator. When the engine is stabilized at the normal ground running conditions the r.p.m. or torque (for constant speed engines), is to be noted. The engine operator will then

inform the test operator that the engine is ready for test. No further adjustments to the engine setting are to be made until the test has been completed.

- 59. The test consists of overriding the thermocouple e.m.f. with a temperature signal, i.e. test set voltage, in excess of the datum temperature until the actuator has operated fully in the DECREASE TEMPERATURE direction. During the test the following information is noted.
 - (1) The datum temperature.
 - (2) The engine r.p.m. or torque, before and whilst the temperature signal is applied.
 - (3) The engine r.p.m. or torque, after the temperature signal is removed.
- **60.** With the engine stabilized at the normal ground running r.p.m., or torque, proceed as follows:—
 - (1) Rotate the TEST SELECTOR switch to the CONT. PH. position.
 - (2) Turn the TEMP. SIGNAL, COARSE control fully anti-clockwise, and the FINE control to its mid-travel position.
 - (3) If the aircraft installation is fitted with a jet-pipe temperature indicator of the current-drawing type, set the T/C HARNESS SELECTOR switch to a position appropriate to the thermocouple harness resistance, i.e. to the position selected during the thermocouple harness resistance test (para. 49, sub-para. (2)). If the jet-pipe temperature indicator is of the non-current-drawing type, the T/C HARNESS SELECTOR switch must be set to the SERVO. POT. position.
 - (4) Set the METER II switch to the 25V a.c. position.
 - (5) Set the DATUM TEMPERATURE scale to the datum temperature of the system. Set the galvanometer clamp to the FREE position, and zero the pointer if necessary.
 - (6) Set the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the TEMPERATURE DATUM AND SIGNAL position. METER I should now show a deflection into the red or INCREASE TEMPERATURE zone, indicating that the actuator is at its limit stop in the open direction.

- (7) Turn the TEMP. SIGNAL, COARSE control clockwise (through approx. 10 degrees of arc) until the pointer of METER I is fully in the green zone, and wait until a slight "kick" of the METER I pointer is observed.
- (8) Note the reduction in engine r.p.m. or torque.
- (9) Turn the TEMP. SIGNAL, COARSE control very slowly, anti-clockwise, until the pointer of METER I returns to its midposition, and the pointer of METER II returns to zero (adjustment of the TEMP. SIGNAL, FINE control may be required).
- (10) Measure the temperature in the manner described in para. 50, sub-para. (9), using the DATUM TEMPERATURE scale and the galvanometer. The measured temperature represents the DATUM temperature of the system (the reading of the aircraft jet-pipe temperature indicator should be compared with test set reading)
- (11) Remove the test set voltage by returning the TEMP. DATUM/OFF/TEMPERATURE DATUM AND SIGNAL switch to the OFF position. The engine should now return to normal ground running conditions.

Failure of the engine to return to normal ground running conditions indicates a fault in the fuel system (including the actuator) as distinct from a fault in the temperature control system.

Disconnecting supplies

- 61. On completion of the tests, the following procedure should be adopted:—
 - (1) Rotate the TEMP. SIGNAL, COARSE and FINE controls fully anti-clockwise.
 - (2) Lock the galvanometer in the CLAMP position.
 - (3) Return the relevant switches, of the QT223 test set, to their OFF positions.
 - (4) Switch off the inverters and disconnect the battery truck.
 - (5) Disconnect the test cables and place them behind the hinged flap in the test set lid.
 - (6) Replace the blanking cap on the aircraft test plug.

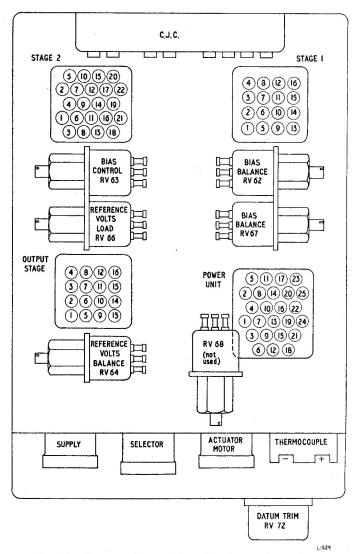


Fig. 7. Layout of amplifier showing seal numbers

Fault finding

- **62.** Should the preceding bench, or aircraft, tests indicate unserviceability of the amplifier, it may be possible to locate the fault by measuring the voltage and resistance between certain terminals inside the amplifier.
- 63. Table 1 gives the values which should be obtained when measuring the voltage or resistance between certain seals, and the function of the relevant winding or resistor. A layout diagram (fig. 7) shows the location of the amplifier components and identifies their seal numbers and terminal markings.

This diagram (fig. 7) and the circuit diagram (fig. 8) should be referred to in conjunction with Table 1 when voltage or resistance measurements are undertaken.

Insulation resistance

- **64.** The insulation resistance between the points given below should not be less than 5 megohms when measured with a 500 volt insulation resistance tester.
 - (1) All plug pins (except pin D of the 400 c.p.s. plug) and the chassis.
 - (2) Thermocouple +ve and chassis.

- (3) Thermocouple —ve and chassis.
- (4) Thermocouple +ve and pin A (400 c.p.s. plug).
- (5) Thermocouple —ve and pin A (ACTUATOR MOTOR plug).

(6) Pin A (400 c.p.s. plug) and pin A (ACTUATOR MOTOR plug).

Note . . .

The thermocouples must be disconnected from the magnetic amplifier unit when applying the insulation resistance test.

TABLE 1 Voltages and resistances

voltages and resistances						
Component	Function	Seal Ref.	Voltage	Resistance (ohms)		
TRANS- FORMER UNIT	 (a) Supply to transformer (b) Supply to stage 1 (c) Supply to stage 2 (d) Supply to output stage (e) Supply to voltage stabilizing bridge 	4-9 1-2-3 5-6-7 10-11-12 22-23-24 13-14	115V a.c. 12·6-0-12·6V a.c. 12·6-0-12·6V a.c. 25-0-25V a.c. 25-0-25V a.c. 48V d.c.	5 0·8–0–0·8 0·8–0–0·8 5–0–5 3–0–3 5000		
STAGE 1	(a) Supply to sections 1A and 1B (b) Section 1A, control (c) Section 1B, control (d) Section 1A, bias (e) Section 1B, bias (f) Section 1A feedback (g) Section 1B output	14-15-16 9-13 10-11 3-4 7-8 1-6 1-5	12·6-0-12·6V a.c. — — — — — —	0·8-0-0·8 250 200 23 23 180 180		
STAGE 2	(a) Supply to power coils (b) Control (c) Feedback (d) Output (e) Bias (f) Bias (g) Bias	5-6-7 1-2 15-16 3-4 11-12 11-9 12-9	25-0-25V a.c. 0.8V d.c. 	5-0-5 180 100 160 100 18 100		
OUTPUT STAGE	(a) Supply to power coils (b) Control (c) Bias (d) Output resistor	5-6 1-11 3-4 9-10	50V a.c. 	8 75 36 21		

Note . .

- (1) A Multimeter, Type 1 (Ref. No. 10S/16411) is suitable for obtaining these measurements.
- (2) Do not short-circuit output terminals, i.e. pins A, B, 1 and 2 of the output (ACTUATOR MOTOR) plug, while testing.
- (3) Resistance checks are to be undertaken with no external connections to the amplifier.
- (4) Tolerances to be ± 15 per cent. for resistance measurements and ± 10 per cent. for voltage measurements.



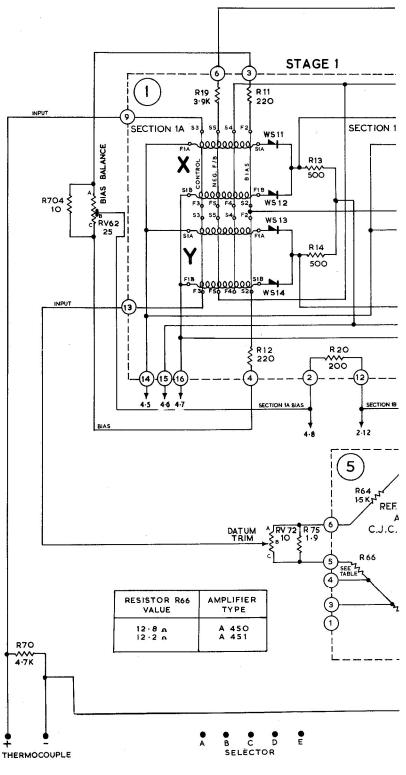


Fig.8

Printed for H.M. Stationery Office by S. Ward Ltd. Preston D.3256. Wt.30381. 257019. 11/62.

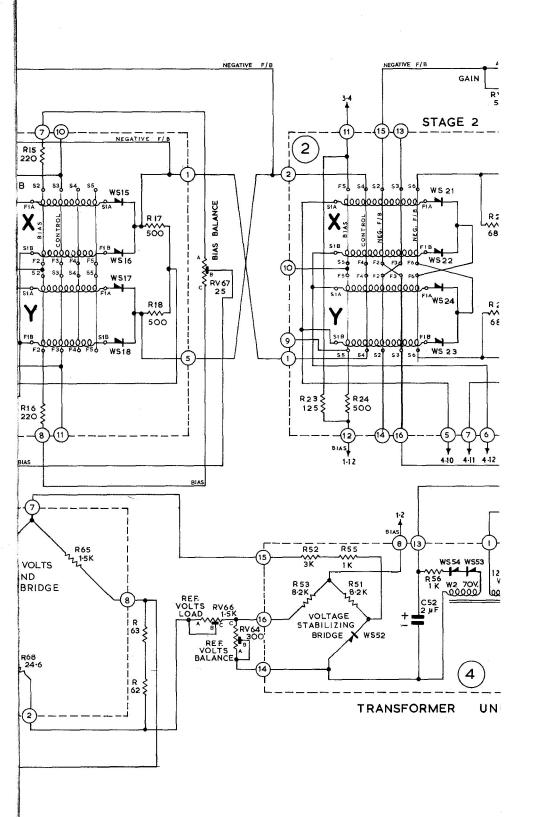

Circuit diagram of Amplifiers A450 and RESTRICTED

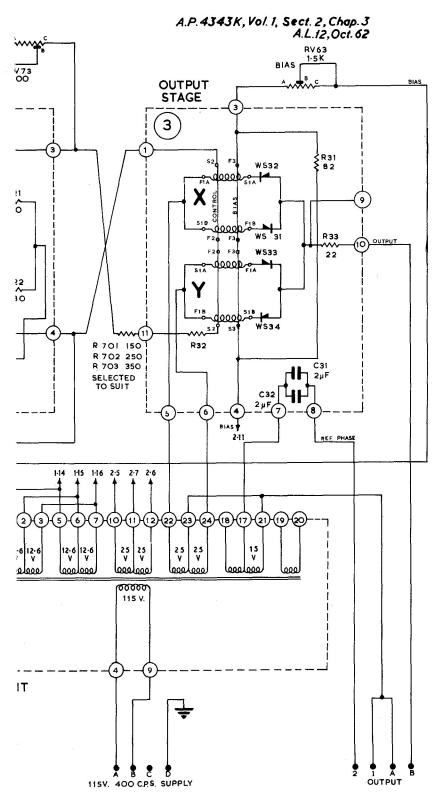

d A451

Fig. 8