

Chap 2 ARMAMENT  
Card 13  
A.L.9

REPLENISHMENTS  
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R VOL 4/5  
Pt 1 Bk 2 Sect 2  
(1st Ed)

Item No	ITEM	OPERATION	OPERATOR
	<u>Launcher Matra Type 116</u>		
1.	<u>Initial Loading</u>		
1.1	Armament safety break.	} Ensure disconnected.	Armament
1.2	Pylon safety breaks.		
1.3	Outboard E.R.U. circuits.	Test (S.P.208).	Electrical
1.4	Launcher circuits.	Test (S.P.210).	"
1.5	Outboard pylons.	Examine.	Armament
1.6	Hoisting brackets.	Ensure secure.	"
1.7	Sole plate with anti-yaw spigot housings.	Examine.	"
S.M. 15588(11)			Continued Overleaf

		Armament
1.8	Outboard E.R.U.'s	Lower sufficiently only to remove jaw pins.
1.9	Loaded launchers.	Position under pylons.
1.10	Outboard E.R.U. jaws.	Position in launcher suspension lug.
1.11	Launcher.	(i) Hoist to within 3 in of sole plate. (ii) Connect to aircraft supply. (iii) Continue hoisting until lugs are positioned in yaw housings.
1.12	Outboard E.R.U jaws.	Refit.
1.13	Launcher supply lead.	Ensure not fouling.
1.14	Outboard E.R.U's.	Using torque wrench crutch to 50 lb ft.
1.15	Wing access panels.	Refit.

(Continued)

Chap 2 ARMAMENT  
Card 14  
A.L.9

REPLENISHMENTS  
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5  
Pt 1 Bk 2 Sect 2  
(1st Ed)

Item No	ITEM	OPERATION	OPERATOR
1.	<u>Intial Loading</u> (Contd)		
1.16	Outboard E.R.U. circuits.	Carry out 'No VOLTS' test. (S.P.177)	Armament
2.	<u>Re-arming</u>		
2.1	Armament safety break. )		
2.2	Pylon safety breaks. )	Ensure disconnected.	"
2.3	Armament selector switches.	Ensure set to 'SAFE' or 'OFF'.	"
2.4	Expended launcher.	Remove.	"
2.5	Loaded launcher.	Repeat Items 1.9 to 1.16.	"

3. Disarming

- |  |  |            |
|--|--|------------|
| 3.1 Aircraft.  | Ensure pointing in safe direction                    | Armament   |
| 3.2 Armament safety break. }                                   |  |            |
| 3.3 Pylon safety breaks. }                                     | Ensure disconnected.                                 | "          |
| 3.4 Armament selector switches.                                | Ensure set to 'SAFE' or 'OFF'.                       | "          |
| 3.5 Launcher load.   | Ascertain from Pilot condition of load.              | "          |
| 3.6 Launcher.  | Remove from aircraft and return to preparation area. | "          |
| 3.7 This Sub-item is applicable only if rockets have misfired. |  |            |
| Launcher circuits.   | Test. (S.P.210).                                     | Electrical |

This file was downloaded  
from the RTFM Library.

Link: [www.scottbouch.com/rtfm](http://www.scottbouch.com/rtfm)

Please see site for usage terms,  
and more aircraft documents.

