

Chap 2 ARMAMENT
Card 8
A.L.9

REPLENISHMENTS
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
------------	------	-----------	----------

Inboard Pylon Installation. (Non E.R.U.).

1. Initial Loading

1.1	Gun firing safety devices.)	Set to 'OFF'.	Armament
1.2	Bombs/R.P. switch.)		
1.3	E.M.R.U. No 1, Mk 1.	Examine.	"
1.4	E.M.R.U. No 1, Mk 1.		"
	(a) Bomb hooks.	Ensure clean and dry.	
	(b) Bomb hook springs.	Ensure operating correctly.	
1.5	Housing, Fuzing and release.)	Examine.	"
1.6	Fuzing units.)		

1.7	Jettison mechanism.)		
1.8	Reset mechanism.)	Operate.	Armament
1.9	Spigots.		Ensure lockwire secure.	"
1.10	Practice bomb carrier. (If required).	(i)	Fit.	"
		(ii)	Torque load. (30 lb ft).	
1.11	E.M.R.U. No 1, Mk 1.		Carry out cocking test.	"
1.12	Manual release units. (Type R).		Operate.	"
1.13	Release circuit.		Test. (S.P. 209).	Electrical
1.14	Bombs/Fuel Tanks/Practice Bombs. (As applicable).	(i)	Load.	Armament
		(ii)	Torque load bombs/fuel tanks (80 lb ft).	
1.15	Bomb safety devices.	(i)	Remove. (Immediately before take-off).	"
		(ii)	Hand to pilot.	

(Continued)

Chap 2 ARMAMENT
Card 9

REPLENISHMENTS
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
2.	<u>Servicing between Bombing Sorties. (Stores not expended)</u>		
2.1	Bomb safety devices.	(i) Obtain from pilot. (ii) Fit.	Armament
2.2	E.M.R.U. No 1, Mk 1.	Carry out cocking test.	"
2.3	Bomb safety devices.	(i) Remove. (Immediately before take-off). (ii) Hand to pilot.	"
3.	<u>Servicing between Bombing Sorties. (Stores expended)</u>		
3.1	Pylon.) Examine.	"
3.2	E.M.R.U. No 1, Mk 1.		

			Armament
3.3	Housing, Fuzing and release)	Examine.	
3.4	Fuzing units.		
3.5	Bombs.	(i) Load.	"
		(ii) Torque load. (80 lbs ft).	
3.6	Bomb safety devices.	(i) Remove. (Immediately before take-off).	"
		(ii) Hand to pilot.	
4.	<u>Unloading</u>		
4.1	Bomb safety devices.	(i) Obtain from pilot.	"
		(ii) Fit.	
4.2	Bombs/Practice bombs.		
4.3	Practice bomb carrier. (If fitted).	Remove.	"
4.4	E.M.R.C. No 1, Mk 1.		
4.5	Housing, Fuzing and release.	Examine.	"
4.6	Fuzing units.		

(Continued)

Chap 2 ARMAMENT
Card 10

REPLENISHMENTS
HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10

A.P.4347F,G,J,K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
4.	<u>Unloading</u>	(Contd)	
4.7	Pylon.	(i) Clean. (ii) Examine.,	Armament
4.8	E.M.R.U. No 1, Mk 1.	(i) Fit keeper bar. (ii) Torque load. (15 lb/ft).	"



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

