

Chap 4 ENGINES

Card 1

A.L.25

Item

No

REPLENISHMENTS

A.P.4347F,G,J,K & R Vol 4/5

HUNTER F.6,T.7,T.7A,G.A.9 & F.R.10 Pt 1 Bk 2 Sect 2 (1st Ed)

Fuel System - Refuelling

1. Preparation

ITEM	OPERATION	OPERATOR
1.1 Refueller.	Ensure connected to 'Earth'.	Engines
1.2 Refueller bonding lead.	Ensure connected to aircraft.	"
1.3 Defuelling cock.) Ensure set to 'OFF'.	"
1.4 L.P. fuel cock.		
1.5 This Sub-item is applicable only to F.6,G.A.9 and F.R.10. Ganged cocks. (Transport joint).	Ensure set to 'ON'. Note:- If transport joint butt strap fitted, cocks will be 'ON'.	"
1.6 Refuelling pressure relief valves. (Underside of stub wings).	Ensure free to operate.	"

1.7 Refuelling coupling sealing cap. (Port wheel compartment). Remove. Engines

1.8 Refueller hose. Connect. "

2. During this Item rate of refuelling is not to exceed 150 gall/min at 50 lbf/in².
Refuelling

2.1 Refueller pump. Ensure set to 'ON'. "

2.2 Refueller control. Ensure set to 'REFUEL'. "

2.3 Battery master switch.)
2.4 Time switch. (Port wheel compartment).) Set to 'ON'. "

(Continued)

Chap 4 ENGINES
Card 2

REPLENISHMENTS
HUNTER F.6, T.7, T.7A, G.A.9 & F.R.10

A.P. 4347F, G, J, K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

ITEM No	ITEM	OPERATION	OPERATOR
2.	<u>Refuelling</u> (Contd)		
2.5	This Sub-item is applicable only to G.A.9 and F.R.10. Drop tank refuelling selector switch.	Set as required. Note:- Switch position control drop tank refuelling as follows:-	Engines
		<u>Drop Tanks</u>	
	<u>Switch Position</u>	<u>Fitted</u>	<u>Refuelled</u>
	I	(Inners and - (Outers.	All
		(Outers - (only.	Outers
		(Inners - (only.	No

		All - None
II	configura- tions.	
	(Inners and - Inners (outers.	
III	(Outers - No (only. (Inners - Inners (only.	
2.6	Refuelling indicator lights.	Ensure illuminated. Engines
2.7	Refuelling pressure relief valves.	Ensure venting correctly after 50 to 100 gallons of fuel has passed into aircraft. "
2.8	Refuelling indicator lights.	Ensure extinguished when refuelling completed. "
3.	<u>General</u>	
3.1	Fuel contents gauges.	Record contents indicated. "

(Continued)

Chap 4 ENGINES
Card 3
A.L.19

REPLENISHMENTS
HUNTER F.6, T.7, T.7A, G.A.9 & F.R.10

A.P.4347F, G, J, K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

ITEM	OPERATION	OPERATOR
3. <u>General</u> (Contd)		
3.2 Battery master switch.	Set to 'OFF'.	Engines
3.3 Refueller hose.	Disconnect.	"
3.4 Refuelling coupling. sealing cap. (Port wheel compartment).	Refit.	"
3.5 Refueller bonding lead.	Disconnect from aircraft.	"
3.6 Refueller 'Earth'.	Ensure disconnected.	"



This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rftm

Please see site for usage terms,
and more aircraft documents.