

Chap 4 ENGINES

Card 4
A.L.19

REPLENISHMENTS

HUNTER F.6, T.7, T.7A, G.A.9 & F.R.10

A.P.4347F, G, J, K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item

No ITEM

OPERATION

OPERATOR

Fuel System - Defuelling

1. Preparation

1.1 Refueller.

Ensure connected to 'Earth'.

Engines
"

1.2 Refueller bonding lead.

Ensure connected to aircraft.

1.3 Refuelling coupling sealing cap. (Port wheel compartment).

Remove.

"

1.4 Refueller hose.

Connect.

"

1.5 L.P. cock.

Ensure set to 'OFF'.

"

S.M.68/1713 (4)

(Continued overleaf)

(Continued)

Chap 4 ENGINES
Card 5
A.L.19

REPLENISHMENTS
HUNTER F.6, T.7, T.7A, G.A.9 & F.R.10

A.P.4347F, G, J, K & R Vol 4/5
Pt 1 Bk 2 Sect 2 (1st Ed)

Item No	ITEM	OPERATION	OPERATOR
2. <u>Defuelling</u> (Contd)			
2.3	Booster pumps.	(i) Switch on when refueller commences to suck air. (ii) Switch off when refueller sucks air again.	Engines
2.4	Refueller pump.	Ensure set to 'OFF'.	"
2.5	Defuelling cock.	(i) Set to 'OFF'. (ii) Lock.	"
3. <u>General</u>			
3.1	External air pressure supply.	(i) Set to 'OFF'. (ii) Disconnect from aircraft.	"
3.2	Refueller hose.	Disconnect.	"

3.3 Refuelling coupling
sealing cap. Refit. Engines

3.4 Refueller bonding lead. Ensure disconnected from
aircraft. "

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

