

PART 6

ILLUSTRATIONS

List of Figures

Hunter T7 — Cockpit	1
(UHF-ARC 52, standby UHF, radio compass and IFF/SSR embodied)	
Hunter T7 — Cockpit	2
(TACAN and IFF/SSR embodied)	
Hunter T7A — Cockpit	3

PART 6

ILLUSTRATIONS

Key to Fig. 1 Hunter T7 Cockpit — (UHF-ARC 52, standby UHF, radio compass and IFF/SSR embodied)

		Reference	
		PART 1	
1.	Cockpit pressure test switch	Chap. 7	Para. 3
2.	Canopy override switch	Chap. 7	Para. 1
3.	Landing gear emergency air pressure gauge	Chap. 6	Para. 4
4.	Flap emergency air pressure gauge	Chap. 6	Para. 6
5.	Cockpit temperature control	Chap. 7	Para. 3
6.	Cockpit pressure master switch	Chap. 7	Para. 3
7.	LP fuel cock	Chap. 1	Para. 5
8.	DME control unit	Chap. 9	Para. 4
9.	Top temperature control	Chap. 2	Para. 10
10.	Rudder and aileron trim control	Chap. 5	Para. 9
11.	Airbrake control	Chap. 6	Para. 7
12.	Press-to-transmit switch	Chap. 9	Para. 1
13.	Telebriefing button and light	Chap. 9	Para. 2
14.	Landing gear emergency selector	Chap. 6	Para. 4
15.	Radar ranging switch and indicator	Chap. 9	Para. 5
16.	Brake accumulator pressure gauge	Chap. 6	Para. 8
17.	Main/standby UHF set selector switch	Chap. 9	Para. 1
18.	UHF tone switch	Chap. 9	Para. 1
19.	Standby UHF channel selector	Chap. 9	Para. 1
20.	Braking parachute test switch and circuit breaker	Chap. 6	Para. 9
21.	Target reject switch	Chap. 9	Para. 5
22.	Landing gear selector	Chap. 6	Para. 3
23.	Hydraulic failure warning light	Chap. 4	Para. 1
24.	Flap emergency selector	Chap. 6	Para. 6
25.	Aileron power switch and indicator	Chap. 5	Para. 6
26.	Elevator power switch and indicator	Chap. 5	Para. 6
27.	Outboard stores jettison button	Chap. 10	Para. 5
28.	Inboard stores jettison button	Chap. 10	Para. 5
29.	Clear aircraft switch bar	Chap. 10	Para. 6
30.	RP — Ripple/Salvo/Sneb selector	Chap. 10	Para. 4
31.	Bombs/RP switch	Chap. 10	Para. 4
32.	RP selector switch	Chap. 10	Para. 4
33.	Braking parachute switch	Chap. 6	Para. 9
34.	Bomb fuzing switch	Chap. 10	Para. 4
35.	Canopy control switch	Chap. 7	Para. 1
36.	GGs master switch	Chap. 10	Para. 1
37.	Braking parachute warning panel	Chap. 6	Para. 9
38.	Accelerometer	Chap. 6	Para. 12
39.	Canopy warning light	Chap. 7	Para. 1
40.	Cockpit pressure warning light	Chap. 7	Para. 3
41.	DME indicator	Chap. 9	Para. 4

Reference
PART 1

42.	ADF bearing indicator	Chap. 9	Para. 6
43.	Fire extinguisher and test switch ...	Chap. 2	Para. 4
44.	Fuel transfer failure indicator—port ...	Chap. 1	Para. 8
45.	Fuel contents gauges	Chap. 1	Para. 7
46.	Outboard drop tank indicator—port ...	Chap. 1	Para. 9
47.	Booster pump circuit breakers	Chap. 1	Para. 6
48.	Fuel low pressure warning light	Chap. 1	Para. 6
49.	Fuel contents check switch	Chap. 1	Para. 7
50.	Outboard drop tank indicator—starboard	Chap. 1	Para. 9
51.	Emergency lights switch	Chap. 7	Para. 5
52.	Fuel transfer failure indicator—starboard	Chap. 1	Para. 8
53.	Braking parachute switch	Chap. 6	Para. 9
54.	Booster pump switch and warning light—starboard	Chap. 1	Para. 6
55.	Target reject switch	Chap. 9	Para. 5
56.	Navigation lights switch	Chap. 7	Para. 6
57.	Camera aperture switch	Chap. 10	Para. 2
58.	Audio warning cut-out switch	Chap. 4	Para. 1
59.	Oxygen contents gauge	Chap. 8	Para. 8
60.	Oxygen flow indicator	Chap. 8	Para. 9
61.	Aileron and elevators power control indicators	Chap. 5	Para. 6
62.	UHF/ADF mixer switch	Chap. 9	Para. 6
63.	Oxygen regulator—pupil	Chap. 8	Para. 9
64.	Cockpit altimeter	Chap. 6	Para. 11
65.	Power control override switches	Chap. 5	Para. 6
66.	Anti-G air pressure gauge	Chap. 8	Para. 7
67.	OGS control unit	Chap. 10	Para. 1
68.	Tailplane trim cut-out	Chap. 5	Para. 7
69.	Anti-G test button	Chap. 8	Para. 7
70.	Aileron trim control	Chap. 5	Para. 9
71.	Intercomm. switches	Chap. 9	Para. 3
72.	Butt test switch	Chap. 10	Para. 3
73.	Oxygen regulator—instructor	Chap. 8	Para. 9
74.	Rudder and aileron trim indicator	Chap. 5	Para. 9
75.	Landing gear selector	Chap. 6	Para. 3
76.	Flap selector	Chap. 6	Para. 5
77.	IFF control unit lights switch	Chap. 9	Para. 8
78.	IFF failure warning light	Chap. 9	Para. 8
79.	IFF/SSR control unit	Chap. 9	Para. 8
80.	Turn and slip standby switch (also under port turn and slip indicator)	Chap. 3	Para. 7
81.	Tailplane interconnection switch	Chap. 5	Para. 8
82.	Booster pump switch and warning light—port	Chap. 1	Para. 6
83.	Radio compass control unit	Chap. 9	Para. 6
84.	UHF control unit	Chap. 9	Para. 1
85.	Engine anti-ice switch and indicator	Chap. 2	Para. 13
86.	Inverter indicators	Chap. 3	Para. 8
87.	Pillar lights switch	Chap. 7	Para. 5
88.	Muting switch	Chap. 9	Para. 3
89.	No 1 group inverter switch	Chap. 3	Para. 8
90.	Starter circuit breaker	Chap. 2	Para. 7

Reference
PART 1

91.	Anti-G suit control	...	...	...	Chap. 8	Para. 7
92.	Anti-G test button	...	...	...	Chap. 8	Para. 7
93.	Canopy jettison control	...	...	...	Chap. 7	Para. 2
94.	Airbrake test switch	...	...	...	Chap. 6	Para. 7
95.	No. 2 group inverter switch	...	...	...	Chap. 3	Para. 8
96.	Camera master switch	...	...	...	Chap. 10	Para. 2
97.	Battery master switch	...	...	...	Chap. 3	Para. 6
98.	Pressure head heater switch	...	...	...	Chap. 6	Para. 11
99.	Engine master switch	...	...	...	Chap. 2	Para. 7
100.	Starter push-button	...	...	...	Chap. 2	Para. 7
101.	Oil pressure gauge	...	...	...	Chap. 2	Para. 11
102.	Ignition switch	...	...	...	Chap. 2	Para. 7
103.	Generator failure warning lights	...	...	...	Chap. 3	Para. 5
104.	Flap position indicator	...	...	...	Chap. 6	Para. 5
105.	Windscreen wiper control	...	...	...	Chap. 6	Para. 13
106.	Flap selector	...	...	...	Chap. 6	Para. 5
107.	Airbrake indicator	...	...	...	Chap. 6	Para. 7
108.	Landing gear warning light	...	...	...	Chap. 6	Para. 3
109.	Hydraulic triple pressure gauge	...	...	...	Chap. 4	Para. 1
110.	Landing gear indicator	...	...	...	Chap. 6	Para. 3
111.	ogs control unit	...	...	...	Chap. 10	Para. 1
112.	Tailplane standby control	...	...	...	Chap. 5	Para. 7
113.	Rudder and aileron trim indicator	...	...	...	Chap. 5	Para. 9
114.	HP pump isolation warning light	...	...	...	Chap. 2	Para. 9
115.	HP pump isolation switch	...	...	...	Chap. 2	Para. 9
116.	HP cock and relight button	...	...	...	Chap. 2	Paras. 5 and 8
117.	Cockpit temperature selector	...	...	...	Chap. 7	Para. 3
118.	Flood air flow switch	...	...	...	Chap. 7	Para. 3

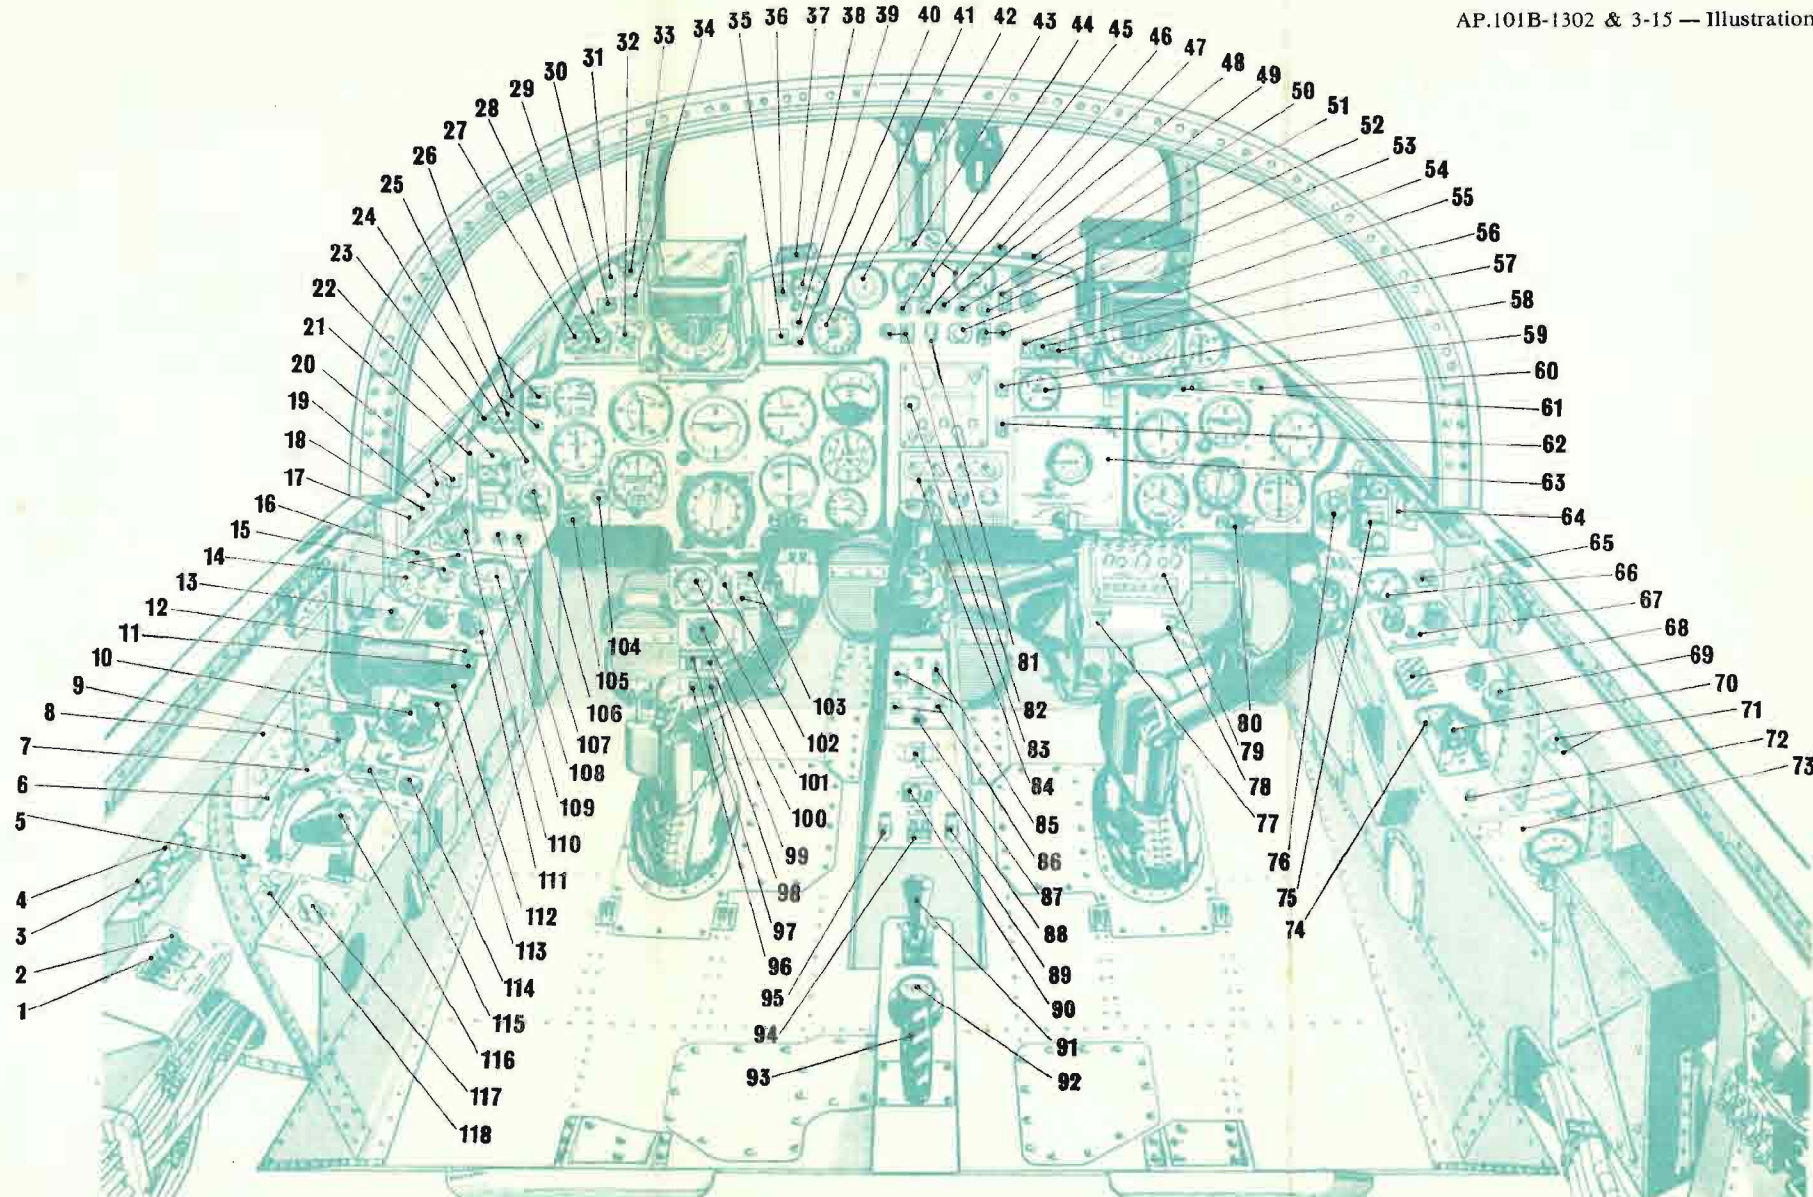


Fig. 1 Hunter T7 Cockpit — (UHF-ARC 52, standby UHF, radio compass and IFF/SSR embodied)

RESTRICTED

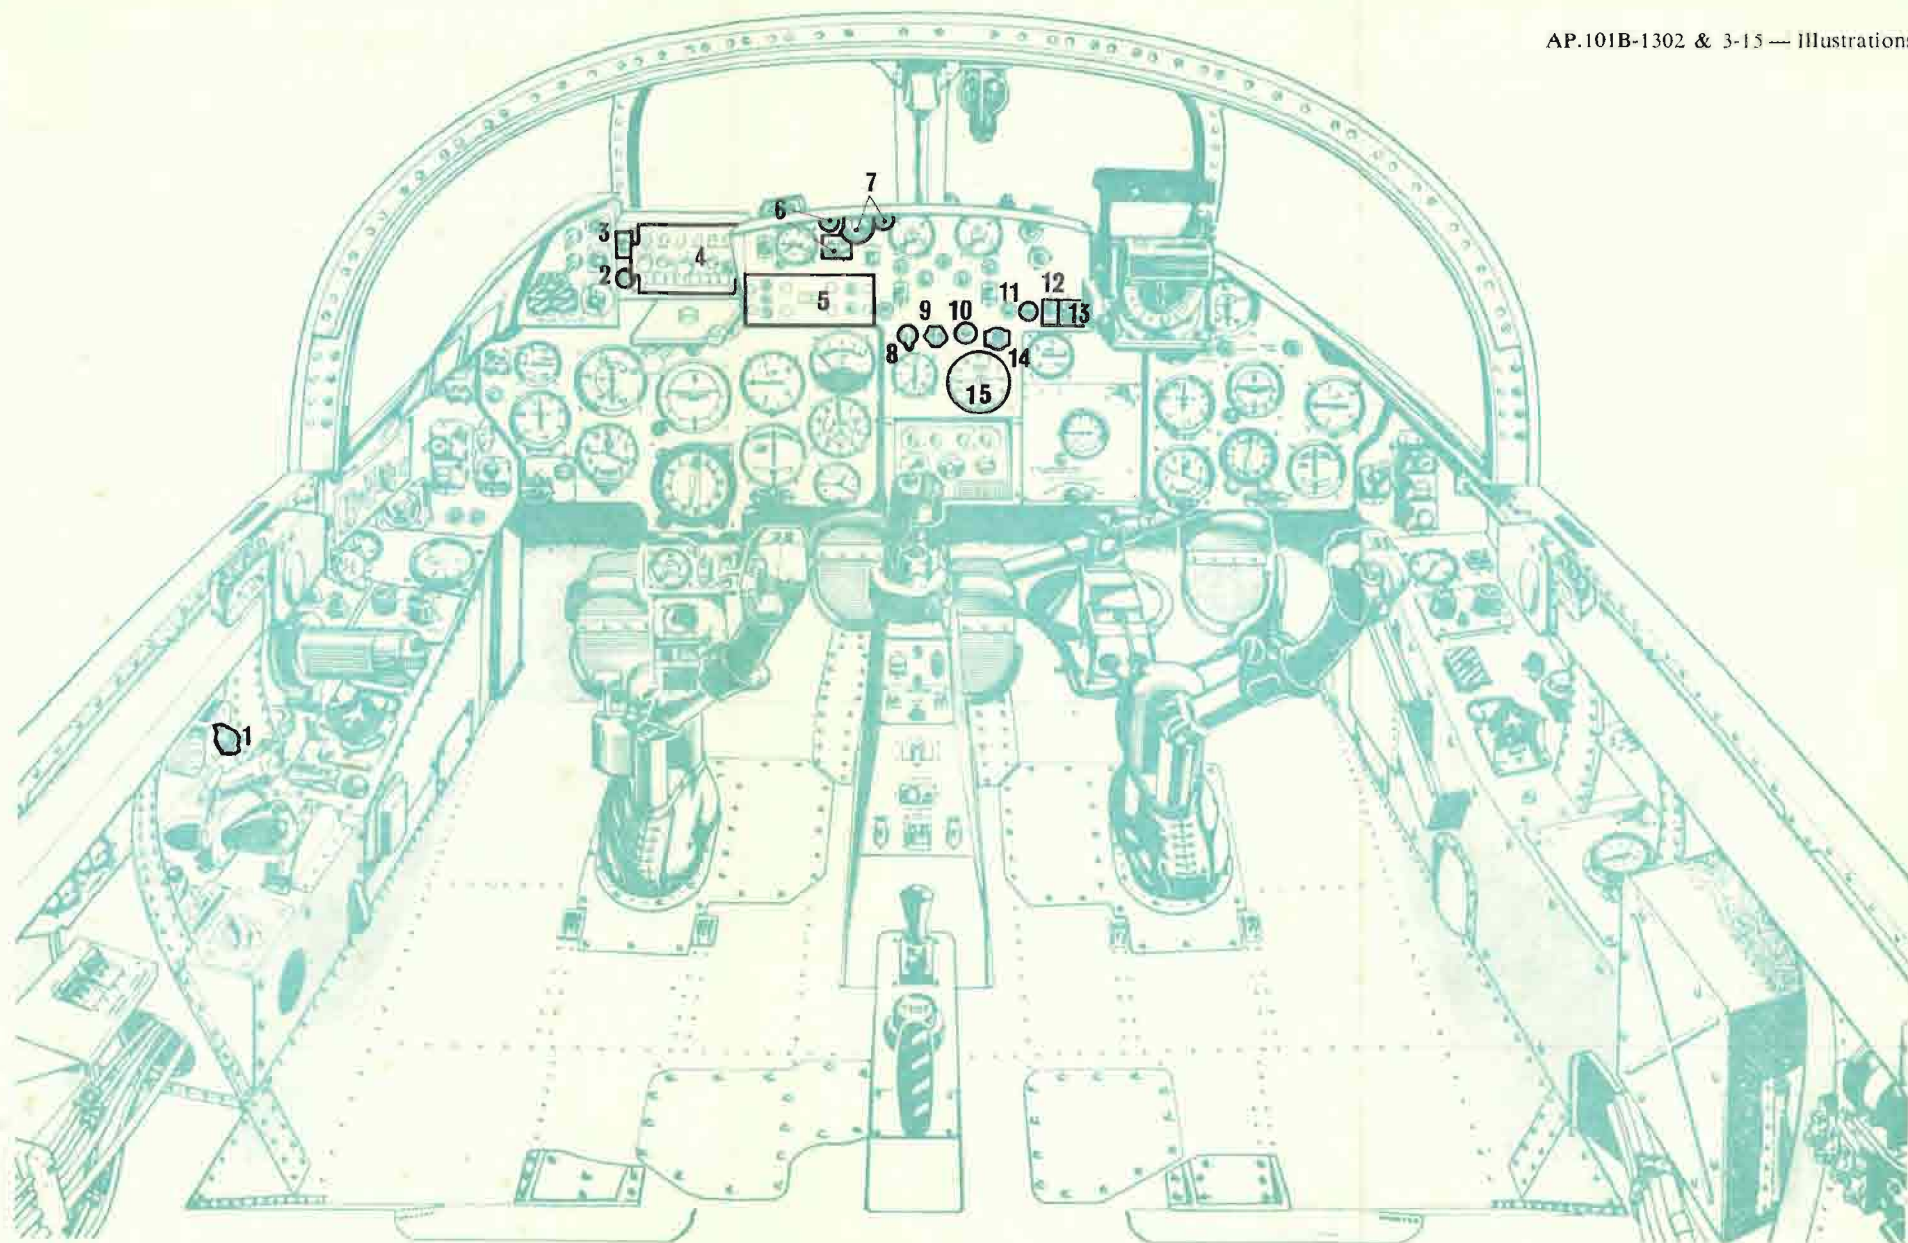


Fig. 2 Hunter T7 Cockpit — (TACAN and IFF/SSR embodied)

RESTRICTED

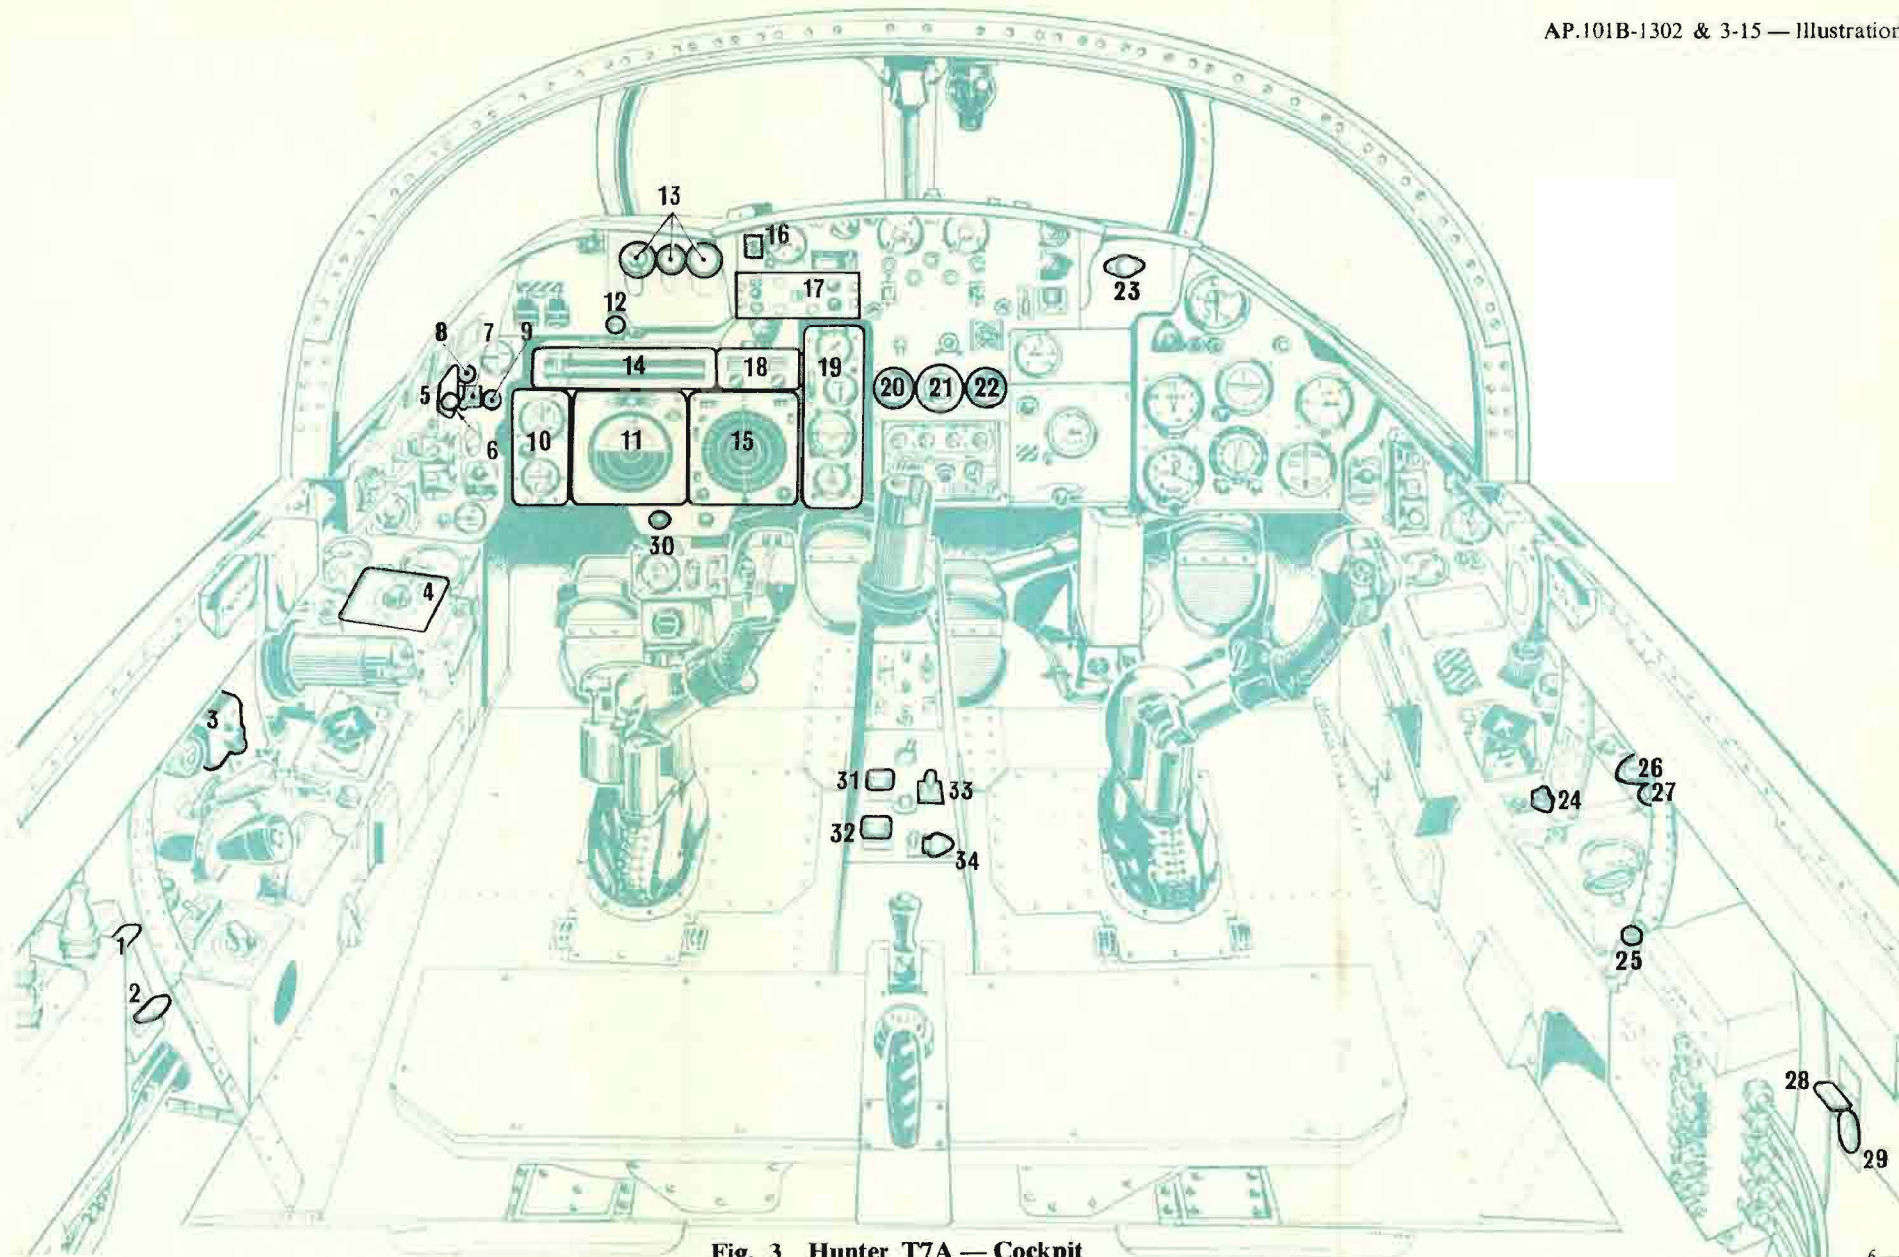


Fig. 3 Hunter T7A — Cockpit
RESTRICTED

This file was downloaded
from the RTFM Library.

Link: www.scottbouch.com/rtfm

Please see site for usage terms,
and more aircraft documents.

